

# WJ200 Series Inverter Instruction Manual

Single-phase Input 100V class

Manual Number: NT326AX May 2011 After read this manual,
Keep it handy for future reference.

Hitachi Industrial Equipment Systems Co., Ltd.

## Safety Messages

For the best results with the WJ200 Series inverter, carefully read this manual and all of the warning labels attached to the inverter before installing and operating it, and follow the instructions exactly. Keep this manual handy for quick reference.

#### **Definitions and Symbols**

A safety instruction (message) includes a "Safety Alert Symbol" and a signal word or phrase such as WARNING or CAUTION. Each signal word has the following meaning:




**HIGH VOLTAGE:** This symbol indicates high voltage. It calls your attention to items or operations that could be dangerous to you and other persons operating this equipment. Read the message and follow the instructions carefully.



**WARNING:** indicates a potentially hazardous situation that, if not avoided, can result in serious injury or death.



**CAUTION:** Indicates a potentially hazardous situation that, if not avoided, can result in minor to moderate injury or serious damage to the product. The situation described in the **CAUTION** may, if not avoided, lead to serious results. Important safety measures are described in CAUTION (as well as WARNING), so be sure to observe them.

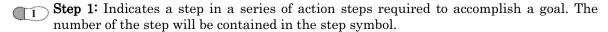



**NOTE:** Notes indicates an area or subject of special merit, emphasizing either the product's capability or common errors in operation or maintenance.



**TIP:** Tips give a special instruction that can save time or provide other benefits while installing or using the product. The tip calls attention to an idea that may not be obvious to first-time users of the product.

## **Hazardous High Voltage**



**HIGH VOLTAGE:** Motor control equipment and electronic controllers are connected to hazardous line voltages. When servicing drives and electronic controllers, there may be exposed components with housing or protrusions at or above line potential. Extreme care should be taken to protect against shock.

Stand on an insulating pad and make it a habit to use only one hand when checking components. Always work with another person in case an emergency occurs. Disconnect power before checking controllers or performing maintenance. Be sure equipment is properly grounded. Wear safety glasses whenever working on electronic controllers or rotating machinery.

## Caution when using Safe Stop Function

When using Safe Stop function, make sure to check whether the safe stop function properly works when installation (before starting operation). Please carefully refer to page Appendix E

### **General Precautions – Read These First!**



**WARNING:** This equipment should be installed, adjusted, and serviced by qualified electrical maintenance personnel familiar with the construction and operation of the equipment and the hazards involved. Failure to observe this precaution could result in bodily injury.



WARNING: The user is responsible for ensuring that all driven machinery, drive train mechanism not supplied by Hitachi Industrial Equipment Systems Co., Ltd., and process line material are capable of safe operation at an applied frequency of 150% of the maximum selected frequency range to the AC motor. Failure to do so can result in destruction of equipment and injury to personnel should a single-point failure occur.



**WARNING:** For equipment protection, install a ground leakage type breaker with a fast response circuit capable of handling large currents. The ground fault protection circuit is not designed to protect against personal injury.



**WARNING:** HAZARDOUS OF ELECTRICAL SHOCK. DISCONNECT INCOMING POWER BEFORE WORKING ON THIS CONTROL.



**WARNING:** Wait at least five (10) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is the danger of electric shock.



**CAUTION:** These instructions should be read and clearly understood before working on WJ200 series equipment.



**CAUTION:** Proper grounds, disconnecting devices and other safety devices and their location are the responsibility of the user and are not provided by Hitachi Industrial Equipment Systems Co., Ltd.



**CAUTION:** Be sure to connect a motor thermal disconnect switch or overload device to the WJ200 series controller to assure that the inverter will shut down in the event of an overload or an overheated motor.



**HIGH VOLTAGE:** Dangerous voltage exists until power light is OFF. Wait at least five (10) minutes after input power is disconnected before performing maintenance.



**WARNING:** This equipment has high leakage current and must be permanently (fixed) hard-wire to earth ground via two independent cables.





**WARNING:** Rotating shafts and above-ground electrical potentials can be hazardous. Therefore, it is strongly recommended that all electrical work conform to the National Electrical Codes and local regulations. Installation, alignment and maintenance should be performed only by qualified personnel.



#### CAUTION:

- a) Class I motor must be connected to earth ground via low resistive path (<0.1Ω)
- b) Any motor used must be of a suitable rating.
- c) Motors may have hazardous moving path. In this event suitable protection must be provided.



**CAUTION:** Alarm connection may contain hazardous live voltage even when inverter is disconnected. When removing the front cover for maintenance or inspection, confirm that incoming power for alarm connection is completely disconnected.




**CAUTION:** Hazardous (main) terminals for any interconnection (motor, contact breaker, filter, etc.) must be inaccessible in the final installation.



**CAUTION:** This equipment should be installed in IP54 or equivalent (see EN60529) enclosure. The end application must be in accordance with BS EN60204-1. Refer to the section "Choosing a Mounting Location" on page 2-7. The diagram dimensions are to be suitably amended for your application.



**CAUTION:** Connection to field wiring terminals must be reliably fixed having two independent means of mechanical support. Use a termination with cable support (figure below), or strain relief, cable clamp, etc.

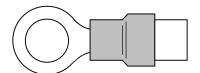



**CAUTION:** A double-pole disconnection device must be fitted to the incoming main power supply close to the inverter. Additionally, a protection device meet IEC947-1/ IEC947-3 must be fitted at this point (protection device data shown in "<u>Determining Wire and Fuse Sizes" on page 2-16</u>).



**NOTE:** The above instructions, together with any other requirements highlighted in this manual.

## Index to Warnings and Cautions in This Manual

#### **Cautions and Warnings for Orientation and Mounting Procedures**



**HIGH VOLTAGE**: Hazard of electrical shock. Disconnect incoming power before working on this control. Wait five (10) minutes before removing the front cover.



HIGH VOLTAGE: Hazard of electrical shock. Never touch the naked PCB (printed circuit board) portions while the unit is powered up. Even for switch portion, the inverter must be powered OFF before you change.



**WARNING:** In the cases below involving a general-purpose inverter, a large peak current can flow on the power supply side, sometimes destroying the converter module:

- 1. The unbalance factor of the power supply is 3% or higher.
- 2. The power supply capacity is at least 10 times greater than the inverter capacity (or the power supply capacity is 500kVA or more).
- 3. Abrupt power supply changes are expected, due to the conditions such as:
  - a. Several inverters are interconnected with a short bus.
  - b. A thyristor converter and an inverter are interconnected with a short bus.
  - c. An installed phase advance capacitor opens and closes.



**CAUTION**: Be sure to install the unit on flame-resistant material such as a steel plate. ...2-9 Otherwise, there is the danger of fire.



**CAUTION**: Be sure not to place any flammable materials near the inverter. Otherwise, there is the danger of fire.



**CAUTION**: Be sure not to let the foreign matter enter vent openings in the inverter housing, such as wire clippings, spatter from welding, metal shavings, dust, etc. Otherwise, there is the danger of fire.



**CAUTION**: Be sure to install the inverter in a place that can bear the weight according to the specifications in the text (Chapter 1, Specifications Tables). Otherwise, it may fall and cause injury to personnel.



**CAUTION**: Be sure to install the unit on a perpendicular wall that is not subject to vibration. Otherwise, it may fall and cause injury to personnel. ...2-9



**CAUTION**: Be sure not to install or operate an inverter that is damaged or has missing parts. Otherwise, it may cause injury to personnel.

...2-9



**CAUTION**: Be sure to install the inverter in a well-ventilated room that does not have direct exposure to sunlight, a tendency for high temperature, high humidity or dew condensation, high levels of dust, corrosive gas, explosive gas, inflammable gas, grinding-fluid mist, salt damage, etc. Otherwise, there is the danger of fire.



**CAUTION**: Be sure to maintain the specified clearance area around the inverter and to provide adequate ventilation. Otherwise, the inverter may overheat and cause equipment damage or fire. ...2-10

## Wiring – Warnings for Electrical Practice and Wire Specifications

$\triangle$	<b>WARNING</b> : "USE 60/75°C Cu wire only" or equivalent. For models WJ200-004M, and 007M.	2-18
$\triangle$	WARNING: "Open Type Equipment."	2-18
<u>^</u>	<b>WARNING</b> : "Suitable for use on a circuit capable of delivering not more than 100k rms symmetrical amperes, 240V maximum when protected by Class CC, G, J or R fuses or circuit breaker having an interrupting rating not les than 100,000 rms symmetrical amperes, 240 volts maximum". For models with suffix S, N or L.	2-18
<u>^</u>	<b>WARNING:</b> "Suitable for use on a circuit capable of delivering not more than 100k rms symmetrical amperes, 480V maximum when protected by Class CC, G, J or R fuses or circuit breaker having an interrupting rating not les than 100,000 rms symmetrical amperes, 480 volts maximum." For models with suffix H.	2-18
A	<b>HIGH VOLTAGE</b> : Be sure to ground the unit. Otherwise, there is a danger of electric shock and/or fire.	2-18
A	<b>HIGH VOLTAGE</b> : Wiring work shall be carried out only by qualified personnel. Otherwise, there is a danger of electric shock and/or fire.	2-18
A	<b>HIGH VOLTAGE</b> : Implement wiring after checking that the power supply is OFF. Otherwise, you may incur electric shock and/or fire.	2-18
A	<b>HIGH VOLTAGE</b> : Do not connect wiring to an inverter operate an inverter that is not mounted according to the instructions given in this manual. Otherwise, there is a danger of electric shock and/or injury to personnel.	2-18
$\wedge$	<b>WARNING</b> : Make sure the input power to the inverter is OFF. If the drive has been powered, leave it OFF for five minutes before continuing.	2-11
$\triangle$	<b>CAUTION</b> : Power terminal assignment is different compared to old models such as L100, L200 series, etc,. Pay attention when wiring the power cable.	~21



#### Wiring - Cautions for Electrical Practice



**CAUTION**: Fasten the screws with the specified fastening torque in the table ... 2·18 below. Check for any loosening of screws. Otherwise, there is the danger of fire.



**CAUTION**: Be sure that the input voltage matches the inverter specifications; ... <u>2-20</u>
• Single phase 100V to 120V 50/60Hz for MF model



**CAUTION**: Be sure not to power a three-phase-only inverter with single phase ... <u>2-20</u> power. Otherwise, there is the possibility of damage to the inverter and the danger of fire.



**CAUTION:** Be sure not to connect an AC power supply to the output terminals. ... <u>2-20</u> Otherwise, there is the possibility of damage to the inverter and the danger of injury and/or fire.



**CAUTION**: Remarks for using ground fault interrupter breakers in the main power supply: Adjustable frequency inverter with integrated CE-filters and shielded (screened) motor cables have a higher leakage current toward earth GND. Especially at the moment of switching ON this can cause an inadvertent trip of ground fault interrupters. Because of the rectifier on the input side of the inverter there is the possibility to stall the switch-off function through small amounts of DC current.

Please observe the following:

- Use only short time-invariant and pulse current-sensitive ground fault interrupters with higher trigger current.
- Other components should be secured with separate ground fault interrupters.
- Ground fault interrupters in the power input wiring of an inverter are not an absolute protection against electric shock.



**CAUTION**: Be sure to install a fuse in each phase of the main power supply to the ... 2-20 inverter. Otherwise, there is the danger of fire.



**CAUTION**: For motor leads, ground fault interrupter breakers and ... <u>2</u>-electromagnetic contactors, be sure to size these components properly (each must have the capacity for rated current and voltage). Otherwise, there is the danger of fire

#### **Powerup Test Caution Messages**



**CAUTION**: The heat sink fins will have a high temperature. Be careful not to ... 2-23 touch them. Otherwise, there is the danger of getting burned.



**CAUTION:** The operation of the inverter can be easily changed from low speed to ... <u>2-23</u> high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, there is the danger of injury.



**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage and/or injury.



**CAUTION**: Check the following before and during the Powerup test. Otherwise, ...  $\underline{2-23}$  there is the danger of equipment damage.

- Is the direction of the motor rotation correct?
- Did the inverter trip during acceleration or deceleration?
- Were the rpm and frequency meter readings as expected?
- Were there any abnormal motor vibration or noise?



#### **Warnings for Configuring Drive Parameters**



WARNING: When parameter b012, level of electronic thermal setting, is set to motor FLA rating (Full Load Ampere nameplate rating), the inverter provides solid state motor overload protection at 115% of motor FLA or equivalent. If parameter B012 exceeds the motor FLA rating, the motor may overheat and damaged. Parameter B012, level of electronic thermal setting, is a variable parameter.

#### **Cautions for Configuring Drive Parameters**



**CAUTION**: Be careful to avoid specifying a braking time that is long enough to cause motor overheating. If you use DC braking, we recommend using a motor with a built-in thermistor, and wiring it to the inverter's thermistor input (see "Thermistor Thermal Protection" on page 4-24). Also refer to the motor manufacturer's specifications for duty-cycle recommendations during DC braking.



**HIGH VOLTAGE:** When set RDY function ON, there will be a voltage appear at ... <u>3-47</u> motor output terminals U, V and W even if the motor is in stop mode. So never touch the inverter power terminal even the motor is not running.



**CAUTION:** Do not change Debug mode for safety reasons. Otherwise unexpected ... <u>3-62</u> performances may occur.

#### Warnings for Operations and Monitoring



**WARNING**: Be sure to turn ON the input power supply only after closing the front case. While the inverter is energized, be sure not to open the front case. Otherwise, there is the danger of electric shock.



**WARNING:** Be sure not to operate electrical equipment with wet hands. ... <u>4:3</u> Otherwise, there is the danger of electric shock.



**WARNING:** While the inverter is energized, be sure not to touch the inverter terminals even when the motor is stopped. Otherwise, there is the danger of electric shock.



WARNING: If the retry mode is selected, the motor may suddenly restart after a ... 4-3 trip stop. Be sure to stop the inverter before approaching the machine (be sure to design the machine so that safety for personnel is secure even if it restarts.) Otherwise, it may cause injury to personnel.




**WARNING**: If the power supply is cut OFF for a short period of time, the inverter may restart operating after the power supply recovers if the Run command is active. If a restart may pose danger to personnel, so be sure to use a lock-out circuit so that it will not restart after power recovery. Otherwise, it may cause injury to personnel.



**WARNING:** The Stop Key is effective only when the stop function is enabled. Be sure to enable the Stop Key separately from the emergency stop. Otherwise, it may cause injury to personnel.



**WARNING:** During a trip event, if the alarm reset is applied and the Run command is present, the inverter will automatically restart. Be sure to apply the alarm reset only after verifying the Run command is OFF. Otherwise, it may cause injury to personnel.

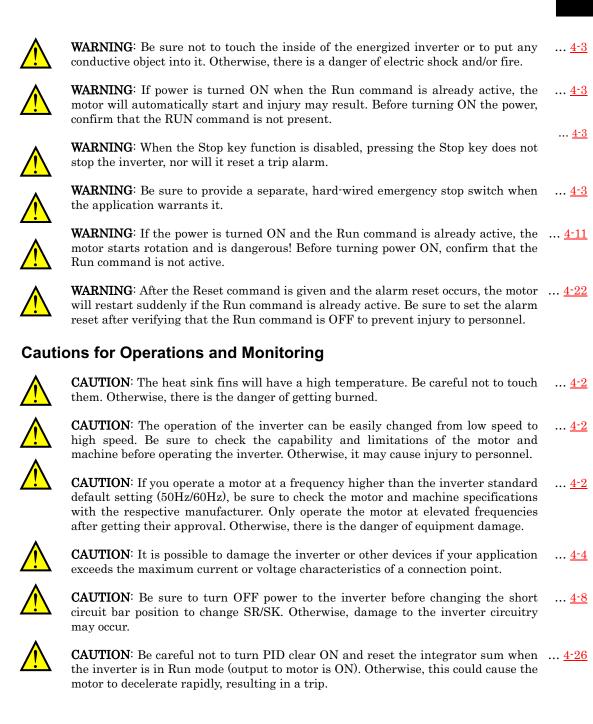



**CAUTION**: The digital outputs (relay and/or open collector) available on the drive must not be considered as safety related signals. The outputs of the external safety relay must be used for integration into a safety related control/command circuit



**HIGH VOLTAGE:** Dangerous voltage exists even after the Safe Stop is activated. ...  $\underline{4:34}$  It does NOT mean that the main power has been removed.

#### Warnings and Cautions for Troubleshooting and Maintenance



**WARNING:** Wait at least five (5) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is the danger of electric shock.



**WARNING:** Make sure that only qualified personnel will perform maintenance, inspection, and part replacement. Before starting to work, remove any metallic objects from your person (wristwatch, bracelet, etc.). Be sure to use tools with insulated handles. Otherwise, there is a danger of electric shock and/or injury to personnel.



**WARNING:** Never remove connectors by pulling on its wire leads (wires for cooling fan and logic P.C.board). Otherwise, there is a danger of fire due to wire breakage and/or injury to personnel.



**CAUTION**: Do not connect the megger to any control terminals such as intelligent ... <u>6-10</u> I/O, analog terminals, etc. Doing so could cause damage to the inverter.



**CAUTION**: Never test the withstand voltage (HIPOT) on the inverter. The inverter has a surge protector between the main circuit terminals above and the chassis ground.



**CAUTION:** Do not connect the megger to any control circuit terminals such as ... <u>6-10</u> intelligent I/O, analog terminals, etc. Doing so could cause damage to the inverter.



**CAUTION:** Never test the withstand voltage (HIPOT) on the inverter. The inverter has a surge protector between the main circuit terminals above and the chassis ground.



**HIGH VOLTAGE**: Be careful not to touch wiring or connector terminals when working with the inverters and taking measurements. Be sure to place the measurement circuitry components above in an insulated housing before using them.  $\cdots$ 

## **General Warnings and Cautions**



WARNING: Never modify the unit. Otherwise, there is a danger of electric shock and/or injury.



**CAUTION:** Withstand voltage test and insulation resistance tests (HIPOT) are executed before the units are shipped, so there is no need to conduct these tests before operation.



**CAUTION:** Do not attach or remove wiring or connectors when power is applied. Also, do not check signals during operation.




**CAUTION:** Be sure to connect the grounding terminal to earth ground.



**CAUTION:** When inspecting the unit, be sure to wait five minutes after turning OFF the power supply before opening the cover.




**CAUTION:** Do not stop operation by switching OFF electromagnetic contactors on the primary or secondary side of the inverter.

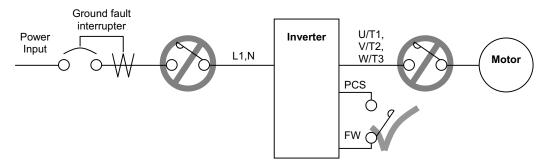

When there has been a sudden power failure while an operation instruction is active, then the unit may restart operation automatically after the power failure has ended. If there is a possibility that such an occurrence may harm humans, then install an electromagnetic contactor (Mgo) on the power supply side, so that the circuit does not allow automatic restarting after the power supply recovers. If the optional remote operator is used and the retry function has been selected, this will also cause automatic restarting when a Run command is active. So, please be careful.



**CAUTION:** Do not insert leading power factor capacitors or surge absorbers between the output terminals of the inverter and motor.

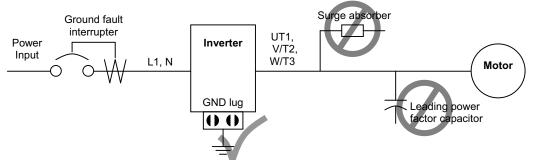

When there has been a sudden power failure while an operation instruction is active, then the unit may restart operation automatically after the power failure has ended. If there is a possibility that such an occurrence may harm humans, then install an electromagnetic contactor (Mgo) on the power supply side, so that the circuit does not allow automatic restarting after the power supply recovers. If the optional remote operator is used and the retry function has been selected, this will also cause automatic restarting when a Run command is active. So, please be careful.





#### CAUTION: EFFECTS OF POWER DISTRIBUTION SYSTEM ON INVERTER

In the case below involving a general-purpose inverter, a large peak current can flow on the power supply side, sometimes destroying the converter module:

- 1. The unbalance factor of the power supply is 3% or higher.
- 2. The power supply capacity is at least 10 times greater than the inverter capacity (or the power supply capacity is 500kVA or more).
- 3. Abrupt power supply changes are expected, due to conditions such as:
  - a. Several inverters are interconnected with a short bus.
  - b. A thyristor converter and an inverter are interconnected with a short bus.
  - c. An installed phase advance capacitor opens and closes.

Where these conditions exist or when the connected equipment must be highly reliable, you MUST install an input side AC-reactor of 3% (at a voltage drop at rated current) with respect to the supply voltage on the power supply side. Also, where the effects of an indirect lightening strike are possible, install a lightening conductor.




#### CAUTION: SUPPRESSION FOR NOISE INTERFERENCE FROM INVERTER

The inverter uses many semiconductor switching elements such as transistors and IGBTs. Thus, a radio receiver or measuring instrument located near the inverter is susceptible to noise interference.

To protect the instruments from erroneous operation due to noise interference, they should be used well away from the inverter. It is also effective to shield the whole inverter structure.

The addition of an EMI filter on the input side of the inverter also reduces the effect of noise from the commercial power line on external devices.

Note that the external dispersion of noise from the power line can be minimized by connecting an EMI filter on the primary side of the inverter.

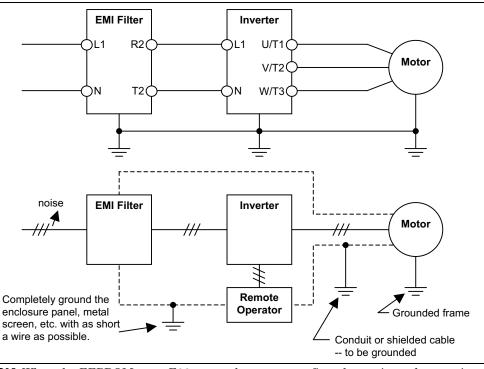



**CAUTION:** When the EEPROM error E08 occurs, be sure to confirm the setting values again.



**CAUTION:** When using normally closed active state settings (C011 to C017) for externally commanded Forward or Reverse terminals [FW] or [RV], the inverter may start automatically when the external system is powered OFF or disconnected from the inverter! So do not use normally closed active state settings for Forward or Reverse terminals [FW] or [RV] unless your system design protects against unintended motor operation.





**CAUTION:** In all the instrumentations in this manual, covers and safety devices are occasionally removed to describe the details. While operating the product, make sure that the covers and safety devices are placed as they were specified originally and operate it according to the instruction manual.



**CAUTION:** Do not discard the inverter with household waste. Contact an industrial waste management company in your area who can treat industrial waste without polling the environment.



#### **UL® Cautions, Warnings and Instructions**

#### Warnings and Cautions for Troubleshooting and Maintenance

The warnings and instructions in this section summarizes the procedures necessary to ensure an inverter installation complies with Underwriters Laboratories® guidelines.



**WARNING:** Use 60/75°C Cu wire only. (for models: WJ200-004M and -007M.)



**WARNING:** Suitable for use on a circuit capable of delivering not more than 100,000 rms Symmetrical Amperes, 240 or 480V maximum.



**WARNING:** When protected by CC, G, J, or R class Fuses, or when Protected By A Circuit Breaker Having An Interrupting Rating Not Less Than 100,000 rms Symmetrical Amperes, 240 or 480 Volts Maximum.



**WARNING:** Install device in pollution degree 2 environment.



**WARNING:** Maximum Surrounding Air Temperature 50°C



WARNING: Solid state motor overload protection is provided in each model



**WARNING:** Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electric Code and any additional local codes



## Terminal symbols and Screw size

Inverter Model	Screw Size	Required Torque (N-m)	Wire range
WJ200-004M	M3.5	1.0	AWG12 (3.3mm <sup>2</sup> )
WJ200-007M	M4	1.4	AWG10 (5.3mm <sup>2</sup> )



#### **Fuse Sizes**

The inverter shall be connected with a UL Listed Cartridge Nonrenewable fuse, rated 600Vac with the current ratings as shown in the table below or Type E Combination Motor Controller marking is to indicate that the unit shall be connected with, LS Industrial System Co., Ltd, Type E Combination Motor Controller MMS Series with the ratings as shown in the table below:

Inverter Model	Fuse (UL-rated, class J, 600V, Maximum allowable current)	Туре Е С.М.С.
WJ200-004M WJ200-007M	50A, AIC 200kA	MMS-32H, 120 V, 40 A

## **Table of Contents**

Safety Messages	
Hazardous High Voltage	i
General Precautions – Read These First!	
Index to Warnings and Cautions in This Manual	
General Warnings and Cautions	
UL Cautions, Warnings and Instructions	
Circuit Breaker and Fuse Sizes	
Circuit Breaker and I use Sizes	Αγ
Table of Contents	
Revisions	
Contact Information	xix
Chapter 1: Getting Started	
Introduction	1-2
WJ200 Inverter Specifications	
Introduction to Variable-Frequency Drives	
Frequently Asked Questions	
Chapter 2: Inverter Mounting and Installation	
Orientation to Inverter Features	
Basic System Description	
Step-by-Step Basic Installation	
Powerup Test	2-16
Using the Front Panel Keypad	2-18
Chapter 3: Configuring Drive Parameters	
Choosing a Programmable Device	2-9
Using the Keypad Devices	
"D" Group: Monitoring Functions	
"F" Group: Main Profile Parameters	
"A" Group: Standard Functions	
"B" Group: Fine Tuning Functions	
"C" Group: Intelligent Terminal Functions	
<u>.</u>	
"H" Group: Motor Constants Functions	
"P" Group: Other Parameters	3-109
Chapter 4: Operations and Monitoring	
Introduction	
Connecting to PLCs and Other Devices	4-4
Control Logic Signal Specifications	
Intelligent Terminal Listing	4-10
Using Intelligent Input Terminals	
Using Intelligent Output Terminals	
Analog Input Operation	
Pulse Train Input Operation	
Analog Output Operation	

Chapter 5: Inverter System Accessories	
Introduction	5-2
Component Description	5-3
Chapter 6: Troubleshooting and Maintenance	
Troubleshooting	6-2
Monitoring Trip Events, History, & Conditions	
Restoring Factory Default Settings	6-14
Maintenance and Inspection	6-15
Warranty	6-22
Appendix A: Glossary and Bibliography	
Glossary	A-2
Bibliography	A-8
Appendix B: ModBus Network Communication	
Introduction	
Connecting the Inverter to ModBus	B-3
Network Protocol Reference	
ModBus Data Listing	B-24
Appendix C: Drive parameter Setting Tables	
Introduction	
Parameter Settings for Keypad Entry	
Additional function For Version 2	
PM Motor Drive	Ver.2-2
Dynamic Braking related functions	Ver.2-15
Read/Copy	Ver.2-16
Inverter mode	Ver.2-16
Thermal detection system Error	Ver.2-17
ModBus Data Listing	
Drive Parameter Setting Tables	Ver.2-48



## Revisions

#### **Revision History Table**

No.	Revision Comments	Date of Issue	Operation Manual No.
1	Initial release of manual NT326X.	2010/05	NT326X
2	Description was reviewed.	2011/08	NT326AX



#### **Contact Information**

Hitachi America, Ltd.
Power and Industrial Division
50 Prospect Avenue
Tarrytown, NY 10591
U.S.A.
Phone: 11-014-631-0600

Phone: +1-914-631-0600 Fax: +1-914-631-3672

Hitachi Europe GmbH Am Seestern 18 D-40547 Dusseldorf Germany

Phone: +49-211-5283-0 Fax: +49-211-5283-649

Hitachi Asia Ltd. 16 Collyer Quay #20-00 hitachi Tower, Singapore 049318 Singapore

Phone: +65-538-6511 Fax: +65-538-9011

Hitachi Asia (Hong Kong) Ltd. 7th Floor, North Tower World Finance Centre, Harbour City Canton Road, Tsimshatsui, Kowloon Hong Kong

Phone: +852-2735-9218 Fax: +852-2735-6793 Hitachi Australia Ltd. Level 3, 82 Waterloo Road North Ryde, N.S.W. 2113 Australia Phone: +61-2-9888-4100

Phone: +61-2-9888-410 Fax: +61-2-9888-4188

Hitachi Industrial Equipment Systems Co., Ltd. AKS Building, 3, kanda Neribei-cho Chiyoda-ku, Tokyo, 101-0022 Japan Phone: +81-3-4345-6910

Phone: +81-3-4345-691 Fax: +81-3-4345-6067

Hitachi Industrial Equipment Systems Co., Ltd. Narashino Division 1-1, Higashi-Narashino 7-chome Narashino-shi, Chiba 275-8611 Japan

Phone: +81-47-474-9921 Fax: +81-47-476-9517



**NOTE:** To receive technical support for the Hitachi inverter you purchased, contact the Hitachi inverter dealer from whom you purchased the unit, or the sales office or factory contact listed above. Please be prepared to provide the following inverter nameplate information:

- 1. Model
- 2. Date of purchase
- 3. Manufacturing number (MFG No.)
- 4. Symptoms of any inverter problem

If any inverter nameplate information is illegible, please provide your Hitachi contact with any other legible nameplate items. To reduce unpredictable downtime, we recommend that you stock a spare inverter.

## **Getting Started**

1

In This	s Chapter	page
-	Introduction	2
-	WJ200 Inverter Specifications	4
_	Introduction to Variable-Frequency Drives	13
_	Frequently Asked Questions	18

### Introduction

#### **Main Features**

Congratulation on your purchase of a WJ200 Series Hitachi inverter! This inverter drive features state-of-the-art circuitry and components to provide high performance. The housing footprint is exceptionally small, given the size of the corresponding motor. The Hitachi WJ200 product line includes more than a dozen inverter models to cover motor sizes from 1/2 horsepower or 1 horsepower, in either 120VAC power input versions.

The main features are:

- 100V class, 0.4 and 0.75kW inverters
- US or EU versions available
- EzSQ (simple programming function) integrated
- Built-in RS485 MODBUS RTU as standard, other FieldBus optional
- New current suppressing function
- Sixteen programmable speed levels
- PID control adjusts motor speed automatically to maintain a process variable value
- Password protection to avoid unexpected parameter change

The design in Hitachi inverters overcomes many of the traditional trade-offs between speed, torque and efficiency. The performance characteristics are:


- High starting torque of 200% at 0.5Hz
- Continuous operation at 100% torque within a 1:10 speed range (6/60Hz / 5/50Hz) without motor derating.
- Fan has ON/OFF selection to provide longer life for cooling fan.

A full line of accessories from Hitachi is available to complete your motor application:

- Integrated USB port for PC communication
- Digital remote operator keypad
- Integrated brake chopper
- EMC filter (footprint type C1) optional


#### **Inverter Specification Label**

The Hitachi WJ200 inverters have product labels located on the right side of the housing, as pictured below. Be sure to verify that the specifications on the labels match your power source, and application safety requirements.

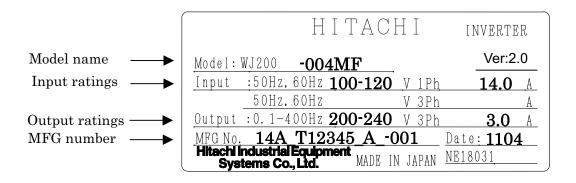

#### **Inverter Specification Label**

The model number for a specific inverter contains useful information about its operating characteristics. Refer to the model number legend below:

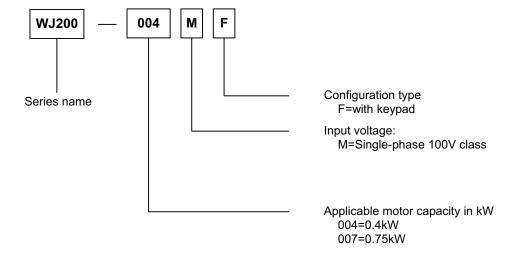

## **WJ200 Inverter Specifications**

#### Model-specific tables for 100V class inverters

The following tables are specific to WJ200 inverters for the 100V class model groups. Note that "General Specifications" on page in this chapter apply to both voltage class groups. Footnotes for all specification tables follow the table below.

Item			Single-ph:	Single-phase 100V class Specifications		
WJ200 inv	erters, 100V m	odels	004MF		007MF	
Applicable	motor size *2	kW	0.4		0.75	
		HP	1/2		1.0	
Rated capa	city (kVA)	100V	1.0		1.7	
		120V	1.2		2.0	
Rated inpu	t voltage		Single-phase: 100	V-10% to 120V +	10%, 50/60Hz ±5%	
Rated outp	ut voltage *3		3-phase: 200 to 2	3-phase: 200 to 240V (proportional to input voltage)		
Rated outp	ut current (A)	<sup>*</sup> 5	3.0 (2.6)		5.0 (4.0)	
Starting to	rque *6		200% @0.5Hz (IM: sens	200% @0.5Hz (IM: sensorless vector control)		
			50% @10% of base fr	quency (PM: sen	sorless vector control)	
Braking	Without resis	stor	100%:≤50Hz			
			50%: ≤ 60Hz			
With resistor			150%			
DC brakin	g		Variable operatin	Variable operating frequency, time, and braking force		
Weight	Weight kg		1.1		1.6	
	lb		2.4		3.1	

Footnotes for the preceding table and the tables that follow:

**Note1:** The protection method conforms to JIS 0920.

Note2: The applicable motor refers to Hitachi standard 3-phase motor (4p). When using other motors, care must be taken to prevent the rated motor current (50/60Hz) from exceeding the rated output current of the inverter.

**Note3:** The output voltage decreases as the main supply voltage decreases (except when using the AVR function). In any case, the output voltage cannot exceed the input power supply voltage.

**Note4:** To operate the motor beyond 50/60Hz, consult the motor manufacturer for the maximum allowable rotation speed.

**Note5:** Use it below the current in () when the ambient temperature exceeds 40°C.

**Note6:** At the rated voltage when using a Hitachi standard 3-phase, 4-pole motor.

Note7: The braking torque via capacitive feedback is the average deceleration torque at the shortest deceleration (stopping from 50/60Hz as indicated). It is not continuous regenerative braking torque. The average deceleration torque varies with motor loss. This value decreases when operating beyond 50Hz. If a large regenerative torque is required, the optional regenerative braking unit and a resistor should be used.

Note8: The frequency command is the maximum frequency at 9.8V for input voltage 0 to 10VDC, or at 19.6mA for input current 4 to 20mA. If this characteristic is not satisfactory for your application, contact your Hitachi representative.

Note9: If the inverter is operated outside the region shown in the graph in the derating curve, the inverter may be damaged or its service life may be shortened. Set bobs Carrier Frequency Adjustment in accordance with the expected output current level. See derating curve section for the detailed information of the inverter operating range.

**Note10:** The storage temperature refers to the short-term temperature during transportation.

Note11: Conforms to the test method specified in JIS C 60068-2-6 :2010(IEC 60068-2-6:2007). For the model types excluded in the standard specifications, contact your Hitachi sales representative.

Note12: Watt losses are calculated values based on specification of main semi-conductors. You must take suitable margin when designing cabinet based on these values. Otherwise there is a possibility of heating trouble.

**Note13:** When the ambient temperature is used by 50C, it is necessary to limit the output current to the value of ().

 $WJ200\ Inverter\ Specifications, continued...$ 

Item				Single-phase 100V class Specifications		
WJ200 inverters, 100V models				004MF	$007 \mathrm{MF}$	
Applicable	motor size	kW		0.4	0.75	
*2		HP		1/2	1	
Rated capa	city (kVA)	100V		1.0	1.7	
		120V		1.2	2.0	
Rated inpu	Rated input voltage			Single-phase: 100V to 120V ±10%, 50/60Hz ±5%		
Rated outp	ut voltage	*3		Three-phase: 200 to 240V (proportional to input voltage)		
Rated output current (A) *13				3.0 (2.6)	5.0 (4.0)	
Braking	Without re	esistor		100%	6:≤50Hz	
*7				50%∶≤60Hz		
With resistor		150%				
DC braking	DC braking			Variable operating frequency, time, and braking force		
Weight kg		1.1	1.6			
lb		lb	2.4	3.5		

## **General Specifications**

The following table applies to all WJ200 inverters.

Item		n	General Specifications
Protective housing *1		*1	IP20
Control n	nethod		Sinusoidal Pulse Width Modulation (PWM) control
Carrier fr	equency		2kHz to 15kHz (derating required depending on the model)
Output fr	equency	range *4	0.1 to 400Hz
Frequenc	y accurac	су	Digital command: $\pm 0.01\%$ of the maximum frequency Analog command: $\pm 0.2\%$ of the maximum frequency (25°C $\pm$ 10°C)
Frequenc	y setting	resolution	Digital: 0.01Hz; Analog: max. frequency/1000
Volt./Freq. characteristic		eristic	V/f control (constant torque, reduced torque, free-V/F): base freq. 30Hz~400Hz adjustable, Sensorless vector control, Closed loop control with motor encoder feedback
Overload	capacity		CT(Heavy duty) : 60 sec. @150%
	Acceleration/deceleration time		0.01 to 3600 seconds, linear and S-curve accel/decel, second accel/decel setting available
Starting t	torque *	6	200% @0.5Hz (IM: sensorless vector control) 50% @10% of base frequency (PM: sensorless vector control)
Input	Freq.	Operator panel	Up and Down keys / Value settings
signal	setting	External signal *8	0 to 10 VDC (input impedance 10k Ohms), 4 to 20mA (input impedance 100 Ohms), Potentiometer (1k to 2k Ohms, 2W)
		Via network	RS485 ModBus RTU, other network option
	FWD/	Operator panel	Run/Stop (Forward/Reverse run change by command)
	REV run		Forward run/stop, Reverse run/stop
		Via network	RS485 ModBus RTU, other network option

	Item	General Specifications
	Intelligent input	FW (forward run command), RV (reverse run command), CF1~CF4
	terminal	(multi-stage speed setting), <b>JG</b> (jog command), <b>DB</b> (external braking), <b>SET</b> (set second motor), <b>2CH</b> (2-stage accel./decel. command), <b>FRS</b> (free run stop
		command), <b>EXT</b> (external trip), <b>USP</b> (startup function), <b>CS</b> (commercial
	Seven terminals,	power switchover), SFT (soft lock), AT (analog input selection), RS (reset),
	sink/source changeable	PTC (thermistor thermal protection), STA (start), STP (stop), F/R
	by a short bar	(forward/reverse), PID (PID disable), PIDC (PID reset), UP (remote control
	68 functions assignable	up function), <b>DWN</b> (remote control down function), <b>UDC</b> (remote control data clear), <b>OPE</b> (operator control), <b>SF1~SF7</b> (multi-stage speed setting; bit operation), <b>OLR</b> (overload restriction), <b>TL</b> (torque limit enable), <b>TRQ1</b> (torque limit changeover1), <b>TRQ2</b> (torque limit changeover2), <b>BOK</b> (Braking
		confirmation), LAC (LAD cancellation), PCLR (position deviation clear), ADD (add frequency enable), F-TM (force terminal mode), ATR (permission of torque command input), KHC (Cumulative power clear), MI1~MI7 (general purpose inputs for EzSQ), AHD (analog command hold), CP1~CP3 (multistage-position switches), ORL (limit signal of zero-return), ORC (trigger signal of zero-return), SPD (speed/position changeover), GS1,GS2 (STO inputs, safety related signals), 485 (Starting communication signal), PRG (executing EzSQ program), HLD (retain output frequency), ROK (permission of run command), EB (rotation direction detection of B-phase),
Output	Intelligent output	DISP (display limitation), NO (no function)  RUN (run signal), FA1~FA5 (frequency arrival signal), OL,OL2 (overload)
signal	terminal	advance notice signal), <b>OD</b> (PID deviation error signal), <b>AL</b> (alarm signal), <b>OTQ</b> (over/under torque threshold), <b>UV</b> (under-voltage), <b>TRQ</b> (torque limit
	48 functions assignable	signal), <b>RNT</b> (run time expired), <b>ONT</b> (power ON time expired), <b>THM</b> (thermal warning), <b>BRK</b> (brake release), <b>BER</b> (brake error), <b>ZS</b> (0Hz detection), <b>DSE</b> (speed deviation excessive), <b>POK</b> (positioning completion),
		ODc (analog voltage input disconnection), OIDc (analog current input disconnection), FBV (PID second stage output), NDc (network disconnect detection), LOG1~LOG3 (Logic output signals), WAC (capacitor life
		warning), <b>WAF</b> (cooling fan warning), <b>FR</b> (starting contact), <b>OHF</b> (heat sink overheat warning), <b>LOC</b> (Low load), <b>MO1~MO3</b> (general outputs for EzSQ),
		IRDY (inverter ready), FWR (forward operation), RVR (reverse operation), MJA (major failure), WCO (window comparator O), WCOI (window
		comparator OI), <b>FREF</b> (frequency command source), <b>REF</b> (run command source), <b>SETM</b> (second motor in operation), <b>EDM</b> (STO (safe torque off) performance monitor), <b>OP</b> (option control signal), <b>NO</b> (no function)
	Monitor output (analog)	Output freq., output current, output torque, output voltage, input power, thermal load ratio, LAD freq., heat sink temperature, general output (EzSQ)
	Pulse train output	[PWM output]
	(0~10Vdc, 32kHz max.)	Output freq., output current, output torque, output voltage, input power, thermal load ratio, LAD freq., heat sink temperature, general output (EzSQ) [Pulse train output]
		Output frequency, output current, pulse train input monitor
Alarm ou	tput contact	ON for inverter alarm (1c contacts, both normally open or closed available.)
Other fur		Free-V/f, manual/automatic torque boost, output voltage gain adjustment, AVR function, reduced voltage start, motor data selection, auto-tuning, motor stabilization control, reverse running protection, simple position
		control, simple torque control, torque limiting, automatic carrier frequency reduction, energy saving operation, PID function, non-stop operation at instantaneous power failure, brake control, DC injection braking, dynamic
		braking (BRD), frequency upper and lower limiters, jump frequencies, curve accel and decel (S, U, inversed U,EL-S), 16-stage speed profile, fine
		adjustment of start frequency, accel and decel stop, process jogging, frequency calculation, frequency addition, 2-stage accel/decel, stop mode
		selection, start/end freq., analog input filter, window comparators, input terminal response time, output signal delay/hold function, rotation direction
		restriction, stop key selection, software lock, safe stop function, scaling function, display restriction, password function, user parameter,
		initialization, initial display selection, cooling fan control, warning, trip retry, frequency pull-in restart, frequency matching, overload restriction, over current restriction, DC bus voltage AVR
Protectiv	e function	Over-current, over-voltage, under-voltage, overload, brake resistor overload,
11000001		CPU error, memory error, external trip, USP error, ground fault detection at power on, temperature error, internal communication error, driver error,
		, , , , , , , , , , , , , , , , , , , ,

I	tem	General Specifications
		thermistor error, brake error, safe stop, overload at low speed, modbus communication error, option error, encoder disconnection, speed excessive, EzSQ command error, EzSQ nesting error, EzSQ execution error, EzSQ user trip
Operating	Temperature	Operating (ambient): -10 to 40°C(*10), / Storage: -20 to 65°C(*11)
environment	Humidity	20 to 90% humidity (non-condensing)
	Vibration *11	5.9m/s <sup>2</sup> (0.6G), 10 to 55 Hz
	Location	Altitude 1,000m or less, indoors (no corrosive gasses or dust)
Coating color		Black
Options		Remote operator unit, cables for the units, braking unit, braking resistor, AC reactor, DC reactor, EMC filter, fieldbus

## **Signal Ratings**


Detailed ratings are in "Control Logic Signal Specifications" in chapter 4.

Signal / Contact	Ratings
Built-in power for inputs	24VDC, 100mA maximum
Discrete logic inputs	27VDC maximum
Discrete logic outputs	50mA maximum ON state current, 27 VDC maximum OFF state voltage
Analog output	10bit / 0 to 10VDC, 2mA
Analog input, current	4 to 19.6 mA range, 20mA nominal
Analog input, voltage	0 to 9.8 VDC range, 10VDC nominal, input impedance $10 \mathrm{k}\Omega$
+10V analog reference	10VDC nominal, 10mA maximum
Alarm relay contacts	250 VAC, 2.5A (R load) max., 0.2A (I load, P.F.=0.4) max.
	100 VAC, 10mA min
	30 VDC, 3.0A (R load) max., 0.7A (I load, P.F.=0.4) max.)
	5 VDC. 100mA min.


#### **Derating Curves**

The maximum available inverter current output is limited by the carrier frequency and ambient temperature. Choosing a higher carrier frequency tends to decrease audible noise, but it also increases the internal heating of the inverter, thus decreasing (derating) the maximum current output capability. Ambient temperature is the temperature just outside the inverter housing—such as inside the control cabinet where the inverter is mounted. A higher ambient temperature decreases (derates) the inverter's maximum current output capacity.

An inverter may be mounted individually in an enclosure or side-by-side with other inverter(s) as shown below. Side-by-side mounting causes greater derating than mounting inverters separately. Graphs for either mounting methods are included in this section. Refer to "Ensure Adequate Ventilation" on page 2-10 for minimum clearance dimensions for both mounting configurations.

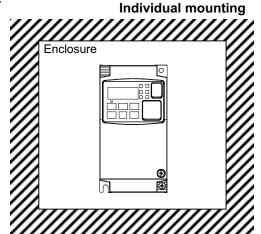

#### Side-by-side mounting

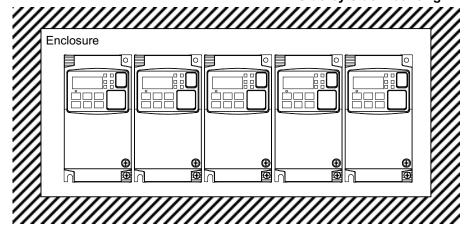

The following table shows which models need derating.

1-ph 100V class	Need
	derating
WJ200-004M	✓
WJ200-007M	✓

✓ : need derating— : need no derating

Use the following derating curves to help determine the optimal carrier frequency setting for your inverter and find the output current derating. Be sure to use the proper curve for your particular WJ200 inverter model number.

#### Legend for Graphs:


Ambient temperature 40°C max., individual mounting

Ambient temperature 50°C max., individual mounting

Ambient temperature 40°C max., side-by-side mounting

Derating curves:


#### Models need no derating

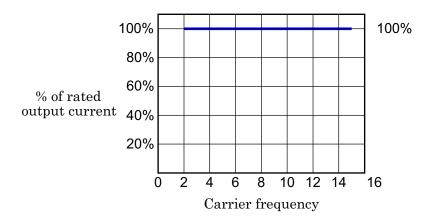


Derating curves, continued...

<u>Models need derating</u>

#### WJ200-004M

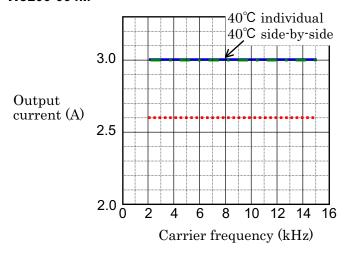

#### WJ200-007M

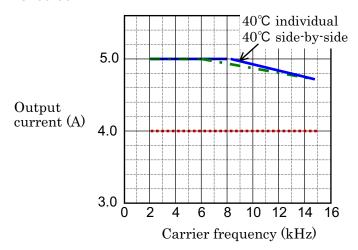

## **Introduction to Variable-Frequency Drives**

#### The Purpose of Motor Speed Control for Industry


Hitachi inverters provide speed control for 3-phase AC induction motors. You connect AC power to the inverter, and connect the inverter to the motor. Many applications benefit from a motor with variable speed, in several ways:

- Energy savings HVAC
- Need to coordinate speed with an adjacent process textile and printing presses
- Need to control acceleration and deceleration (torque)
- Sensitive loads elevators, food processing, pharmaceuticals

#### What is an Inverter

The term *inverter* and *variable-frequency drive* are related and somewhat interchangeable. An electronic motor drive for an AC motor can control the motor's speed by *varying the frequency* of the power sent to the motor.

An inverter, in general, is a device that converts DC power to AC power. The figure below shows how the variable-frequency drive employs an internal inverter. The drive first converts incoming AC power to DC through a rectifier bridge, creating an internal DC bus voltage. Then the inverter circuit converts the DC back to AC again to power the motor. The special inverter can vary its output frequency and voltage according to the desired motor speed.

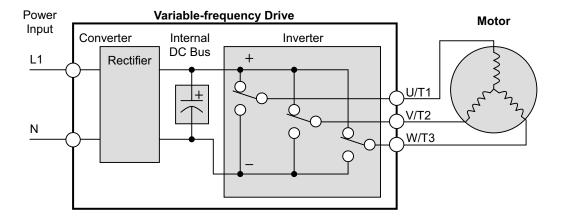


The simplified drawing of the inverter shows three double-throw switches. In Hitachi inverters, the switches are actually IGBTs (insulated gate bipolar transistors). Using a commutation algorithm, the microprocessor in the drive switches the IGBTs on and off at a very high speed to create the desired output waveforms. The inductance of the motor windings helps smooth out the pulses.

#### **Torque and Constant Volts/Hertz Operation**

In the past, AC variable speed drives used an open loop (scalar) technique to control speed. The constant-volts-hertz operation maintains a constant ratio between the applied voltage and the applied frequency. With these conditions, AC induction motors inherently delivered constant torque across the operating speed range.


For some applications, this scalar technique was adequate.

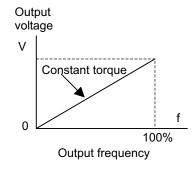

Today, with the advent of sophisticated microprocessors and digital signal processors (DSPs), it is possible to control the speed and torque of AC induction motors with unprecedented accuracy. The WJ200 utilizes these devices to perform complex mathematical calculations required to achieve superior performance. You can choose various torque curves to fit the needs of your application. Constant torque applies the same torque level across the frequency (speed) range. Variable torque, also called reduced torque, lowers the torque delivered at mid-level frequencies. A torque boost setting will add additional torque in the lower half of the frequency range for the constant and variable torque curves. With the free-setting torque curve feature, you can specify a series of data points that will define a custom torque curve to fit your application.

#### **Inverter Output to the Motor**

The AC motor must be connected only to the inverter's output terminals. The output terminals are uniquely labeled (to differentiate them from the input terminals) with the designations U/T1, V/T2, and W/T3. This corresponds to typical motor lead connection designations T1, T2, and T3. It is often not necessary to connect a particular motor lead for a new application. The consequence of swapping any two of the three connections is the reversal of the motor direction. In applications where reversed rotation could cause equipment damage or personnel injury, be sure to verify direction of rotation before attempting full-speed operation.

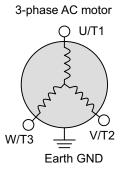

For safety to personnel, you must connect the motor chassis ground to the ground connection at the bottom of the inverter housing.

Notice the three connections to the motor do not include one marked "Neutral" or "Return". The motor represents a balanced "Y" impedance to the inverter, so there is no need for a separate return. In other words, each of the three "Hot" connections serves also as a return for the other connections, because of their phase relationship.

The Hitachi inverter is a rugged and reliable device. The intention is for the inverter to assume the role of controlling power to the motor during all normal operations. Therefore, this manual instructs you not to switch off power to the inverter *while the motor is running* (unless it is an emergency stop). Also, do not install or use disconnect switches in the wiring from the inverter to the motor (except thermal disconnect). Of course, safety-related devices such as fuses must be in the design to break power during a malfunction, as required by NEC and local codes.

#### **Intelligent Functions and Parameters**

Much of this manual is devoted to describing how to use inverter functions and how to configure inverter parameters. The inverter is micro-processor-controlled, and has many independent functions. The microprocessor has an on-board EEPROM for parameter storage. The inverter's front panel keypad provides access to all functions and parameters, which you can access through other devices as well. The general name for all these devices is the *digital operator*; *integrated operator*; or *digital operator* panel. Chapter 2 will show you how to get a motor running, using a minimal set of function commands or configuring parameters.

The optional read/write programmer will let you read and write inverter EEPROM contents from the programmer. This feature is particularly useful for OEMs who need to duplicate a particular inverter's settings in many other inverters in assembly-line fashion.

#### **Braking**


In general, braking is a force that attempts to slow or stop motor rotation. So it is associated with motor deceleration, but may also occur even when the load attempts to drive the motor faster than the desired speed (overhauling). If you need the motor and load to decelerate quicker than their natural deceleration during coasting, we recommend installing a braking resistor. The dynamic braking unit (built into WJ200) sends excess motor energy into a resistor to slow the motor and load (See "Introduction" on page 5-2 and "Dynamic Braking" on page 5-5 for more information). For loads that continuously overhaul the motor for extended periods of time, the WJ200 may not be suitable (contact your Hitachi distributor).


The inverter parameters include acceleration and deceleration, which you can set to match the needs of the application. For a particular inverter, motor, and load, there will be a range of practically achievable accelerations and decelerations.

# **Velocity Profiles**

The WJ200 inverter is capable of sophisticated speed control. A graphical representation of that capability will help you understand and configure the associated parameters. This manual makes use of the velocity profile graph used in industry (shown at right). In the example, *acceleration* is a ramp to a set speed, and *deceleration* is a decline to a stop.


Acceleration and deceleration settings specify the time required to go from a stop to maximum frequency (or vise versa). The resulting slope (speed change divided by time) is the acceleration or deceleration. An increase in output frequency uses the acceleration slope, while a decrease uses the deceleration slope. The accel or decel time a particular speed change depends on the starting and ending frequencies.

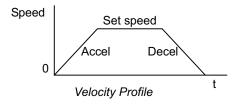

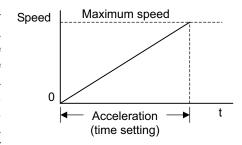


However, the slope is constant, corresponding to the full-scale accel or decel time setting. For example, the full-scale acceleration setting (time) may be 10 seconds – the time required to go from 0 to 60 Hz.

The WJ200 inverter can store up to 16 preset speeds. And, it can apply separate acceleration and deceleration transitions from any preset to any other preset speed. A multi-speed profile (shown at right) uses two or more preset speeds, which you can select via intelligent input terminals. This external control can apply any preset speed at any time.

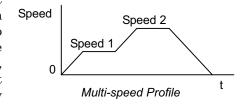

Alternatively, the selected speed is infinitely variable across the speed range. You can use the potentiometer control on the keypad for manual control. The drive accepts analog 0-10VDC signals and 4-20 mA control signals as well.

The inverter can drive the motor in either direction. Separate FW and RV commands select the direction of rotation. The motion profile example shows a forward motion followed by a reverse motion of shorter duration. The speed presets and analog signals control the magnitude of the speed, while the FWD and REV commands determine the direction before the motion starts.

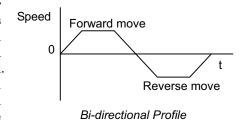



**NOTE**: The WJ200 can move loads in both directions. However, it is not designed for use in servo-type applications that use a bipolar velocity signal that determines direction.

# **Frequently Asked Questions**

- **Q.** What is the main advantage in using an inverter to drive a motor, compared to alternative solutions?
  - **A.** An inverter can vary the motor speed with very little loss of efficiency, unlike mechanical or hydraulic speed control solutions. The resulting energy savings usually pays for the inverter in a relatively short time.
- **Q.** The term "inverter" is a little confusing, since we also use "drive" and "amplifier" to describe the electronic unit that controls a motor. What does "inverter" mean?
  - A. The term *inverter*, *drive*, and *amplifier* are used somewhat interchangeably in industry. Nowadays, the term *drive*, *variable-frequency drive*, *variable-speed drive*, and *inverter* are generally used to describe electronic, microprocessor-based motor speed controllers. In the past, *variable-speed drive* also referred to various mechanical means to vary speed. *Amplifier* is a term almost exclusively used to describe drives for servo or stepper motors.
- **Q.** Although the WJ200 inverter is a variable speed drive, can I use it in a fixed-speed application?
  - **A.** Yes, sometimes an inverter can be used simply as a "soft-start" device, providing controlled acceleration and deceleration to a fixed speed. Other functions of the WJ200 may be useful in such applications, as well. However, using a variable speed drive can benefit many types of industrial and commercial motor applications, by providing controlled acceleration and deceleration, high torque at low speeds, and energy savings over alternative solutions.
- **Q.** Can I use an inverter and AC induction motor in a positioning application?
  - A. That depends on the required precision, and the slowest speed the motor must turn and still deliver torque. The WJ200 inverter will deliver full torque while turning the motor at 6Hz (180RPM). DO NOT use an inverter if you need the motor to stop and hold the load position without the aid of a mechanical brake (use a servo or stepper motion control system).
- **Q.** Can the inverter be controlled and monitored via a network?
  - **A.** Yes. WJ200 inverters have built-in ModBus communications. See Appendix B for more information on network communications.

- **Q.** Why doesn't the motor have a neutral connection as a return to the inverter?
  - **A.** The motor theoretically represents a "balanced Y" load if all three stator windings have the same impedance. The Y connection allows each of the three wires to alternatively serve as input or return on alternate half-cycle.
- **Q.** Does the motor need a chassis ground connection?
  - A. Yes, for several reasons. Most importantly, this provides protection in the event of a short in the motor that puts a hazardous voltage on its housing. Secondly, motors exhibit leakage current that increase with aging. Lastly, a grounded chassis generally emits less electrical noise than an ungrounded one.
- **Q.** What type of motor is compatible with the Hitachi inverters?
  - A. Motor type It must be a three-phase AC induction motor. Use an inverter-grade motor that has at least 800V insulation.
     Motor size In practice, it's better to find the right size motor for your application; then look for the inverter to match the motor.



**NOTE**: There may be other factors that will affect motor selection, including heat dissipation, motor operating speed profile, enclosure type, and cooling method.

- **Q.** How many poles should the motor have?
  - **A.** Hitachi inverters can be configured to operate motors with 2, 4, 6, or 8 poles. The greater the number of the poles, the slower the top motor speed will be, but it will have higher torque at the base speed.
- **Q.** Will I be able to add dynamic (resistive) braking to my Hitachi WJ200 drive after the initial installation?
  - **A.** Yes, the WJ200 inverter already has a dynamic braking circuit built in. Just add the resistor sized to meet the braking requirements. For more information, contact your nearest Hitachi representative.

- **Q.** How will I know if my application will require resistive braking?
  - A. For new applications, it may be difficult to tell before you actually test a motor/drive solution. In general, some application can rely on system losses such as friction to serve as the deceleration force, or otherwise can tolerate a long decel time. These applications will not need dynamic braking. However, applications with a combination of a high-inertia load and a required short decel time will need dynamic braking. This is a physics question that may be answered either empirically or through extensive calculations.
- **Q.** Several options related to electrical noise suppression are available for the Hitachi inverters. How can I know if my application require any of these options?
  - A. The purpose of these noise filters is to reduce the inverter electrical noise so the operation of nearby electrical devices is not affected. Some applications are governed by particular regulatory agencies, and noise suppression is mandatory in those cases, the inverter must have the corresponding noise filter installed. Other applications may not need noise suppression, unless you notice electrical interference with the operation of other devices.
- **Q.** The WJ200 features a PID control. PID loops are usually associated with chemical processes, heating, or process industries in general. How could the PID loop feature be useful in my application?
  - A. You will need to determine the particular main variable in your application the motor affects. That is the process variable (PV) for the motor. Over time, a faster motor speed will cause a faster change in the PV than a slow motor speed will. By using the PID loop feature, the inverter commands the motor to run at the optimal speed required to maintain the PV at the desired value for current conditions. Using the PID loop feature will require an additional sensor and other wiring, and is considered an advanced application.

# **Inverter Mounting** and Installation

In This	Chapter	page
-	Orientation to Inverter Features	2
-	Basic System Description	4
-	Step-by-Step Basic Installation	6
-	Powerup Test	16
-	Using the Front Panel Keypad	18

# **Orientation to Inverter Features**

# **Unpacking and Inspection**

Please take a few moments to unpack your new WJ200 inverter and perform these steps:

- 1. Look for any damage that may have occurred during transportation.
- **2.** Verify the contents of the box include:
  - a. One WJ200 inverter
  - **b.** One instruction Manual
  - c. One WJ200 Quick Reference Guide
- 3. Inspect the specifications label on the side of the inverter. Make sure it matches the product part number you ordered.


# **Main Physical Features**


The WJ200 Series inverters vary in size according to the current output rating and motor size for each model number. All feature the same basic Keypad and connector interface for consistent ease of use. The inverter construction has a heat sink at the back of the housing. The larger models include a fan to enhance heat sink performance. The mounting holes are predrilled in the heat sink for your convenience. Smaller models have two mounting holes, while larger ones have four. Be sure to use all the mounting holes provided.

Never touch the heat sink during or just after operation; it can be very hot.

The electronics housing and front panel are built onto the front of the heat sink.

Inverter Keypad — The inverter uses a digital operator interface, or keypad. The four-digit display can show a variety of performance parameters. LEDs indicate whether the display units are Hertz or Amperes. Other LEDs indicate Power (external), and Run/Stop mode and Program/Monitor Mode status. Membrane keys Run and Stop/Reset control monitor operation. The ESC, SET,  $\triangle$  and  $\nabla$  keys allow an operator to navigate to the inverter's functions and parameter values. The SET key is used when changing a parameter.

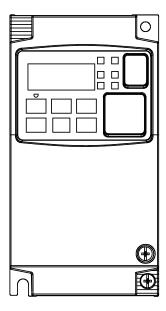

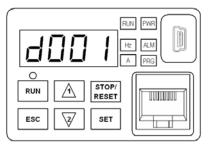


Power Wiring Access - First, ensure no power source is connected to the inverter. If power has been connected, verify that the Power LED is OFF and then wait five minutes after power down to proceed. After removing the terminal cover and front housing cover, the housing partitions that cover the power and motor wiring exits will be able to slide upward as shown below.

Notice the four wire exit slots in the housing partition. This helps keep the power and motor wiring (to the left) separated from the signal-level logic or analog wiring (to the right).

Remove the housing partition and as shown as set them aside in a secure place while wiring. Be sure to replace them afterward. Never operate the inverter with the partition removed or the front housing cover removed.

The power input and motor 3-phase wiring connect to the lower row of the terminals. The upper row of power terminals connect to optional braking units or DC link choke.

The following section in this chapter will describe system design and guide you through a step-by-step installation process. After the section on wiring, this chapter will show how to use the front panel keys to access functions and edit parameters.

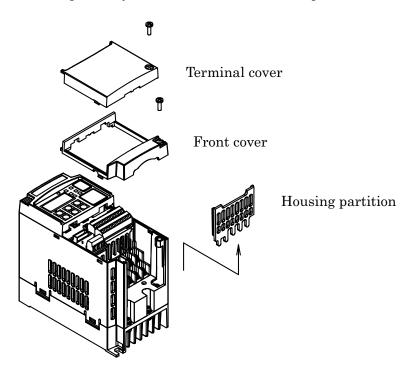




NOTE: The housing partition can be removed without removing the front cover in the following models.

Single-phase 100V: 0.75kW

# **Basic System Description**

A motor control system will obviously include a motor and inverter, as well as a circuit breaker or fuses for safety. If you are connecting a motor to the inverter on a test bench just to get started, that's all you may need for now. But a system can also have a variety of additional components. Some can be for noise suppression, while others may enhance the inverter's braking performance. The figure and table below show a system with all the **optional** components you might need in your finished application.

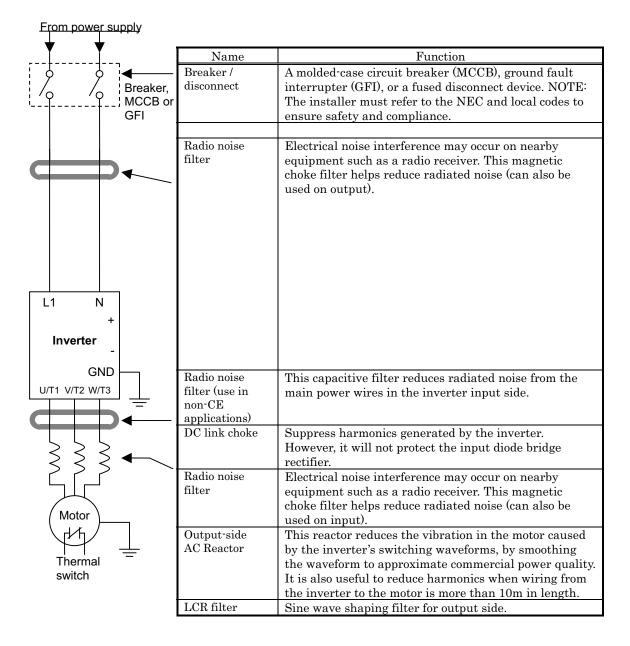



**NOTE**: Note that some components are required for regulatory agency compliance (see chapter 5 and Appendix D).



**WARNING:** In the cases below involving a general-purpose inverter, a large peak current can flow on the power supply side, sometimes destroying the converter module:

- 1. The unbalance factor of the power supply is 3% or higher.
- 2. The power supply capacity is at least 10 times greater than the inverter capacity (or the power supply capacity is 500kVA or more).
- 3. Abrupt power supply changes are expected, due to conditions such as:
  - a. Several inverters are interconnected with a short bus.
  - b. A thyristor converter and an inverter are interconnected with a short bus.
  - c. An installed phase advance capacitor opens and closes.

Where these conditions exist or when the connected equipment must be highly reliable, you MUST install an input-side AC reactor of 3% (at a voltage drop at rated current) with respect to the supply voltage on the power supply side. Also, where the effects of an indirect lightning strike are possible, install a lightning conductor.

# Step-by-Step Basic Installation

This section will guide you through the following basic steps of installation:

Step	Activity	Page	
1	Choose a mounting location in compliance with the Warnings and Cautions.		
	See NOTE below.		
2	Check the mounting location for adequate ventilation		
3	Cover the inverter's ventilation openings to prevent debris from entering.		
4	Check the inverter dimensions for footprint and mounting hole locations.		
5	Study the Cautions, Warnings, wire and fuse sizes, and terminal torque		
	specifications before wiring the inverter.		
6	Connect wiring for the inverter power input.		
7	Wire the inverter output to the motor.		
8	Uncover the inverter's ventilation openings applied in Step 3.		
9	Perform the Powerup Test. (This step includes several sub steps.)	•	
10	Make observations and check your installation.		

#### Choosing a Mounting Location



Step 1: Study the following caution messages associated with mounting the inverter. This is the time when mistakes are most likely to occur that will result in expensive rework, equipment damage, or personal injury.



**CAUTION:** Be sure to install the unit on flame-resistant material such as steel plate. Otherwise, there is the danger of fire.



**CAUTION:** Be sure not to place any flammable materials near the inverter. Otherwise, there is the danger of fire.



**CAUTION:** Be sure not to let the foreign matter enter vent openings in the inverter housing, such as wire clippings, spatter from welding, metal shavings, dust, etc. Otherwise, there is the danger of fire.



**CAUTION:** Be sure to install the inverter in a place that can bear the weight according to the specifications in the text (Chapter 1, Specifications Tables). Otherwise, it may fall and cause injury to personnel.



**CAUTION:** Be sure to install the unit on a perpendicular wall that is not subject to vibration. Otherwise, it may fall and cause injury to personnel.




**CAUTION:** Be sure not to install or operate an inverter that is damaged or has missing parts. Otherwise, it may cause injury to personnel.




**CAUTION:** Be sure to install the inverter in a well-ventilated room that does not have direct exposure to sunlight, a tendency for high temperature, high humidity or dew condensation, high levels of dust, corrosive gas, explosive gas, inflammable gas, grinding-fluid mist, salt damage, etc. Otherwise, there is the danger of fire.

## **Ensure Adequate Ventilation**

Step 2: To summarize the caution messages – you will need to find a solid, non-flammable, vertical surface that is in a relatively clean and dry environment. In order to ensure enough room for air circulation around the inverter to aid in cooling, it is recommended to maintain the specified clearance and the inverter specified in the below diagram.

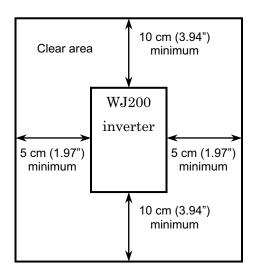

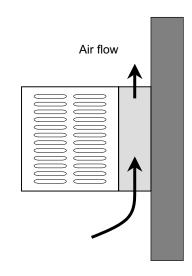




**CAUTION:** Be sure to maintain the specified clearance area around the inverter and to provide adequate ventilation. Otherwise, the inverter may overheat and cause equipment damage or fire.

# **Keep Debris Out of Inverter Vents**

Step 3: Before proceeding to the wiring section, it's a good time to *temporarily* covers the inverter's ventilation openings. Paper and masking tape are all that is needed. This will prevent harmful debris such as wire clippings and metal shavings from entering the inverter during installation.

Please observe this checklist while mounting the inverter:

- 1. The ambient temperature must be in the range of -10 to 40°C.
- 2. Keep any other heat-producing equipment as far away from the inverter as possible.
- 3. When installing the inverter in an enclosure, maintain the clearance around the inverter and verify that its ambient is within specification when the enclosure door is closed.
- 4. Do not remove the front housing at any time during operation.

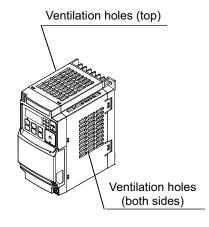


# **Check Inverter Dimensions**



Step 4: Locate the applicable drawing on the following pages for your inverter. Dimensions are given in millimeters format.

#### WJ200-004MF

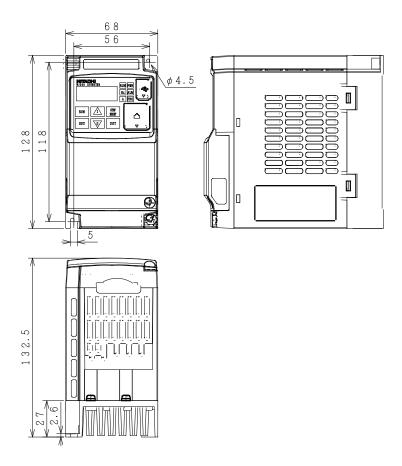




NOTE: Some inverter housing require two mounting screws, while other requires four. Be sure to use lock washers or other means to ensure screws do not loosen due to vibration.

 $Dimensional\ drawings, continued...$ 

# WJ200-007MF

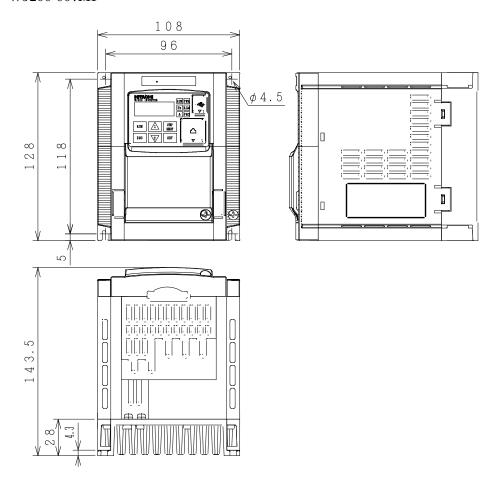

# **Prepare for Wiring**



Step 5: It is very important to perform the wiring steps carefully and correctly. Before proceeding, please study the caution and warning message herebelow.



WARNING: Use 75°C Cu wire only. For models: WJ200-004M.



**WARNING:** "USE 60/75°C Cu wire. For models: WJ200-007M.

WARNING: "Open Type Equipment."



WARNING: "Suitable for use on a circuit capable of delivering not more than 100k rms symmetrical amperes, 120V maximum." For models with suffix M



HIGH VOLTAGE: Be sure to ground the unit. Otherwise, there is a danger of electric shock and/or fire.



HIGH VOLTAGE: Wiring work shall be carried out only by qualified personnel. Otherwise, there is a danger of electric shock and/or fire.



**HIGH VOLTAGE:** Implement wiring after checking that the power supply is OFF. Otherwise, you may incur electric shock and/or fire.



**HIGH VOLTAGE:** Do not connect wiring to an inverter or operate an inverter that is not mounted according to the instructions given in this manual. Otherwise, there is a danger of electric shock and/or injury to personnel.

# **Determining Wire and Fuse Sizes**

The maximum motor currents in your application determines the recommended wore size. The following table gives the wire size in AWG. The "Power Lines" column applies to the inverter input power, output wires to the motor, the earth ground connection, and any other components shown in the "Basic System Description" on page 2-4. The "Signal Lines" column applies to any wire connecting to the two green connectors just inside the front cover panel.

<b>Motor Output</b>			Wiring		Wiring Applicable equipment		uipment
kW	НР	Inverter Model	Power Lines	Signal Lines	Fuse (UL-rated, class J, 600V, Maximum allowable current)	Type E C.M.C.	
0.4	1/2	WJ200-004MF	AWG12 / 3.3mm <sup>2</sup>	18 to 28 AWG / 0.14 to 0.75 mm <sup>2</sup>	50A	MMS-32H, 120 V, 40 A	
0.75	1	WJ200-007MF	AWG10 / 5.3mm <sup>2</sup>	shielded wire (see Note 4)	50A	MMS-32H, 120 V, 40 A	

- **Note 1:** Field wiring must be made by a UL-Listed and CSA-certified closed-loop terminal connector sized for the wire gauge involved. Connector must be fixed by using the crimping tool specified by the connector manufacturer.
- **Note 2:** Be sure to consider the capacity of the circuit breaker to be used.
- Note 3: Be sure to use a larger wire gauge if power line length exceeds 66ft. (20m).
- Note 4: Use 18 AWG / 0.75mm<sup>2</sup> wire for the alarm signal wire ([AL0], [AL1], [AL2] terminals).
- Note 5: Type E Combination Motor Controller marking is to indicate that the unit shall be connected with, LS Industrial System Co., Ltd, Type E Combination Motor Controller MMS Series.

# **Terminal Dimensions and Torque Specs**

The terminal screw dimensions for all WJ200 inverters are listed in table below. This information is useful in sizing spade lug or ring lug connectors for wire terminations.



**WARNING:** Tighten the screws with the specified torque in the table below. Check for any loosening of screws. Otherwise, there is the danger of fire.

Types	Screw Diameter	Width (mm)	Tightening Torque (N•m)
WJ200 – 004M	M3.5	7.6	1.0
WJ200 – 007M	M4	10	1.4


# Wire the Inverter Input to a Supply




Step 6: In this step, you will connect wiring to the input of the inverter. First, you must determine whether the inverter model you have required three-phase power only, or single-phase power only. All models have the same power connection terminals [L1], and [N].


Note the use of ring lug connectors for a secure connection.


#### Single-phase 100V 0.4kW

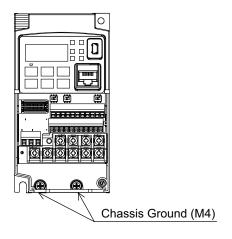

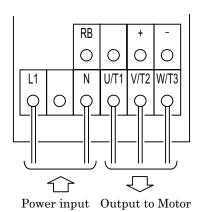

### Single-phase 100V 0.75kW

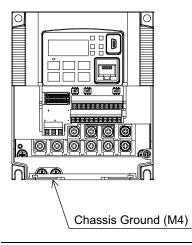

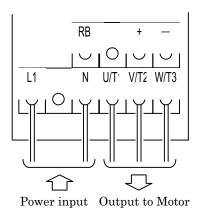



NOTE: An inverter powered by a portable power generator may receive a distorted power waveform, overheating the generator. In general, the generator capacity should be five times that of the inverter (kVA).



**CAUTION:** Be sure that the input voltage matches the inverter specifications:

• Single-phase 100 to 120 V 50/60 Hz (0.4kW,0.75kW) for MF models



**CAUTION:** Be sure not to power a three-phase-only inverter with single-phase power. Otherwise, there is the possibility of damage to the inverter and the danger of fire.



**CAUTION:** Be sure not to connect an AC power supply to the output terminals. Otherwise, there is the possibility of damage to the inverter and the danger of injury and/or fire.



**CAUTION:** Remarks for using ground fault interrupter breakers in the main power supply: Adjustable frequency inverter with integrated CE-filters and shielded (screened) motor cables have a higher leakage current toward earth GND. Especially at the moment of switching ON this can cause an inadvertent trip of ground fault interrupters. Because of the rectifier on the input side of the inverter there is the possibility to stall the switch-off function through small amounts of DC current.

Please observe the following:

- Use only short time-invariant and pulse current-sensitive ground fault interrupters with higher trigger current.
- Other components should be secured with separate ground fault interrupters.
- Ground fault interrupters in the power input wiring of an inverter are not an absolute protection against electric shock.



**CAUTION:** Be sure to install a fuse in each phase of the main power supply to the inverter. Otherwise, there is the danger of fire.



**CAUTION:** For motor leads, ground fault interrupter breakers and electromagnetic contactors, be sure to size these components properly (each must have the capacity for rated current and voltage). Otherwise, there is the danger of fire.

## Wire the Inverter Output to Motor



Step 7: The process of motor selection is beyond the scope of this manual. However, it must be an AC induction motor with three phases. It should also come with a chassis ground lug. If the motor does not have three power input leads, stop the installation and verify the motor type. Other guidelines for wiring the motor include:

- Use an inverter-grade motor for maximum motor life (1600V insulation).
- For standard motors, use the AC reactor accessory if the wiring between the inverter and motor exceeds 10 meters in length.

Simply connect the motor to the terminals [U/T1], [V/T2], and [W/T3] as shown in page 2-4 to 2-19. This is a good time to connect the chassis ground lug on the drive as well. The motor chassis ground must also connect to the same point. Use a star ground (single-point) arrangement, and never daisy-chain the grounds (point-to-point).

- Check the mechanical integrity of each wire crimp and terminal connection.
- Replace the housing partition that covers access to the power connections.



CAUTION: Power terminal assignment is different compared to old models such as L100, L200 series, etc,. Pay attention when wiring the power cable

# **Logic Control Wiring**

After completing the initial installation and powerup test in this chapter, you may need to wire the logic signal connector for your application. For new inverter users/applications, we highly recommend that you first complete the powerup test in this chapter without adding any logic control wiring. Then you will be ready to set the required parameters for logic control as covered in Chapter 4, Operations and Monitoring.


#### **Uncover the Inverter Vents**



Step 8: After mounting and wiring the inverter, remove any covers from the inverter housing. This includes material over the side ventilation ports.



WARNING: Make sure the input power to the inverter is OFF. If the drive has been powered, leave it OFF for five minutes before continuing.

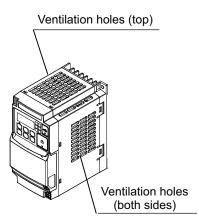

# **Powerup Test**



Step 9: After wiring the inverter and motor, you're ready to do a powerup test. The procedure that follows is designed for the first-time use of the drive. Please verify the following conditions before conducting the powerup test:

- You have followed all the steps in this chapter up to this step.
- The inverter is new, and is securely mounted to a non-flammable vertical surface.
- The inverter is connected to a power source and a motor.
- No additional wiring of the inverter connectors or terminals has been done.
- The power supply is reliable, and the motor is a known working unit, and the motor nameplate ratings match the inverter ratings.
- The motor is securely mounted, and is not connected to any load.

# Goals for the Powerup Test

If there are any exceptions to the above conditions at this step, please take a moment to take any measures necessary to reach this basic starting point. The specific goals of this powerup test are:

- Verify that the wiring to the power supply and motor is correct.
- Demonstrate that the inverter and motor are generally compatible.
- Get an introduction to the use of the built-in operator keypad.

The powerup test gives you an important starting to ensure a safe and successful application of the Hitachi inverter. We highly recommend performing this test before proceeding to the other chapters in this manual.

# **Pre-test and Operational Precautions**

The following instructions apply to the powerup test, or to any time the inverter is powered and operating. Please study the following instructions and messages before proceeding with the powerup test.

- 1. The power supply must have fusing suitable for the load. Check the fuse size chart presented in Step 5, if necessary.
- **2.** Be sure you have access to a disconnect switch for the drive input power if necessary. However, do not turn OFF power during inverter operation unless it is an emergency.
- **3.** Turn the keypad potentiometer to the minimum position (full counter-clockwise).



**CAUTION:** The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned.



**CAUTION:** The operation of the inverter can be easily changed from low speed to high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, there is the danger of injury.



**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage and/or injury.



**CAUTION:** Check the following before and during the Powerup test. Otherwise, there is the danger of equipment damage.

- Is the direction of the motor rotation correct?
- Did the inverter trip during acceleration or deceleration?
- Were the rpm and frequency meter readings as expected?
- Were there any abnormal motor vibration or noise?

# Powering the Inverter

If you have followed all the steps, cautions and warnings up to this point, you're ready to apply power. After doing so, the following events should occur:

- The *POWER* LED will illuminate.
- The numeric (7-segment) LEDs will display a test pattern, then stop at \( \mathcal{O} . \mathcal{O} .
- The Hz LED will be ON.


If the motor starts running unexpectedly or any other problem occurs, press the STOP key. Only if necessary should you remove power to the inverter as a remedy.



NOTE: If the inverter has been previously powered and programmed, the LEDs (other than the POWER LED) may illuminate differently than as indicated above. If necessary, you can initialize all parameters to the factory default settings. See "Restoring Factory Default Settings" on page 6-14.

# **Using the Front Panel Keypad**

Please take a moment to familiarize yourself with the keypad layout shown in the figure below. The display is used in programming the inverter's parameters, as well as monitoring specific parameter values during operation.

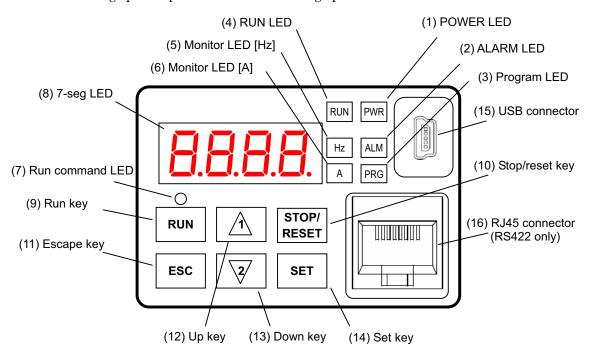


**Key and Indicator Legend** 

Ney and indicator	Legend			
Items	Contents			
(1) POWER LED	Turns ON (Green) while the inverter is powered up.			
(2) ALARM LED	Turns ON (Red) when the inverter trips.			
(3) Program LED	<ul> <li>Turns ON (Green) when the display shows changeable parameter.</li> <li>Blinks when there is a mismatch in setting.</li> </ul>			
(4) RUN LED	Turns ON (Green) when the inverter is driving the motor.			
(5) Monitor LED [Hz]	Turns ON (Green) when the displayed data is frequency related.			
(6) Monitor LED [A]	Turns ON (Green) when the displayed data is current related.			
(7) Run command LED	Turns ON (Green) when a Run command is set to the operator. (Run key is effective.)			
(8) 7-seg LED	Shows each parameter, monitors etc.			
(9) Run key	Makes inverter run.			
(10) Stop/reset key	<ul> <li>Makes inverter decelerates to a stop.</li> <li>Reset the inverter when it is in trip situation</li> </ul>			
(11) ESC key	<ul> <li>➢ Go to the top of next function group, when a function mode is shown</li> <li>➢ Cancel the setting and return to the function code, when a data is shown</li> <li>➢ Moves the cursor to a digit left, when it is in digit-to-digit setting mode</li> <li>➢ Pressing for 1 second leads to display data of dDD I, regardless of current display.</li> </ul>			
(12) Up key	➤ Increase or decrease the data.			
(13) Down key	➤ Pressing the both keys at the same time gives you the digit-to-digit edit.			
(14) SET key	<ul> <li>Go to the data display mode when a function code is shown</li> <li>Stores the data and go back to show the function code, when data is shown.</li> <li>Moves the cursor to a digit right, when it is in digit-to-digit display mode</li> </ul>			
(15) USB connector	Connect USB connector (mini-B) for using PC communication			
(16) RJ45 connector	Connect RJ45 jack for remote operator, (RS422 only)			

# Keys, Modes, and Parameters

The purpose of the keypad is to provide a way to change modes and parameters. The term function applies to both monitoring modes and parameters. These are all accessible through function codes that are primary 4-character codes. The various functions are separated into related groups identifiable by the left-most character, as the table shows.

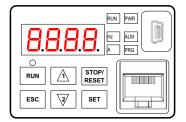


Function Group	Type (Category) of Function	Mode to Access	PRG LED Indicator
"D"	Monitoring functions	Monitor	O
"F"	Main profile parameters	Program	•
"A"	Standard functions	Program	•
"B"	Fine tuning functions	Program	•
"C"	Intelligent terminal functions	Program	•
"H"	Motor constant related functions	Program	•
"P"	Pulse train input, torque, EzSQ, and communication related functions	Program	•
"∪"	User selected parameters	Program	•
"E"	Error codes	-	_

You can see from the following page how to monitor and/or program the parameters.

# **Keypad Navigation Map**

The WJ200 Series inverter drives have many programmable functions and parameters. Chapter 3 will cover these in detail, but you need to access just a few items to perform the powerup test. The menu structure makes use of function codes and parameter codes to allow programming and monitoring with only a 4-digit display and keys and LEDs. So, it is important to become familiar with the basic navigation map of parameters and functions in the diagram below. You may later use this map as a reference.

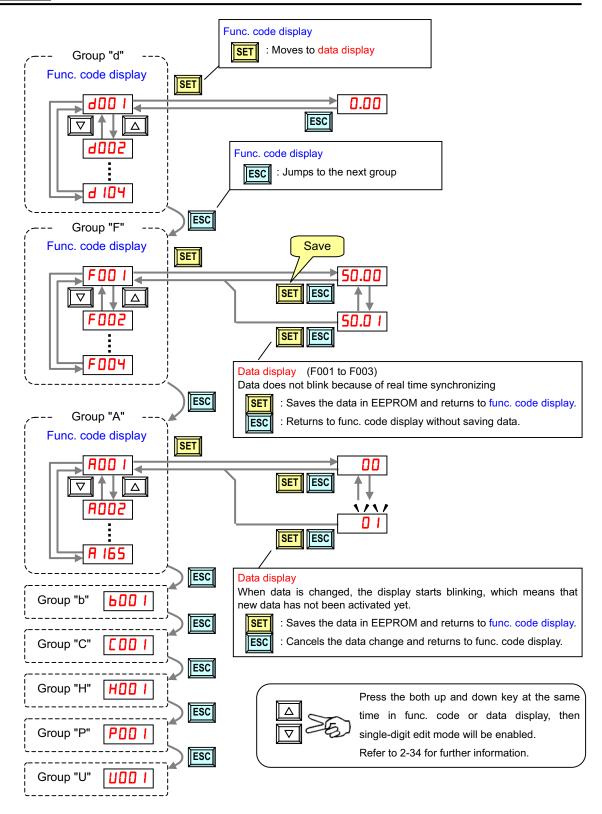




**NOTE**: Pressing the [ESC] key will make the display go to the top of next function group, regardless the display contents. (e.g.  $ADZ I \rightarrow [ESC] \rightarrow bDD I$ )

#### [Setting example]

After power ON, changing from 0.00 display to change the 6083 (carrier frequency) data.

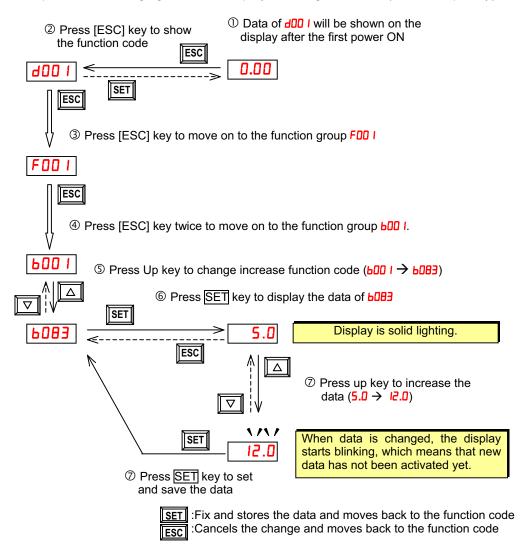



Function code dxxx are for monitor and not possible to change.

Function codes **Fxxx** other than **F004** are reflected on the performance just after changing the data (before pressing SET key), and there will be no blinking.

	When a function code is shown	When a data is shown
ESC key	Move on to the next function group	Cancels the change and moves back to the function code
SET key	Move on to the data display	Fix and stores the data and moves back to the function code
△ key	Increase function code	Increase data value
∇ key	Decrease function code	Decrease data value

#### Note

Keep pressing for more than 1 second leads to d001 display, regardless the display situation. But note that the display will circulates while keep pressing the [ESC] key because of the original function of the key. (e.g.  $FDD I \rightarrow RDD I \rightarrow EDD I \rightarrow ...\rightarrow$  displays 5D.DD after 1 second)

# **Selecting Functions and Editing Parameters**

To prepare to run the motor in the powerup test, this section will show how to configure the necessary parameters:

- 1. Select the digital operator as the source of motor speed command (ADD I=D2).
- **2.** Select the digital operator as the source of the RUN command (ADD2=D2).
- 3. Set the motor base frequency (ADD3) and AVR voltage of the motor (ADB2).
- **4.** Set the motor current for proper thermal protection (**b0 12**).
- **5.** Set the number of poles for the motor (HDD4).

The following series of programming tables are designed for successive use. Each table uses the previous table's final state as the starting point. Therefore, start with the first and continue programming until the last one. If you get lost or concerned that some of the other parameters setting may be incorrect, refer to "Restoring Factory Default Settings" on page 6-14.

**Prepare to Edit Parameters** – This sequence begins with powering ON the inverter, then it shows how to navigate to the "A" Group parameters for subsequent settings. You can also refer to the "Keypad Navigation Map" on page 2-26 for orientation throughout the steps.

Action	Display	Func./Parameter
Turn ON the inverter	0.0	Inverter output frequency displayed (0Hz in stop mode)
Press the ESC key.	400 I	"d" group selected
Press the ESC key 2 times.	A00 I	"A" group selected

**1. Select the digital operator for Speed Command** – The inverter output frequency can be set from several sources, including an analog input, memory setting, or the network, for example. The powerup test uses the keypad as the speed control source for your convenience. Note that the default setting depends on the country.

Action	Display	Func./Parameter
(Starting point)	A00 I	"A" Group selected Speed command source setting
Press the SET key	<u> </u>	☐Potentiometer of ext. operator ☐ IControl terminals ☐Digital operator (F001) ☐ModBus network etc.
Press the △ / ▽ key to select	02	□2Digital operator (selected)
Press the SET key to store	ADD 1	Stores parameter, returns to "ADD I"

2. Select the digital operator for RUN Command – To RUN command causes the inverter to accelerate the motor to the selected speed. The Run command can arrive from various sources, including the control terminals, the Run key on the keypad or the network. In the figure to the right, notice the Run Key Enable LED, just above the Run key. If the LED is ON, the Run key is already selected as the source, and you may skip this step. Note that the default setting depends on the country.



If the Potentiometer Enable LED is OFF, follow these steps below (the table resumes action from the end of the previous table).

Action	Display	Func./Parameter
(Starting point)	A00 I	Speed command source setting
Press the	A005	Run command source setting
Press the SET key	01	☐ IControl terminal ☐2Digital operator ☐3ModBus network input etc.
Press the △ / ▽ key to select	02	□2 Digital operator (selected)
Press the SET key to store	A005	Stores parameter, returns to "RDD2"



**NOTE**: After completing the steps above, the Run Key Enable LED will be ON. This does not mean the motor is trying to run; it means that the RUN key is now enabled. DO NOT press the RUN key at this time – complete the parameter setup first.

**3. Set the Motor Base Frequency and AVR voltage of the motor** – The motor is designed to operate at a specific AC frequency. Most commercial motors are designed for 50/60 Hz operation. First, check the motor specifications. Then follow the steps below to verify the setting or correct it for your motor. DO NOT set it greater than 50/60 Hz unless the motor manufacturer specifically approves operation at the higher frequency.

Action	Display	Func./Parameter
(Starting point)	A005	Run command source setting
Press the	A003	Base frequency setting
D # 1000	60.0.	Default value for the base frequency. US = 60 Hz, Europe = 50 Hz
Press the SET key.	or <b>50.0</b>	
Press the △ / ▽ key to select	60.0	Set to your motor specs (your display may be different)
Press the SET key.	A003	Store parameter, returns to "ADD3"



**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage.

Set the AVR Voltage Setting – The inverter has an Automatic Voltage Regulation (AVR) function. It adjusts the output voltage to match the motor's nameplate voltage rating. The AVR smoothes out fluctuation in the input power source, but note that it does not boost the voltage in the event of a brown-out. Use the AVR setting (RDB2) that most closely matches the one for your motor.

• 200 / 215 / 220 / 230 / 240 VAC

To set the motor voltage, follow the steps on the following table.

Action	Display	Func./Parameter
(Starting point)	A003	Base frequency setting
Press the $\triangle$ key and hold until $\rightarrow$	A085	AVR voltage select
	A530	Default value for AVR voltage: 230VAC
Press the SET key.	or	
	A400	
Press the △ / ▽ key to select	A2 15	Set to your motor specs (your display may be different)
Press the SET key.	A085	Store parameter, returns to "ADB2"

**4. Set the Motor Current** – The inverter has thermal overload protection that is designed to protect the inverter and motor from overheating due to an excessive load. The inverter's uses the motor's current rating to calculate the time-based heating effect. This protection depends on using correct current rating for your motor. The level of electronic thermal setting, parameter **bD 12**, is adjustable from 20% to 100% of the inverter's rated current. A proper configuration will also help prevent unnecessary inverter trip events.

Read the motor's current rating on its manufacturer's nameplate. Then follow the steps below to configure the inverter's overload protection setting.

Action	Display	Func./Parameter	
(Starting point)	A085	AVR voltage select	
Press the ESC key.	P00 1	First "B" Group parameter selected	
Press the △ key and hold until →	PO 15	Level of electronic thermal setting	
Press the SET key.	ь 160	Default value will be 100% of inverter rated current	
Press the △ / ▽ key to select	Ь 140	Set to your motor specs (your display may be different)	
Press the SET key.	PO 15	Store parameter, returns to "bD IZ"	

**5. Set the Number of Motor Poles** – The motor's internal winding arrangement determines its number of magnetic poles. The specification label on the motor usually indicates the number of poles. For proper operation, verify the parameter setting matches the motor poles. Many industrial motors have four poles, corresponding to the default setting in the inverter (HDDH).

Follow the steps in the table below to verify the motor poles setting and change if necessary (the table resumes action from the end of the previous table.)

Action	Display	Func./Parameter	
(Starting point)	PO 15	Level of electronic thermal setting	
Press the ESC key two times	H00 I	"H" Group selected	
Press the	H004	Motor poles parameter	
Press the SET key.	нооч	2 = 2 poles 4 = 4 poles (default) 6 = 6 poles 8 = 8 poles 10 = 10 poles	
Press the △ / ▽ key to select	НООЧ	Set to your motor specs (your display may be different)	
Press the SET key.	H004	Store parameter, returns to "HDD4"	

This step concludes the parameter setups for the inverter. You are almost ready to run the motor for the first time!




**TIP**: If you became lost during any of these steps, first observe the state of the PRG LED. Then study the "<u>Keypad Navigation Map</u> on page 2-26 to determine the current state of the keypad controls and display. As long as you do not press the SET key, no parameter will be changed by keypad entry errors. Note that power cycling the inverter causes it to power up Monitor Mode, displaying the value for **dDD** I (output frequency).

The next section will show you how to monitor a particular parameter from the display. Then you will be ready to run the motor.

# **Monitoring Parameters with the Display**

After using the keypad for parameter editing, it's a good idea to switch the inverter from Program Mode to Monitor Mode. The PRG LED will be OFF, and the Hertz or Ampere LED indicates the display units.

For the powerup test, monitor the motor speed indirectly by viewing the inverter's output frequency. The output frequency must not be confused with base frequency (50/60 Hz) of the motor, or the carrier frequency (switching frequency of the inverter, in the kHz range). The monitoring functions are in the "D" list, located near the top left of the "Keypad Navigation Map" on page 2-26.

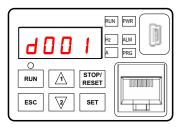

**Output frequency (speed) set -** Resuming keypad operation from the previous table, follow the steps below.

Action	Display	Func./Parameter	
(Starting point)	H004	Motor poles parameter	
Press the ESC key four times	F00 I	FOO I is selected	
Press the SET key.	ь 100	Set frequency displayed	


# **Running the Motor**

If you have programmed all the parameters up to this point, you're ready to run the motor! First, review this checklist:

- 1. Verify the power LED is ON. If not, check the power connections.
- 2. Verify the Run Key Enable LED is ON. If it is OFF, check the #002 setting.
- 3. Verify the PRG LED is OFF. If it is ON, review the instructions above.
- **4.** Make sure the motor is disconnected from any mechanical load.
- **5.** Now, press the RUN key on the keypad. The RUN LED will turn ON.
- **6.** Press the  $[\triangle]$  key for a few seconds. The motor should start turning.
- 7. Press the STOP key to stop the motor rotation.

# Single-Digit Edit Mode

If a target function code or data is far from current data, using the single-digit edit mode makes it quicker. Pressing the up key and down key at the same time leads you to go into the digit-to-digit changing mode.

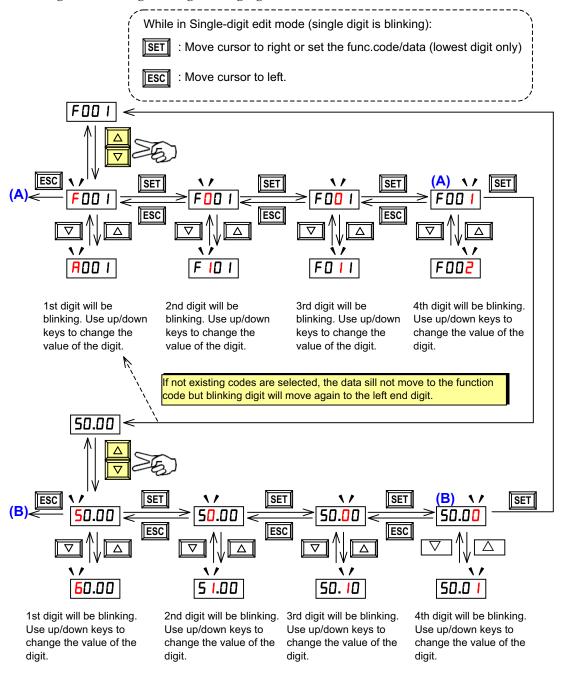



(Note) When pressing [ESC] with cursor on the highest digit, the cursor will jump to the lowest digit. ((A) and (B) in above figure.)



(Note) When pressing up key and down key at the same time in single-digit edit mode, the single-digit edit mode is disabled and goes back to normal mode.

# **Powerup Test Observations and Summary**



Step 10: Reading this section will help you make some useful observations when first running the motor.

**Error Codes** – If the inverter displays an error code (format is "E xx"), see "Monitoring Trip Events, History, & Conditions" on page 6-8 to interpret and clear the error.

Acceleration and Deceleration - The WJ200 inverter has programmable acceleration and deceleration value. The test procedure left these at the default value, 10 seconds. You can observe this by setting the frequency FOO I at about half speed before running the motor. Then press RUN, and the motor will take 5 seconds to reach a steady speed. Press the STOP key to see a 5 second deceleration to a STOP.

State of Inverter at Stop - If you adjust the motor's speed to zero, the motor will slow to a near stop, and the inverter turns the outputs OFF. The high-performance WJ200 can rotate at a very slow speed with high torque output, but not zero (must use servo systems with position feedback for that feature). This characteristic means you must use a mechanical brake for some applications.


Interpreting the Display - First, refer to the output frequency display readout. The maximum frequency setting (parameter #044) defaults to 50 Hz or 60 Hz (Europe and United States, respectively) for your application.

Example: Suppose a 4-pole motor is rated for 60 Hz operation, so the inverter is configured to output 60 Hz at full scale. Use the following formula to calculate the rpm.

Speed in RPM = 
$$\frac{Frequency \times 60}{Pairs\ of\ poles} = \frac{Frequency \times 120}{\#of\ poles} = \frac{60 \times 120}{4} = 1800RPM$$

The theoretical speed for the motor is 1800 RPM (speed of torque vector rotation). However, the motor cannot generate torque unless its shaft turns at a slightly different speed. This difference is called slip. So it's common to see a rated speed of approximately 1750 RPM on a 60 Hz, 4-pole motor. Using a tachometer to measure shaft speed, you can see the difference between the inverter output frequency and the actual motor speed. The slip increases slightly as the motor's load increases. This is why the inverter output value is called "frequency", since it is not exactly equal to motor speed.

Run/Stop Versus Monitor/Program Modes – The Run LED on the inverter is ON in Run Mode, and OFF in Stop Mode. The Program LED is ON when the inverter is in Program Mode, and OFF for Monitor Mode. All four mode combinations are possible. The diagram to the right depicts the modes and the mode transitions via keypad.

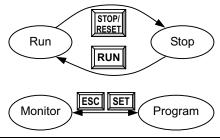



NOTE: Some factory automation devices such as PLCs have alternative Run/Program modes; the device is in either one mode or the other. In the Hitachi inverter, however, Run Mode alternates with Stop Mode, and Program Mode alternates with Monitor Mode. This arrangement lets you program some value while the inverter is operating – providing flexibility for maintenance personnel.

# **Configuring**Drive Parameters

In This C	hapter	page
-	Choosing a Programming Device	2
- (	Using the Keypad Devices	3
- '	D" Group: Monitoring Functions	6
_ '	F" Group: Main Profile Parameters	10
- '	"A" Group: Standard Functions	11
_ '	B" Group: Fine Tuning Functions	43
	"C" Group: Intelligent Terminal Functions	81
	"H" Group: Motor Constants Functions	102
	: Sensorless Vector Control	105
	: Auto-tuning Function	106
_ '	P" Group: Other Parameters	109
	: Simple Positioning	112

# **Choosing a Programming Device**

### Introduction

Hitachi variable frequency drives (inverters) use the latest electronics technology for getting the right AC waveform to the motor at the right time. The benefits are many, including energy savings and higher machine output or productivity. The flexibility required to handle a broad range of applications has required ever more configurable options and parameters — inverter are now a complex industrial automation component. And this can make a product seem difficult to use, but the goal of this chapter is to make this easier for you.

As the powerup test in Chapter 2 demonstrated, you do not have to program very many parameters to run the motor. In fact, most applications would benefit only from programming just a few, specific parameters. This chapter will explain the purpose of each set of parameters, and help you choose the ones that are important to your application.


If you are developing a new application for the inverter and a motor, finding the right parameters to change is mostly an exercise in optimization. Therefore, it is okay to begin running the motor with a loosely tuned system. By making specific, individual changes and observing their effects, you can achieve a finely tuned system.

# **Introduction of Inverter Programming**

The front panel keypad is the first and best way to get to know the inverter's capabilities. Every function or programmable parameter is accessible from the keypad.

# **Using the Keypad Devices**

The WJ200 Series inverter front keypad contains all the elements for both monitoring and programming parameters. The keypad layout is pictured below. All other programming devices for the inverter have a similar key arrangement and function.

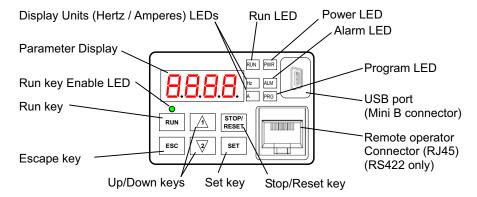


# **Key and Indicator Legend**

- **Run LED** ON when the inverter output is ON and the motor is developing torque (Run Mode), and OFF when the inverter output is OFF (Stop Mode).
- **Program LED** This LED is ON when the inverter is ready for parameter editing (Program Mode). It is OFF when the parameter display is monitoring data (Monitor Mode).
- Run Key Enable LED This LED is ON when the inverter is ready to respond to the Run key, OFF when the Run key is disabled.
- Run Key Press this key to run the motor (the Run Enable LED must be ON first). Parameter FOO4, Keypad Run Key Routing, determines whether the Run key generates a Run FWD or Run REV command.
- Stop/Reset Key Press this key to stop the motor when it is running (uses the programmed deceleration rate). This key will also reset an alarm that has tripped.
- Parameter Display A 4-digit, 7-segment display for parameters and function codes.
- **Display Units, Hertz/Amperes** One of these LEDs will be ON to indicate the units associated with the parameter display.
- **Power LED** This is ON when the power input to the inverter is ON.
- Alarm LED ON when an inverter trip is active (alarm relay contact will be closed).
- **Escape Key** This key is used to escape from the current situation.
- **Up/Down keys** Use these keys alternatively to move up or down the lists of parameter and functions shown in the display, and increment/decrement values.
- Set key This key is used to navigate through the lists of parameters and functions for setting and monitoring parameter values. When the unit is in Program Mode and you have edited a parameter value, press the Set key to write the new value to the EEPROM.

## **Operational Modes**

The RUN and PRG LEDs tell just part of the story; Run Mode and Program Modes are independent modes, not opposite modes. In the state diagram to the right, Run alternates with Stop, and Program Mode alternates with Monitor Mode. This is a very important ability, for it shows that a technician can approach a running machine and change some parameters without shutting down the machine.

The occurrence of a fault during operation will cause the inverter to enter Trip Mode as shown. An event such as an output overload will cause the inverter to exit the Run Mode and turn OFF its output to the motor. In the Trip Mode, any request to run the motor is ignored. You must clear the error by pressing the Stop/Reset switch. See "Monitoring Trip Events, History, & Conditions" on page 6-8.

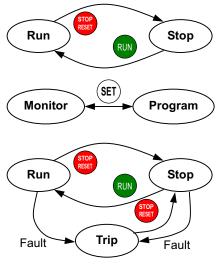

#### Run Mode Edit

The inverter can be in Run Mode (inverter output is controlling motor) and still allow you to edit certain parameters. This is useful in applications that must run continuously, you need some inverter parameter adjustment.


The parameter tables in this chapter have a column titled "Run Mode Edit". An Ex mark ★ means the parameter cannot be edited; a Check mark ✓ means the parameter can be edited. The Software Lock Setting (parameter **bO3**) determines when the Run Mode access permission is in effect and access permission in other conditions, as well. It is the responsibility of the user to choose a useful and safe software lock setting for the inverter operating conditions and personnel. Please refer to "Software Lock Mode" on page 3-52 for more information.

Run Mode Edit	
×	
✓	

# **Control Algorithms**

The motor control program in the WJ200 inverter has two sinusoidal PWM switching algorithms. The intent is that you select the best algorithm for the motor and load characteristics of your application. Both algorithms generate the frequency output in a unique way. Once configured, the algorithm is the basis for other parameter settings as well (see "Torque Control Algorithms" on page 3-21). Therefore, choose the best algorithm early in your application design process.



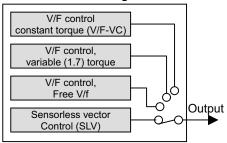

# **Dual Rating Selection**

VT mode in dual rating is not available for 1-phase 100V WJ200.

# "D" Group: Monitoring Functions

You can access important parameter values with the "D" Group monitoring functions, whether the inverter is in Run Mode or Stop Mode. After selecting the function code number for the parameter you want to monitor, press the Function key once to show the value on the display. In functions <code>dOD5</code> and <code>dOD5</code>, the intelligent terminals use individual segments of the display to show ON/OFF status.

If the inverter display is set to monitor a parameter and powerdown occurs, the inverter stores the present monitor function setting. For your convenience, the display automatically returns to the previously monitored parameter upon the next powerup.

	"d" Fur	nction	Run	
Func. Code	Name	Description	Mode Edit	Units
400 1	Output frequency monitor	Real time display of output frequency to motor from 0.0 to 400.0Hz  If <b>b</b> (53 is set high, output frequency (FOO!) can be changed by up/down key with d001 monitoring.	_	Hz
9005	Output current monitor	Filtered display of output current to motor, range is 0 to 655.3 ampere (~99.9 ampere for 1.5kW and less)	_	A
4003	Rotation direction monitor	Three different indications:  "F"Forward  "a"Stop  "r"Reverse	_	_
4004	Process variable (PV), PID feedback monitor	Displays the scaled PID process variable (feedback) value (A015 is scale factor), 0.00 to 10000	_	% times constant
d005	Intelligent input terminal status	Displays the state of the intelligent input terminals:  ON $ 7 6 5 4 3 2 1 $ Terminal numbers	_	_
4006	Intelligent output terminal status	Displays the state of the intelligent output terminals:  ON OFF Relay 11	_	-
רססט	Scaled output frequency monitor	Displays the output frequency scaled by the constant in <b>b085</b> .  Decimal point indicates range:  0 to 3999	_	Hz times constant
4008	Actual frequency monitor	Displays the actual frequency, range is -400 to 400 Hz	_	Hz

	"d" Fur	nction	Run	
Func. Code	Name	Description	Mode Edit	Units
4009	Torque command monitor	Displays the torque command, range is -200 to 200 %	_	%
40 10	Torque bias monitor	Displays the torque bias value, range is -200 to 200 %	_	%
90 15	Output torque monitor	Displays the output torque, range is -200 to 200 %	_	%
40 I3	Output voltage monitor	Voltage of output to motor, Range is 0.0 to 600.0V	_	V
40 IY	Input power monitor	Displays the input power, range is 0 to 999.9 kW		KW
d0 15	Watt-hour monitor	Displays watt-hour of the inverter, range is 0 to 9999000	_	
d0 16	Elapsed RUN time monitor	Displays total time the inverter has been in RUN mode in hours. Range is 0 to 9999 / 1000 to 9999 / 100 to 99,900)	_	hours
40 N	Elapsed power-on time monitor	Displays total time the inverter has been powered up in hours. Range is 0 to 9999 / 1000 to 9999 / 100 to 5999 (10,000 to 99,900)	1	hours
40 IB	Heat sink temperature monitor	Temperature of the cooling fin, range is -20~150	_	$^{\circ}\mathrm{C}$
4022	Life check monitor	Displays the state of lifetime of electrolytic capacitors on the PWB.  Lifetime expired  Normal  Electrolytic caps		_
4023	Program counter monitor [EzSQ]	Range is 0 to 1024	_	_
4024	Program number monitor [EzSQ]	Range is 0 to 9999	_	_
4025	User monitor 0 [EzSQ]	Result of EzSQ execution, range is -2147483647~2147483647		_
4026	User monitor 1 [EzSQ]	Result of EzSQ execution, range is -2147483647~2147483647	_	_
4027	User monitor 2 [EzSQ]	Result of EzSQ execution, range is -2147483647~2147483647	_	_
4029	Positioning command monitor	Displays the positioning command, range is -268435455~+268435455	_	
4030	Current position monitor	Displays the current position, range is -268435455~+268435455	_	_
d050	Dual monitor	Displays two different data configured in <b>b</b> 160 and <b>b</b> 16 1.	_	_
4060	Inverter mode monitor	Displays currently selected inverter mode: I-C:IM I-V:Not available P:PM	-	-

	"d" Fu	nction	Run	
Func. Code	Name	Description	Mode Edit	Units
9 105	DC bus voltage monitor	Voltage of inverter internal DC bus, Range is 0.0 to 999.9	_	V
d 103	BRD load ratio monitor	Usage ratio of integrated brake chopper, range is 0.0~100.0%	_	%
d 104	Electronic thermal monitor	Accumulated value of electronic thermal detection, range is from 0.0~100.0%	_	%

# **Trip Event and History Monitoring**

The trip event and history monitoring feature lets you cycle through related information using the keypad. See "Monitoring Trip Events, History, & Conditions" on page 6-8 for more details.

	"d" Function			
Func. Code	Name	Description	Mode Edit	Units
4080	Trip counter	Number of trip events, Range is 0. to 65530	_	events
d08 I	Trip monitor 1	Displays trip event information:  • Error code  • Output frequency at trip point	_	_
4082	Trip monitor 2	<ul> <li>Motor current at trip point</li> <li>DC bus voltage at trip point</li> <li>Cumulative inverter operation</li> </ul>	_	_
4083	Trip monitor 3	time at trip point  Cumulative power-ON time at trip point	_	_
4084	Trip monitor 4		_	_
d085	Trip monitor 5		_	_
d086	Trip monitor 6		_	_
4090	Warning monitor	Displays the warning code	_	_

## Local Monitoring with keypad connected


The WJ200 inverter's serial port may be connected to an external digital operator. During those times, the inverter keypad keys will not function (except for the Stop key). However, the inverter's 4-digit display still provides the Monitor Mode function, displaying any of the parameters \$\ddot{00}\$ to \$\docume{000}\$. Function \$\beta\$ (50), Monitor Display Select for Networked Inverter, determines the particular \$\docume{000}\$x parameter displayed. Refer to the previous table.

When monitoring the inverter with external keypad connected, please note the following:

- The inverter display will monitor **d00**x functions according to **b !50** setting when a device is already connected to the inverter's serial port at inverter powerup.
- When external keypad is connected, the inverter keypad will also display error codes for inverter trip events. Use the Stop key or inverter Reset function to clear the error. Refer to "Error Codes" on page 6-8 to interpret the error codes.
- The Stop key can be disabled, if you prefer, by using function **5087**.

# "F" Group: Main Profile Parameters

The basic frequency (speed) profile is defined by parameters contained in the "F" Group as shown to the right. The set running frequency is in Hz, but acceleration and deceleration are specified in the time duration of the ramp (from zero to maximum frequency, or from maximum frequency to zero). The motor direction parameter determines whether the keypad Run key produces a FWD or REV command. This parameter does not affect the intelligent terminal [FW] and [REV] functions, which you configure separately.

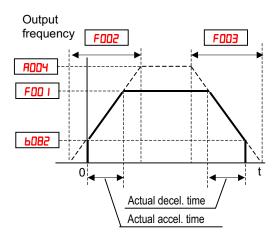

Acceleration 1 and Deceleration 1 are the standard default accel and decel values for the main profile. Accel and decel values for an alternative profile are specified by using parameters <code>Fx92</code> through <code>Fx93</code>. The motor direction selection (<code>FDD4</code>) determines the direction of rotation as commanded only from the keypad. This setting applies to any motor profile (1st or 2nd) in use at t particular time.

	"F" Function			Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
F00 I	Output frequency setting	Standard default target frequency that determines constant motor speed, range is 0.0 / start frequency to maximum frequency (A004)	<b>√</b>	0.0	Hz
F002	Acceleration time (1)	Standard default acceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
F202	Acceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	sec.
F003	Deceleration time (1)	Standard default deceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
F203	Deceleration time (1), 2 <sup>nd</sup> motor		<b>√</b>	10.0	sec.
F004	Keypad RUN key routing	Two options; select codes:  ODForward  OIReverse	×	00	_

Acceleration and deceleration can be set via EzSQ as well via the following parameter.

	"P" Function		Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Jnite
P03 I	Acceleration/Deceleration setting source selection	Two options; select codes:  ODVia operator  OIVia EzSQ	×	00	_

# "A" Group: Standard Functions

The inverter provides flexibility in how you control Run/Stop operation and set the output frequency (motor speed). It has other control sources that can override the <code>ROD I</code> / <code>ROD2</code> settings. Parameter <code>ROD2</code> sets the source selection for the inverter's output frequency. Parameter <code>ROD2</code> selects the Run command source (for FW or RV Run commands). The default settings use the input terminals for <code>-FE</code> (European) models, and the keypad for <code>-FU</code> (USA) models.

	"A" Function		Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
800 I	Frequency source	Eight options; select codes:	×	02	-
		POT on ext. operator			
		<b>D</b> 1Control terminal			
A20 I	Frequency source,	Function F001 setting	X	02	_
	2 <sup>nd</sup> motor	OFModBus network input			
		04Option			
		<b>05</b> Pulse train input			
		סזvia EzSQ			
		Calculate function output			
A005	Run command source	Five options; select codes:	×	02	_
		<b>D</b> 1Control terminal			
		□2Run key on keypad,			
A202	Run command source,	or digital operator	×	02	-
	2 <sup>nd</sup> motor	O3ModBus network input			
		ОЧOption			

**Frequency Source Setting** – For parameter **FOO** I, the following table provides a further description of each option, and a reference to other page(s) for more information.

Code	Frequency Source	Refer to page(s)
00	POT on ext. operator – The range of rotation of the knob matches the range defined by <b>bob2</b> (start frequency) to <b>floor</b> (max. frequency), when external operator is used	-
01	Control terminal – The active analog input signal on analog terminals [O] or [OI] sets the output frequency	4-70, 3-16, 3-40, 3.83
02	Function FOO I setting – The value in FOO I is a constant, used for the output frequency	3-10
03	ModBus network input – The network has a dedicated register for inverter output frequency	B-24
04	Option – Select when an option card is connected and use the frequency source from the option	(manual of each option)
06	Pulse train input – The pulse train given to EA terminal. The pulse train must be 10Vdc, 32kHz max.	3-113
רם	Via EzSQ – The frequency source can be given by the EzSQ function, when it is used	(EzSQ manual)
10	Calculate function output – The Calculated function has user-selectable analog input sources (A and B). The output can be the sum, difference, or product (+, -, x) of the two outputs.	3-41

**Run Command Source Setting** – For parameter **ADD2**, the following table provides a further description of each option, and a reference to other page(s) for more information.

Code	Run Command Source	Refer to page(s)
01	Control terminal – The [FW] or [RV] input terminals control	4-16
_ ,	Run/Stop operation	
02	Keypad Run key – The Run and Stop keys provide control	2-23
03	ModBus network input – The network has a dedicated coil for	B-24
	Run/Stop command and a coil for FW/RV	
04	Option – Select when an option card is connected and use the	(manual of each
	frequency source from the option	option)


**RDD I/RDD2 Override Sources** – The inverter allows some sources to override the setting for output frequency and Run command in **RDD I** and **RDD2**. This provides flexibility for applications that occasionally need to use a different source, leaving the standard settings in **RDD I/RDD2**.

The inverter has other control sources that can temporarily override the parameter ROD I setting, forcing a different output frequency source. The following table lists all frequency source setting methods and their relative priority ("1" is the highest priority).

Priority	RDD I Frequency Source Setting Method	Refer to page
1	[CF1] to [CF4] Multi-speed terminals	4-17
2	[OPE] Operator Control intelligent input	4-35
3	[F-TM] intelligent input	4-42
4	[AT] terminal	4-28
5	ADD I Frequency source setting	3-11

The inverter also has other control sources that can temporarily override the parameter ROD2 setting, forcing a different Run command source. The following table lists all Run command setting methods and their relative priority ("1" is the highest priority).

Priority	ADD2 Run Command Setting Method	Refer to page
1	[OPE] Operator Control intelligent input	4-35
2	[F-TM] intelligent input	4-42
3	<b>ADD2</b> Run command source setting	3-11

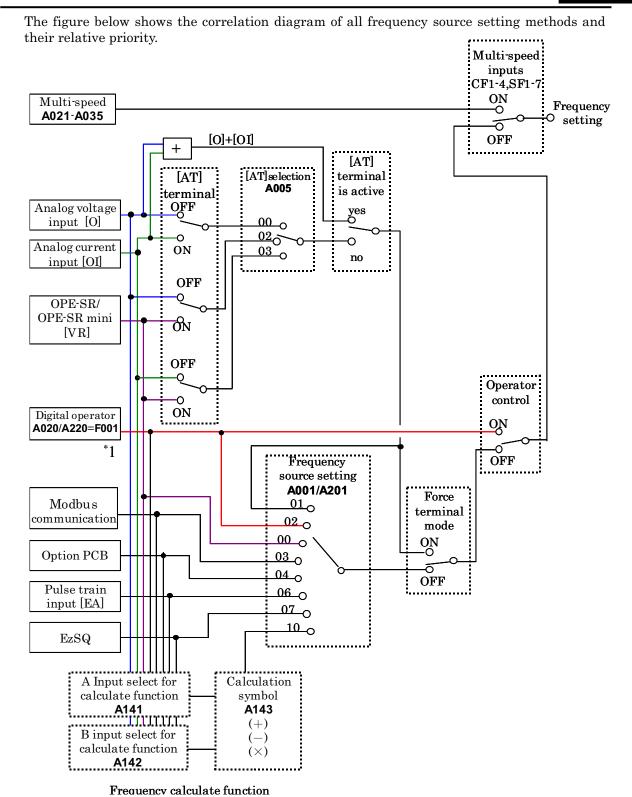



Note 1: You can set the inverter output frequency with function FOO I only when you have specified "02" for the frequency source setting ROO I. If the setting of function ROO I is other than "O2", function FOO I operates as the frequency command monitoring function. And by setting the frequency set in monitoring active (b 163=0 1), you can change the inverter output frequency with function dOO I or dOO7.

## **Basic Parameter Settings**

These settings affect the most fundamental behavior of the inverter – the outputs to the motor. The frequency of the inverter's AC output determines the motor speed. You may select from three different sources for the reference speed. During application development you may prefer using the potentiometer, but you may switch to an external source (control terminal setting) in the finished application, for example.

The base frequency and maximum frequency settings interact according to the graph below (left). The inverter output operation follows the constant V/f curve until it reaches the full-scale output voltage at the base frequency. This initial straight line is the constant-torque part of the operating characteristic. The horizontal line over to the maximum frequency serves to let the motor run faster, but at a reduced torque. This is the constant-power operating range. If you want the motor to output constant torque over its entire operating range (limited to the motor nameplate voltage and frequency rating), then set the base frequency and maximum frequency equal as shown (below right).

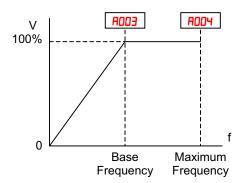

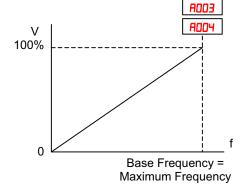



**NOTE**: The "2nd motor" settings in the table in this chapter store an alternate set of parameters for a second motor. The inverter can use the 1st set or 2nd set of parameters to generate the output frequency to the motor.


	"A" Fı	Run	Defau	ılts	
Func. Code	Name	Description	Mode Edit	Initial data	Units
A003	Base frequency	Settable from 30 Hz to the maximum frequency(RDD4) Settable from 30 Hz to the 2 <sup>nd</sup>	×	60.0	Hz
A203	Base frequency, 2 <sup>nd</sup> motor	maximum frequency( <b>A204</b> )	×	60.0	Hz
A004	Maximum frequency	Settable from the base frequency to 400 Hz Settable from the 2 <sup>nd</sup> base	×	60.0	Hz
A504	Maximum frequency, 2 <sup>nd</sup> motor	frequency to 400 Hz	×	60.0	Hz


## **Analog Input Settings**

The inverter has the capability to accept an external analog input that can command the output frequency to the motor. Voltage input (0-10 V) and current input (4-20mA) are available on separate terminals ([O] and [OI] respectively). Terminal [L] serves as signal ground for the two analog inputs. The analog input settings adjust the curve characteristics between the analog input and the frequency output.

Adjusting [O-L] characteristics - In the graph to the right, AO I3 and AO I4 select the active portion of the input voltage range. Parameters AO I I and AO I2 select the start and end frequency of the converted output frequency range, respectively. Together, these four parameters define the major line segment as shown. When the line does not begin at the origin (AD II and AD I3 > 0), then **AD IS** defines whether the inverter outputs OHz or the ROII-specified frequency when the analog input value is less than the **AD I3** setting. When the input voltage is greater than the AOH ending value, the inverter outputs the ending frequency specified by AD 12.

Adjusting [OI-L] characteristics - In the graph to the right, A ID3 and A ID4 select the active portion of the input current range. Parameters A 10 1 and A 102 select the start and end frequency of the converted output frequency range, respectively. Together, these four parameters define the major line segment as shown. When the line does not begin at the origin ( $\mathbf{A} \cdot \mathbf{IO} \cdot \mathbf{I}$  and  $\mathbf{A} \cdot \mathbf{IO3} > 0$ ), then **A IOS** defines whether the inverter outputs OHz or the AID I-specified frequency when the analog input value is less than the A 103 setting. When the input voltage is greater than the A 104 ending value, the inverter outputs the ending frequency specified by A 102.

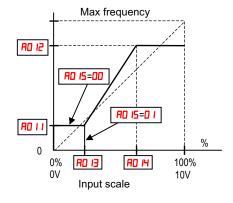

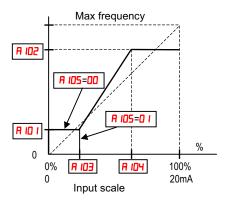

If [AT] is not assigned to any of the intelligent input terminal, inverter recognizes the input [O]+[OI].

**Adjusting [VR-L] characteristics –** This is used when an optional operator is used. Refer to parameters  $H \setminus I \cap H$  of the details.

	"A" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
A005	[AT] selection	Three options; select codes:  ODSelect between [O] and [OI]  at [AT] (ON=OI, OFF=O)	×	00	_
AO 11	[O] input active range start frequency	O2Select between [O] and external POT at [AT] (ON=POT, OFF=O) O3Select between [OI] and external POT at [AT] (ON=POT, OFF=OI) The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0	×	0.00	Hz
AO 12	[O] input active range end frequency	The output frequency corresponding to the analog input range ending point,	×	0.00	Hz
AO 13	[O] input active range start voltage	range is 0.0 to 400.0  The starting point (offset) for the active analog input range, range is 0. to 100.	×	0.	%
AO 14	[O] input active range end voltage	The ending point (offset) for the active analog input range, range is 0. to 100.	×	100.	%
AO 15	[O] input start frequency enable	Two options; select codes:  ODUse offset (AD 11 value)  O1Use 0Hz	×	01	_
AO 16	Analog input filter	Range n = 1 to 31, 1 to 30: $\times$ 2ms filter 31: 500ms fixed filter with $\pm$ 0.1kHz hys.	×	8.	Spl.


**AD 15: External Frequency Filter Time Constant** – This filter smoothes the analog input signal for the inverter's output frequency reference.

- AD 15 sets the filter range from n=1 to 3D. This is a simple moving average calculation, where n (number of samples) is variable.
- RO 15=3 I is a special value. It configures the inverter to use a movable deadband feature. Initially the inverter uses the 500ms of filter time constant. Then, the deadband is employed for each subsequent average of 16 samples. The deadband works by ignoring small fluctuations in each new average: less than ±0.1Hz change. When a 30-sample average exceeds this deadband, then the inverter applies that average to the output frequency reference, and it also becomes the new deadband comparison point for subsequent sample averages.

The example graph below shoes a typical analog input waveform. The filter removes the noise spikes. When a speed change (such as level increase) occurs, the filter naturally has a delayed response. Due to the deadband feature (RO 16=3 1), the final output changes only when the 30-sample average moves past the deadband threshold.



**TIP:** The deadband feature is useful in applications that requires a very stable output frequency but use an analog input for the speed reference. Example application: A grinding machine uses a remote potmeter for operator speed input. After a setting change, the grinder maintains a very stable speed to deliver a uniform finished surface.

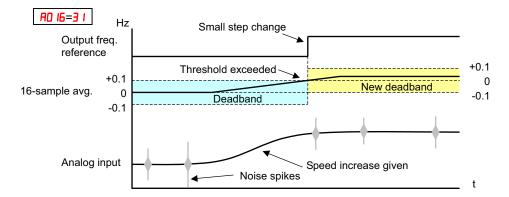

# **EzSQ Related Settings**

The WJ200 series inverter has capability to execute EzSQ program like SJ700 series inverters. Parameters AD 17 is for the EzSQ performance. Please refer to the EzSQ section for the detailed explanation.

## **Multi-speed and Jog Frequency Setting**

**Multi-speed** – The WJ200 inverter has the capability to store and output up to 16 preset frequencies to the motor (AO20 to AO35). As in traditional motion terminology, we call this *multi-speed profile* capability. These preset frequencies are selected by means of digital inputs to the inverter. The inverter applies the current acceleration or deceleration setting to change from the current output frequency to the new one. The first multi-speed setting is duplicated for the second motor settings (the remaining 15 multi-speeds apply only to the first motor).

	"A" Function			Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
AO 19	Multi-speed operation selection	Select codes:  ODBinary operation  (16 speeds selectable	×	00	-
A020	Multi-speed freq. 0	with 4 terminals)  0 IBit operation (8 speeds selectable with 7 terminals)  Defines the first speed of a multi-speed profile, range is 0.0 / start frequency to 400Hz  ROZO = Speed 0 (1st motor)	✓	0.0	Hz
A550	Multi-speed freq. 0, 2 <sup>nd</sup> motor	Defines the first speed of a multi-speed profile or a 2nd motor, range is 0.0 / start	✓	0.0	Hz
HO2 I to HO35	Multi-speed freq. 1 to 15 (for both motors)	frequency to 400Hz  #220 = Speed 0 (2nd motor)  Defines 15 more speeds, range is 0.0 / start frequency to 400 Hz.  #02  =Speed 1 ~ #035=Speed15	✓	See next row	Hz
C 169	Multistage speed/position determination time	Set range is 0. to 200. (x 10ms)	×	0.	ms

There are two ways for speed selection, that are "binary operation" and "bit operation".

For binary operation (AD 19=00), you can select 16 speeds by combination of 4 digital inputs. And for bit operation (AD 19=01), you can select 8 speeds by using 7 digital inputs. Please refer to the following figures for detailed explanation.

(1) Binary operation ("1"=ON)

Billary operation (1 OT)							
Speed	Param.	CF4	CF3	CF2	CF1		
Speed 0	A050	0	0	0	0		
Speed 1	AOS 1	0	0	0	1		
Speed 2	R022	0	0	1	0		
Speed 3	A053	0	0	1	1		
Speed 4	R024	0	1	0	0		
Speed 5	R025	0	1	0	1		
Speed 6	A026	0	1	1	0		
Speed 7	A057	0	1	1	1		
Speed 8	A058	1	0	0	0		
Speed 9	R029	1	0	0	1		
Speed 10	A030	1	0	1	0		
Speed 11	A03 I	1	0	1	1		
Speed 12	R032	1	1	0	0		
Speed 13	R033	1	1	0	1		
Speed 14	A034	1	1	1	0		
Speed 15	A035	1	1	1	1		

(2) Bit operation ("1"=ON, "X"=regardless the condition (ON or OFF))

Speed	Param.	SF7	SF6	SF5	SF4	SF3	SF2	SF1
Speed 0	A050	0	0	0	0	0	0	0
Speed 1	RO2 I	Х	Х	Х	Х	Х	Х	1
Speed 2	A055	Х	X	Х	Χ	Х	1	0
Speed 3	A053	Х	X	Х	Х	1	0	0
Speed 4	R024	Х	Χ	Х	1	0	0	0
Speed 5	R025	Х	Х	1	0	0	0	0
Speed 6	A056	Х	1	0	0	0	0	0
Speed 7	R027	1	0	0	0	0	0	0

**Jog Frequency** – The jog speed setting is used whenever the Jog command is active. The jog speed setting range is arbitrarily limited to 10 Hz, to provide safety during manual operation. The acceleration to the jog frequency is instantaneous, but you can choose from three modes for the best method for stopping the jog operation.

	"A" Function			Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A038	Jog frequency	Defines limited speed for jog, range is from start frequency to 9.99 Hz	✓	6.00	Hz
R039	Jog stop mode	Define how end of jog stops the motor; six options:  OOFree-run stop (invalid during run)  OIControlled deceleration (invalid during run)  OZDC braking to stop(invalid during run)  OJFree-run stop (valid during run)  OHControlled deceleration (valid during run)  OHControlled deceleration (valid during run)  OSDC braking to stop(valid during run)	×	04	_

Note 1: For jogging operation, turn JG terminal ON at first and then turn FW or RV terminal on.

Note 2: When jogging stop mode A039=02 or 05, DC braking data is needed.


Note 3: During jogging operation, frequency can be set with output frequency setting F001.

## **Torque Control Algorithms**

The inverter generates the motor output according to the V/f algorithm selected. Parameter #044 selects the inverter algorithm for generating the frequency output, as shown in the diagram to the right (#244 for 2nd motor). The factory default is 00 (constant torque).


Review the following description to help you choose the best torque control algorithm for your application.

#### **Inverter Torque Control Algorithms**

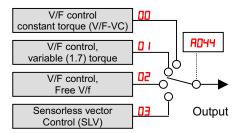

The built-in V/f curves are oriented toward developing constant torque or variable torque characteristics (see graphs below). You can select either constant torque or reduced torque V/f control.

**Constant and Variable (Reduced) Torque** – The graph at right shows the constant torque characteristic from 0Hz to the base frequency ROD3. The voltage remains constant for output frequencies higher than the base frequency.

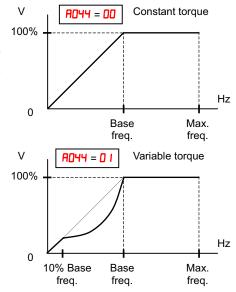

The graph above (right) shows the variable (reduced) torque curve, which has a constant torque characteristic from 0Hz to 10% of the base frequency. This helps to achieve higher torque at low speed with reduced torque curve at higher speeds.


**Sensorless Vector Control** – You can achieve high torque performance (200% torque at 0.5Hz of output frequency) without motor speed feedback (encoder feedback), which is so-called sensorless vector control (SLV control).

Free V/F Control – The free V/F setting function allows you to set an arbitrary V/F characteristics by specifying the voltages and frequencies (b IDD~b I I3) for the seven points on the V/F characteristic curve.

The free V/F frequencies 1 to 7 set by this function must always be in the collating sequence of "1<2<3<4<5<6<7".

Since all the free V/F frequencies are set to 0Hz as default (factory setting), specify their arbitrary values (being set with free-setting V/F frequency 7). The inverter does not operate the free V/F characteristics with the factory setting.


Enabling the free V/F characteristics setting function disables the torque boost selection (ADY I/A2Y I), base frequency setting (ADD3/A2D3), and maximum frequency setting (ADD4/A2D4) automatically. (The inverter regard the value of free-setting V/F frequency 7 (b II2) as the maximum frequency.)

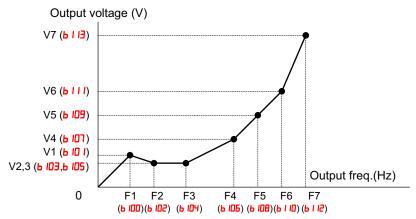

Item	Code	Set range	Remarks
Free-setting V/F freq. (7)	P115	0 to 400 (Hz)	
Free-setting V/F freq. (6)	Ь І 10	Free-setting V/F freq.5 to freq.7 (Hz)	
Free-setting V/F freq. (5)	ь 108	Free-setting V/F freq.4 to freq.6 (Hz)	Setting of the output freg. at each breakpoint
Free-setting V/F freq. (4)	ь 106	Free-setting V/F freq.3 to freq.5 (Hz)	of the V/F characteristic
Free-setting V/F freq. (3)	ь 104	Free-setting V/F freq.2 to freq.4 (Hz)	curve
Free-setting V/F freq. (2)	P 105	Free-setting V/F freq.1 to freq.3 (Hz)	04.10
Free-setting V/F freq. (1)	ь 100	0 to Free-setting V/F freq.2 (Hz)	
Free-setting V/F volt. (7)	ь і іЗ		
Free-setting V/F volt. (6)	Ы		G
Free-setting V/F volt. (5)	ь 109		Setting of the output
Free-setting V/F volt. (4)	ь 107	0.0 to 800.0 (V)	voltage at each breakpoint of the V/F
Free-setting V/F volt. (3)	ь 105		characteristic curve *1)
Free-setting V/F volt. (2)	ь 103		5
Free-setting V/F volt. (1)	ь 10 1		

\*1) Even if the voltage higher than input is set as a free-setting V/F voltage 1 to 7, the inverter output voltage cannot exceed the inverter input voltage or that specified by the AVR voltage selection. Carefully note that selecting an inappropriate control system (V/F characteristics) may result in overcurrent during motor acceleration or deceleration or vibration of the motor or other machine driven by the inverter.


Manual Torque Boost – The Constant and Variable Torque algorithms feature an adjustable *torque boost* curve. When the motor load has a lot of inertia or starting friction, you may need to increase the low frequency starting torque characteristics by boosting the voltage above the normal V/f ratio (shown at right). The function attempts to compensate for voltage drop in the motor primary winding in the low speed range.

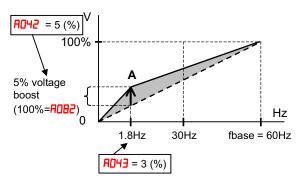

The boost is applied from zero to the base frequency. You set the breakpoint of the boost (point **A** on the graph) by using parameters **FO42** and **FO43**. The manual boost is calculated as an addition to the standard V/f curve.

Be aware that running the motor at a low speed for a long time can cause motor overheating. This is particularly true when manual torque boost is ON, or if the motor relies on a built-in fan for cooling.

Voltage gain – Using parameter AD45 you can modify the voltage gain of the inverter (see graph at right). This is specified as a percentage of the full scale output voltage. The gain can be set from 20% to 100%. It should be adjusted in accordance with the motor specifications. Gain can be changed even during operation in V/f mode, and while stopped in SLV mode. When the setting is changed, reset (RS terminal on/off) is to be executed so that the motor constants are re-calculated.

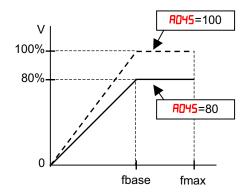

After the setting is done, please be sure to reset (terminal RS on/off) to recalculate the motor constant.

Refrain from change the setting value suddenly (within 10%). Inverter may overvoltage trip due to the rapid change of output voltage.

**Voltage compensation gain and slip compensation gain** — Using parameters RD45 and RD47, you can obtain better performance under automatic torque boost mode (RD4 I=D I). See following table for the concept of adjustment, including other parameters.

Symptom	Adjustment	Adjust item
Motor torque is not enough at low speed (The motor does not rotate at low speed)	Increase the voltage setting for manual torque boost, step by step	AD42 / A242
	Increase the voltage compensation gain for automatic torque boost, step by step	AD46 / A246
	Increase the slip compensation gain for automatic torque boost, step by step	AD47 / A547
	Reduce carrier frequency	ь083
Motor speed decreases (stalls) when a	Increase the slip compensation gain for	PD47 / P247

load is given to the motor	automatic torque boost, step by step	
Motor speed increases when a load is given to the motor	Decrease the slip compensation gain for automatic torque boost, step by step	AD47 / A547
The inverter trips due to overcurrent when a load is given to the motor	Decrease the voltage setting for manual torque boost, step by step	AD45 / B545
	Decrease the voltage compensation gain for automatic torque boost, step by step	A046 / A246
	Decrease the slip compensation gain for automatic torque boost, step by step	R047 / R247

	"A" Funct	Run	Defaults		
Func. Code	Name	Description	Mode Edit	Initial data	Units
AD4 1	Torque boost select	Two options:	×	00	_
A24 I	Torque boost select, 2 <sup>nd</sup> motor	00Manual torque boost 01Automatic torque boost	×	00	_
A045	Manual torque boost value	Can boost starting torque between 0 and 20% above normal V/f curve,	✓	1.0	%
A545	Manual torque boost value, $2^{\mathrm{nd}}$ motor	range is 0.0 to 20.0%	✓	1.0	%
A043	Manual torque boost frequency	Sets the frequency of the V/f breakpoint A in graph (top of previous page) for torque	✓	5.0	%
A243	Manual torque boost frequency, $2^{ m nd}$ motor	boost, range is 0.0 to 50.0%	✓	5.0	%
A044	V/f characteristic curve	Six available V/f curves;  OConstant torque  OReduced torque (1.7)  OFree V/F  OSensorless vector (SLV)	×	00	-
A544	V/f characteristic curve, 2 <sup>nd</sup> motor		×	00	_
A045	V/f gain	Sets voltage gain of the inverter, range is 20. to 100.%	✓	100.	%
A245	V/f gain, 2 <sup>nd</sup> motor		✓	100.	%
A046	Voltage compensation gain for automatic torque boost	Sets voltage compensation gain under automatic torque boost, range is 0. to 255.	✓	100.	_
A246	Voltage compensation gain for automatic torque boost, 2 <sup>nd</sup> motor	50050, failge is 0. to 200.	✓	100.	_
РОЧТ	Slip compensation gain for automatic torque boost	Sets slip compensation gain under automatic torque boost, range is 0. to 255.	<b>✓</b>	100.	_
A247	Slip compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	100.	_

## DC Braking (DB) Settings

Normal DC braking performance— The DC braking feature can provide additional stopping torque when compared to a normal deceleration to a stop. DC braking is particularly useful at low speeds when normal deceleration torque is minimal.





When you set **AOS** I to **O** I (Enable during stop), and the RUN command (FW/RV signal) turns OFF, the inverter injects a DC voltage into the motor windings during deceleration below a frequency you can specify (**AOS2**).

The braking power (ADS4) and duration (ADS5) can both be set. You can optionally specify a wait time before DC braking (ADS3), during which the motor will free run.

**DC Braking – Frequency Detection**—You can instead set DC braking to operate during RUN mode only, by setting RO5 I to O2 (Frequency detection). In this case DC braking operates when the output frequency comes down to the one you specified in RO52 while the RUN command is still active. Refer to the graphs figures below.

External DB and Internal DC braking are invalid during the frequency detection mode.

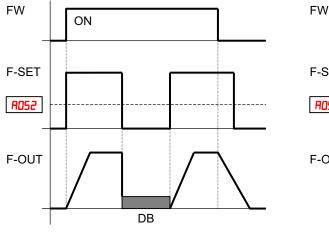

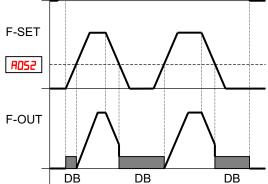

ON

Ex.1) Step change in F-SET.

Ex.2) Analog change in F-SET.

Example 1, (above left) shows the performance with ROS I=O2 with a step-changing frequency reference. In this case, when the reference goes to 0, the inverter immediately starts DC braking because the set point drops below the value specified in ROS2. DC braking continues until the set point exceeds ROS2. There will be no DC braking at next downward transition because the FW input is OFF.

Example 2, (above right) shows a gradually changing frequency reference, for example by analog input. In this case, there will be a DC braking period at starting because the frequency set point is lower than the value specified in **FD52**.



**CAUTION:** Be careful to avoid specifying a braking time that is long enough to cause motor overheating. If you use DC braking, we recommend using a motor with a built-in thermistor, and wiring it to the inverter's thermistor input (see "Thermistor Thermal Protection" in chapter 4). Also refer to the motor manufacturer's specifications for duty-cycle recommendations during DC braking.

DC braking performance at start can also be set separately (AOST) and AOSE). And carrier frequency of DC braking performance can also be set separately (AOSE).




**CAUTION:** Be careful to avoid specifying a braking carrier frequency that is high enough to cause inverter and motor overheating. If you use DC braking, we recommend using a motor with a built-in thermistor, and wiring it to the inverter's thermistor input (see "Thermistor Thermal Protection" in chapter 4).

Also refer to the motor manufacturer's specifications for duty-cycle recommendations during DC braking.

	"A" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
A05 I	DC braking enable	Three options; select codes:  ODDisable  O IEnable during stop	×	00	_
A052	DC braking frequency	D2Frequency detection The frequency at which DC braking begins, range is from the start frequency (bDB2) to 60Hz	×	0.5	Hz
A053	DC braking wait time	The delay from the end of controlled deceleration to start of DC braking (motor free runs	×	0.0	sec.
A054	DC braking force for deceleration	until DC braking begins), range is 0.0 to 5.0 sec. Level of DC braking force, settable from 0 to 100%	×	50.	%
R055	DC braking time for deceleration	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	×	0.5	sec.
A056	DC braking / edge or level detection for [DB] input	Two options; select codes:  ODEdge detection O ILevel detection	×	01	_
A057	DC braking force at start	Level of DC braking force at start, settable from 0 to 100%	×	0.	%
A058	DC braking time at start	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	×	0.0	sec.
A059	Carrier frequency during DC braking	Carrier frequency of DC braking performance, range is from 2.0 to 15.0kHz	×	5.0	sec.


# **Frequency-related Functions**

Frequency Limits – Upper and lower limits can be imposed on the inverter output frequency. These limits will apply regardless of the source of the speed reference. You can configure the lower frequency limit to be greater than zero as shown in the graph. The upper limit must not exceed the rating of the motor or capability of the machinery. The maximum frequency setting (RODY/R2DY) takes precedence over frequency upper limit (ROD5 1/R25 1).

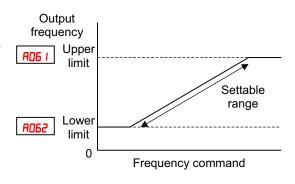


	"A" Fu	ınction	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A06 I	Frequency upper limit	Sets a limit on output frequency less than the maximum frequency (ADD4).	×	0.00	Hz
R26 I	Frequency upper limit, 2nd motor	Range is from frequency lower limit (#052) to maximum frequency (#004).  0.0 setting is disabled   >0.0 setting is enabled   Sets a limit on output frequency less than the maximum frequency (#204).  Range is from frequency lower limit (#252) to maximum frequency (#204).  0.0 setting is disabled   >0.0 setting is enabled	×	0.00	Hz
A065	Frequency lower limit	Sets a limit on output frequency greater than zero. Range is start frequency (6082) to	×	0.00	Hz
A262	Frequency lower limit, 2nd motor	frequency upper limit (AOS I) 0.0 setting is disabled >0.0 setting is enabled Sets a limit on output frequency greater than zero. Range is start frequency (LOB2) to frequency upper limit (A2S I) 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz

**Jump Frequencies** – Some motors or machines exhibit resonances at particular speed(s), which can be destructive for prolonged running at those speeds. The inverter has up to three *jump frequencies* as shown in the graph. The hysteresis around the jump frequencies causes the inverter output to skip around the sensitive frequency values.

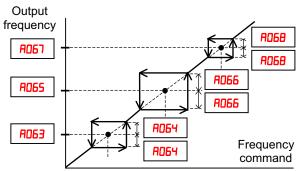

	"A" Function			Defau	lts
Func. Code	Name	Description	Initial data	Units	
A063 A065 A067	Jump freq. (center) 1 to 3	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency)	×	0.0 0.0 0.0	Hz
A064 A066 A068	Jump freq. width (hysteresis) 1 to 3	Range is 0.0 to 400.0 Hz Defines the distance from the center frequency at which the jump around occurs Range is 0.0 to 10.0 Hz	×	0.5 0.5 0.5	Hz

**Acceleration stop/Deceleration stop** – The acceleration stop and deceleration stop frequency setting allows you to make the inverter wait, upon starting the motor or upon decelerating the motor, until the motor slip becomes less when the motor load causes a large moment of inertia. Use this function if the inverter trips because of overcurrent when starting or decelerating the motor. This function operates with every acceleration and deceleration pattern, regardless the acceleration and deceleration curve selection (AOSI and AOSE). Instead of setting AOSE, AOIO, A ISH and A ISS, acceleration and deceleration can be held by intelligent input configured as "B3:HLD".

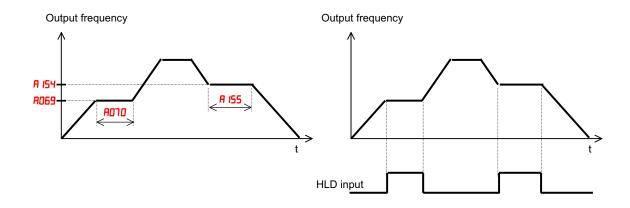

	"A" Function			Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A069	Acceleration hold frequency	Sets the frequency to hold acceleration, range is 0.0 to 400.0Hz	×	0.00	Hz
סרסא	Acceleration hold time	Sets the duration of acceleration hold, range is 0.0 to 60.0 seconds	×	0.0	sec.
A 154	Deceleration hold frequency	Sets the frequency to hold deceleration, range is 0.0 to 400.0Hz	×	0.0	Hz
A 155	Deceleration hold time	Sets the duration of deceleration hold, range is 0.0 to 60.0 seconds	×	0.0	sec.

### **PID Control**

When enabled, the built-in PID loop calculates an ideal inverter output value to cause a loop feedback process variable (PV) to move closer in value to the set point (SP). The frequency command serves as the SP. The PID loop algorithm will read the analog input for the process variable (you specify the current or voltage input) and calculate the output.


	"A" Fund	etion	Run	Defau	ılts
Func. Code	Name	Description	Mode Edit	Initial data	Units
ו רם	PID enable	Enables PID function, three option codes: 00PID Disable	×	00	_
AOJS	PID proportional gain	OlPID Enable Olimbia Control Olimbia Contro	✓	1.0	_
яот <u>Э</u>	PID integral time constant	Integral time constant has a range of 0.0 to 3600 seconds Derivative time constant has a	✓	1.0	sec.
РСОЧ	PID derivative time constant	range of 0.0 to 100 seconds	<b>✓</b>	0.00	sec.
A075	PV scale conversion	Process Variable (PV), scale factor (multiplier), range of 0.01 to 99.99	×	1.00	_
<i>я</i> от6	PV source	Selects source of Process Variable (PV), option codes: OO[OI] terminal (current in) OI[O] terminal (voltage in) OZModBus network OJPulse train input OCCalculate function output	×	00	_
ררם	Reverse PID action	Two option codes:  ODPID input = SP-PV  O IPID input = -(SP-PV)	×	00	_
ACJ8	PID output limit	Sets the limit of PID output as percent of full scale, range is 0.0 to 100.0%	×	0.0	%
A019	PID feed forward selection	Selects source of feed forward gain, option codes:  ODDisabled OI[O] terminal (voltage in) OZ[OI] terminal (current in)	×	00	_
A 156	PID sleep function action threshold	Sets the threshold for the action, set range 0.0~400.0 Hz	×	0.00	Hz
A 157	PID sleep function action delay time	Sets the delay time for the action, set range 0.0~25.5 sec	×	0.0	sec.




**NOTE**: The setting AD73 for the integrator is the integrator's time constant Ti, not the gain. The integrator gain Ki = 1/Ti. When you set AD73 = 0, the integrator is disabled.

In standard operation, the inverter uses a reference source selected by parameter RODI for the output frequency, which may be a fixed value (FDDI), a variable set by the front panel potentiometer, or value from an analog input (voltage or current). To enable PID operation, set RDI = II. This causes the inverter to calculate the target freq, or setpoint.

A calculated target frequency can have a lot of advantages. It lets the inverter adjust the motor speed to optimize some other process of interest, potentially saving energy as well. Refer to the figure below. The motor acts upon the external process. To control that external process, the inverter must monitor the process variable. This requires wiring a sensor to either the analog input terminal [O] (voltage) or terminal [OI] (current).

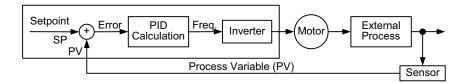

When enabled, the PID loop calculates the ideal output frequency to minimize the loop error. This means we no longer command the inverter to run at a particular frequency, but we specify the ideal value for the process variable. That ideal value is called the setpoint, and is specified in the units of the external process variable. For a pump application it may be gallons/minute, or it could be air velocity or temperature for an HVAC unit. Parameter #075 is a scale factor that relates the external process variable units to motor frequency. The figure below is a more detailed diagram of the function.

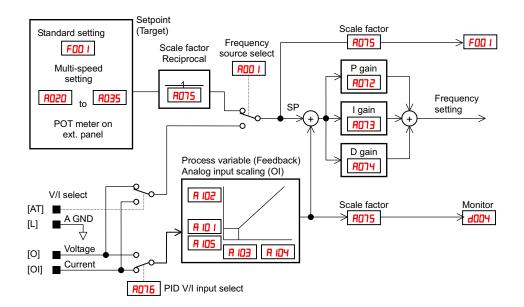


# **PID Loop Configuration**

The inverter's PID loop algorithm is configurable for various applications.


**PID Output Limit -** The PID loop controller has a built-in output limit function. This function monitors the difference between the PID setpoint and the loop output (inverter output frequency), measured as a percentage of the full scale range of each. The limit is specified by parameter **ADTB**.

- When the difference | (Setpoint loop output) | is smaller than or equal to the ADTO limit value, the loop controller operates in its normal linear range.
- When the difference | (Setpoint loop output) | is larger than the ADTO limit value, the loop controller changes the output frequency as needed so that the difference does not exceed the limit.

The diagram below shows PID setpoint changes and the related output frequency behavior when a limit value in **AD78** exists.

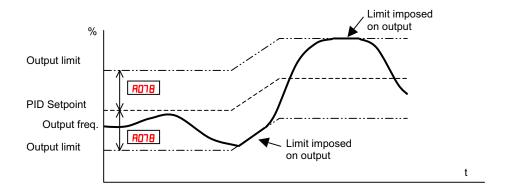


**Deviation (error) Inversion -** In typical heating loops or ventilation loops, an increase in energy into the process results in an *increasing* PV. In this case, the Loop Error = (SP - PV). For cooling loops, an increase in energy into the process results in a *decreasing* PV. In this case, the Loop Error = -(SP - PV). Use **FIGT** to configure the error term.

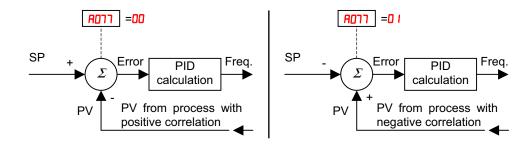

**PID deviation output –** If PID deviation "\varepsilon" exceeds the value in **CO44**, output signal configured as **O4** (OD) is activated.

**PID feedback comparison output** – If PID feedback is out of the range between **CO52** and **CO53** output signal configured as **3** *I* (FBV) is activated.

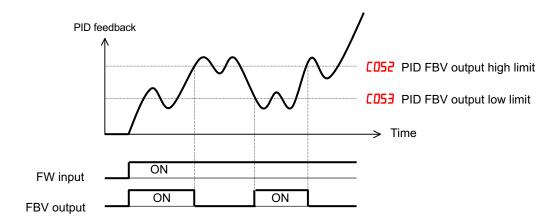


**PID scaling –** When PID scale parameter (AD75) is set, following variables are scaled.

(monitored) = (variable)  $\times$  (A075)

d004	F001	A011	A012	A020	A220	A021	A022
A023	A024	A025	A026	A027	A028	A029	A030
A031	A032	A033	A034	A035	A101	A102	A145

# **PID Sleep Function**

The inverter shuts off the output when the PID output becomes less than the specified value (A 156) in case of PID is set enabled, or shuts off when the frequency command becomes less than the specified value in case of PID is set disabled. And if the PID output or frequency command exceeds the specified value (A 156) for a specified period (A 157), inverter automatically restarts the operation. This is the PID sleep function.

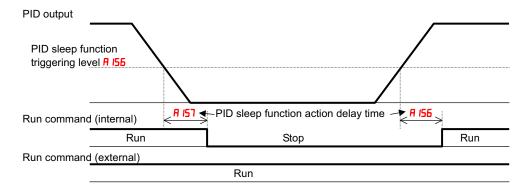

✓ PID Sleep function is always enabled, even the PID function is disabled.

## **Automatic Voltage Regulation (AVR) Function**

The automatic voltage regulation (AVR) feature keeps the inverter output waveform at a relatively constant amplitude during power input fluctuations. This can be useful if the installation is subject to input voltage fluctuations. However, the inverter cannot boost its motor output to a voltage higher than the power input voltage. If you enable this feature, be sure to select the proper voltage class setting for your motor.

	"A" Funct	ion	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A08 I	AVR function select	Automatic (output) voltage regulation, selects from three type of AVR functions, three	×	02	-
A28 I	AVR function select, $2^{\mathrm{nd}}$ motor	option codes:  OOAVR enabled OIAVR disabled O2AVR enabled except during deceleration	×	02	_
A085	AVR voltage select	200/215/220/230/240	×	200	V
A585	AVR voltage select, 2 <sup>nd</sup> motor		×	200	V
A083	AVR filter time constant	Define the time constant of the AVR filter, range is 0 to 10 sec.	×	0.300	sec.
A084	AVR deceleration gain	Gain adjustment of the braking performance, range is 50 to 200%	×	100.	%

Note: The motor behave as generator during deceleration and the energy is regenerated to the drive. As a result, the DC voltage in the inverter increases and cause over-voltage trip when exceeding the OV level. When the voltage is set high, deceleration time can be set shorter thanks to the energy consumption due to the incensement of loss in inverter. In order to set deceleration time shorter without over-voltage trip, please try to set AVR off during deceleration or to tune the AR filter time constant and AVR deceleration gain.

## **Energy Savings Mode / Optional Accel/Decel**

**Energy Saving Mode** – This function allows the inverter to deliver the minimum power necessary to maintain speed at any given frequency. This works best when driving variable torque characteristic loads such as fans and pumps. Parameter **ADB5=D I** enables this function and ROBE controls the degrees of its effect. A setting of 0.0 yields slow response but high accuracy, while a setting of 100 will yield a fast response with lower accuracy.

	"A" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
A085	Energy-saving operation mode	Two option codes:  ODNormal operation  O IEnergy-saving operation	×	00	-
A086	Energy-saving mode tuning	Range is 0.0 to 100 %.	×	50.0	%

The acceleration time is controlled so that the output current below the level set by the Overload Restriction Function if enabled (Parameters **b02 1**, **b022**, and **b023**). If Overload Restriction is not enabled, then the current limit used is 150% of the inverter's rated output current.

The deceleration time is controlled so that the output current is maintained below 150% of the inverter's rated current, and the DC bus voltage is maintained below the OV Trip level (400V).



NOTE: If the load exceeds the rating of the inverter, the acceleration time may be increased.



**NOTE**: If using a motor with a capacity that is one size smaller than the inverter rating, enable the Overload Restriction function (bD2 l) and set the Overload Restriction Level (6022) to 1.5 times the motor nameplate current.




NOTE: Be aware that the acceleration and deceleration times will vary, depending on the actual load conditions during each individual operation of the inverter.



NOTE: When analog input is a source of frequency command, be sure to set analog filter S RD 15=3 I (500ms). Otherwise, there can be the case that this energy saving function doesn't work well.

#### Second Acceleration and Deceleration Functions

The WJ200 inverter features two-stage acceleration and deceleration ramps. This gives flexibility in the profile shape. You can specify the frequency transition point, the point at which the standard acceleration (FOO2) or deceleration (FOO3) changes to the second acceleration (ADS2) or deceleration (ADS3). Or, you can use intelligent input [2CH] to trigger this transition. These profile options are also available for the second motor settings. Select a transition method via **ADS4** as depicted below. Be careful not to confuse the second acceleration/deceleration settings with settings for the second motor!

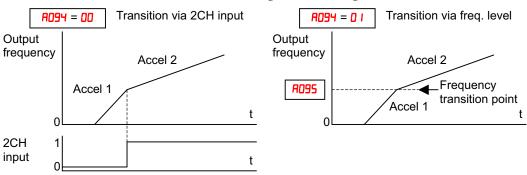

	"A" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
A092	Acceleration time (2)	Duration of 2 <sup>nd</sup> segment of acceleration, range is:	✓	10.00	sec.
A592	Acceleration time (2), 2 <sup>nd</sup> motor	0.01 to 3600 sec.	<b>✓</b>	10.00	sec.
A093	Deceleration time (2)	Duration of 2 <sup>nd</sup> segment of deceleration, range is:	✓	10.00	sec.
A293	Deceleration time (2), 2 <sup>nd</sup> motor	0.01 to 3600 sec.	✓	10.00	sec.
A094	Select method to switch to Acc2/Dec2 profile	Three options for switching from 1st to 2nd accel/decel:  DD2CH input from terminal D1Transition frequency D2Forward and reverse  Output frequency at which Accel1 switches to Accel2, range is 0.0 to 400.0 Hz	×	00	1
A594	Select method to switch to Acc2/Dec2 profile, 2 <sup>nd</sup> motor		×	00	_
A095	Acc1 to Acc2 frequency transition point		×	0.0	Hz
A295	Acc1 to Acc2 frequency transition point, 2 <sup>nd</sup> motor		×	0.0	$_{ m Hz}$
A096	Dec1 to Dec2 frequency transition point	Output frequency at which Decel1 switches to Decel2,	×	0.0	Hz
A596	Dec1 to Dec2 regularity transition point, 2 <sup>nd</sup> motor	range is 0.0 to 400.0 Hz	×	0.0	Hz




NOTE: For A095 and A095 (and for 2nd motor settings), if you set a very rapid Acc1 or  $lacktrel{\Box}$  Dec1 time (less than 1.0 second), the inverter may not be able to change rates to Acc2 or Dec2 before reaching the target frequency. In that case, the inverter decreases the rate of Acc1 or Dec1 in order to achieve the second ramp to the target frequency.

## Accel/Decel


Standard acceleration and deceleration is linear. The inverter CPU can also calculate an S-curve acceleration or deceleration curve as shown. This profile is useful for favoring the load characteristics in particular applications.


Curve settings for acceleration and deceleration are independently selected. To enable the S-curve, use function **A097** (acceleration) and **A098** (deceleration).

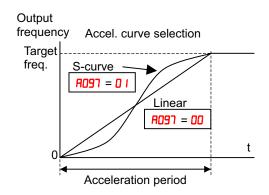

	"A" Func	tion	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
R097	Acceleration curve selection	Set the characteristic curve of Acc1 and Acc2, five options:	×	01	_
R098	Deceleration curve selection	ODlinear OlS-curve OZU-curve OJInverse U-curve OHEL S-curve Set the characteristic curve of Dec1 and Dec2, options are same as above (AOS1)	×	01	-
A 13 I	Acceleration curve constant	Range is 01 to 10. Range is 01 to 10.	×	02	-
A 135	Deceleration curve constant	1441180 10 01 00 101	×	02	_
A 150	Curvature of EL-S-curve at the start of acceleration	Range is 0 to 50%	×	10.	%
A 15 I	Curvature of EL-S-curve at the end of acceleration	Range is 0 to 50%	×	10.	%
A 152	Curvature of EL-S-curve at the start of deceleration	Range is 0 to 50%	×	10.	%
A 153	Curvature of EL-S-curve at the end of deceleration	Range is 0 to 50%	×	10.	%

See next page for the details.

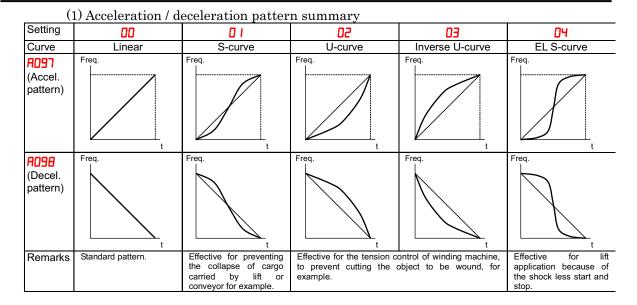


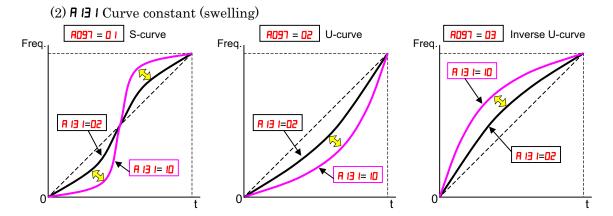

Large A 13 I value will result in a big swelling. A 132 is the same concept as above.

### (3) A ISO~A IS3 Curvature of EL-S-curve

When using EL-S-curve pattern, you can set the curvatures individually for acceleration and deceleration. If all the curvatures are set to 50%, the EL-S-curve pattern will be equivalent to the S-curve pattern.

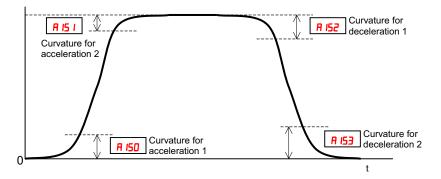

For use of EL-S curve be sure to use select frequency source as multi-speed, to avoid nuisance change of frequency during acceleration and deceleration.

# **Additional Analog Input Settings**


**Input Range Settings** – The parameters in the following table adjust the input characteristics of the analog current input. When using the inputs to command the inverter output frequency, these parameters adjust the starting and ending ranges for the current, as well as the output frequency range. Related characteristic diagrams are located in "Analog Input Settings" on page 3-15.

Analog sampling setting is the value specified in AD 16.

	"A" Function			Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A 10 I	[OI] input active range start frequency	The output frequency corresponding to the analog	×	0.00	Hz
A 102	[OI] input active range end frequency	input range starting point, range is 0.0 to 400.0 Hz The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	×	0.0	Hz
A 103	[OI] input active range start current	The starting point (offset) for the current input range,	×	20.	%
A 104	[OI] input active range end current	range is 0. to 100.% The ending point (offset) for the current input range, range is 0. to 100.%	×	100.	%
A 105	[OI] input start frequency select	Two options; select codes:  ODUse offset (A IO I value)  O IUse 0Hz	×	00	-


Refer to parameter **AD I I** to **AD I5** for analog voltage input.

**Analog Input Calculate Function** – The inverter can mathematically combine two input sources into one value. The Calculate function can either add, subtract, or multiply the two selected sources. This provides the flexibility needed by various applications. You can use the result for the output frequency setting (use ROO = IO) or for the PID Process Variable (PV) input (use ROO = IO).

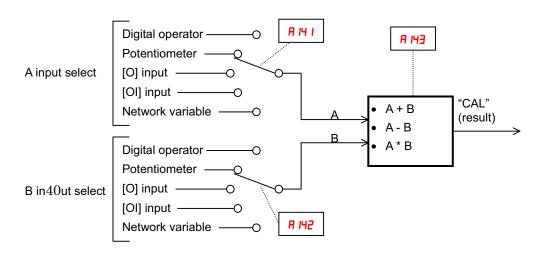

	"A" Function		Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
A 14 I	A input select for calculate	Seven options:	×	02	_
	function	00Operator	^		
A 142	B input select for calculate	01VR	×	03	_
	function	02Terminal [O] input			
		<b>D3</b> Terminal [OI] input			
		<b>04</b> RS485			
		<b>05</b> Option			
		רםPulse train input			
		Seven options:			
		00Operator			
		0 IVR			
		02Terminal [O] input			
		03Terminal [OI] input			
		<b>04</b> RS485			
		<b>05</b> Option			
		סזPulse train input			
A 143	Calculation symbol	Calculates a value based on	×	00	_
		the A input source (A 14 I	^		
		selects) and B input source			
		(A M2 selects).			
		Three options:			
		<b>00</b> ADD (A input + B input)			
		01SUB (A input - B input)			
		<b>02</b> MUL (A input * B input)			

**Add Frequency** – The inverter can add or subtract on offset value to the output frequency setting which is specified by **FOO** I (will work with any of the five possible sources). The ADD Frequency is a value you can store in parameter **A I45**. The ADD Frequency is summed with or subtracted from the output frequency setting only when the [ADD] terminal is ON. Function **A I45** selects whether to add or subtract. By configuring an intelligent input as the [ADD] terminal, your application can selectively apply the fixed value in **A I45** to offset (positively or negatively) the inverter output frequency in real time.

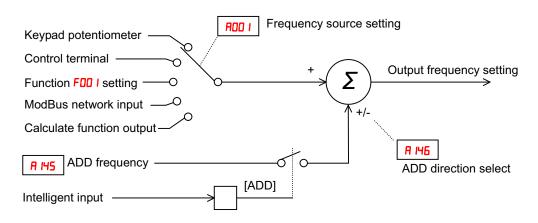

	"A" Function			Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A 145	ADD frequency	An offset value that is applied to the output frequency when	✓	0.00	Hz
A 146	ADD direction select	the [ADD] terminal is ON. Range is 0.0 to 400.0 Hz Two options: ODPlus (adds # 145 value to the output frequency setting) OIMinus (subtracts # 145 value from the output frequency setting)	×	00	-

**Input Range Settings** – The parameters in the following table adjust the input characteristics of the VR (POT meter on external operator) input. When using the inputs to command the inverter output frequency, these parameters adjust the starting and ending ranges for the current, as well as the output frequency range. Related characteristic diagrams are located in "Analog Input Settings" in this chapter.

Analog sampling setting is the value specified in **AD 15**.

	"A" Funct	ion	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A 16 I	[VR] input active range start frequency	The output frequency corresponding to the analog	×	0.00	Hz
A 162	[VR] input active range end frequency	input range starting point, range is 0.0 to 400.0 Hz The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	×	0.00	Hz
A 163	[VR] input active range start %	The starting point (offset) for the current input range,	×	0.	%
A 164	[VR] input active range end %	range is 0. to 100.% The ending point (offset) for the current input range, range is 0. to 100.%	×	100.	%
A 165	[VR] input start frequency select	Two options; select codes:  ODUse offset (A 15 I value)  O IUse OHz	×	01	_

Refer to parameter AD II to AD I5 for analog voltage input.

# "B" Group: Fine Tuning Functions

The "B" Group of functions and parameters adjust some of the more subtle but useful aspects of motor control and system configuration.

#### **Automatic Restart Mode**


The restart mode determines how the inverter will resume operation after a fault causes a trip event. The five options provide advantages for your applications. Frequency matching allows the inverter to read the motor speed by virtue of its residual magnetic flux and restart the output at the corresponding frequency. The inverter can attempt a restart a certain number of times depending on the particular trip event:

- Over-current trip, restart up to 3 times
- Over-voltage trip, restart up to 3 times

When the inverter reaches the maximum number of restarts (3), you must power cycle the inverter to reset its operation.

Other parameters specify the allowable under-voltage level and the delay time before restarting. The proper settings depend on the typical fault conditions for your application, the necessity of restarting the process in unattended situations, and whether restarting is always say.

# Power failure < allowable power fail Time (Ы22), Inverter resumes

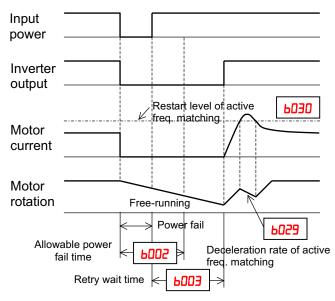

If the actual power failure time is shorter than the **b002** set value, inverter resumes from the set frequency in **b011**.

The resumption mode is called "active frequency matching" and the inverter performs reduced voltage start to avoid over-current trip.

If the motor current exceeds the **b030** set value during this period, the inverter decelerates according to the **b029** set value and helps to reduce the motor current.

When the motor current is less than **b030**, the inverter increases motor speed toward the set speed. The inverter continues this retry process until the motor speed comes to the previous set speed.

Overload restriction (b02 l~b028) is not valid when active frequency matching is activated.

If the actual power failure time is longer than the **bool** set value, the inverter does not resume and the motor will coast to stop.

Automatic restart (retry) related parameters.

	"b" Function		Run	Defaul	ts
Func. Code	Name	Description	Mode Edit	Initial data	Units
ьоо 1	Restart mode on power failure / under-voltage trip	Select inverter restart method, Five option codes:  OOAlarm output after trip, no automatic restart  OIRestart at OHz  OZResume operation after frequency matching  OJResume previous freq. after freq. matching, then decelerate to stop and display trip info  OHResume operation after active freq. matching	×	00	
P005	Allowable under-voltage power failure time	The amount of time a power input under-voltage can occur without tripping the power failure alarm. Range is 0.3 to 25 sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	×	1.0	sec.
ь003	Retry wait time before motor restart	Time delay after under-voltage condition goes away, before the inverter runs motor again. Range is 0.3 to 100 seconds.	×	1.0	sec.
ь004	Instantaneous power failure / under-voltage trip alarm enable	Three option codes:  ODDisable  OIEnable  OZDisable during stop and decelerates to a stop	×	00	-
ь005	Number of restarts on power failure / under-voltage trip events	Two option codes:  ODRestart 16 times  O IAlways restart	×	00	-
ьоол	Restart frequency threshold	Restart the motor from 0Hz if the frequency becomes less than this set value during the motor is coasting, range is 0 to 400Hz	×	0.00	Hz
ь008	Restart mode on over voltage / over current trip	Select inverter restart method, Five option codes:  OOAlarm output after trip, no automatic restart  OIRestart at OHz  OZResume operation after frequency matching  OJResume previous freq. after active freq. matching, then decelerate to stop and display trip info  OHResume operation after active freq. matching	×	00	-

	"b" Function			Default	S
Func. Code	Name	Description	Mode Edit	Initial data	Units
ьо ю	Number of retry on over voltage / over current trip	Range is 1 to 3 times	×	3	times
ь0 11	Retry wait time on over voltage / over current trip	Range is 0.3 to 100 sec.	×	1.0	sec.

# **Active Frequency Matching Restart**

Goal of the active frequency matching is the same as normal frequency matching. Difference is the method. Please select the suitable one for your application.

_	"b" Fu	nction	Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
P058	Current level of active freq. matching	Sets the current level of active freq. matching restart, range is 0.1*inverter rated current to 2.0*inverter rated current, resolution 0.1	×	Rated current	A
P053	Deceleration rate of active freq. matching	Sets the deceleration rate when active freq. matching restart, range is 0.1 to 3000.0, resolution 0.1	×	0.5	sec.
PO30	Start freq. of active freq. matching	Three option codes:  ODfreq at previous shutoff OIstart from max. Hz OZstart from set frequency	×	00	-

## **Electronic Thermal Overload Alarm Setting**

The thermal overload detection protects the inverter and motor from overheating due to an excessive load. It uses a current/inverse time curve to determine the trip point.

First, use **b0 i3** to select the torque characteristic that matches your load. This allows the inverter to utilize the best thermal overload characteristic for your application.

The torque developed in a motor is directly proportional to the current in the windings, which is also related to the heat generated (and temperature, over time).


Therefore, you must set the thermal overload threshold in terms of current (amperes) for parameter **b0** 17. The range is 20% to 100% of the rated current for each inverter model. If the current exceeds the level you specify, the inverter will trip and log an event (error **E** 05) in the history table. The inverter turns the motor output OFF when tripped. Separate settings are available for the second motor (if applicable) as shown in the following table.

	"b" Fu	nction	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
PO 15	Level of electronic thermal	Set a level between 20% and 100% for the rated inverter current.	×	Rated current for	A
PS 15	Level of electronic thermal, $2^{ m nd}$ motor		×	each inverter model *1	A
ьо 13	Electronic thermal characteristic	Select from three curves, option codes:	×	01	_
PS 13	Electronic thermal characteristic, 2 <sup>nd</sup> motor	OOReduced torque OIConstant torque O2Free setting	×	01	_
ьо 15	Free setting electronic thermal ~freq.1	Range is 0 to 400Hz	×	0.0	Hz
ь0 16	Free setting electronic thermal ~current1	Range is 0 to inverter rated current Amps	×	0.00	Amps
ьо п	Free setting electronic thermal ~freq.2	Range is 0 to 400Hz	×	0.0	Hz
PO 18	Free setting electronic thermal ~current2	Range is 0 to inverter rated current Amps	×	0.00	Amps
ьо 19	Free setting electronic thermal ~freq.3	Range is 0 to 400Hz	×	0.0	Hz
P050	Free setting electronic thermal ~current3	Range is 0 to inverter rated current Amps	X	0.00	Amps



WARNING: When parameter **b0** 12, level of electronic thermal setting, is set to motor FLA rating (Full Load Ampere nameplate rating), the inverter provides solid state motor overload protection at 115% of motor FLA or equivalent. If parameter **b0** 12 exceeds the motor FLA rating, the motor may overheat and be damaged. Parameter **b0** 12, level of electronic thermal setting, is a variable parameter.


**Electronic thermal characteristic curve:** The characteristic curve depends on dual rate setting in **b049** as follows.

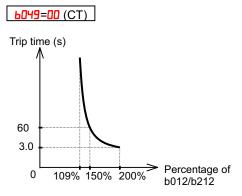

**Electronic thermal characteristic:** The characteristic curve is unique, but reduction rate depending on frequency is selected in **bO !3**.


#### • Reduced Torque (b0 /3=00)

Example: WJ200-015L\*\*, Base FQ=60Hz, CT setting (Rated current 8.0A= b012)

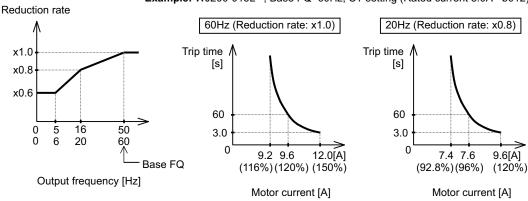



#### • Constant Torque (b0 /3=0 /)

Example: WJ200-015L\*\*, Base FQ=60Hz, CT setting (Rated current 8.0A= b012)

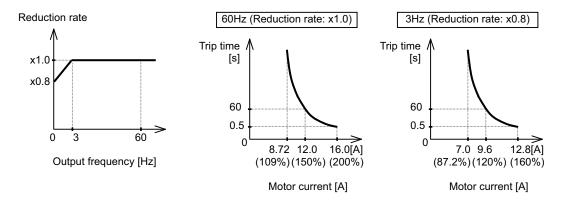

## • Free setting (b0 /3=02)

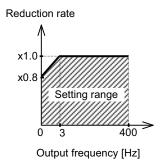

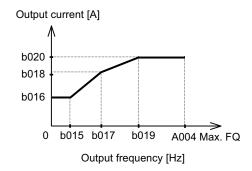


**Electronic Thermal Warning Output:** You can configure this function so that the inverter outputs a warning signal before the electronic thermal protection operates against motor overheat. You can also set the threshold level to output a warning signal with the electronic thermal warning level setting in function "**CO5**".

To output the warning signal, assign parameter "13" (THM) to one of the intelligent output terminals [11] to [12] (CO2 I to CO22), or to the relay output terminal (CO25).

#### **Current limitation Related Functions**

Overload Restriction: bD22 If the inverter's output current exceeds a preset current level you specify during acceleration or constant speed, the overload restriction feature automatically reduces the output frequency during powering drive (and can increase the speed during regeneration) to restrict the overload. This feature does not generate an alarm or trip event. You can instruct the inverter to apply overload restriction only during constant speed, thus allowing higher currents for acceleration. Or, you may use the same threshold for both acceleration and constant speed.

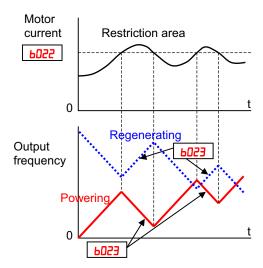


You can specify two types of overload restriction operation by setting functional items **b02**, **b023**, and **b024**, **b025**, **b026** separately. To switch between these two is done by assigning "39 (OLR)" to an intelligent input terminal and make it ON/OFF.

When the inverter detects an overload, it must decelerate the motor to reduce the current until it is less than the threshold. You can choose the rate of deceleration that the inverter uses to lower the output current.

#### Over-current Trip Suppression: 6027 -

The Over-current Trip Suppression function monitors the motor current and actively changes the output frequency profile to maintain the motor current within the limits. Although "LAD" refers to "linear acceleration / deceleration", the inverter only "STOPs" the acceleration and deceleration ramp so that it will not cause an over-current trip event.

The graph at right shows an inverter output profile that starts acceleration to a constant speed. At two different points during the acceleration, motor current increases and exceeds the fixed level of Over-current Trip Suppression level.

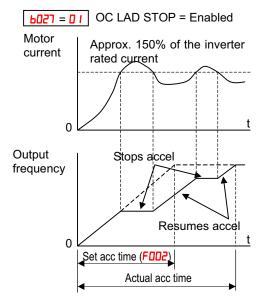

When the Over-current Trip Suppression feature is enabled by b027 = 0 I, the inverter stops the acceleration ramp in each case until the motor current level is again less than the threshold value, which is approximately 180% of the rated current of the inverter.

When using the Over-current Trip Suppression feature, please note the following:

- When the feature is enabled (6027 = 01), the actual acceleration may be longer than the value set by parameters 6002/6202 in some cases.
- The Over-current Trip Suppression feature does not operate by maintaining a constant motor current. So it is still possible to have an over-current trip event during extreme acceleration.

	"b" Function		Run	Defaul	tts
Func. Code	Name	Description	Mode Edit	Initial data	Units
POS 1	Overload restriction operation mode	Select the operation mode during overload conditions, four options,	×	01	-
P55 1	Overload restriction operation mode, 2 <sup>nd</sup> motor	option codes:  OODisabled  O IEnabled for acceleration and constant speed  OZEnabled for constant speed only  OJEnabled for acceleration and constant speed, increase speed at regen.	×	01	_
P055	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated	×	Rated current x 1.5	Amps
P555	Overload restriction level, 2 <sup>nd</sup> motor	current	×	Rated current x 1.5	Amps
P053	Deceleration rate at overload restriction	Sets the deceleration rate when inverter detects overload, range is	×	1.0	sec.
P553	Deceleration rate at overload restriction, 2 <sup>nd</sup> motor	0.1 to 3000.0, resolution 0.1	×	1.0	sec.
6024	Overload restriction operation mode 2	Select the operation mode during overload conditions, four options, option codes:  ODDisabled OIEnabled for acceleration and constant speed OPEnabled for constant speed only OHEnabled for acceleration and constant speed, increase speed at regen.	×	01	_
ь025	Overload restriction level 2	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	×	Rated current x 1.5	Amps
P052	Deceleration rate 2 at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	×	1.0	sec.
6027	OC suppression selection *	Two option codes:  ODisabled  IEnabled	×	01	_

#### **Software Lock Mode**

The software lock function keeps personnel from accidentally changing parameters in the inverter memory. Use **b03** I to select from various protection levels.

The table below lists all combinations of **bO3** I option codes and the ON/OFF state of the [SFT] input. Each Check ✓ or Ex X indicates whether the corresponding parameter(s) can be edited. The Standard Parameters column below shows access in permitted for some lock modes. These refer to the parameter tables throughout this chapter, each of which includes a column titled *Run Mode Edit* as shown to the right.

Run Mode Edit	
×	
✓	

The marks (Check  $\checkmark$  or Ex  $\times$ ) under the "Run Mode Edit" column title indicate whether access applies to each parameter as defined in the table below. In some lock modes, you can edit only FOO I and the Multi-speed parameter group that includes AO2O, AO2O, AO2I—AO35, and AO3O (Jog). However, it does not include AO IS, Multi-speed operation selection. The editing access to bO3 I itself is unique, and is specified in the right-most two columns below.

ЬØЭ I Lock	[SFT] Intelligent	Standard	Standard Parameters		ь0.	∃ I
Mode	Input	Stop	Run	Stop and Run	Stop	Run
00	OFF	✓	Run mode edit access	✓	✓	×
	ON	×	×	×	✓	×
01	OFF	✓	Run mode edit access	✓	✓	×
	ON	×	×	✓	✓	×
02	(ignored)	×	×	×	✓	×
03	(ignored)	×	×	✓	<b>✓</b>	×
10	(ignored)	✓	High level access	✓	✓	✓



**NOTE**: Since the software lock function **bD3** *I* is always accessible, this feature is not the same as password protection used in other industrial control devices. So if you want to use password function, use parameter **bD37** together with the **bD3** *I*. See section 4-104 for detailed explanation of the password function.

	"b"	Function	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
<b>603</b> 1	Software lock mode selection	Prevents parameter changes, in five options, option codes:  OOall parameters except bO3 I are locked when [SFT] terminal is ON  O Iall parameters except bO3 I and output frequency FOO I are locked when [SFT] terminal is ON  O2all parameters except bO3 I are locked  O3all parameters except bO3 I and output frequency FOO I are locked  IOHigh level access including bO3 I  See appendix C for the accessible parameters in this mode.	×	01	



NOTE: To disable parameter editing when using b03 I lock modes 00 and 0 I, assign the [SFT] function to one of the intelligent input terminals.

See "Software Lock" in chapter 4

## **Motor Cable Length Parameter**

To achieve higher motor control performance, the WJ200 inverter has the Motor Cable Length Parameter setting **b033**. Normally there is no need to adjust this parameter, however in case of long motor cable and/or shielded cable, where there is a comparatively higher earth capacitance, set this parameter higher to achieve better motor control performance.

Note that the parameter is indicative and no formula to calculate the suitable value. Normally, longer the motor cable, bigger the set value. Please adjust depending on your system.

For 11 and 15kW inverter, it is not needed to set b033.

	"b" Function			Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь033	Motor cable length parameter	Set range is 5 to 20.	×	10.	_

## Run/power ON warning time

Inverter outputs the operation time over (RNT) or the plug-in time over (ONT) signal when the time specified as the run/power ON warning time (**bD34**) is exceeded.

	"b" Function			Default	s
Func. Code	Name	Description	Mode Edit	Initial dat	Units
ь034	Run/power ON warning time	Range is,  0.:Warning disabled  1. to 9999.:  10~99,990 hrs (unit: 10)  1000 to 5553:  100,000~655,350 hrs (unit: 100)	×	0.	Hrs.

#### (1) Operation time over (RNT) signal

To use this signal function, assign function "11 (RNT)" to one of the intelligent output terminals [11] to [12] ([02] to [022]), or to the alarm relay output ([026]). Specify the run/power-ON warning time (6034).

#### (2) Plug-in time over (ONT) signal

To use this signal function, assign function "12 (ONT)" to one of the intelligent output terminals [11] to [12] ([02] to [02]), or to the alarm relay output ([02]). Specify the run/power-ON warning time ([03]4).

## Rotation restriction related parameters

**Rotation direction restriction:** bD35 – The rotation direction restriction function allows you to restrict the direction of the motor rotation. This function is effective regardless of the specification of operation command input device (e.g., control terminal or integrated operator). If an operation command to drive the motor in a restricted direction is given, the inverter (display) shows (DDDD).

**Reverse run protection: b046** – The reverse run protection function is effective when "03 (sensorless vector control)" or "04 (0-SLV)" is specified for the V/F characteristic selection (A044). For control reasons, especially during motor operation at low speed, the inverter may output a frequency that instructs the motor to rotate in the direction opposite to that specified by the operation command.


	"b" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial dat	Units
ь035	Rotation direction restriction	Three option codes:  DDNo restriction  D1Reverse rotation is restricted  D2Forward rotation is restricted	×	00	_
6046	Reverse run protection	Two option codes:  ODNo protection  D1Reverse rotation is protected	×	00	-

# Reduced voltage start

The reduced voltage start function enables you to make the inverter increase the output voltage gradually when starting the motor.

Set a small value for the reduced voltage start selection (**b035**) if you intend to increase the start torque. On the other hand, setting a small value will cause the inverter to perform full-voltage starting and to easily trip because of overcurrent.

	"b" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
6036	Reduced voltage start selection	Set range, O (disabling the function), (approx. 6ms) to 255 (approx. 1.5s)	×	2	-

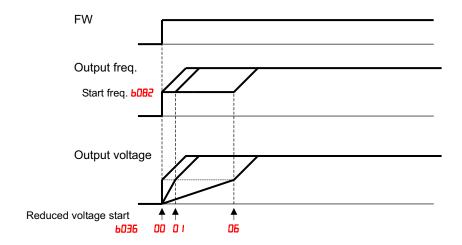

## Display related parameters

Function code display restriction: 6037 – The function code display restriction allows you to arbitrarily switch the display mode or the display content on the integrated operator.

	"b" Function			Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
6037	Function code display restriction	Six option codes:  ODFull display  OIFunction-specific display  OZUser setting (and bOJ7)  OJData comparison display  OHBasic display  OSMonitor display only	×	04	

## (1) Function-specific display mode (שם=רכנו)

If a specific function has not been selected, the monitor does not show the parameters concerning the specific function. Following table lists the details of display conditions.

No.	Displayed conditions		Displayed func. codes when condition fulfilled.		
1	2nd motor	C001C007=08	F202, F203, A201 to A204, A220, A244, A245, A261, A262, A281, A282, A292 to A296, b212, b213, b221 to b223, C241, H202 to H204, H206		
2	EzSQ	A017=01,02	d023 to d027, P100 to P131		
3	Sensorless vector control	A044=03	d009, d010, d012, b040 to b046, C054 to C059, H001, H005, H020 to H024, H030 to H034, P033, P034, P036 to P040		
4	Sensorless vector control for 2nd motor	C001C007=08 AND A244=03	d009, d010, d012, b040 to b046, C054 to C059, H001, H205, H220 to H224, H230 to H234, P033, P034, P036 to P040		
5	Free V/F control	A044=02 OR C001C007=08 AND A244=02	b100 to b113		
6	Free setting of electronic-thermal	b013=02 OR C001C007=08 AND b213=02	b015 to b020		
7	VC or VP <sup>1.7</sup> control	A044=00,01	A041 to A043,A046, A047		
8	VC or VP <sup>1.7</sup> control for 2nd motor	C001C007=08 AND A244=00,01	A241 to A243, A246, A247		
9	DC breaking	A051=01,02 OR C001C007=07	A052 to A059		
10	PID	A071=01,02	d004, A072 to A079, A156, A157, C044, C052, C053		
11	EzCOM	C096=01,02	C098 to C100, P140 to P155		
12	Curving accel/deceleration	A097,A098=0104	A131, A132, A150 to A153		
13	Controlled deceleration	b050=01,02,03	b051 to b054		
14	Breaking	b120=01	b121 to b127		
15	Decel. overvolt. suppress	b130=01,02	b131 to b134		
16	Simple positioning	P003=01	d008, P004, P011, P012, P015, P026, P027, P060to P073, P075, P077, H050, H051		

#### (2) User setting display mode (6037=02)

The monitor displays only the codes and items that are arbitrarily assigned to user parameters (UOO I~UO32), except codes dOO I, FOO I and bO37.

Refer to User parameter (UOO I~UO32) section for the detail.

#### (3) Data comparison display mode (6037=03)

The monitor displays only the parameters that have been changed from the factory settings. All monitoring indications dxxx and code FOOI, bISO, bISO are always displayed.

#### (4) Basic display mode (ьоэл=оч)

The monitor displays basic parameters. (The monitor display is the factory setting.) The following table lists the parameters that can be displayed in basic display mode.

No.	Code displayed	Item
1	d00 l ~ d 104	Monitoring indication
2	F00 I	Output frequency setting
3	F002	Acceleration time (1)
4	F003	Deceleration time (1)
5	F004	Keypad Rn key routing
6	R00 I	Frequency source
7	R002	Run command source
8	R003	Base frequency
9	R004	Maximum frequency
10	R005	[AT] selection
11	R020	Multi-speed frequency 0
12	RO2 I	Multi-speed frequency 1
13	R022	Multi-speed frequency 2
14	R023	Multi-speed frequency 3
15	R044	V/F characteristic curve selection
16	R045	V/F gain
17	R085	Energy saving operation mode
18	P00 I	Restart mode on power failure / under volt. trip
19	P005	Allowable under voltage power failure time
20	P008	Restart mode on over volt. / over current. trip
21	ьо 11	Retry wait time on over volt. / over current. trip
22	6037	Function code display restriction
23	6083	Carrier frequency
24	6084	Initialization mode (parameters or trip history)
25	ь 130	Decel. overvoltage suppression enable
26	P 13 I	Decel. overvoltage suppression level
27	ь 180	Initialization trigger
28	ь 190	Password A setting
29	ь 19 1	Password A for authentication
30	COS 1	Output [11] function
31	C055	Output [12] function
32	C036	Alarm relay active state

**Initial display selection:** bO3B – The initial display selection function allows you to specify data displayed on the integrated operator on powerup. The table below lists the display items selectable. (The factory setting is OI[dOOI].)

**Panel display selection: b** 150 – When an external operator is connected to WJ200 via RS-422 port, the display is locked and shows only one parameter configured by **b** 150.

**Automatic return to the initial display: b** 164 - 10 min. after the last key operation, display returns to the initial parameter set by **b**038.

Frequency conversion coefficient setting: b006 - By setting b006, converted output frequency is monitored in d007. ( $d007 = d00 I \times b006$ )

Frequency set in monitoring: b 163 - If 0 I is set in b 163, frequency can be changed by up/down key in monitor display d00 I and d007.

**Action selection in case of external operator disconnection: b** 165 – When an external operator is disconnected, the inverter behaves according to **b** 165 setting.

	"b" Fun	ction	Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь038	Initial display selection	000Func. code that SET key pressed last displayed.(*) 00 I~030d00 I~d030 displayed 20 IF00 I displayed 202B display of LCD operator	×	001	-
ь086	Frequency scaling conversion factor	Specify a constant to scale the displayed frequency for door monitor, range is 0.01 to 99.99	×	1.00	_
ь 150	Display ex.operator connected	When an external operator is connected via RS-422 port, the built-in display is locked and shows only one "d" parameter configured in:	×	001	_
ь 160	1st parameter of Dual Monitor	Set any two "d" parameters in b160 and b161, then they can be	×	001	_
ь 16 1	2nd parameter of Dual Monitor	monitored in d050. The two parameters are switched by up/down keys. Set range: d00! ~ d030	×	002	_
ь 163	Frequency set in monitoring	Two option codes:  OFreq. set disabled  IFreq. set enabled	✓	00	_
ь 164	Automatic return to the initial display	10 min. after the last key operation, display returns to the initial parameter set by <b>b038</b> . Two option codes: <b>00</b> Disable <b>0</b> 1Enable	✓	00	_
ь 165	Ex. operator com. loss action	Five option codes:  OOTrip OITrip after deceleration to a stop OZIgnore OJCoasting (FRS) OHDecelerates to a stop	✓	02	_

<sup>(\*)</sup> note: If the power is off with displaying "000" after the set, b038 comes when power is on again.

## **User Parameter Registration**

Parameter group "U" is the user parameter. Any function code can be chosen to registor on this parameter up to 32. When display mode is set to be "user parameter" (bD37 = D2) then is UDD I to UD32 and dDD I, FDD I, bD37 are displayed.

	"b" Function			m Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
6037	Function code display restriction	Six option codes:  ODFull display  OIFunction-specific display  OZUser setting (and bOJ7)  OJData comparison display  OHBasic display  OSMonitor display only	×	04	
UOO 1	User parameters 1 to 32	Set range, "no'',d00 I-P 103	×		_
U032					

## **Automatic User Parameter Registration**

When any data is changed and SET key is pressed, the function code will be stored in U001 to U032 sequentially.

The latest data is in **UOO** I, and the oldest one is in **UO32**.

Stored function codes in **UDD I** to **UDB2** are not duplicated. If duplicated function code is changed, old existing function code is deleted. If number of changed function code exceeds 32, the oldest one in **UDB2** is deleted.

	"b" Function			Default	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units	
ь039	Automatic user parameter registration	Two option codes:  ODisable  IEnable	×	00	_	
0032 - UO32	User parameters 1 to 32	Set range, "no'',d00 I-P 183	×		_	

### **Torque Limit Function**

Torque limit function allows you to limit the motor output when O3 (SLV) is set for the V/F characteristics set at parameter AO44. You can select one of the following modes with the torque limit selection (b040).

(1) Quadrant-specific setting mode (**b040=00**)

In this mode, individual torque limit value to be applied to four quadrants (i.e. forward powering, reverse regeneration, reverse powering and forward regeneration) are set as the torque limits 1 to 4 (b04 I to b044), respectively.

(2) Terminal-switching mode(**b040=0 !**)

In this mode, the torque limit values set in the torque limits 1 to 4 (**bD4 I** to **bD44**) are switched from one another according to the combination of the states of torque limit switch terminals 1 and 2 (TRQ1 and TRQ2) assigned to intelligent input terminals. A single selected torque limit is valid in all the operating states.

(3) Analog voltage input mode(**b040=02**)

In this mode, the torque limit value is set by a voltage applied to the control circuit terminal O. The voltage range 0 to 10V corresponds to the torque limit value range 0 to 200%. A single selected torque limit is valid in all the operating states.

If parameter "40 (TL: whether to enable torque limitation)" has been assigned to any intelligent input terminal, the torque limit mode selected by the setting of **b040** is enabled only when the TL terminal is turned ON. When the TL terminal is turned OFF, torque limit settings are invalid, and the maximum torque setting is applied as a torque limit.

It the TL function has not been assigned to the intelligent input terminal, the torque limit mode selected by the setting of **b040** is always enabled.

Each torque limit value used for this function is expressed as a ratio of the maximum torque generated when the inverter outputs its maximum current on the assumption that the maximum torque is 200%.

Note that each torque limit value does not represent an absolute value of torque. The actual output torque varies depending on the motor.

It the torque limited signal function (TRQ) is assigned to an intelligent output terminal, the TRQ signal will turn ON when the torque limit function operates.


100% torque is referred to inverter rated current. Absolute torque value is up the motor to be combined.

	"b" Function			Default	S
Func. Code	Name	Description	Mode Edit	Initial data	Units
ьочо	Torque limit selection	Three option codes:  ODQuadrant-specific setting mode  OITerminal-switching mode  OZAnalog voltage input mode(O)	×	00	-
604 I	Torque limit 1 (fwd/power)	Torque limit level in forward powering quadrant, range is 0 to 200%/no(disabled)	×	200	%
P055	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	×	Rated current x 1.5	Amps
6043	Torque limit 3 (rev/power)	Torque limit level in reverse powering quadrant, range is 0 to 200%/no(disabled)	×	200	%
6044	Torque limit 4 (fwd/regen.)	Torque limit level in forward regen. quadrant, range is 0 to 200%/no(disabled)	×	200	%
6045	Torque LAD STOP selection	Two option codes:  ODDisable  O IEnable	×	00	_

When "DD" is specified for the torque limit selection (bD4D), the torque limits 1 to 4 apply as shown to the top right.

When "DD" is specified for the torque limit selection (bD4D), the torque limit 1 to 4 are set as shown to the bottom right. The torque limit 1 to 4 are switched by the torque limit switches 1 and 2 assigned to intelligent input terminals 7 and 8, respectively for example:


When applying the torque limit function to the motor operation at low speed, also use the overload restriction function to get more stable performance.

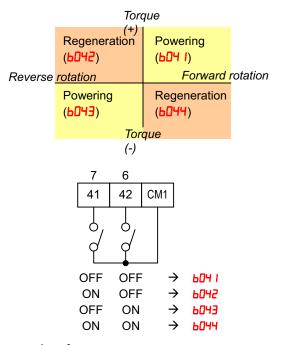

Related parameters: Over torque / under torque signal

## Controlled Stop Operation at Power Loss

Controlled stop operation at power loss helps avoid tripping or free-running (coasting) of the motor when power is lost while in run mode. The inverter controls the internal DC bus voltage while decelerating the motor, and brings the motor to a controlled stop.

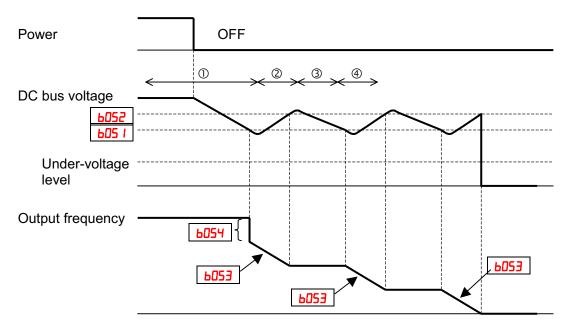

Should power be lost while the inverter is in run mode, this function will have the following effect:

- ① When the internal DC bus voltage of the inverter comes down to the set level of B051, the inverter decreases the output frequency by the amount set in B054. (During this interval the DC bus voltage rises due to regeneration, so does not reach the UV level.)
- ② The inverter then continues deceleration according to the value set in **b053**. If the DC bus voltage rises up to the set value of **b052**, the inverter stops deceleration to avoid OV tripping.
- 3 During this interval, the DC bus voltage decreases again due to lack of input power.
- When the DC bus voltage comes down to the set value of b05 I, the inverter starts deceleration according to the set value of b053 again. This process will be repeated as needed until the motor is brought to a stop.



NOTE: If the DC bus voltage comes down to the UV level during this operation, the inverter trips with under-voltage and motor will free-run (coast) to a stop.



NOTE: If the set value of b052 < b051, then the inverter internally swaps the b052 and 605 I values. However the displayed values are not changed.



NOTE: This function cannot be interrupted until it is completed. So if the power is restored during this operation, wait until the operation is done (motor stops) and then give the run command.

	"b" Function		Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь050	Controlled deceleration on power loss	Four option codes:  OOTrips OIDecelerates to a stop OCDecelerates to a stop with DC bus voltage controlled OGDecelerates to a stop with DC bus voltage controlled, then restart	×	00	-
ь05 I	DC bus voltage trigger level of ctrl. decel.	Setting of DC bus voltage to start controlled decel. operation. Range is 0.0 to 1000.0	×	220.0	V
6052	Over-voltage threshold of ctrl. decel.	Setting the OV-LAD stop level of controlled decel. operation. Range is 0.0 to 1000.0	×	360.0	V
ь05Э	Deceleration time of ctrl. decel.	Range is 0.01 to 3600.0	×	1.0	sec.
6054	Initial freq. drop of ctrl. decel.	Setting of initial freq. drop. Range is 0.0 to 10.0 Hz	×	0.0	Hz

## Window Comparator, Analog disconnection


The window comparator function outputs signals when the values of analog inputs O and OI are within the maximum and minimum limits specified for the window comparator. You can monitor analog inputs with reference to arbitrary levels (to find input terminal disconnection and other errors).

You can specify a hysteresis width for the maximum-limit and minimum-limit levels of the window comparator. You can also specify limit levels and a hysteresis width individually for analog inputs O and OI.

You can fix the analog input data to be applied to an arbitrary value when WCO or WCOI is output. For this purpose, specify a desired value as the operation level at O/OI disconnection (b070/b07 1/b072). When "no" is specified, the analog input data is reflected as input.

Output values of Odc and OIDc are the same as those of WCO and WCOI, respectively.

	"b" Function			Defaul	ts
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь060	Maximum-limit level of window comparator (0)	Set range, {Minlimit level ( <b>b05</b> t) + hysteresis width ( <b>b052</b> )x2} to 100 % (Minimum of 0%)	×	100.	%
ь06 I	Minimum-limit level of window comparator (O)	Set range, 0 to {Maxlimit level (b050) - hysteresis width (b052)x2} % (Maximum of 0%)	✓	0.	%
P025	Hysteresis width of window comparator (O)	Set range, 0 to {Maxlimit level ( <b>b050</b> ) - Minlimit level ( <b>b05</b> )}/2 % (Maximum of 10%)	✓	0.	%
ь063	Maximum-limit level of window comparator (OI)	Set range, {Minlimit level ( <b>b054</b> + hysteresis width ( <b>b055</b> )x2} to 100 % (Minimum of 0%)	✓	100.	%
6064	Minimum-limit level of window comparator (OI)	Set range, 0 to {Maxlimit level (b063) - hysteresis width (b065)x2} % (Maximum of 0%)	✓	0.	%
ь065	Hysteresis width of window comparator (OI)	Set range, 0 to {Maxlimit level ( <b>b063</b> ) - Minlimit level ( <b>b064</b> )}/2 % (Maximum of 10%)	✓	0.	%
ьото	Operation level at O disconnection	Set range, 0 to 100%, or "no" (ignore)	×	no	_
ו רם	Operation level at OI disconnection	Set range, 0 to 100%, or "no" (ignore)	×	no	-

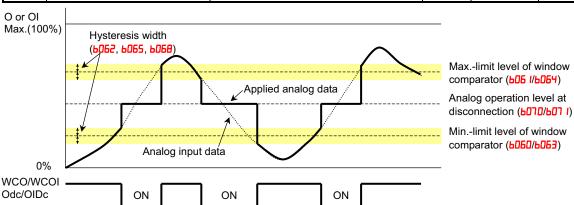

## **Ambient Temperature Setting**

Sets the ambient temperature where the inverter is installed, so to calculate internally the lifetime of cooling fan. Incorrect data will result in an incorrect calculation result.

"b" Function			Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
6075	Ambient temperature setting	Set range is, -10~50 °C	<b>√</b>	40	$^{\circ}\mathrm{C}$

#### Watt-hour related

When the watt-hour monitoring function is selected, the inverter displays the watt-hour value of electric power given to the inverter. You can also convert the value to be displayed to gain data by setting the cumulative input power display gain setting (b079). Value displayed by function d0 is expressed as follows:

The watt-hour input gain can be set within the range 1 to 1000 in step of 1.

You can clear the watt-hour data by specifying "01" for the watt-hour clearance function (both) and pressing the STR key. You can also clear the watt-hour data at an intelligent input terminal by assigning parameter "53" (KHC: watt-hour clearance) to the terminal.

When the watt-hour display gain setting (**LO78**) is set to "**LOOO**", the watt-hour data up to 999000 (kWh) can be displayed.

	"b" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
6078	Watt-hour clearance	Two option codes:  OOFF  ION (press STR then clear)	✓	00	_
ьот9	Watt-hour display gain	Set range is, 1.~1000.	<b>~</b>	1.	_

## Carrier frequency (PWM) related

Carrier frequency adjustment: bDB3 – The internal switching frequency of the inverter circuitry (also called the chopper frequency). It is called the carrier frequency because the lower AC power frequency of the inverter "rides" the carrier. The faint, high-pitched sound you hear when the inverter is in Run Mode is characteristic of switching power supplies in general. The carrier frequency is adjustable from 2.0kHz to 15kHz. The audible sound decreases at the higher frequencies, but RFI noise and leakage current may be increased. Refer to the specification derating curves in Chapter 1 to determine the maximum allowable carrier frequency setting for your particular inverter and environmental conditions. Refer also to bDB9 for automatic carrier frequency reduction.




**NOTE**: The carrier frequency setting must stay within specified limits for inverter-motor applications that must comply with particular regulatory agencies. For example, European CE-approved application requires the carrier to be 3kHz or less.

**Automatic carrier frequency reduction: b089** – The automatic carrier frequency reduction automatically reduces the carrier frequency according to the increase in output current. To enable this function, specify "D l" for automatic carrier frequency reduction selection (**b089**).

When the output current increases to 60%, 72%, 84%, or 96% of the rated current, this function reduces the carrier frequency to 12, 9, 6, or 3 kHz, respectively. This function restores the original carrier frequency when the output decreases to 5% lower than each reduction start level.

The rate of carrier frequency reduction is 2kHz per second. The maximum limit of carrier frequency change by this function is

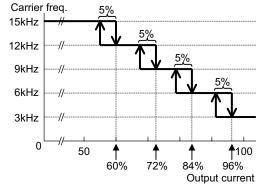

the value specified for the carrier frequency setting (**b083**); the minimum limit is 3 kHz. Note: If 3 kHz or less freq. has been specified for **b083**, this function is disabled regardless of the setting of **b089**.

[Remark: Above graph is for schematic concept and the profile is a subject to change reflecting the temperature test.]

	"b" Function		Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь0 <del>8</del> 3	Carrier frequency	Sets the PWM carrier (internal switching frequency), range is 2.0 to 15.0 kHz	×	2.0	kHz
ь089	Automatic carrier frequency reduction	Three option codes:  ODDisabled  OIEnabled, depending on the output current  OZEnabled, depending on the heat-sink temperature	×	01	_

## Miscellaneous Settings

The miscellaneous settings include scaling factors, initialization modes, and others. This section covers some of the most important settings you may need to configure.

**Start frequency adjustment: 6082** – When the inverter starts to run, the output frequency does not ramp from 0Hz. Instead, it steps directly to the *start frequency* (**6082**), and the ramp proceeds upward from there.

Initialization related: b084, b085, b094, b 180 – These functions allow you to restore the factory default settings. Please refer to "Restoring Factory Default Settings" in chapter 6.

**Stop key enable function:** bDB7 – This function allows you to decide whether the stop key on the integrated operator is enabled or not.

**Dynamic Braking related functions: b090**, **b095**, **b096**, **–** These parameters are for using the internal brake chopper so to get more regeneration torque of the motor.

**Cooling Fan Control: b092** – You can select the performance of the cooling fan (if your inverter model includes a fan). This function controls whether the cooling fan stops or keeps on running after the inverter stops the motor. This can result in an additional energy saving and extends fan life.

	"b" F	unction	Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
P085	Start frequency	Sets the starting frequency for the inverter output, range is 0.10 to 9.99 Hz	×	0.50	Hz
ь084	Initialization mode (parameters or trip history)	Select initialized data, five option codes:  ODInitialization disabled  OIClears Trip history  OZInitializes all Parameters  OJClears Trip history and initializes all parameters  OHClears Trip history and initializes all parameters and EzSQ program	×	00	
ь085	Country for initialization	Select default parameter values for country on initialization, two option codes:  ODarea A O Iarea B	×	00	-
ь087	STOP key enable	Select whether the STOP key on the keypad is enabled, three option codes:  OEnabled  IDisabled always  ODisabled for stop	×	00	_
ь090	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 sec. intervals, range is 0.0 to 100%.  0%: Function disabled >0%: Enabled, per value	×	0.0	%

	"b" F	unction	Run	Defaul	ts
Func. Code	Name	Description	Mode Edit	Initial data	Units
PO35	Cooling fan control	The cooling fan is not applying.	×	01	-
ь093	Clear elapsed time of cooling fan	The cooling fan is not applying.	×	00	-
ь094	Initialization target data	Select initialized parameters, four option codes:  ODAll parameters  OIAll parameters except in/output terminals and communication.  OZOnly registered parameters in Uxxx.  OJAll parameters except registered parameters in Uxxx and 6037.	×	00	_
ь095	Dynamic braking control (BRD) selection	Three option codes:  ODisable  IEnable during run only  CEnable always	×	01	_
ь096	BRD activation level	Range is: 330 to 380V (200V class)	×	360	V
ь 180	Initialization trigger (*)	This is to perform initialization by parameter input with 6084, 6085 and 6094. Two option codes: 00Initialization disable 01Perform initialization	×	00	_

<sup>(\*)</sup> Note: When 01 is set on b180, and SET key is pressed, initialization starts immediately and there is not any way to restore the previous parameter setting. WJ200 doesn't have a method to trigger the initialization by key action as the other Hitachi inverter models have.

Stop Mode / Restart Mode Configuration: b09 //b088 - You can configure how the inverter performs a standard stop (each time Run FWD and REV signals turn OFF). Setting b09 / determines whether the inverter will control the deceleration, or whether it will perform a free-run stop (coast to a stop). When using the free-run stop selection, it is imperative to also configure how you want the inverter to resume control of motor speed. Setting b088 determines whether the inverter will ensure the motor always resumes at 0 Hz, or whether the motor resumes from its current coasting speed (also called active frequency matching). The run command may turn OFF briefly, allowing the motor to coast to a slower speed from which normal operation can resume.

In most applications a controlled deceleration is desirable, corresponding to b09 !=00. However, applications such as HVAC fan control will often use a free-run stop (b09 !=0 !). This practice decreases dynamic stress on system components, prolonging system life. In this case, you will typically set b088=0! in order to resume from the current speed after a free-run stop (see diagram down below: active frequency matching resume). Note that using the default setting, b088=00, can cause trip events when the inverter attempts to force the load quickly to zero speed.




**NOTE**: Other events can cause (or be configured to cause) a free-run stop, such as power loss (see "Automatic Restart Mode" on page 3-32), or an intelligent input terminal [FRS] signal. If all free-run stop behavior is important to your application (such as HVAC), be sure to configure each event accordingly.

An additional parameter further configures all instances of a free-run stop. Parameter **b003**, Retry Wait Time Before Motor Restart, sets the minimum time the inverter will free-run. For example, if **b003** = 4 seconds (and **b09** = 0) and the cause of the free-run stop lasts 10 seconds, the inverter will free-run (coast) for a total of 14 seconds before driving the motor again.

The figure at below right describes how active frequency matching resume operates. After waiting the time set in **b003**, the inverter tries to catch the speed of the motor shaft and outputs the speed set in **b030**. At this time, if the motor current rises up to the value set in **b028**, the inverter decreases the frequency according to the deceleration time set in **b029**, and finally comes to the required speed. Following are the related parameters for this control.

Code	Parameter contents
P058	Current level of active frequency matching
PO53	Deceleration rate of active frequency matching
ь030	Start freq. of active freq. matching
ь088	Restart mode after FRS
ь09 I	Stop mode selection

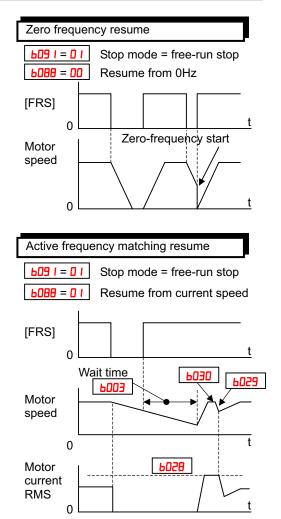

	"b" I	Function	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь088	Restart mode after FRS	Selects how the inverter resumes operation when free-run stop (FRS) is cancelled, three options:  ODRestart from 0Hz  OIRestart from frequency detected from real speed of motor (freq. matching)  OZRestart from frequency detected from real speed of motor (active freq. matching)	×	00	-
ь09 I	Stop mode selection	Select how the inverter stops the motor, two option codes:  ODDEC (decelerate to stop)  OlFRS (free-run to stop)	×	00	_

# Free-V/F Settings Related


Please refer to chapter 3 for detailed explanation of the function.

	"b" Function		Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь 100	Free V/F setting, freq.1	Set range, 0 ~ value of <b>b</b> 102	×	0.	Hz
ь 10 1	Free V/F setting, voltage.1	Set range, $0 \sim 800 \text{V}$	×	0.0	V
P 105	Free V/F setting, freq.2	Set range, value of <b>b</b> 100 ~ <b>b</b> 104	×	0.	Hz
ь 103	Free V/F setting, voltage.2	Set range, 0 ~ 800V	×	0.0	V
ь 104	Free V/F setting, freq.3	Set range, value of <b>b</b> 102 ~ <b>b</b> 105	×	0.	Hz
ь 105	Free V/F setting, voltage.3	Set range, $0 \sim 800 \text{V}$	×	0.0	V
ь 106	Free V/F setting, freq.4	Set range, value of <b>b</b> 104 ~ <b>b</b> 108	×	0.	Hz
ь 107	Free V/F setting, voltage.4	Set range, $0 \sim 800 \text{V}$	×	0.0	V
ь 108	Free V/F setting, freq.5	Set range, value of <b>b</b> 108 ~ <b>b</b> 110	×	0.	Hz
ь 109	Free V/F setting, voltage.5	Set range, $0 \sim 800 \text{V}$	×	0.0	V
Ь 1 10	Free V/F setting, freq.6	Set range, value of <b>b</b> 108 ~ <b>b</b> 112	×	0.	Hz
ЬПП	Free V/F setting, voltage.6	Set range, $0 \sim 800 \text{V}$	×	0.0	V
P 1 15	Free V/F setting, freq.7	Set range, <b>b</b> / 10 ~ 400	×	0.	Hz
6113	Free V/F setting, voltage.7	Set range, 0 ~ 800V	×	0.0	V

#### **Brake Control Function Related**

The brake control function allows you to make the inverter control an external brake used for a lift or other machines. To enable this function, specify "D" (enabling the brake control function) for the Brake Control Enable (b 120). This function operates as described below.

- (1) When the inverter receives an operation command, it starts the output and accelerates the motor up to the Brake Release Frequency Setting.
- (2) After the Brake Release Frequency Setting is reached, the inverter waits for the braking wait time (**b** 17 1), and then outputs the brake release signal (BOK). However, if the inverter output current has not reached the brake release current (**b** 175), the inverter does not output the brake release signal, but trips and outputs a brake error signal (BER).
- (3) When the braking confirmation signal (BOK) has been assigned to an intelligent input terminal (that is, when "44" is specified for one of "500 f" to "5007"), the inverter waits for the Brake Wait Time for Confirmation (b 124) without accelerating the motor after receiving the brake release signal. If the inverter does not receive the braking confirmation signal within the braking confirmation time (b 124), it trips with the braking error signal (BER) output. When the braking confirmation signal (BOK) has not been assigned to any intelligent input terminal, the Brake Wait Time for Confirmation (b 124) is invalid. In such cases, the inverter proceeds to the operation described in item (4) after the output of the brake release signal.
- (4) After the input of the braking confirmation signal (or the output of the brake release signal [when the BOK signal function is disabled]), the inverter waits for the Brake Wait Time for Acceleration (**b** 122), and then starts accelerating the motor up to the set acceleration frequency.
- (5) When the operation command is turned off, the inverter decelerates the motor down to the braking frequency (**b** 125), and then turns off the brake release signal (BRK).

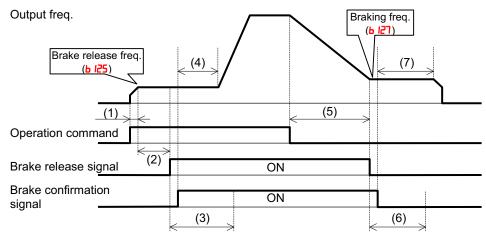

- (1) Time to reach Brake release freq.
- (2) Brake Wait Time for Release (b 12 1)
- (3) Brake Wait Time for Confirmation (b (24))
- (4) Brake Wait Time for Acceleration (b 122)
- (5) Time to decelerate down to Braking freq
- (6) Brake Wait Time for Confirmation (b 124)
- (7) Brake Wait Time for Stopping (b 123)

- (6) When the braking confirmation signal (BOK) has been assigned to an intelligent input terminal (that is, when "44" is specified for one of "5001" to "5007"), the inverter waits, after turning off the brake release signal, until the braking confirmation is turned off at least for the Brake Wait Time for Confirmation (b 124) without decelerating the motor. If the braking confirmation signal is not turned off within the Brake Wait Time for Confirmation (b 124), the inverter trips with the braking error signal (BER) output. When the braking confirmation signal (BOK) has not been assigned to any intelligent input terminal, the Brake Wait Time for Confirmation (b 124) is invalid. In such cases, the inverter proceeds to the operation described in item (7) after the brake release signal is turned off.
- (7) After the braking confirmation signal (or the brake release signal [when the BOK signal function is disabled]) is turned off, the inverter waits for the Brake Wait Time for Stopping (b 123), and then starts decelerating the motor down to 0Hz.



**NOTE**: The above timing chart shows the operation on the assumption that the braking confirmation signal "44" (BOK) is assigned to one of the terminal 1 to 7 (**COO** 1~**COO**7). If the BOK signal is not assigned to any terminal, the Brake Wait Time for Acceleration (**b** 122) begins when the brake release signal is turned on, and the Brake Wait Time for Stopping (**b** 123) begins when the brake release signal is turned off.

When using the brake control function, assign the following signal functions to intelligent input and output terminals as needed.

- ① To input a signal indicating that the brake is released from the external brake to the inverter, assign the braking confirmation signal (44: BOK) to one of the terminal 1~7 (CDD I~CDD7)
- ② Assign the brake release signal (月: BRK), which is a brake-releasing command, to one of the output terminal 11~12 ([02 /~[02]). To output a signal when braking is abnormal, assign the brake error signal (20: BER) to an output terminal.


When using the brake control function, you are recommended to select the sensorless vector control (RO44=O3) that ensures a high torque performance.

	"b" Function Run De				Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units	
P 150	Brake control enable	Two option codes:  ODisable  IEnable	×	00	_	
P 15 I	Brake Wait Time for Release	Set range: 0.00 to 5.00 sec	×	0.00	sec.	
P 155	Brake Wait Time for Acceleration	Set range: 0.00 to 5.00 sec	×	0.00	sec.	
P 153	Brake Wait Time for Stopping	Set range: 0.00 to 5.00 sec	×	0.00	sec.	
ь 124	Brake Wait Time for Confirmation	Set range: 0.00 to 5.00 sec	×	0.00	sec.	
ь 125	Brake release freq.	Set range: 0 to 400Hz	×	0.00	sec.	
ь 126	Brake release current	Set range: 0~200% of inverter rated current	×	(rated current)	A	
ь 127	Braking freq. setting	Set range: 0 to 400Hz	×	0.00	Hz	

## DC Bus AVR (Automatic Voltage Regulation) for Deceleration Settings

This function is to achieve stable DC bus voltage in case of deceleration. DC bus voltage rises due to regeneration during deceleration. When this function is activated (b 130=0 1 or 02), inverter controls the deceleration time so that the DC bus voltage not to go up to the overvoltage trip level, and leads to the trip-less operation during deceleration.

Please note that the actual deceleration time can be longer in this case.

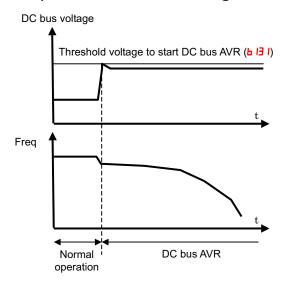

	"b" Fւ	Run	Defaults		
Func. Code	Name	Description	Mode Edit Initial data		Units
ь 130	Deceleration overvoltage suppression enable	OODisabled O IEnabled O≥Enabled with accel.	<b>X</b> 00 -		-
P 13 1	Decel. overvolt. suppress level	DC bus voltage of suppression. Range is: 330 to 395	<b>X</b> 380 V		V
P 135	Decel. overvolt. suppress const.	Accel. rate when b130=02. Set range: $0.10 \sim 30.00$ sec.	<b>X</b> 1.00 se		sec.
ь 133	Decel. overvolt. suppress proportional gain	Proportional gain when b130=01. Range is: 0.00 to 5.00	✓ 0.20		1
ь 134	Decel. overvolt. suppress integral time	Integration time when b130=01. Range is: 0.00 to 150.0	✓	1.0	sec.

## STO (Safe Torque Off) Setting

Please refer to the appendix E for detailed information.

	"b" Fu	Run	Default	s	
Func. Code	Name	Description Mode Edit		Initial data	Units
ь 145	GS input mode	Two option codes:  ODNo trip (Hardware shutoff only)  O ITrip	×	00	-

#### **Inverter Mode Setting**

 $\label{lem:policy} After \ \ switched \ \ \ Inverter \ \ mode \ \ to \ \ PM(Permanent \ \ magnetic) \ \ mode, Permanent \ \ magnetic \ \ motor \ control \ is \ available. (factory \ default \ is \ IM(Induction \ motor) \ \ mode)$ 

PM mode is available only CT(HD)mode.(parameter b049=00)

The mode is not changed only Inverter mode set(parameter b 17 l). After changed the Inverter mode, excecute "Restoring Factory Default Settings"(parameter b 180), then the Parameter is initilized, the Inveter mode is changed. (this initilization needs no parameter change of books like "Restoring Factory Default Settings".)

Current preset Mode can be monitored 4050 display.

If you need such "Clears Trip history" or "Restoring Factory Default Settings" again at PM mode, please set 6084,6085,6094 parameters,then set 6.7%, so that Initilization will be excecuted.

Ь П | parameter setting is not required.

If you change from PM mode to IM mode, use  $b\sqcap l,b\mid B\square$  parameter setting & the procedure.

	"b" Fu	Run	Default	s	
Func. Code	Name	Description	Mode Edit Initial data		Units
ьпі	Inverter mode selection	Three option codes:  ODNo function  OIStd. IM (Induction Motor)  OHPM(Permanent Magnet Motor)	×	00	_


Main differences between high frequency and std. mode are as follows.

#### **Password Function**

The WJ200 inverter has password function to prevent from changing parameters or to hide a part of parameters. There are two passwords for **b037** (Function Code Display Restriction) and **b03** (Software Lock) corresponding to password A and password B.

If password is forgotten, there is no way to delete password. Please be careful to set password.

#### ♦ Overview of password function (Example of password A)

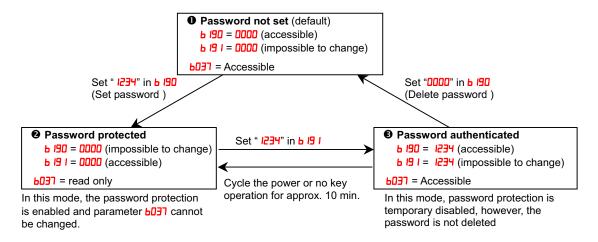


#### ♦ Function Code Display Restriction Function and Software Lock Function

Target of password	Function description	Applied parameters for setting password
Function Code Display Restriction 6037 (password A)	Depending on the value in b037, a part of function codes are not displayed. (Displayed parameters can be changed.)	ь 190, ь 19 1
Software Lock 603 (password B)	Depending on the value in b031, all or a part of parameters can not be changed. (All the function codes and data are displayed.)	ь 192, ь 193

#### ♦ How to Set Password

- (1) Set parameter **b037** and/or **b03** I depending on your demand
- (2) Set password in **b** 190 and/or **b** 192 ("0000" is not available.)

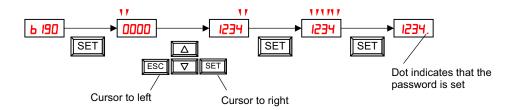


(3) Password has been set and locked. Parameter **b037** and/or **b03** *I* cannot be changed.

#### ♦ How to authenticate Password

For a person who knows the password, unlock password protection as follows.

(4) Set password in **b** 19 1 and/or **b** 193.

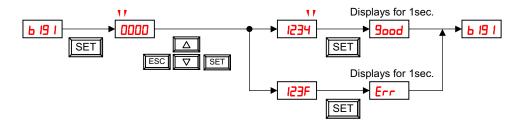

(5) If entered password is matched, "**Incl** (Good)" is displayed for 1 second and password protection is unlocked temporary. If cycling the power or no key operation lasts 10 min., password protection is enabled again automatically. If entered password is unmatched, "**Err** (Error)" is displayed and protection is not unlocked.

#### ♦ How to change Password


- (6) Make password authentication as above (4).
- (7) Set new password in **b** 190 and/or **b** 192



(8) After changing the password, password protection is enabled automatically.

#### ♦ How to delete Password

- (9) Make password authentication as above (4).
- (10) Set "0000" in **b** 190 and/or **b** 192
- (11)Password has been deleted and all the password information are cleared

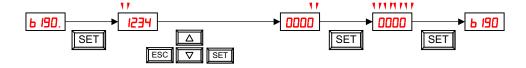

# "C" Group: Intelligent Terminal Functions

The seven input terminals [1], [2], [3], [4], [5], [6], and [7] can be configured for any of 72 different functions. The next two tables show how to configure the seven terminals. The inputs are logical, in that they are either OFF or ON. We define these states as OFF=0, and ON=1.

The inverter comes with default options for the seven terminals. These settings are initially unique, each one having its own setting. Note that European and US versions have different default settings. You can use any option on any terminal, and even use the same option twice to create a logical OR (though usually not required).



NOTE: Terminals [3] and [4] have the ability to be logical inputs, and to be safety inputs in case of safe stop function is selected.



NOTE: Terminal [5] has the ability to be a logical input, and to be an analog input for a thermistor device when PTC function (option code 19) is assigned to that terminal.

#### **Input Terminal Configuration**

Functions and Options - The function codes in the following table let you assign one of seventy-two options to any of the seven logic inputs for the WJ200 inverters. The functions [00] through [007] configure the terminals [1] through [7] respectively. The "value" of these particular parameters is not a scalar value, but it is a discrete number that selects one option from many available options.

For example, if you set function **COD** !=**OD**, you have assigned option **OD** (Forward Run) to terminal [1]. The option codes and the specifics of how each one works are in Chap. 4.

	"C" Ft	Run	Defaults	8	
Func. Code	Name	Description	Mode Edit	Initial data	Units
C00 I	Input [1] function	Select input terminal [1] function, 68 options (see next section)	×	00 [FW]	_
C002	Input [2] function	Select input terminal [2] function, 68 options (see next section) Select input terminal [3] function,	×	01 [RV]	-
C003	Input [3] function [GS1 assignable]	68 options (see next section) Select input terminal [4] function,	×	02 [CF1]	-
C004	Input [4] function [GS2 assignable]	68 options (see next section) Select input terminal [5] function,	×	03 [CF2]	-
C005	Input [5] function [PTC assignable]	68 options (see next section) Select input terminal [6] function, 68 options (see next section)	×	09 [2CH]	-
C006	Input [6] function	Select input terminal [7] function, 68 options (see next section)	×	18 [RS]	-
רםםם	Input [7] function		×	13 [USP]	_

The input logic conversion is programmable for each of the seven inputs default to normally open (active high), but you can select normally closed (active low) in order to invert the sense of the logic.

	"C" Ft	Run	Defaults	8	
Func. Code	Name	Description	Mode Edit	Initial data	Units
CD 11	Input [1] active state	Select logic conversion, two option codes:	×	00	_
CO 15	Input [2] active state	OOnormally open [NO] O Inormally closed [NC]	×	00	_
CO 13	Input [3] active state	2lormany closed [1(c]	×	00	_
CO 14	Input [4] active state		×	00	_
CO 15	Input [5] active state		×	00	_
CO 16	Input [6] active state		×	00	_
רם ח	Input [7] active state		×	00	_



**NOTE**: An input terminal configured for option code **IB** ([RS] Reset command) cannot be configured for normally closed operation.

Note: This response time is disregarded when power-on or reset. For example, when the power is up when FW terminal is on, then the operation starts regardless this response time as soon as the internal reset process is completed.

	"C" F	Run	Default	S	
Func. Code	Name	Description	Mode Edit	Initial data	Units
C 160	Input [1] response time	Sets response time of each input terminal, set range:	×	1.	_
C 16 1	Input [2] response time	(0 to 400 [ms]) (x 2 [ms])	×	1.	_
C 162	Input [3] response time	(6 66 166 [1115])	×	1.	_
C 163	Input [4] response time		×	1.	_
C 164	Input [5] response time		×	1.	-
C 165	Input [6] response time		×	1.	_
C 166	Input [7] response time		×	1.	_

## Intelligent Input Terminal Overview

Each of the seven intelligent terminals may be assigned any of the options in the following table. When you program one of the option codes for terminal assignments **COO** I to **COO**7, the respective terminal assumes the function role of that option code. The terminal functions have a symbol or abbreviation that we use to label a terminal using that function. For example, the "Forward Run" command is [FW]. The physical label on the terminal block connector is simply 1, 2, 3, 4, 5, 6, or 7. However, schematic examples in this manual also use the terminal symbol (such as [FW]) to show the assigned option. The option codes for **CO** I I to **CO** I7 determines the active state of the logical input (active high or active low).

**Input Function Summary Table** – This table shows all thirty-one intelligent input functions at a glance. Detailed description of these functions, related parameters and settings, and example wiring diagrams are in "Using Intelligent Input Terminals" on page 4-8.

Input Function Summary Table								
Option Code	Terminal Symbol	Function Name		Description				
00	FW	FORWARD Run/Stop	ON	Inverter is in Run Mode, motor runs forward				
		•	OFF	Inverter is in Stop Mode, motor stops				
01	RV	Reverse Run/Stop	ON	Inverter is in Run Mode, motor runs reverse				
			OFF	Inverter is in Stop Mode, motor stops				
02	CF1 *1	Multi-speed Select,	ON OFF	Binary encoded speed select, Bit 0, logical 1				
		Bit 0 (LSB) Multi-speed Select,	OFF	Binary encoded speed select, Bit 0, logical 0 Binary encoded speed select, Bit 1, logical 1				
03	CF2	Bit 1	OFF	Binary encoded speed select, Bit 1, logical 1				
		Multi-speed Select,	ON	Binary encoded speed select, Bit 1, logical 0				
04	CF3	Bit 2	OFF	Binary encoded speed select, Bit 2, logical 0				
		Multi-speed Select,	ON	Binary encoded speed select, Bit 3, logical 1				
05	CF4	Bit 3 (MSB)	OFF	Binary encoded speed select, Bit 3, logical 0				
		,		Inverter is in Run Mode, output to motor runs at jog				
06	JG	Jogging	ON	parameter frequency				
			OFF	Inverter is in Stop Mode				
רם	DB	External DC braking	ON	DC braking will be applied during deceleration				
	55	External De Braking	OFF	DC braking will not be applied				
			ON	The inverter uses 2nd motor parameters for				
08	SET	Set (select) 2nd Motor		generating frequency output to motor				
		Data	OFF	The inverter uses 1st (main) motor parameters for				
				generating frequency output to motor Frequency output uses 2nd-stage acceleration and				
		2-stage Acceleration and Deceleration	2-stage Acceleration	2-stage Acceleration	2-stage Acceleration	2-stage Acceleration	ON	deceleration values
09	2CH			Frequency output uses standard acceleration and				
			OFF	deceleration values				
Î				ON	Causes output to turn OFF, allowing motor to free			
11	FRS	Free-run Stop	ON	run (coast) to stop				
''	1110			OFF	Output operates normally, so controlled			
			0	deceleration stop motor				
			ON	When assigned input transitions OFF to ON,				
12	EXT	External Trip		inverter latches trip event and displays E 12				
		·	OFF	No trip event for ON to OFF, any recorded trip				
				events remain in history until reset On powerup, the inverter will not resume a Run				
_		Unattended Start	ON	command (mostly used in the US)				
13	USP	Protection	~	On powerup, the inverter will resume a Run				
			OFF	command that was active before power loss				
14	CS	Commercial power		Motor can be driven by commercial power				
	00	source switchover	OFF	Motor is driven via the inverter				
]			ON	The keypad and remote programming devices are				
15	SFT	Software Lock		prevented from changing parameters				
		A mala m Immut	OFF	The parameters may be edited and stored				
16	AT	Analog Input Voltage/Current Select	ON OFF	Refer to "Analog Input Settings" on page 3-15.				
		Voltage/Out/Tellt Oelect		The trip condition is reset, the motor output is				
18	RS	Reset Inverter	ON	turned OFF, and powerup reset is asserted				
"			OFF	Normal power-ON operation				
				When a thermistor is connected to terminal [5] and				
		PTC thermistor Thermal	ANLG	[L], the inverter checks for over-temperature and				
19	PTC	Protection	-	will cause trip event and turn OFF output to motor				
		(C005 only)	OPEN	A disconnect of the thermistor causes a trip event,				
			- · <b>-</b> · ·	and the inverter turns OFF the motor				

Input Function Summary Table					
Option Code	Terminal Symbol	Function Name		Description	
20	STA	Start	ON	Starts the motor rotation	
	OTD	(3-wire interface)	OFF	No change to present motor status	
21	STP	Stop	ON	Stops the motor rotation	
	F/R	(3-wire interface)	OFF	No change to present motor status	
22	F/R	FWD, REV (3-wire interface)	ON	Selects the direction of motor rotation: ON = FWD. While the motor is rotating, a change of F/R will start	
		(3-wire interface)		a deceleration, followed by a change in direction	
			OFF	Selects the direction of motor rotation: OFF = REV.	
			0	While the motor is rotating, a change of F/R will start	
				a deceleration, followed by a change in direction	
23	PID	PID Disable	ON	Temporarily disables PID loop control. Inverter output	
				turns OFF as long as PID Enable is active (RD7 I=D I)	
			OFF	Has no effect on PID loop operation, which operates	
				normally if PID Enable is active (AD7 I=0 I)	
24	PIDC	PID Reset	ON	Resets the PID loop controller. The main	
				consequence is that the integrator sum is forced to zero	
			OFF	No effect on PID controller	
27	UP	Remote Control UP	ON	Accelerates (increases output frequency) motor from	
		Function (motorized speed pot.)	OFF	current frequency Output to motor operates normally	
		. ,			
28	DWN	Remote Control Down	ON	Decelerates (decreases output frequency) motor	
		Function (motorized	OFF	from current frequency	
	UDC	speed pot.) Remote Control Data	OFF ON	Output to motor operates normally  Clears the UP/DWN frequency memory by forcing it	
29	ODC	Clearing	ON	to equal the set frequency parameter F001. Setting	
		Cleaning		[ ID I must be set=00 to enable this function to work	
			OFF	UP/DWN frequency memory is not changed	
31	OPE	Operator Control	ON	Forces the source of the output frequency setting	
'				<b>RDD</b> I and the source of the Run command <b>RDD2</b> to be	
				from the digital operator	
			OFF	Source of output frequency set by #00 I and source	
				of Run command set by ₩002 is used	
32	SF1	Multi-speed Select,	ON	Bit encoded speed select, Bit 1, logical 1	
		Bit operation Bit 1	OFF	Bit encoded speed select, Bit 1, logical 0	
33	SF2	Multi-speed Select,	ON	Bit encoded speed select, Bit 2, logical 1	
	050	Bit operation Bit 2	OFF	Bit encoded speed select, Bit 2, logical 0	
34	SF3	Multi-speed Select, Bit operation Bit 3	ON OFF	Bit encoded speed select, Bit 3, logical 1 Bit encoded speed select, Bit 3, logical 0	
75	SF4	Multi-speed Select,	OFF	Bit encoded speed select, Bit 3, logical 0  Bit encoded speed select, Bit 4, logical 1	
35	3F4	Bit operation Bit 4	OFF	Bit encoded speed select, Bit 4, logical 1	
36	SF5	Multi-speed Select,	ON	Bit encoded speed select, Bit 4, logical 0	
30	5. 5	Bit operation Bit 5	OFF	Bit encoded speed select, Bit 5, logical 0	
37	SF6	Multi-speed Select,	ON	Bit encoded speed select, Bit 6, logical 1	
'		Bit operation Bit 6	OFF	Bit encoded speed select, Bit 6, logical 0	
38	SF7	Multi-speed Select,	ON	Bit encoded speed select, Bit 7, logical 1	
		Bit operation Bit 7	OFF	Bit encoded speed select, Bit 7, logical 0	
39	OLR	Overload Restriction	ON	Perform overload restriction	
		Source Changeover	OFF	Normal operation	
40	TL	Torque Limit Selection	ON	Setting of 6040 is enabled	
			OFF	Max. torque is limited with 200%	
41	TRQ1	Torque limit switch 1	ON	Torque limit related parameters of Powering/regen,	
			OFF	and FW/RV modes are selected by the combinations	
42	TRQ2	Torque limit switch 2	ON	of these inputs.	
			OFF		

	Input Function Summary Table					
Option Code	Terminal Symbol	Function Name		Description		
44	BOK	Brake confirmation	ON	Brake wait time ( <b>ь I≥Ч</b> ) is valid		
			OFF	= 101110 1101110 (= 12 1) 10 1101		
46	LAC	LAD cancellation	ON	Set ramp times are ignored. Inverter output		
				immediately follows the freq. command.		
			OFF	Accel. and/or decel. is according to the set ramp time		
47	PCLR	Pulse counter clear	ON	Clear the position deviation data		
	400	455 ( ) II	OFF			
50	ADD	ADD frequency enable	ON	Adds the <b>F</b> I45 (add frequency) value to the output frequency		
			OFF			
51	F-TM	Force Terminal Mode	ON	Force inverter to use input terminals for output		
				frequency and Run command sources		
			OFF	Source of output frequency set by ROO I and source of		
				Run command set by ADD2 is used		
52	ATR	Enable torque	ON	Torque control command input is enabled		
	1/110	command input	OFF	,		
53	KHC	Clear watt-hour data	ON	Clear watt-hour data		
	MI1	Conoral nurnoso innut	OFF			
56	IVII I	General purpose input (1)	ON OFF	General purpose input (1) is made ON under EzSQ General purpose input (1) is made OFF under EzSQ		
<del></del>	MI2	General purpose input	ON	General purpose input (1) is made OFF under EZSQ  General purpose input (2) is made ON under EZSQ		
57	IVIIZ	(2)	OFF			
58	MI3	General purpose input	ON	General purpose input (3) is made ON under EzSQ		
20		(3)	OFF	General purpose input (3) is made OFF under EzSQ		
59	MI4	General purpose input	ON	General purpose input (4) is made ON under EzSQ		
"		(4)	OFF	General purpose input (4) is made OFF under EzSQ		
60	MI5	General purpose input	ON	General purpose input (5) is made ON under EzSQ		
"		(5)	OFF	General purpose input (5) is made OFF under EzSQ		
61	MI6	General purpose input	ON	General purpose input (6) is made ON under EzSQ		
		(6)	OFF			
62	MI7	General purpose input	ON	General purpose input (7) is made ON under EzSQ		
		(7)	OFF			
65	AHD	Analog command hold	ON	Analog command is held		
	004	B.A. 10' ( '0'	OFF	Analog command is not held		
66	CP1	Multistage-position	ON	Multistage position commands are set according to		
	CP2	switch (1) Multistage-position	OFF	the combination of these switches.		
67		switch (2)	ON OFF			
68	CP3	Multistage-position switch (3)	ON OFF			
69	ORL	Limit signal of homing	ON	Limit signal of homing is ON		
			OFF			
סר	ORG	Trigger signal of	ON	Starts homing operation		
		homing	OFF	No action		
73	SPD	Speed/position	ON	Speed control mode		
		changeover	OFF	Position control mode		

	Input Function Summary Table						
Option Code	Terminal Symbol	Function Name	Description				
דר	GS1 *	GS1 input	ON OFF	EN60204-1 related signals: Signal input of "Safe torque off" function.			
78	GS2 *	GS2 input	ON OFF				
81	485	Start EzCOM	ON OFF	Starts EzCOM No execution			
82	PRG	Executing EzSQ program	ON OFF	Executing EzSQ program  No execution			
83	HLD	Retain output frequency	ON OFF	Retain the current output frequency  No retention			
84	ROK	Permission of Run command	ON OFF	Run command permitted Run command is not permitted			
85	EB	Rotation direction detection (C007 only)	ON OFF	Forward rotation Reverse rotation			
86	DISP	Display limitation	ON OFF	Only a parameter configured in <b>b038</b> is shown All the monitors can be shown			
255	no	No function	ON OFF	(input ignored) (input ignored)			

## **Output Terminal Configuration**

The inverter provides configuration for logic (discrete) and analog outputs, shown in the table below.

	"C" Function		Run	Defaults	3
Func. Code	Name	Description	Mode Edit	Initial data	Units
COS 1	Output [11] function [EDM assignable]	48 programmable functions available for logic (discrete) outputs	×	01 [FA1]	_
C022	Output [12] function	(see next section) 48 programmable functions available for logic (discrete) outputs	×	00 [RUN]	-
C026	Alarm relay function	(see next section) 13 programmable functions: 00Output frequency (PWM)	×	05 [AL]	_
רבסם	[EO] terminal selection (Pulse/PWM output)	01Output current (PWM) 02Output torque (PWM)	×	07	_
C028	[AM] terminal selection (Analog voltage output 010V)	D3Output frequency (Pulse train) D4Output voltage (PWM)	×	07 [LAD]	-
C030	Digital current monitor reference value	05Input power (PWM) 06Electronic thermal load ratio (PWM) 07LAD frequency (PWM) 08Output current (Pulse train) 10Heat sink temperature (PWM) 12General output (PWM) 15Pulse train input monitor 16Option(PWM) 11 programmable functions: 00Output frequency 01Output current 02Output torque 04Output voltage 05Input power 06Electronic thermal load ratio 07LAD frequency 10Heat sink temperature 11Output torque (with code) 13General output 16Option Current with digital current monitor output at 1,440Hz Range is 20%~200% of rated current Select logic conversion, two option codes: 00normally open [NO] 01normally closed [NC]	•	Rated current	A
רטטז	Pulse train input/output scale conversion	If EO terminal is configured as pulse train input (C027=15), scale conversion is set in C047. Pulse-out = Pulse-in × (C047) Set range is 0.01 to 99.99	✓	1.00	-

The output logic conversion is programmable for terminal [11], [12] and the alarm relay terminal. The open-collector output terminal [11] and [12] defaults to normally open (active low), but you can select normally closed (active high) for the terminal in order to invert the sense of the logic. You can invert the logical sense of the alarm relay output as well.

	"C" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
CO3 I	Output [11] active state	Select logic conversion, two option codes:	×	00	_
C032	Output [12] active state	ODnormally open [NO] OInormally closed [NC]	×	00	-
C036	Alarm relay active state	b normany closed [100]	×	01	_

You can also adjust the output with ON/OFF delays.

	"C" Function			Default	3
Func. Code	Name	Description	Mode Edit	Initial data	Units
C 130	Output [11] on delay	Set range is 0.0 to 100.0 sec.	×	0.0	sec.
[ [3 ]	Output [11] off delay		×	0.0	sec.
C 132	Output [12] on delay		×	0.0	sec.
C 133	Output [12] off delay		×	0.0	sec.
C 140	Relay output on delay		×	0.0	sec.
E 14 I	Relay output off delay		×	0.0	sec.



**NOTE**: If you are using the output terminal OFF delay feature (any of [ 145, [ 145 > 0.0 sec.), the [RS] (reset) terminal affects the ON-to-OFF transition slightly. Normally (with using OFF delays), the [RS] input causes the motor output and the logic outputs to turn OFF together, immediately. However, when any output uses an OFF delay, then after the [RS] input turns ON, that output will remain ON for an additional 1 sec. period (approximate) before turning OFF.

Output Function Summary Table – This table shows all functions for the logical outputs (terminals [11], [12] and [AL]) at a glance. Detailed descriptions of these functions, related parameters and settings, and example wiring diagrams are in "Using Intelligent Output Terminals" in chapter 4.

Output Function Summary Table						
Option Code	Terminal Symbol	Function Name		Description		
00	RUN	Run Signal	ON	When the inverter is in Run Mode		
			OFF	When the inverter is in Stop Mode		
01	FA1	Frequency Arrival Type	ON	When output to motor is at the set frequency		
		1–Constant Speed	OFF	When output to motor is OFF, or in any acceleration		
	FA2	Frequency Arrival Type	ON	or deceleration ramp  When output to motor is at or above the set freq.,		
02	I AZ	2–Over frequency	OIV	even if in accel (E042) or decel (E043) ramps		
			OFF	When output to motor is OFF, or at a level below the		
				set frequency		
03	OL	Overload Advance	ON	When output current is more than the set threshold		
		Notice Signal 1		(CDY I) for the overload signal		
			OFF	When output current is less than the set threshold		
	0.0	0 1 10 11 1 1 10	ON	for the deviation signal		
04	OD	Output Deviation for PID Control	ON	When PID error is more than the set threshold for the deviation signal		
		Control	OFF	When PID error is less than the set threshold for the		
			011	deviation signal		
05	AL	Alarm Signal	ON	When an alarm signal has occurred and has not		
				been cleared		
			OFF	When no alarm has occurred since the last cleaning of alarm(s)		
06	FA3	Frequency Arrival Type	ON	When output to motor is at the set frequency, during		
		3–Set frequency		accel (ED42) and decel (ED43).		
			OFF	When output to motor is OFF, or is not at a level of		
	OTQ	Overhunder Terrun	ON	the set frequency Estimated motor torque exceeds the specified level		
רם	OlQ	Over/under Torque Signal	ON OFF	Estimated motor torque exceeds the specified level		
		Olgilai	011	level		
09	UV	Under voltage	ON	Inverter is in Under voltage		
			OFF	Inverter is not in Under voltage		
10	TRQ	Torque Limited Signal	ON	Torque limit function is executing		
	DNT	D # E · ·	OFF	Torque limit function is not executing		
11	RNT	Run Time Expired	ON	Total running time of the inverter exceeds the specified value		
			OFF	Total running time of the inverter does not exceed		
			<b>0</b> . 1	the specified value		
12	ONT	Power ON time Expired	ON	Total power ON time of the inverter exceeds the		
"-				specified value		
			OFF	Total power ON time of the inverter does not exceed		
	THM	Thormal Warning	ON	the specified value		
13	I MIVI	Thermal Warning	ON	Accumulated thermal count exceeds the £05 i set value		
			OFF	Accumulated thermal count does not exceed the		
				CO5 I set value		
19	BRK	Brake Release Signal	ON	Output for brake release		
			OFF	No action for brake		
20	BER	Brake Error Signal	ON	Brake error has occurred		
			OFF	Brake performance is normal		
	<u> </u>	<u>I</u>	<b>~</b>	= perfermence to merman		


Output Function Summary Table						
Option Code	Terminal Symbol	Function Name		Description		
51	ZS	Zero Hz Speed Detection Signal	ON	Output frequency falls below the threshold specified in [063]		
			OFF	Output frequency is higher than the threshold specified in <b>CD53</b>		
55	DSE	Speed Deviation Excessive	ON	Deviation of speed command and actual speed exceeds the specified value PD27.		
			OFF	Deviation of speed command and actual speed does not exceed the specified value PD27.		
23	POK	Positioning Completion	ON OFF	Positioning is completed Positioning is not completed		
24	FA4	Frequency Arrival Type 4–Over frequency	ON	When output to motor is at or above the set freq., even if in accel ([045]) or decel ([045]) ramps		
		, ,	OFF	When output to motor is OFF, or at a level below the set frequency		
25	FA5	Frequency Arrival Type 5–Set frequency	ON	When output to motor is at the set frequency, during accel ( <b>£045</b> ) and decel ( <b>£046</b> ).		
			OFF	When output to motor is OFF, or is not at a level of the set frequency		
26	OL2	Overload Advance Notice Signal 2	ON	When output current is more than the set threshold ([ III) for the overload signal		
			OFF	When output current is less than the set threshold for the deviation signal		
27	ODc	Analog Voltage Input Disconnect Detection	ON	When the [O] input value < b010 setting (signal loss detected)		
<b></b>	OID -	Analan Ormantinari	OFF	When no signal loss is detected		
28	OIDc	Analog Current input Disconnect Detection	ON	When the [OI] input value < b07 / setting (signal loss detected)		
<del>  , ,   </del>	FBV	PID Second Stage	OFF ON	When no signal loss is detected  Transitions to ON when the inverter is in RUN Mode		
31	100	Output	ON	and the PID Process Variable (PV) is less than the Feedback Low Limit ([053])		
			OFF	Transitions to OFF when the PID Process Variable		
				(PV) exceeds the PID High Limit (£052), and		
				transitions to OFF when the inverter goes from Run Mode to Stop Mode		
32	NDc	Network Disconnect Detection	ON	When the communications watchdog timer (period specified by נרום) has time out		
			OFF	When the communications watchdog timer is satisfied by regular communications activity		
33	LOG1	Logic Output Function 1	ON	When the Boolean operation specified by [ I43 has a logical "1" result		
			OFF	When the Boolean operation specified by [ IH] has a logical "0" result		
∄4	LOG2	Logic Output Function 2	ON	When the Boolean operation specified by [ IH6 has a logical "1" result		
			OFF	When the Boolean operation specified by [ IH6 has a logical "0" result		
35	LOG3	Logic Output Function 3	ON	When the Boolean operation specified by [ I49 has a logical "1" result		
			OFF	When the Boolean operation specified by [ 149 has a logical "0" result		
39	WAC	Capacitor Life Warning	ON	Lifetime of internal capacitor has expired.		
		Signal	OFF	Lifetime of internal capacitor has not expired.		

	Output Function Summary Table					
Option Code	Terminal Symbol	Function Name		Description		
41	FR	Starting Contact Signal	ON	Either FW or RV command is given to the inverter		
			OFF	No FW or RV command is given to the inverter, or both are given to the inverter		
42	OHF	Heat Sink Overheat Warning	ON	Temperature of the heat sink exceeds a specified value ( <b>CD54</b> )		
			OFF	Temperature of the heat sink does not exceed a specified value (£064)		
43	LOC	Low load detection	ON	Motor current is less than the specified value ([039])		
			OFF	Motor current is not less than the specified value (£039)		
44	MO1	General Output 1	ON	General output 1 is ON		
			OFF	General output 1 is OFF		
45	MO2	General Output 2	ON	General output 2 is ON		
			OFF	General output 2 is OFF		
46	MO3	General Output 3	ON	General output 3 is ON		
	IDDV		OFF	General output 3 is OFF		
50	IRDY	Inverter Ready Signal	ON	Inverter can receive a run command		
	EMD	Famous ad Datation	OFF	Inverter cannot receive a run command		
51	FWR	Forward Rotation	ON OFF	Inverter is driving the motor in forward direction		
<b></b> -	RVR	Reverse Rotation		Inverter is not driving the motor in forward direction		
52	KVK	Reverse Rotation	ON OFF	Inverter is driving the motor in reverse direction  Inverter is not driving the motor in reverse direction		
	MJA	Major Failure Signal	ON	Inverter is tripping with major failure		
53	IVIJA	Major Fallure Signal	OFF	Inverter is urpping with major railure  Inverter is normal, or is not tripping with major		
			Oii	failure		
54	WCO	Window Comparator for Analog Voltage Input	ON	Analog voltage input value is inside of the window comparator		
			OFF	Analog voltage input value is outside of the window comparator		
55	WCOI	Window Comparator for Analog Current Input	ON	Analog current input value is inside of the window comparator		
			OFF	Analog current input value is outside of the window comparator		
58	FREF	Frequency Command	ON	Frequency command is given from the operator		
	DEE	Source	OFF	Frequency command is not given from the operator		
59	REF	Run Command Source	ON OFF	Run command is given from the operator Run command is not given from the operator		
<u> </u>	SETM	2 <sup>nd</sup> Motor Selection	ON	2 <sup>nd</sup> motor is being selected		
60	OLIM	Z WIOLOI OGIGOLIOII	OFF	2 <sup>nd</sup> motor is not being selected		
62	EDM	STO (Safe Torque Off)	ON	STO is being performed		
		Performance Monitor (Output terminal 11 only)	OFF	STO is not being performed		
63	OPO	Option card output	ON	(output terminal for option card)		
		N	OFF	(output terminal for option card)		
255	no	Not used	ON	-		
			OFF	-		

#### **Low Load Detection Parameters**

The following parameters work in conjunction with the intelligent output function, when configured. The output mode parameter ([0]] sets the mode of the detection at which the low load detection signal [LOC] turns ON. Three kinds of modes can be selected. The detection level parameter ([0]]) is to set the level of the low load.

This function is for generating an early warning logic output, without causing either a trip event or a restriction of the motor current (those effects are available on other functions).

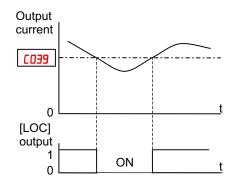


	"C" Function			Defaults	3
Func. Code	Name	Description	Mode Edit	Initial data	Units
C038	Output mode of low current detection	Two option codes:  ODuring acceleration, deceleration and constant speed ODuring constant speed only	×	01	_
C039	Low current detection level	Set the level of low load detection, range is 0.0 to 2.0*inverter rated current	×	INV rated current	A


#### **Output Function Adjustment Parameters**

Overload Warning Output - The following parameters work in conjunction with the intelligent output function, when configured. The overload level parameter (LD4 I) sets the motor current level at which the overload signal [OL] turns ON. The range of setting is from 0% to 200% of the rated current for the inverter. This function is for generating an early warning logic output, without causing either a trip event or a restriction of the motor current (those effects are available on other functions).

Frequency Arrival Output - The frequency arrival signal, [FA1] or [FA2], is intended to indicate when the inverter output has reached (arrived at) the target frequency. You can adjust the timing of the leading and trailing edges of the signal via two parameters specified to acceleration ad deceleration ramps, <code>CO42</code> and <code>CO43</code>. Refer also to chapter 4.

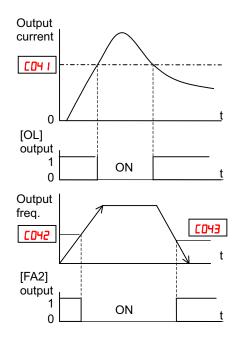

PID FBV Output - The Error for the PID loop is the magnitude (absolute value) of the difference between the Set point (desired value) and Process Variable (actual value). The PID output deviation signal [OD] (output terminal function option code D4) indicates when the error magnitude has exceeded a magnitude you define.

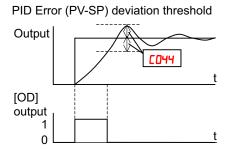

**Over/Under-torque Output** – The inverter outputs the over/under-torque signal when it detects that the estimated motor output torque exceeds the specified level. To enable this function, assign parameter "D7" (OTQ: over/under-torque signal) to an intelligent output terminal. Over-torque or under-torque can be selected by function **LO54**.

This function is effective only when the V/F characteristic curve selection "#D44" or "#244" is the sensorless vector control or 0Hz range sensorless vector control. With any other V/F characteristic curve is selected, the output of the OTQ signal is unpredictable. When using the inverter for a lift, use the OTQ signal as the trigger to stop braking. Use the frequency arrival signal as the trigger to start braking.

**Electronic Thermal Warning Output** –Please refer to page 3-39 for detailed information.

**Zero speed detection Output** – The inverter outputs the 0Hz speed detection signal when the inverter output frequency falls below the threshold frequency specified in the zero speed detection level (CD63).

To use this function, assign parameter "2 l" to one of the intelligent output terminals [11] to [12] (CO2 l to CO22), or to the alarm relay output terminal (CO26).

This function applies to the inverter output frequency when the V/F characteristic curve selection is based on the constant torque (VC), reduced torque (VP), free-V/F, sensorless vector control, or 0Hz range sensorless vector control.

Heat Sink Overheat Warning Output – The inverter monitors the temperature of its heat sink, and outputs the heat sink overheat warning (OHF) signal when the temperature exceeds the heat sink overheat warning level specified in parameter CD54.

	"C" Fo	unction	Run	Defaults	3
Func. Code	Name	Description	Mode Edit	Initial data	Units
C040	Output mode of overload warning	Two option codes:  ODDuring accel., decel. and constant speed  O!During constant speed only	×	01	
C04 I	Overload warning level	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	×	Rated current x 1.15	
C24 I	Overload warning level, $2^{\mathrm{nd}}$ motor	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	×	Rated current x 1.15	
C042	Frequency arrival setting for acceleration	Sets the frequency arrival setting threshold for the output frequency during acceleration, range is 0.0 to 400.0 Hz	×	0.0	
C043	Frequency arrival setting for deceleration	Sets the frequency arrival setting threshold for the output frequency during deceleration, range is 0.0 to 400.0 Hz	×	0.0	
C044	PID deviation level	Sets the allowable PID loop error magnitude (absolute value), SP-PV, range is 0.0 to 100%	×	3.0	
C045	Frequency arrival setting 2 for acceleration	Set range is 0.0 to 400.0 Hz	×	0.00	
C046	Frequency arrival setting 2 for deceleration	Set range is 0.0 to 400.0 Hz	×	0.00	
C052	PID FBV output high limit	When the PV exceeds this value, the PID loop turns OFF the PID second stage output, range is 0.0 to 100%	×	100.0	%

	"C" Function			Defaults	8
Func. Code	Name	Description	Mode Edit	Initial data	Units
C053	PID FBV output low limit	When the PV goes below this value, the PID loop turns ON the PID second stage output, range is 0.0 to 100%	×	0.0	%
C054	Over-torque/under-torque selection	Two option codes:  ODOver-torque O IUnder-torque	×	00	-
C055	Over/under-torque level (Forward powering mode)	Set range is 0 to 200%	×	100.	%
C056	Over/under-torque level (Reverse regen. mode)	Set range is 0 to 200%	×	100.	%
C057	Over/under-torque level (Reverse powering mode)	Set range is 0 to 200%	×	100.	%
C058	Over/under-torque level (Forward regen. mode)	Set range is 0 to 200%	×	100.	%
C059	Signal output mode of Over/under-torque	Two option codes:  ODuring accel., decel. and constant speed  ODuring constant speed only	×	01	-
C06 I	Electronic thermal warning level	Set range is 0 to 100% Setting 0 means disabled.	×	90	%
C063	Zero speed detection level	Set range is 0.0 to 100.0Hz	×	0.00	Hz
C064	Heat sink overheat warning	Set range is 0 to 110 °C	×	100.	$^{\circ}\mathrm{C}$
	Overload warning level 2	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	Rated current x 1.15	A

## **Network Communications Settings**


The following table lists parameters that configure the inverter's serial communications port. The settings affect how the inverter communication with a digital operator (such as SRW-0EX), as well as a ModBus network (for networked inverter applications). The settings cannot be edited via the network, in order to ensure network reliability. Refer to "ModBus Network Communications" on page B-1 for more information on controlling any monitoring your inverter from a network.

	"C" Function		Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ו רם	Communication speed	Eight option codes:  032,400 bps  044,800 bps  059,600 bps  0619,200 bps  0738,400 bps  0857,600 bps  0976,800 bps  10115,200 bps	×	05	baud
ברם	Modbus address	Set the address of the inverter on the network. Range is 1 to 247	×	1.	-
בסטא	Communication parity	Three option codes:  ODNo parity  OIEven parity  OZOdd parity	×	00	_
C075	Communication stop bit	Two option codes:  11 bit  22 bit	×	1	bit
C076	Communication error select	Selects inverter response to communications error. Five options:  ODTrip  O1Decelerate to a stop and trip  O2Disable  O3Free run stop (coasting)  O4Decelerates to a stop	×	02	1
ררם	Communication error time-out	Sets the communications watchdog timer period. Range is 0.00 to 99.99 sec 0.0 = disabled	×	0.00	sec.
פרסם	Communication wait time	Time the inverter waits after receiving a message before it transmits. Range is 0. to 1000. ms	×	0.	msec.
ו רם	Communication speed	Eight option codes:  032,400 bps  044,800 bps  059,600 bps  0619,200 bps  0738,400 bps  0957,600 bps  0976,800 bps  10115,200 bps	X	05	baud

## **Analog Input Signal Calibration Settings**

The functions in the following table configure the signals for the analog input terminals. Note that these settings do not change the current/voltage or sink/source characteristics - only the zero and span (scaling) of the signals.

These parameters are already adjusted before the shipment, and therefore it is not recommended to do the adjustment at the customer.

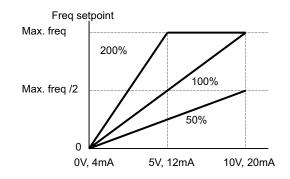

	"C" Function			Defaults	8
Func. Code	Name	Description	Mode Edit	Initial data	Units
C08 I	O input span calibration	Scale factor between the external frequency command on terminals L–O (voltage input) and the frequency output, range is 0.0 to 200%	<b>✓</b>	100.0	%
C082	OI input span calibration	Scale factor between the external frequency command on terminals L–OI (voltage input) and the frequency output, range is 0.0 to 200%	<b>√</b>	100.0	%
C085	Thermistor input (PTC) span calibration	Scale factor of PTC input. Range is 0.0 to 200%	<b>√</b>	100.0	%



NOTE: When you restore factory default settings, the values will change to those listed above. Be sure to manually reconfigure the values for your application, if needed, after restoring factory defaults.

## **Miscellaneous Functions**

The following table contains miscellaneous functions not in other function groups.

	"C" Function		Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
C09 I	Debug mode enable *	Displays debug parameters. Two option codes: ODDisable O IEnable <do not="" set=""> (for factory use)</do>	✓	00	_
C 10 I	Up/Down memory mode selection	Controls speed set point for the inverter after power cycle.  Two option codes:  ODClear last frequency (return to default frequency FOO I)  O IKeep last frequency adjusted by UP/DWN	×	00	_
C 102	Reset selection	Determines response to Reset input [RS]. Four option codes:  ODCancel trip state at input signal ON transition, stops inverter if in Run Mode  O ICancel trip state at signal OFF transition, stops inverter if in Run Mode  OZCancel trip state at input ON transition, no effect if in Run Mode  OJClear the memories only related to trip status	×	00	
C 103	Restart mode after reset	Determines the restart mode after reset is given, three option codes:  ODStart with 0 Hz OIStart with freq. matching OZStart with active freq. matching	×	00	-
C 104	UP/DWN clear mode	Freq. set value when UDC signal is given to the input terminal, two option codes:  ODO Hz OIOriginal setting (in the EEPROM memory at power on)	×	00	_



**CAUTION:** Do not change the debug mode for safety reasons. Otherwise unexpected performances may occur.


## **Analog Output Calibration Related Functions**

These functions are for adjustment of analog output FM and AM. The outputs are adjusted at factory before the shipment, and therefore basically no need to adjust at the customer. But in case you need to change the gain depending on your system (i.e. analog meter specification), you can use these functions for the adjustment.

	"C" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
C 105	EO gain adjustment	Set range is 50 to 200%	✓	100.	%
C 106	AM gain adjustment	Set range is 50 to 200%	✓	100.	%
C 109	AM bias adjustment	Set range is 0 to 100%	<b>√</b>	0.	%

#### **Output Logic and Timing**

**Logic Output Function** – The inverter has a built-in logic output feature. Select any two operands out of all intelligent output options except LOG1~LOG3 and their operator out of AND, OR, or XOR (exclusive OR). The terminal symbol for the new output is [LOG]. Use **CO21**, **CO22** or **CO25** to route the logical result to terminal [11], [12] or the relay terminals. LOG1-LOG3, no, OPO cannot be the operand.

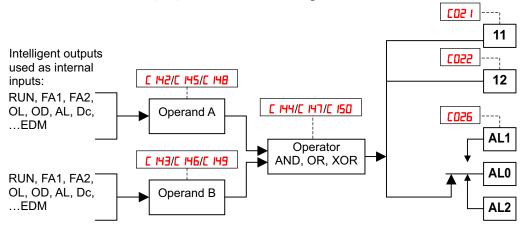

The following table shows all four possible input combinations with each of the three available logic operations.

Ope	rand	Operator			
Α	В	AND	OR	XOR	
0	0	0	0	0	
0	1	0	1	1	
1	0	0	1	1	
1	1	1	1	0	

	"C" F	unction	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
C 142	Logic output 1 operand A	All the programmable functions available for logic (discrete)	×	00	_
E 143	Logic output 1 operand B	outputs except LOG1 to LOG3, OPO, no	×	00	_
C 144	Logic output 1 operator	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OL[LOG] = A OR B  OL[LOG] = A XOR B	×	00	
C 145	Logic output 2 operand A	All the programmable functions available for logic (discrete)	×	00	_
C 146	Logic output 2 operand B	outputs except LOG1 to LOG3, OPO, no	×	00	_
E 147	Logic output 2 operator	Applies a logic function to calculate [LOG] output state, Three options: OD[LOG] = A AND B OI[LOG] = A OR B OZ[LOG] = A XOR B	×	00	_
C 148	Logic output 3 operand A	All the programmable functions available for logic (discrete)	×	00	_
C 149	Logic output 3 operand B	outputs except LOG1 to LOG3, OPO, no	×	01	_
C 150	Logic output 3 operator	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OI[LOG] = A OR B  OZ[LOG] = A XOR B	×	00	_


## **Other Functions**

To avoid the miss-input of the multi-speed due to the time rug, waiting time to fix the multi-speed can be set by C169. When input is detected, data is fixed after the time defined with C169.

# "H" Group: Motor Constants Functions

The "H" Group parameters configure the inverter for the motor characteristics. You must manually set HOO3 and HOO4 values to match the motor. Parameter HOO5 is factory-set. If you want to reset the parameters to the factory default settings, use the procedure in "Restoring Factory Default Settings" on in section 6. Use RO44 to select the torque control algorithm as shown in the diagram.

#### **Inverter Torque Control Algorithms**

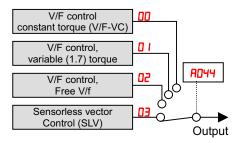

Please refer to chapter 4 for detailed explanation of the auto-tuning.

	"H" F	unction	Run	Defaults		
Func. Code	Name	Description	Mode Edit	Initial data_	<u>Units</u>	
H00 I	Auto-tuning selection	Three option codes:	×	00	_	
H002	Motor constant selection	01Enabled with motor stop 02Enabled with motor rotation	×	00	_	
H202	Motor constant selection, 2 <sup>nd</sup> motor	Four option codes:  OHitachi standard motor  OAuto tuned data	×	00	-	
H003	Motor capacity	Eleven selections: 0.1/0.2/0.4/0.75/1.5/2.2/3.7/ 5.5/7.5/11/15/18.5	×	Specified by the capacity of each inverter model	kW	
H203	Motor capacity, 2 <sup>nd</sup> motor		×	00	kW	
H004	Motor poles setting	Four selections: 2/4/6/8/10	×	4	poles	
H204	Motor poles setting, 2 <sup>nd</sup> motor		×	4	poles	
H005	Motor speed response constant	Set range is 1 to 1000	✓	100.	_	
H205	Motor speed response constant, 2 <sup>nd</sup> motor		✓	100.	-	
ноо6	Motor stabilization constant	Motor constant (factory set), range is 0 to 255	✓	100.	_	
H206	Motor stabilization constant, 2 <sup>nd</sup> motor	_	✓	100.	_	
H050	Motor constant R1 (Hitachi motor)	0.001~65.535 ohms	×	Specified by the capacity	Ohm	
H220	Motor constant R1, 2 <sup>nd</sup> motor (Hitachi motor)		×	of each inverter mode	Ohm	
HO2 I	Motor constant R2 (Hitachi motor)	0.001~65.535 ohms	×		Ohm	
H25 1	Motor constant R2, 2 <sup>nd</sup> motor (Hitachi motor)		X		Ohm	

	"H" Fo	unction	Run	Defaults	3
Func. Code	Name	Description	Mode Edit	Initial data	Units
H055	Motor constant L (Hitachi motor)	0.01~655.35mH	×		mH
H255	Motor constant L, 2 <sup>nd</sup> motor <b>(Hitachi motor)</b>		×		mH
H023	Motor constant I0 (Hitachi motor)	0.01~655.35A 0.001~9999 kgm <sup>2</sup>	×		A
H223	Motor constant I0, 2 <sup>nd</sup> motor <b>(Hitachi motor)</b>		×		A
H024	Motor constant J (Hitachi motor)		×		kgm <sup>2</sup>
H224	Motor constant J, 2 <sup>nd</sup> motor <b>(Hitachi motor)</b>		×	01	kgm <sup>2</sup>
H030	Motor constant R1 (Auto tuned data)	0.001~65.535 ohms	×	Specified by the capacity	ohm
H230	Motor constant R1, 2 <sup>nd</sup> motor <b>(Auto tuned data)</b>		×	of each	ohm
H03 I	Motor constant R2 (Auto tuned data)	0.001~65.535 ohms	×		ohm
H23 I	Motor constant R2, 2 <sup>nd</sup> motor <b>(Auto tuned data)</b>		×		ohm
H032	Motor constant L (Auto tuned data)	0.01~655.35mH	×		mH
H232	Motor constant L, $2^{nd}$ motor (Auto tuned data)		×		mH
H033	Motor constant I0 (Auto tuned data)	0.01~655.35A	×		A
H233	Motor constant I0, 2 <sup>nd</sup> motor (Auto tuned data)		×		A
H034	Motor constant J (Auto tuned data)	0.001~9999 kgm <sup>2</sup>	×		kgm <sup>2</sup>
H234	Motor constant $J$ , $2^{nd}$ motor (Auto tuned data)		×		kgm <sup>2</sup>
H050	Slip compensation P gain for V/f control with FB	0.00-10.00	×	0.2	Times
H05 I	Slip compensation I gain for V/f control with FB	01000.	×	2.	(s)

#### **Motor Constants Selection**

Adjust the motor constant settings to the motor to be driven by the inverter.

When using a single inverter to drive multiple motors in the control mode based on VC, VP, or free V/F characteristics, calculate the total capacity of the motors, and specify a value close to the total capacity for the motor capacity selection (HDD3/H2D3).

When the automatic torque boost function is used, the motor constant settings that do not match with the motor may result in a reduced motor torque, or unstable motor operation.

You can select the motor constants that are used when the control mode is the sensorless vector control (hereafter "SLV") from the following three types.

- (1) Motor constants of Hitachi standard induction motor
  When HOO2/H2O2=OO, motor constants in HO2O/H22O to HO24/H224 are taken. The initial values in HO2O/H22O to HO24/H224 are Hitachi standard motor's values.
- (2) Motor constants obtained by off-line auto-tuning When H002/H202=02, motor constants in H030/H230 to H034/H234 are taken, which are obtained by off-line auto-tuning.
- (3) Arbitrarily set motor constants
  In above (1) and (2) cases, motor constants can be adjusted manually. According to value of HOD2/H2D2, change motor constants in HO2D/H22O to HO24/H224 or HO3D/H23O to HO34/H234 if necessary.
- \*1) Convert the inertia (J) to the motor shaft value. Bigger J value will result in a quicker in motor response and quicker in torque increase. Smaller J value will result in the opposite way.
- \*2) In the SLV modes, inverter may give out reverse to given operation command in the low speed range as a nature of those controls. In case there is a specific inconvenience for example reverse rotation damages the machine, enable the reverse run protection (b045).

## **Sensorless Vector Control**

This sensorless vector control enables the inverter to accurately operate the motor with a high starting torque, even at low speed. It estimates and controls the motor speed and output torque based on the inverter output voltage, output current, and the set motor constants on the inverter. To use this function, specify "D3" for the V/F characteristic curve selection (RD44/R2444).

In prior to use this function, be sure to make optimum setting of the motor constants, which is described before.

When using this function, observe the following precautions:

- (1) If you use the inverter to drive a motor of which the capacity is two classes lower than the maximum applicable capacity of the inverter, you may not be able to obtain adequate motor characteristics.
- (2) If you cannot obtain the desired characteristics from the motor driven under the SLV control, readjust the motor constants according to the symptom, as described in the table below.

Status	Symptom	Adjustment method	Adjustment item
Powering	Momentary speed variation is negative	Increase the motor constant R2 step by step from the set value up to 1.2 times of the set value	HOS 1/HSS 1
	Momentary speed variation is positive	Decrease the motor constant R2 step by step from the set value up to 0.8 times of the set value	HDS 1/HSS 1
Regeneration	Torque is insufficient at low speed (~ few Hz)	Increase the motor constant R1 step by step from the set value up to 1.2 times of the set value	H050/H550
		Increase the motor constant lo step by step from the set value up to 1.2 times of the set value	HD23/H223
Starting	Motor generates an impact at	Reduce the motor constant J from the set value	HD54/H554
	start	Decrease the speed response factor	H005/H205
	Motor runs backward for short moment at start	Set 01 (enable) on reverse run protection function (b046)	6046
Decelerating	Motor runs unsteadily	Decrease the speed response factor	H005/H205
		Decrease the motor constant J from the set value	H024/H224
Low frequency	Motor rotation is unstable	Increase the motor constant J from the set value	HD24/H224
operation		Increase the speed response factor	H005/H205

Note 1) When driving a motor of which the capacity is one class lower than the inverter, adjust the torque limit (**b04** I to **b044**) so that the value "α" calculated by the expression below does not exceed 200%. Otherwise, the motor may not be burnt.

 $\alpha$  = "torque limit" x (inverter capacity) / (motor capacity)

(Example) When the inverter capacity is 0.75kW and the motor capacity is 0.4kW, the torque limit value is calculated as follows, based on the assumption that the value α should be 200%:

Torque limit (**b04** I to **b044**) =  $\alpha$  x (motor capacity) / (inverter capacity) = 2.0 x (0.4 kW)/(0.75 kW) = 106%

# **Auto-tuning Function**

The WJ200 inverter has auto-tuning function to get suitable motor control performance by measuring the motor constants automatically. Auto-tuning is effective only sensorless vector control.

#### Auto-tuning with motor stop (HDD I=D I)

Motor does not rotate while auto-tuning. If rotating motor could give harm to your application, use this mode. But the motor constant I<sub>0</sub> (no-load current) and J (inertia) are not measured and remain unchanged. (I<sub>0</sub> can be monitored in 50Hz of V/f operation.)

#### Auto-tuning with motor rotation (HDD I=D2)

Motor rotates according to a special operation pattern while auto-tuning. However, the torque during auto-tuning is not sufficient, which may cause a problem in the load (for example, a lift may slide down). See below instruction 7)-d).


When using auto-tuning function, follow the instructions below.

- 1) When using a motor which constants are unknown, execute offline auto-tuning to obtain the constants.
- 2) When the motor constant selection (H002/H202) is Hitachi std. motor (01), the initial values in H020/H220 to H024/H224 are Hitachi standard motor's values. If Hitachi std. motor is used, full performance is achieved without auto-tuning in most cases.
- 3) The motor constant data is corresponding to one-phase of Y (star) connection for 50Hz.
- 4) Set base frequency (AOD3) and AVR voltage (ADB2) according to the motor specifications. If the motor voltage is other than the alternatives, set V/f gain (AD45) according to below formula. "motor voltage (ADB2)" × "output voltage gain (AD45)" = "motor rated voltage"
- 5) Proper motor constants are obtained only when the same size or one size lower motor is used. If other size of motor is connected, proper values may not be obtained or auto-tuning operation may not be completed. In this case, press STOP/RESET key, then error code will be displayed.
- 6) Be sure to disable DC braking setting (AOS =OO) and simple positioning selection (PO 12=OO), otherwise motor constants are not measured properly.
- 7) Be sure to deactivate ATR terminal (52:Enable torque cmd. input), otherwise motor constants are not measured properly.
- 8) If auto-tuning with motor rotation (HDD I=D2) is used, check the followings points.
  - a) The motor rotates up to 80% of base frequency. Check if it is no problem for the application.
  - b) The motor should not be driven by any other external force.
  - c) All the brakes should be released.
  - d) During auto-tuning, insufficient torque may cause a problem in the load (for example, a lift may slide down). In this case, remove the motor from the machine or other load, and perform auto-tuning with the motor alone. The measured inertia J is based on the motor alone. To apply the data, add the moment of inertia of the load machine to the measured J data after converting the moment of inertia to the motor shaft data.
  - e) If the application is with limitation (e.g. lift or boring machine), the allowable rotation limit may be exceeded in auto-tuning, and the machine may be damaged.
- 9) Even when "I (auto-tuning without motor rotation)" is selected, the motor could rotate slightly during auto-tuning.
- 10) When performing the auto-tuning with one lower size of motor, enable the overload restriction function, and set the overload restriction level to 150% of the rated current of the motor.
- 11) When deceleration over-voltage suppress integral time (b134) is small, auto-tuning may result

	3.				1 40			
11	over-voltage	trin I	n thie (	race inc	reace h13/	l and ret	rv the ai	ito-tiining
- 11	I OVCI VOITAGE	urip. r	11 01115 (	case, me	ICASC DIO	r and icu	i y uiic a	ato tummg.

12) To execute auto-tuning, be sure to set the output frequency (F001) larger than starting frequency (b082) regardless with or without rotation.

#### Off-line auto-tuning procedure (with motor rotation)

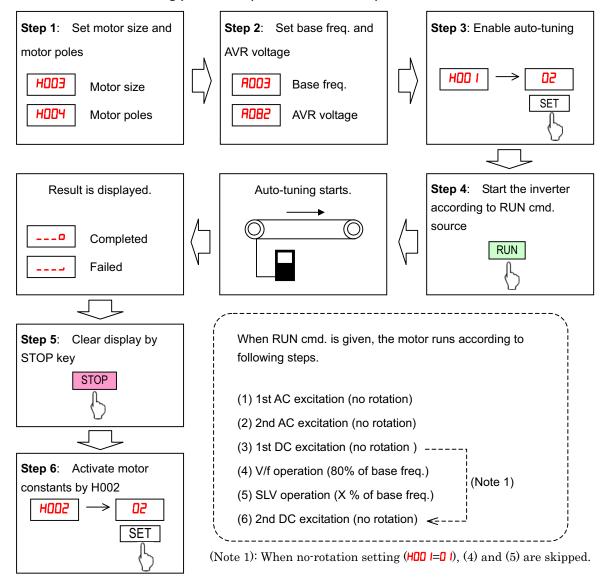

- (Note 2) After auto-tuning is completed, be sure to set 01 in H002/H202, otherwise measured data is not effective.
- (Note 3) Speed "X" of above (5) depends on accel/deceleration time. (T: Larger time of accel or deceleration time)

0 < T < 50 [s]: X=40%  $50 \le T < 100 [s]$ : X=20% $100 \le T [s]$ : X=10%

- (Note 4) If auto-tuning is failed, try to execute again.
- (Note 5) If the inverter trips during the auto-tuning, the auto-tuning is interrupted. After removing the cause of trip, retry auto-tuning from the beginning.
- (Note 6) If inverter is stopped during auto-tuning by stop command (by STOP key or deactivate RUN input), measured constants could remain. Be sure to execute auto-tuning again.
- (Note 7) If auto-tuning is attempted in free V/f setting, auto-tuning will fail with error display.

# "P" Group: Other Parameters

P group parameters are for other functionality such as option error related, encoder (pulse train input) settings related, torque command related, positioning command related, Torque command related, EzSQ related, and communication (CompoNet, DeviceNet, EtherNet, ProfiBus, CAN Open, and CC-Link) related.

## **Option Card Error**

You can select how the inverter reacts when an error results from a built-in option card.

	"P" Ft	Run	Defaults	8	
Func. Code	Name	Description	Mode Edit Initial data		Units
P00 I	Reaction when option card error occurs	Two option codes:  ODInverter trips OIIgnores the error (Inverter continues operation)	×	00	_

## **Encoder (Pulse Train Input) Related Settings**

You can achieve speed control or simple positioning control by using pulse train input. Following table shows the related parameters of those function. Please refer to chapter 4 for the detailed description.

	"P" F	unction	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
P003	[EA] terminal selection	Three option codes:  ODSpeed reference (incl. PID)  OlFor control with encoder feedback  OZExtended terminal for EzSQ	×	00	_
P004	Pulse train input mode selection for feedback	Four option codes:  ODSingle-phase pulse [EA]  O I2-phase pulse (90° difference)  1 ([EA] and [EB])  OZ2-phase pulse (90° difference)  2 ([EA] and [EB])  O3Single-phase pulse [EA] and direction signal [EB]	×	00	
P0 1 1	Encoder pulse setting	Sets the pulse number (ppr) of the encoder, set range is 32~1024 pulses	×	512.	_
PO 12	Simple positioning selection	Two option codes:  ODsimple positioning deactivated  O Isimple positioning activated	×	00	_
PO 15	Creep Speed	Set range is start frequency ( <b>b082</b> ) ~10.00 Hz	×	5.00	Hz
P026	Over-speed error detection level	Set range is 0~150%	×	115.0	%
P027	Speed deviation error detection level	Set range is 0~120 Hz	×	10.00	Hz

## **Speed control Related Settings**

Set " 15" in 15" in 15" and 15" in 15" in 15" in 15" and 15" in 15

## **Torque Command Related Settings**

You can achieve simple positioning by simple encoder feedback control. Following table shows the related parameters to be set for the positioning. Please refer to chapter 4 for the detailed description of the function. 100% torque is referred to inverter rated current. Absolute torque value is up the motor to be combined.

	"P" Fi	unction	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
P033	Torque command input selection	Six option codes:  ODAnalog voltage input [O]  OIAnalog current input [OI]  OBOperator, ObOption	×	00	-
P034	Torque command level input	Set range is 0~200%	✓	0.	%
P036	Torque bias mode selection	Five option codes:  ONo bias  IOperator	×	00	_
РОЭТ	Torque bias value setting	Range is -200~200%	✓	0.	%
P038	Torque bias polar selection	Two option codes:  ODAccording to the sign  OIAccording to the rotation direction  O5Option	×	00	-
P039	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	<b>✓</b>	0.00	Hz
P040	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	<b>✓</b>	0.00	Hz
P04 I	Speed / Torque control switching time	Set range is 0 to 1000 ms	×	0.	ms


# **Simple Positioning**

**Encoder wiring –** The hardware overview about pulse train input is shown bas below.

Pulse input types	Max. Freq.	EA terminal (5 to 24VDC)	EB terminal (24VDC)
90° ph. difference 2-ph. pulse	2kHz	Phase-A (PNP open collector or Voltage output type)	Phase-B (PNP open collector or Voltage output type)
Single phase pulse + direction	32kHz	Single phase pulse (PNP open collector or Voltage output type)	Direction (sink/source transistor or contactor)
Single phase pulse	32kHz	Single phase pulse (PNP open collector or Voltage output type)	-

### 2-phase pulse input


Wire phase-A to EA terminal and phase-B to EB terminal. Since common terminal of EB is same as other inputs, use all the input terminals as source logic (PNP open collector or voltage output type). Voltage of EB should be 18 to 24VDC. Assign EB in input terminal 7.

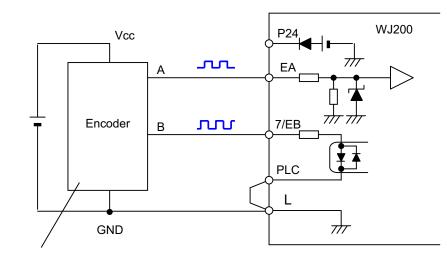

PNP open collector type or voltage output type encoder

### Single phase pulse input

Wire phase-A to EA terminal and direction signal to EB terminal. Both sink or source logic are available for EB terminal by changing position of the short bar. Assign EB in input terminal 7. ON input is forward and OFF input is reverse direction.

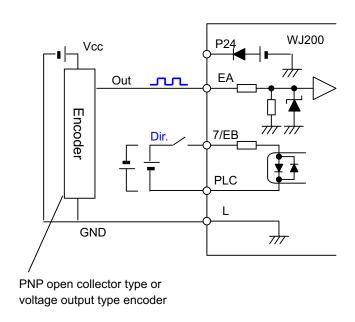

WJ200 WJ200 P24 Vcc Vcc Out Out 7/<u>EB</u> /// 7/EB /// Dir. Dir. PLC **PLC** L **GND GND** 7// 7/7 Souce type transistor Sink type transistor PNP open collector type or PNP open collector type or voltage output type encoder voltage output type encoder

#### Simple positioning setting

- Set "03" in [EA] selection (P003), then pulse train input is used as feedback signal from encoder.
- Set "D2" in simple positioning selection (PD 12), then simple positioning is enabled. (If "DD" is set, "V/f control with FB" is enabled. Please refer to **xx** for further information.
- Up to 8 position data are commanded by combination of 3 input terminals configured as CP1 to CP3.
- Besides positioning input, RUN command (FW,RV) is necessary. Since rotation direction does not matter for positioning, both FW and RV work as RUN command.
- Positioning speed depends on frequency source (ADD 1).

More than four digits are required for positioning data, but only four higher digits are displayed.


Code	Item	Data or data range	Description
P003	[EA] terminal selection	01	Encoder feedback
P004	Feedback pulse train mode	00	Single phase pulse train
		01	90° ph. difference 2-ph. pulse train 1
		02	90° ph. difference 2-ph. pulse train 2
		03	Single phase pulse train + direction
P0 I I	Encoder PPR setting	32. to 1024.	
PO 12	Simple positioning selection	02	Simple positioning enabled
PO 15	Creep speed	Start freq. to .10.00Hz	
P026	Over-speed error detection level	0.0 to 150. %	
P027	Speed deviation error level	0.00 to 120.0 Hz	
PO72	Position range (Forward)	0 to +268435455	Higher 4-digits displayed
РОТЭ	Position range (Reverse)	-268435455 to 0	Higher 4-digits displayed
PO75	Positioning mode selection	00	With limitation
		01	No limitation (shorter route)
			<b>P004</b> is to be set <b>00</b> or <b>0</b> I
ררם	Encoder disconnection timeout	0.0 to 10.0 s	
H050	Slip comp. P gain for FB V/f	0.0 to 10.00	
H05 I	Slip comp. I gain for FB V/f	0.0 to 1000. s	
4029	Position setting monitor	8435455 to +268435455	
4030	Position feedback monitor	0+00+00 t0 +200400400	
C 102	Reset selection	03	Internal data is not cleared by reset
C00 I	Input [1]~[7] function	47	PCLR: Pulse counter clear
- 6007	input [1]~[1] function	85	EB: Rotation direction detection
COS 1-COSS	Output [11][12] function	22	DSE: Speed deviation excessive
C026	Alarm relay function	23	POK: Positioning competion

(Note 1) If 7/EB terminal is used (P004=00~03), set 85 (EB) in input 7 (C007). ON is forward and OFF is reverse direction.

(Note 2) When 2-phase pulse is used, maximum frequency of phase-A and B are different (32kHz for A-phase, 2kHz for B-phase). In order to detect rotation direction over 2kHz, choose detection methods in P004.

P004	Item	Description
01	90° ph. difference 2-ph. pulse train 1	Keep the last direction
02	90° ph. difference 2-ph. pulse train 2	Depend on RUN command (FW or RV)

(Note 3) For rotating coordinate system, if "O I" is set in PO75, the rotation direction of shorter routing is selected. In this case, set the number of pulse for one rotation in position-0 (PO50). This value must be positive number. When "O I" is set in PO75, POOY is to be set OO or OI.

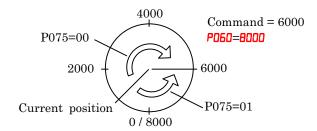

(Note 4) dO30 is cleared by inputting PCLR, SPD, ORG, RS signal or turning on the power supply.


When """ is set in **FOO4**, PCLR is effective only during the RUN command (FW, RV) is given.

(Note 5) **PD75** is to be set higher when speed detection is not accurate in low speed.

In the simple positioning mode, the inverter runs the motor until the machine reaches the target position according to the following settings, and then stops the motor with DC braking.

- <1> Position setting
- <2> Speed setting (frequency setting)
- <3> Acceleration and deceleration time

(DC braking state is held until RUN command is turned off.)

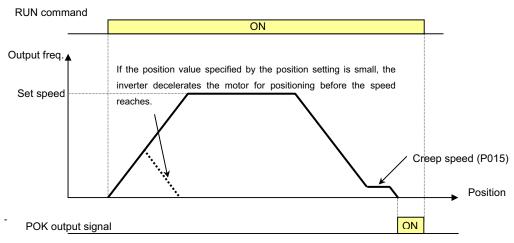

In simple positioning mode, the frequency and acceleration/deceleration are according to current settings as same as normal operation.

- Depending on DC braking and creep speed setting, positioning may go off the point.
- If the position value specified by the position setting is small, the inverter may decelerate the motor for positioning before its speed reaches the speed setting.
- In simple positioning mode, the rotation direction setting (FW or RV) of the operation command is ignored. The operation command simply functions as the signal to run or stop the motor. The motor runs in the forward direction when the value of "target position" –(minus) "current position" is positive, or in the reverse position when the value is negative.
- The position at power up is home position (Position data = 0). If power is removed, current position data is lost.
- When the operation command is turned on with 0 specified as the position setting, positioning is completed (with DC braking) without running the motor.
- Specify "D3 (only to reset a trip)" for reset mode selection ( $\mathcal{L}$  1D2). If a value other than "D3" is specified to  $\mathcal{L}$  1D2, the current position counter will be cleared when the inverter reset terminal (or reset key) is turned on. Be sure to specify "D3" for reset mode selection ( $\mathcal{L}$  1D2) if you intend to use the value of the current position counter for operation after recovering the inverter from tripping by turning on the reset terminal (or reset key).
- If the PCLR function is assigned to a input terminal, turning it on to clear the current position counter.
- In simple positioning mode, ATR terminal is invalid. (Torque control does not work.)
- If current position is out of the set range, inverter will be tripped (E83) and coasting status.

# Multistage position switching function (CP1/CP2/CP3)


When functions "**55** (CP1)" to "**58** (CP3)" are assigned to input terminal [1] to [7] (**500** ) to **500**, you can select multistage positions 0 to 7. Preset position data 0 to 7 in **7050** to **7057**. If no assignment is set in terminals, position command will be position-0 (**7050**).

Code	Item	Data or data range	Description
P060	Multistage position 0		(Note 1)
P06 I	Multistage position 1	P073 to P072	
P062	Multistage position 2		
P063	Multistage position 3	(Displayed higher	
P064	Multistage position 4	4-digits only)	
P065	Multistage position 5		
P066	Multistage position 6		
P067	Multistage position 7		

(Note 1) If **P075=0** I, set the number of pulse for one rotation in **P050**.


Position setting	CP3	CP2	CP1
Multistage position 0 (P060)	0	0	0
Multistage position 1 (PD5 I)	0	0	1
Multistage position 2 (PD62)	0	1	0
Multistage position 3 (PD63)	0	1	1
Multistage position 4 (PD64)	1	0	0
Multistage position 5 (PD65)	1	0	1
Multistage position 6 (PD66)	1	1	0
Multistage position 7 (PD67)	1	1	1

To avoid misinput due to time lag of each input, you can adjust the determination time in ( $\Gamma$  169). The input status is taken the preset time ( $\Gamma$  169) after the last change of input status. (Note that a long determination time deteriorates the input response.)

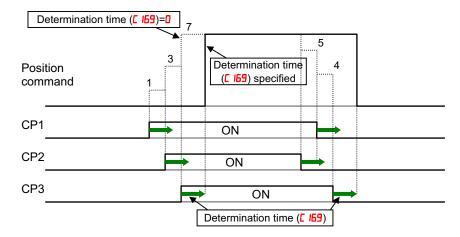

# Speed/positioning switching function (SPD)

- Set SPD terminal ON, then speed control is enabled in simple positioning mode.
- While SPD terminal is ON, current position counter is 0. When SPD is turned OFF, the inverter starts positioning operation.
- If positioning command data is 0 at SPD turning OFF, the inverter start deceleration immediately. (Depending on DC braking setting, motor could be hunting.)
- While SPD terminal is ON, rotating direction depends on RUN command. Be sure to check rotating direction after switching to positioning operation.

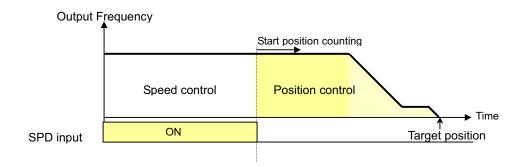


Parameter	Item	Data	Description
COO 1-COO7	Input [1]~[7] function	73	SPD: Speed/position
	input [1]~[7] function		change over

## **Homing function**

- Two different homing functions are available by setting homing mode selection (**PD58**).
- When trigger signal of homing (70: ORG), the inverter starts homing operation. When homing is completed, current position data is reset (0).
- Direction of homing is specified in **P059**.
- If homing is not operated, position at power up is regarded as home position (0).


Code	Item	Data or data range	Description
P068	Homing mode selection	00	Low speed mode
		01	High speed mode
P069	Homing direction	00	Forward rotation side
		01	Reverse rotation side
פרסק	Low speed homing freq.	0 to 10Hz	
ו רם	High speed homing freq.	0 to 400Hz	
COO 1~COO7	Input [1]~[7] function	69	ORL: Limit signal of homing
		סר	ORG: Trigger signal of homing

(1) Low speed homing (P068 = 00)

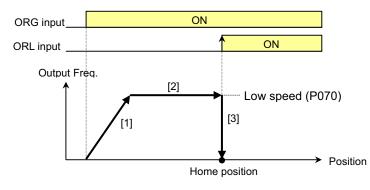

- [1] Acceleration up to the speed P070.
- [2] Running at low speed P070
- [3] DC braking when ORL signal ON

(2) High speed homing (P068 = 01)

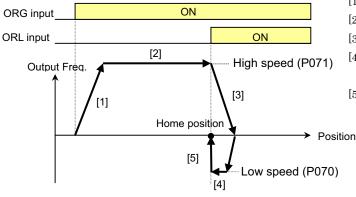

- [1] Acceleration up to the speed P071.
- [2] Running at high speed P071
- [3] Deceleration when ORL signal ON
- [4] Running at low speed P070 in reverse direction
- [5] DC braking when ORL signal OFF

# **EzSQ User Parameter Related Settings**

Please refer to chapter 4 for the detailed description of the function.

	"P" Function		Run	Defaults	3
Func. Code	Name	Description	Mode Edit	Initial data	Units
P 100 ~ P 13 1	EzSQ user parameter U(00) ~ U(31)	Each set range is 0~65535	<b>✓</b>	0.	-

# Operations and Monitoring

In This	Chapter	page
-	Introduction	2
-	Connecting to PLCs and Other Devices	4
-	Control Logic Signal Specifications	6
-	Intelligent Terminal Listing	10
-	Using Intelligent Input Terminals	12
-	Using Intelligent Output Terminals	51
-	Analog Input Operation	87
-	Pulse Train Input Operation	89
-	Analog Output Operation	90
-	Emergency Stop Function	92

# Introduction

The previous material in Chapter 3 gave a reference listing of all the programmable functions of the inverter. We suggest that you first scan through the listing of inverter functions to fain a general familiarity. This chapter will build on that knowledge in the following ways:

- **1. Related functions** Some parameters interact with or depend on the settings in other functions. This chapter lists "required settings" for a programmable function to serve as a cross-reference and an aid in showing how function interacts.
- **2. Intelligent terminals** Some functions rely on an input signal on a control logic connector terminal, or generate output signals in other cases.
- **3. Electrical interfaces** This chapter shows how to make connections between the inverter and other electrical devices.
- **4. Auto Tuning Performance –** This chapter shows how to perform auto tuning so to achieve good performance of the motor control.
- **5. Positioning Performance** This chapter shows how to realize simple positioning by using encoder (PG) feedback.
- **6. PID Loop Operation** The WJ200 has a built-in PID loop that calculates the optimal inverter output frequency to control an external process. This chapter shows the parameters and input/output terminals associated with PID loop operation.
- **7. Multiple motors** A single WJ200 inverter may be used with two or more motors in some types of applications. This chapter shows the electrical connections and inverter parameters involved in multiple-motor applications.

The topics in this chapter can help you decide the features that are important to your application, and how to use them. The basic installation covered in Chapter 2 concluded with the powerup test and running the motor. Now, this chapter starts from that point and shows how to make the inverter part of a larger control or automation system.

# **Caution Messages for Operating Procedures**

Before continuing, please read the following Caution messages.



**CAUTION:** The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned.



**CAUTION:** The operation of the inverter can be easily changed from low speed to high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, it may cause injury to personnel.



**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage.

# **Warning Messages for Operating Procedures**



**WARNING:** Be sure to turn ON the input power supply only after closing the front case. While the inverter is energized, be sure not to open the front case. Otherwise, there is the danger of electric shock.



**WARNING:** Be sure not to operate electrical equipment with wet hands. Otherwise, there is the danger of electric shock.



**WARNING:** While the inverter is energized, be sure not to touch the inverter terminals even when the motor is stopped. Otherwise, there is the danger of electric shock.



**WARNING:** If the retry mode is selected, the motor may suddenly restart after a trip stop. Be sure to stop the inverter before approaching the machine (be sure to design the machine so that safety for personnel is secure even if it restarts.) Otherwise, it may cause injury to personnel.



**WARNING:** If the power supply is cut OFF for a short period of time, the inverter may restart operating after the power supply recovers if the Run command is active. If a restart may pose danger to personnel, so be sure to use a lock-out circuit so that it will not restart after power recovery. Otherwise, it may cause injury to personnel.



**WARNING:** The Stop Key is effective only when the stop function is enabled. Be sure to enable the Stop Key separately from the emergency stop. Otherwise, it may cause injury to personnel.



**WARNING:** During a trip event, if the alarm reset is applied and the Run command is present, the inverter will automatically restart. Be sure to apply the alarm reset only after verifying the Run command is OFF. Otherwise, it may cause injury to personnel.



**WARNING:** Be sure not to touch the inside of the energized inverter or to put any conductive object into it. Otherwise, there is a danger of electric shock and/or fire.



**WARNING:** If power is turned ON when the Run command is already active, the motor will automatically start and injury may result. Before turning ON the power, confirm that the RUN command is not present.



**WARNING:** When the Stop key function is disabled, pressing the Stop key does not stop the inverter, nor will it reset a trip alarm.



**WARNING:** Be sure to provide a separate, hard-wired emergency stop switch when the application warrants it.

# **Connecting to PLCs and Other Devices**

Hitachi inverters (drives) are useful in many types of applications. During installation, the inverter keypad (or other programming device) will facilitate the initial configuration. After installation, the inverter will generally receive its control commands through the control logic connector or serial interface from another controlling device. In a simple application such as single-conveyor speed control, a Run/Stop switch and potentiometer will give the operator all the required control. In a sophisticated application, you may have a *programmable logic controller* (PLC) as the system controller, with several connections to the inverter.

It is not possible to cover all the possible types of application in this manual. It will be necessary for you to know the electrical characteristics of the devices you want to connect to the inverter. Then, this section and the following sections on I/O terminal functions can help you quickly and safely connect those devices to the inverter.




**CAUTION:** It is possible to damage the inverter or other devices if your application exceeds the maximum current or voltage characteristics of a connection point.


The connections between the inverter and other devices rely on the electrical input/output characteristics at both ends of each connection, shown in the diagram to the right. The inverter's configurable inputs accept either a sourcing or sinking output from an external device (such as PLC). This chapter shows the inverter's internal electrical component(s) at each I/O terminal. In some cases, you will need to insert a power source in the interface wiring.

In order to avoid equipment damage and get your application running smoothly, we recommend drawing a schematic of each connection between the inverter and the other device. Include the internal components of each device in the schematic, so that it makes a complete circuit loop.

After making the schematic, then:


- 1. Verify that the current and voltage for each connection is within the operating limits of each device.
- 2. Make sure that the logic sense (active high or active low) of any ON/OFF connection is correct.
- **3.** Check the zero and span (curve end points) for analog connections, and be sure the scale factor from input to output is correct.
- **4.** Understand what will happen at the system level if any particular device suddenly loses power, or powers up after other devices.

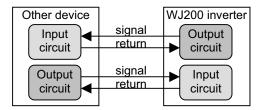

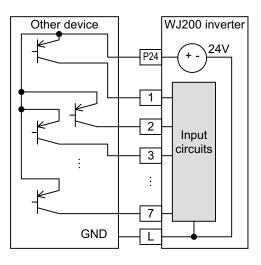


# **Example Wiring Diagram**

The schematic diagram below provides a general example of logic connector wiring, in addition to basic power and motor wiring converted in Chapter 2. The goal of this chapter is to help you determine the proper connections for the various terminals shown below for your application needs.

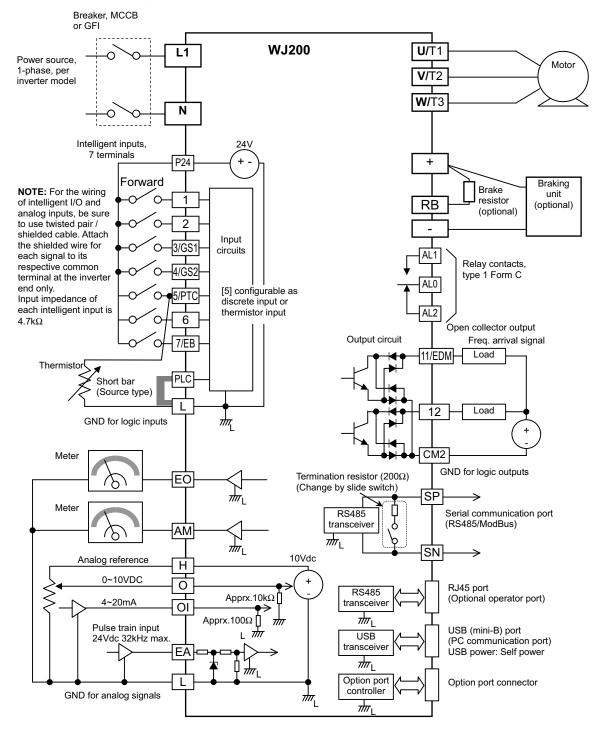

# **Control Logic Signal Specifications**

The control logic connectors are located just behind the front housing cover. The relay contacts are just to the left of the logic connectors. Connector labeling is shown below.

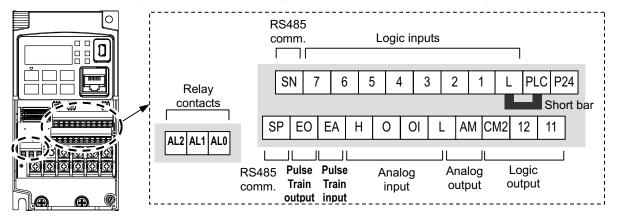

Terminal Name	Description	Ratings
P24	+24V for logic inputs	24VDC, 100mA. (do not short to terminal L)
PLC	Intelligent input common	To change to sink type, remove the short bar between [PLC] and [L], and connect it between [P24] and [L]. In this case, connecting [L] to [1]~[7] makes each input ON. Please remove the short bar when using external power supply.
1 2 3/GS1 4/GS2 5/PTC 6 7/EB	Discrete logic inputs (Terminal [3],[4],[5] and [7] have dual function. See following description and related pages for the details.)	27VDC max. (use PLC or an external supply referenced to terminal L)
GS1(3)	Safe stop input GS1	Functionality is based on ISO13849-1
GS2(4)	Safe stop input GS2	See appendix for the details.
PTC(5)	Motor thermistor input	Connect motor thermistor between PTC and L terminal to detect the motor temperature. Set 19 in COD5.
EB(7)	Pulse train input B	2kHz max. Common is [PLC]
EA	Pulse train input A	32kHz max. Common is [L]
L (in upper row) *1	GND for logic inputs	Sum of input [1]~[7] currents (return)
11/EDM	Discrete logic outputs [11] (Terminal [11] has dual function. See following description and related pages for the details.)	50mA max. ON state current, 27 VDC max. OFF state voltage Common is CM2 In case the EDM is selected, the functionality is based on ISO13849-1 4VDC max. ON state voltage depression
12	Discrete logic outputs [12]	50mA max. ON state current, 27 VDC max. OFF state voltage Common is CM2
CM2	GND for logic output	100 mA: [11], [12] current return
AM	Analog voltage output	0~10VDC 2mA maximum
EO	Pulse train output	10VDC 2mA maximum 32kHz maximum


Terminal Name	Description	Ratings
L (in bottom row) *2	GND for analog signals	Sum of [OI], [O], and [H] currents (return)
OI	Analog current input	4 to 19.6 mA range, 20 mA nominal,
		input impedance $250~\Omega$
0	Analog voltage input	0 to 9.8 VDC range, 10 VDC nominal,
		input impedance $10 \text{ k}\Omega$
Н	+10V analog reference	10VDC nominal, 10mA max.
SP, SN	Serial communication terminal	For RS485 Modbus communication.
AL0	Relay common contact	250VAC, 2.5A (R load) max.
AL1 *3	Relay contact, normally open	250VAC, 0.2A (I load, P.F.=0.4) max.
AL2 *3	Relay contact, normally closed	100VAC, 10mA min.
		30VDC, 3.0A (R load) max.
		30VDC, 0.7A (I load, P.F.=0.4) max.
		5VDC, 100mA min.

Note 1: The two terminals [L] are electrically connected together inside the inverter.

**Note 2:** We recommend using [L] logic GND (to the right) for logic input circuits and [L] analog GND (to the left) for analog I/O circuits.

**Note 3:** Default relay N.O./N.C. configuration is reversed. See page 4-35.


# Wiring sample of control logic terminal (source logic)

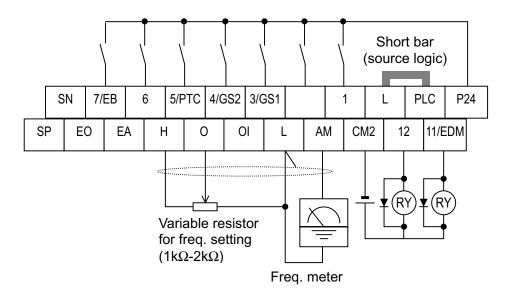

**Note**: If relay is connected to intelligent output, install a diode across the relay coil (reverse-biased) in order to suppress the turn-off spike.


# Sink/source logic of intelligent input terminals

Sink or source logic is switched by a short bar as below.

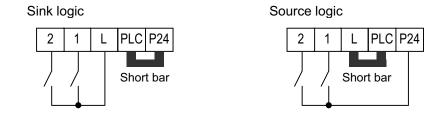

# Wire size for control and relay terminals

Use wires within the specifications listed below. For safe wiring and reliability, it is recommended to use ferrules, but if solid or stranded wire is used, stripping length should be 8mm.

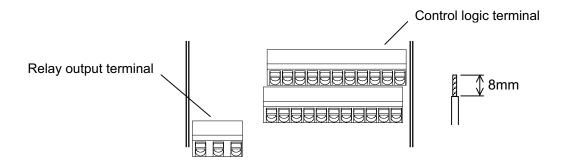

	Şolid	Stranded	Ferrule
	mm² (AWG)	mm² (AWG)	mm <sup>2</sup> (AWG)
Control logic terminal	0.2 to 1.5	0.2 to 1.0	0.25 to 0.75
	(AWG 24 to 16)	(AWG 24 to 17)	(AWG 24 to 18)
Relay terminal	0.2 to 1.5	0.2 to 1.0	0.25 to 0.75
	(AWG 24 to 16)	(AWG 24 to 17)	(AWG 24 to 18)

### Recommended ferrule

For safe wiring and reliability, it is recommended to use following ferrules.


Wire size mm² (AWG)	Model name of ferrule *	L [mm]	Фd [mm]	ФD [mm]	→ <del> K</del> Фd
0.25 (24)	AI 0.25-8YE	12.5	0.8	2.0	181
0.34 (22)	AI 0.34-8TQ	12.5	0.8	2.0	<u> </u>
0.5 (20)	AI 0.5-8WH	14	1.1	2.5	
0.75 (18)	AI 0.75-8GY	14	1.3	2.8	ΦD

<sup>\*</sup> Supplier: Phoenix contact

Crimping pliers: CRIPMFOX UD 6-4 or CRIMPFOX ZA 3

# How to connect?

- (1) Push down an orange actuating lever by a slotted screwdriver (width 2.5mm max.).
- (2) Plug in the conductor.
- (3) Pull out the screwdriver then the conductor is fixed.

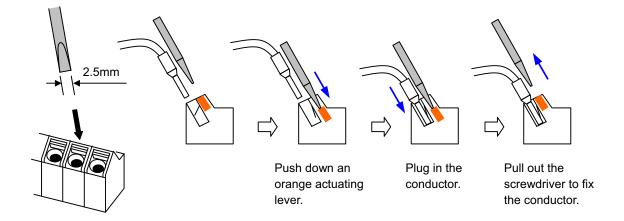

# **Intelligent Terminal Listing**

# **Intelligent Inputs**

Use the following table to locate pages for intelligent input material in this chapter.

Input Function Summary Table								
Symbol	Code	Function Name	Page					
FW	00	Forward Run/Stop	4-16					
RV	01	Reverse Run/Stop	4-16					
CF1	02	Multi-speed Select, Bit 0 (LSB)	4-17					
CF2	03	Multi-speed Select, Bit 1	4-17					
CF3	04	Multi-speed Select, Bit 2	4-17					
CF4	05	Multi-speed Select, Bit 3 (MSB)	4-17					
JG	06	Jogging	4-19					
DB	07	External DC braking	4-20					
SET	08	Set (select) 2nd Motor Data	4-21					
2CH	09	2-stage Acceleration and Deceleration	4-22					
FRS	11	Free-run Stop	4-23					
EXT	12	External Trip	4-24					
USP	13	Unattended Start Protection	4-25					
CS	14	Commercial power source switchover	4-26					
SFT	15	Software Lock	4-27					
AT	16		4-27					
		Analog Input Voltage/Current Select Reset Inverter						
RS	18		4-29					
PTC	19	PTC thermistor Thermal Protection	4-30					
STA	20	Start (3-wire interface)	4-31					
STP	21	Stop (3-wire interface)	4-31					
F/R	22	FWD, REV (3-wire interface)	4-31					
PID	23	PID Disable	4-32					
PIDC	24	PID Reset	4-32					
UP	27	Remote Control UP Function	4-34					
DWN	28	Remote Control Down Function	4-34					
UDC	29	Remote Control Data Clearing	4-34					
OPE	31	Operator Control	4-35					
SF1~SF7	32~38	Multi-speed Select,Bit operation Bit 1~7	4-36					
OLR	39	Overload Restriction Source Changeover	4-37					
TL	40	Torque Limit Selection	4-37					
TRQ1	41	Torque limit switch 1	4-38					
TRQ2	42	Torque limit switch 2	4-38					
BOK	44	Brake confirmation	4-38					
LAC	46	LAD cancellation	4-39					
PCLR	47	Pulse counter clear	4-40					
ADD	50	ADD frequency enable	4-41					
F-TM	51	Force Terminal Mode	4-42					
ATR	52	Permission for torque command input	4-42					
KHC	53	Clear watt-hour data	4-43					
MI1~MI7	56~62	General purpose input (1)~(7)	4-44					
AHD	65	Analog command hold	4-45					
CP1~CP3	66~68	Multistage-position switch (1)~(3)	4-46					
ORL	69	Limit signal of zero-return	4-47					
ORG	70	Trigger signal of zero-return	4-47					
SPD	73	Speed/position changeover	4-48					
GS1	77	STO1 input (Safety related signal)	4-49					
GS2	78	STO2 input (Safety related signal)	4-49					
485	81	Starting communication signal						
PRG	82	Executing EzSQ program 4						
HLD	83	Retain output frequency	4-49					
ROK	84	Permission of Run command	4-50					
EB	85	Rotation direction detection (phase B)	4-50					

Use the following table to locate pages for intelligent input material in this chapter.

Input Function Summary Table							
Symbol Code Function Name Page							
DISP	86	Display limitation	4-50				
NO	255	No assign					

Intelligent Outputs

Use the following table to locate pages for intelligent output material in this chapter.


Input Function Summary Table								
Symbol	Code	Function Name	Page					
RUN	00	Run Signal	4-54					
FA1	01	Frequency Arrival Type 1–Constant Speed	4-55					
FA2	02	Frequency Arrival Type 2–Over frequency	4-55					
OL	03	Overload Advance Notice Signal	4-57					
OD	04	PID Deviation error signal	4-58					
AL	05	Alarm Signal	4-59					
FA3	06	Frequency Arrival Type 3–Set frequency	4-55					
OTQ	07	Over/under Torque Threshold	4-61					
UV	09	Undervoltage	4-62					
TRQ	10	Torque Limited Signal	4-63					
RNT	11	Run Time Expired	4-64					
ONT	12	Power ON time Expired	4-64					
THM	13	Thermal Warning	4-65					
BRK	19	Brake Release Signal	4-66					
BER	20	Brake Error Signal	4-66					
ZS	21	Zero Hz Speed Detection Signal	4-67					
DSE	22	Speed Deviation Excessive	4-68					
POK	23	Positioning Completion	4-69					
FA4	24	Frequency Arrival Type 4–Over frequency	4-55					
FA5	25	Frequency Arrival Type 5–Set frequency	4-55					
OL2	26	Overload Advance Notice Signal 2	4-57					
ODc	27	Analog Voltage Input Disconnect Detection	4-70					
OIDc	28	Analog Voltage Output Disconnect Detection	4-70					
FBV	31	PID Second Stage Output	4-71					
NDc	32	Network Disconnect Detection	4-74					
LOG1~3	33~35	Logic Output Function 1~3	4-75					
WAC	39	Capacitor Life Warning Signal	4-76					
FR	41	Starting Contact Signal	4-77					
OHF	42	Heat Sink Overheat Warning	4-78					
LOC	43	Low load detection	4-79					
MO1~3	44~46	General Output 1~3	4-79					
IRDY	50	Inverter Ready Signal	4-80					
FWR	51	Forward Operation	4-81					
RVR	52	Reverse Operation	4-81					
MJA	53	Major Failure Signal	4-82					
WCO	54	Window Comparator for Analog Voltage Input	4-83					
WCOI	55	Window Comparator for Analog Current Input	4-83					
FREF	58	Frequency Command Source	4-84					
REF	59	Run Command Source	4-84					
SETM	60	2 <sup>nd</sup> Motor in operation	4-85					
EDM	62	STO (Safe Torque Off) Performance Monitor (Output terminal 11 only)	4-86					
OP	63	Option control signal						
no	255	Not used						

# **Using Intelligent Input Terminals**

Terminals [1], [2], [3], [4], [5], [6] and [7] are identical, programmable inputs for general use. The input circuits can use the inverter's internal (isolated) +24V field supply or an external power supply. This section describes input circuits operation and how to connect them properly to switches or transistor outputs on field devices.

The WJ200 inverter features selectable *sinking* or *sourcing* inputs. These terms refer to the connection to the external switching device—it either *sinks* current (from the input to GND) or *sources* current (from a power source) into the input. Note that the sink/source naming convention may be different in your particular country or industry. In any case, just follow the wiring diagrams in this section for your application.


The inverter has a short bar (jumper) for configuring the choice of sinking or sourcing inputs. To access it, you must remove the front cover of the inverter housing. In the figure to the top right, the short bar is shown as attached to the logic terminal block (connector). For EU and US version (suffix –xFE, and –xFU), it is originally located as source type logic. If you need to change to the sink type connection, remove the short bar and connect it as shown in the figure at the bottom right.

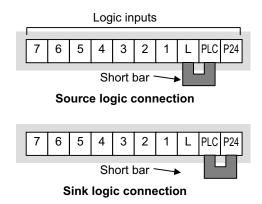

 $\triangle$ 

**CAUTION:** Be sure to turn OFF power to the inverter before changing the short circuit bar position. Otherwise, damage to the inverter circuitry may occur.

[PLC] Terminal Wiring – The [PLC] terminal (Programmable Logic Control terminal) is named to include various devices that can connect to the inverter's logic inputs. In the figure to the right, note the [PLC] terminal and the short bar (jumper). Locating the short bar between [PLC] and [L] sets the input logic source type, which is the default setting for EU and US versions. In this case, you connect input terminal to [P24] to make it active. If instead you locate the short bar between [PLC] and [P24], the input logic will be sink type. In this case, you connect the input terminal to [L] to make it active.

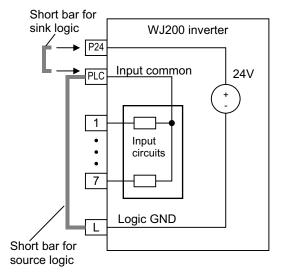

The wiring diagram on the following pages show the four combinations of using sourcing or sinking inputs, and using the internal or an external DC supply.


The two diagrams below input wiring circuits using the inverter's internal +24V supply. Each diagram shows the connection for simple switches, or for a field device with transistor outputs. Note that in the lower diagram, it is necessary to connect terminal [L] only when using the field device with transistors. Be sure to use the correct connection of the short bar shown for each wiring diagram.

# Sinking Inputs, Internal Supply Short bar = [PLC] – [P24] position

Field device

GND


7

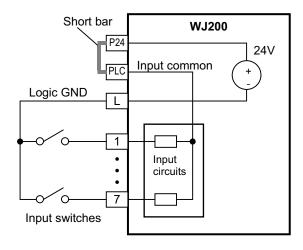

Open collector outputs, NPN transistors

# Sourcing Inputs, Internal Supply


Short bar = [PLC] - [L] position

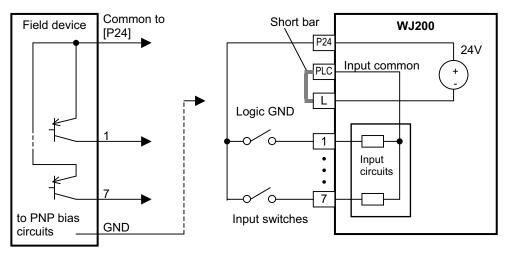


PNP transistor sousing outputs

The two diagrams below show input wiring circuits using an external supply. If using the "Sinking Inputs, External Supply" in below wiring diagram, be sure to remove the short bar, and use a diode (\*) with the external supply. This will prevent a power supply contention in case the short bar is accidentally placed in the incorrect position. For the "Sourcing Inputs, External Supply", please connect the short bar as drawn in the diagram below.

# Sinking Inputs, External Supply

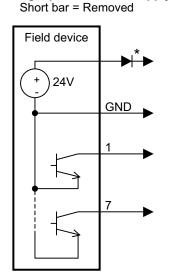

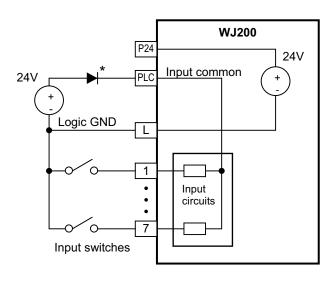


Open collector outputs, NPN transistors

\* Note: If the external power supply to GND is (optionally) connected to [L], then install the above diode.


# Sourcing Inputs, External Supply

Short bar = [PLC] - [L]

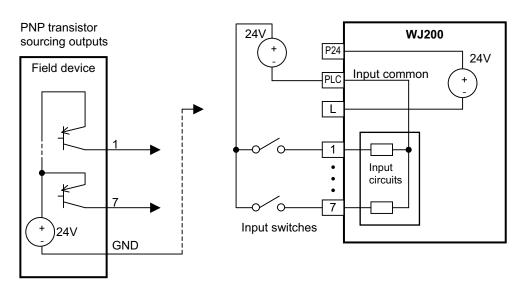


The inverter control section can be powered externally with 24 Vdc as shown below. This will allow you to read and write parameters using the keypad or via communication (such as ModBus/RTU or with optional fieldBus communication cards).

NOTE: You CANNOT use the ProDriveNext programming software when powering the inverter in this way! It will also not be possible to drive a motor.

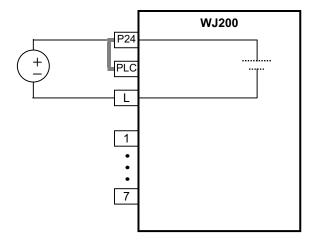

By having ability inverter doesn't block the current flowing into itself when it is not powered. This may cause the closed circuit when two or more inverters are connected to common I/O wiring as shown below to result in unexpected turning the on the input. To avoid this closed circuit, please put the diode (rated:50V/0.1A) in the path as described below.

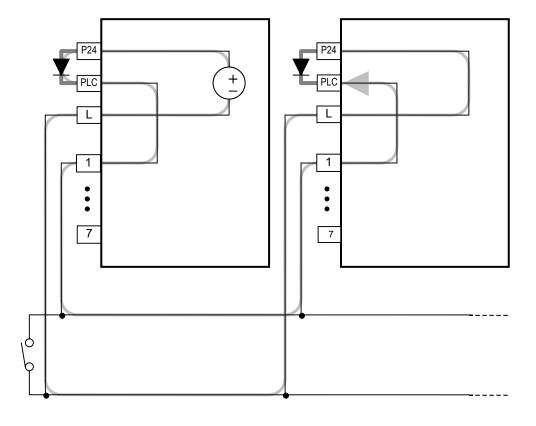

# Forward Run/Stop and Reverse Run/Stop Commands:

When you input the Run command via the terminal [FW], the inverter executes the Forward Run command (high) or Stop command (low). When you input the Run command via the terminal [RV], the inverter executes the Reverse Run command (high) or Stop command (low).

Option Code	Terminal Symbol	Function Name	Description													
00	FW	Forward Run/Stop	ON	Inverter is in Run Mode, motor runs forward												
		OFF		Inverte	er is	in S	Stop	Mo	de, r	noto	or sto	ops				
01	RV	Reverse Run/Stop ON		Inverte	er is	in F	Run	Mod	le, n	noto	r rur	ns re	evers	е		
			Inverte	er is	in S	Stop	Мо	de, r	noto	r sto	ops					
Valid for inputs: [00 1~[00]				Examp	ple (	def	ault	inpu	ıt coı	nfigu	ırati	on s	how	n		
Require	Required settings   ADD2 = D					- see page 3-84)										
comn invert • Wher [RV]	nands are act ter enters the n a terminal a function is co notor starts ro	I Run and Reverse Run tive at the same time, the Stop Mode. ssociated with either [F' nfigured for normally clotation when that terminatherwise has no input volume.	ne W] or osed, al is	See I/0		6 Decs	5 s on	4 pag	3 je 4-	2	FW 1	L	PLC	P24	.]	



**NOTE**: The parameter **FDD4**, Keypad Run Key Routing, determines whether the single Run key issues a Run FWD command or Run REV command. However, it has no effect on the [FW] and [RV] input terminal operation.




**WARNING:** If the power is turned ON and the Run command is already active, the motor starts rotation and is dangerous! Before turning power ON, confirm that the Run command is not active.

# Multi-Speed Select ~Binary Operation

The inverter can store up to 16 different target frequencies (speeds) that the motor output uses for steady-state run condition. These speeds are accessible through programming four of the intelligent terminals as binary-encoded inputs CF1 to CF4 per the table to the right. These can be any of the six inputs, and in any order. You can use fewer inputs if you need eight or fewer speeds.



NOTE: When choosing a subset of speeds to use, 👺 always start at the top of the table, and with the least-significant bit: CF1, CF2, etc.

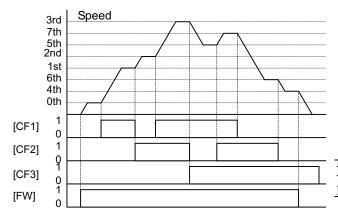

Multi- speed	Input Function						
	CF4	CF3	CF2	CF1			
Speed 0	0	0	0	0			
Speed 1	0	0	0	1			
Speed 2	0	0	1	0			
Speed 3	0	0	1	1			
Speed 4	0	1	0	0			
Speed 5	0	1	0	1			
Speed 6	0	1	1	0			
Speed 7	0	1	1	1			
Speed 8	1	0	0	0			
Speed 9	1	0	0	1			
Speed 10	1	0	1	0			
Speed 11	1	0	1	1			
Speed 12	1	1	0	0			
Speed 13	1	1	0	1			
Speed 14	1 1 1 0						
Speed 15	1	1	1	1			

The example with eight speeds in the figure below shows how input switches configured for CF1-CF3 functions can change the motor speed in real time.

NOTE: Speed 0 depends on ADDI parameter value.


Option Code	Terminal Symbol	Function Name	State	Description			
02	CF1	Multi-speed Select,	ON	Binary encoded speed select, Bit 0, logical 1			
		Bit 0 (LSB)	OFF	Binary encoded speed select, Bit 0, logical 0			
03	CF2	Multi-speed Select,	ON	Binary encoded speed select, Bit 1, logical 1			
		Bit 1	OFF	Binary encoded speed select, Bit 1, logical 0			
04	CF3	Multi-speed Select,	ON	Binary encoded speed select, Bit 2, logical 1			
		Bit 2	OFF	Binary encoded speed select, Bit 2, logical 0			
05	CF4	Multi-speed Select,	ON	Binary encoded speed select, Bit 3, logical 1			
		Bit 3 (MSB)	OFF	Binary encoded speed select, Bit 3, logical 0			
Valid for inputer COD		COO / COO3		Evample (same CE inpute require input			

Valid for inputs: FOO I. AOO I=02. Required settings **AD20** to **AD35** 

#### Notes:

- When programming the multi-speed settings, be sure to press the SET key each time and then set the next multi-speed setting. Note that when the key is not pressed, no data will be set.
- When a multi-speed setting more than 50Hz (60Hz) is to be set, it is necessary to program the maximum frequency FOO4 high enough to allow that speed

Example (some CF inputs require input configuration; some are default inputs):

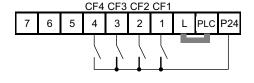

See I/O specs on page 4-6.

While using the multi-speed capability, you can monitor the present frequency with monitor function doo during each segment of a multi-speed operation.



NOTE: When using the Multi-speed Select settings CF1 to CF4, do not display parameter F001 or change the value of F00 I while the inverter is in Run Mode (motor running). If it is necessary to check the value of FOO I during Run Mode, please monitor d00 I instead of F00 I.


There are two ways to program the speeds into the registers **AD20** to **AD35**:

- 1. Standard keypad programming:
  - a. Select each parameter ADZD to ADJS.
  - **b.** Press the SET key to view the parameter value.
  - **c.** Use the  $\triangle$  and  $\nabla$  keys to edit the value.
  - **d.** Use the SET key to save the data to memory.
- 2. Programming using the CF switches. Set the speed by following these steps:
  - **a.** Turn the Run command OFF (Stop Mode).
  - b. Turn inputs ON to select desired Multi-speed. Display the value of FOO I on the digital operator.
  - **c.** Set the desired output frequency by pressing the  $\triangle$  and  $\nabla$  keys.
  - **d.** Press the SET key once to store the set frequency. When this occurs, FOO I indicates the output frequency of Multi-speed n.
  - e. Press the SET key once to confirm that the indication is the same as the set frequency.
  - f. Repeat operations in 2. a) to 2. e) to set the frequency of other Multi-speeds. It can be set also by parameters AO2O to AO35 in the first procedure 1. a) to 1. d).

# **Jogging Command**

The Jog input [JG] is used to command the motor to rotate slowly in small increments for manual operation. The speed is limited to 9.99 Hz. The frequency for the jogging operation is set by parameter RDBB. Jogging does not use an acceleration ramp, so we recommend setting the jogging frequency RDBB to 5 Hz or less to prevent tripping.

When the terminal [JG] is turned ON and the Run command is issued, the inverter outputs the programmed jog frequency to the motor. To enable the Run key on the digital operator for jog input, set the value 01 (terminal mode) in ADD2 (Run command source).

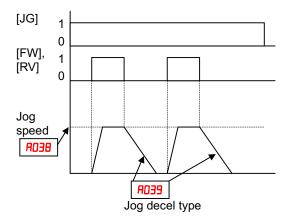

The type of deceleration used to end a motor jog operation is selectable by programming function AD39. The options are:

- DD valid during operation, Free-run stop (coasting)
- O I valid during operation, Deceleration (normal level) and stop
- De valid during operation, Use DC braking and stop
- DB invalid during operation, Free-run stop (coasting)
- Dy invalid during operation, Deceleration (normal level) and stop
- 05 invalid during operation, Use DC braking and stop

Option Code	Terminal Symbol	Function Name	State	Description						
06	JG	Jogging	ON	Inverter is in Run Mode, output to motor runs at jog						
				parameter frequency						
			OFF	Inverter is in Stop Mode						
Valid fo	r inputs:	COO I~COO7		Example (requires input configuration—see						
Doguire	ed settings	A002=0 I, A038>6082,		page 3–84):						
Require	eu settings	<b>A038&gt;</b> 0, <b>A039</b>		10 514						
value the st	of jogging fre art frequency	on is performed when the quency RD3B is smaller bDB2, or the value is 0 is motor when switching r OFF.	r than Hz.	JG       FW         7       6       5       4       3       2       1       L       PLC       P24         See I/O specs on page 4–6.						


# **External Signal for DC Braking**


When the terminal [DB] is turned ON, the DC braking feature is enabled. Set the following parameters when the external DC braking terminal [DB] is to be used:


- A053 DC braking delay time setting. The range is 0.1 to 5.0 seconds.
- AUSY DC braking force setting. The range is 0 to 100%.

The scenarios to the right help show how DC braking works in various situations.

- 1. Scenario 1 The [FW] or [RV] terminal is ON. When [DB] is ON, DC braking is applied. When [DB] is OFF again, the output frequency ramps to the prior level.
- 2. Scenario 2 The Run command is applied from the operator keypad. When the [DB] terminal is ON, DC braking is applied. When the [DB] terminal is OFF again, the inverter output remains OFF.
- 3. Scenario 3 The Run command is applied from the operator keypad. When the [DB] terminal is ON, DC braking is applied after the delay time set by ROS3 expires. The motor is in a free-running (coasting) condition. When the [DB] terminal is OFF again, the inverter output remains OFF.

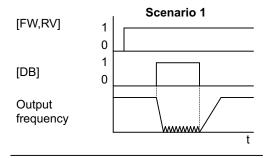

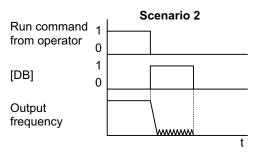

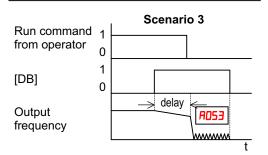

Option Code	Terminal Symbol	Function Name State				Description									
רם	DB	External DC	Applies DC injection braking during deceleration							1					
		Braking OFF		Does not apply DC injection braking during deceleration											
Valid fo	r inputs:	inputs: [00 1~[007			ıple (	(requ	uires	inp	ut cc	nfig	urati	on—	-see		
Require	equired settings ROS3, ROS4				page 3–84):										
long tid is high • Do not duty cy design	me when the (depends or tuse the [DB ycle as a holded to improv	] input continuously or to DC braking force setting the motor application) ] feature for continuous ding brake. The [DB] into estopping performance or holding a stop position.	ng <b>AD54</b> b. c or high put is e. Use a	See I	7 /O s <sub>i</sub>	6 pecs	5 on	4 page	3	DB 2	1	L	PLC	P24	]

# **Set Second Motor, Special Set**

If you assign the [SET] function to an intelligent input terminal, you can select between two sets of motor parameters. The second parameters store an alternate set of motor characteristics. When the terminal [SET] is turned ON, the inverter will use the second set of parameters to generate the frequency output to the motor. When changing the state of the [SET] input terminal, the change will not take effect until the inverter is stopped.

When you turn ON the [SET] input, the inverter operates per the second set of parameters. When the terminal is turned OFF, the output function returns to the original settings (first set of motor parameters). Refer to "Configuring the Inverter for


Multiple Motors" on page 4-58 for details.

viditipic Moto			1-98 for details.					
Parameters		ΞT	Parameters		T			
1 arameters	Stop	Run	1 didifictors	Stop	Run			
F002/F202			A093/A293	✓	-			
F003/F203	✓	-	A094/A294	✓	-			
AOO 1/A2O 1	✓	-	A095/A295	✓	-			
A005/A505	✓	-	A096/A296	✓	-			
A003/A203	✓	-	PD 15/P5 15	✓	-			
A004/A504	✓	-	PD 13/PS 13	✓	-			
A050/A550	✓	-	POS 1/PSS 1	✓	-			
AD4 1/A24 I	✓	-	PD55\P555	✓	-			
AD42/A242	✓	-	PDS3/PSS3	✓	-			
A043/A243	✓	-	CD4 1/C24 1	✓	-			
A044/A244	✓	-	H002/H202	✓	-			
A045/A245	✓	-	H003/H203	✓	-			
A046/A246	✓	-	H004/H204	✓	-			
A047/A247	✓	-	H005/H205	✓	-			
A06 I/A26 I	✓	-	H006/H206	✓	-			
A062/A262	✓	-	H020~H024/	1	_			
AOB 1/A28 1	✓	-	H220~H224	,				
A082/A282	✓	-	H030~H034/	<b>✓</b>	_			
A092/A292	✓	-	H230~H234					

Option Code	Terminal Symbol	Function Name	State	Description					
08	SET	Set (select) 2nd Motor data	ON	causes the inverter to use the 2nd set of motor parameters for generating the frequency output to motor					
			OFF	causes the inverter to use the 1st (main) set of motor parameters for generating the frequency output to motor					
Valid fo	Valid for inputs: [00 1~[007			Example (requires input configuration—see					
Require	ed settings	(none)		page 3–84):					
Notes:  • If the terminal state is changed while the inverter is running, the inverter continues using the current set of parameters until the inverter is stopped.				SET 7 6 5 4 3 2 1 L PLC P24					
				See I/O specs on page 4–6.					

# **Two Stage Acceleration and Deceleration**

When terminal [2CH] is turned ON, the inverter changes the rate of acceleration and deceleration from the initial settings (FDD2 and FDD3) to use the second set of acceleration/ deceleration values. When the terminal is turned OFF, the inverter is returned to the original acceleration and deceleration time (FDD2 acceleration time 1, and FDD3 deceleration time 1). Use RDD2 (acceleration time 2) and RDD3 (deceleration time 2) to set the second stage acceleration and deceleration times.

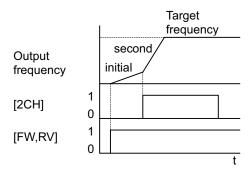

In the graph shown above, the [2CH] becomes active during the initial acceleration. This causes the inverter to switch from using acceleration 1 (FOO2) to acceleration 2 (AO32).


Option Code	Terminal Symbol	Function Name	State	Description					
09	2CH	Two-stage Acceleration and	ON	Frequency output uses 2nd-stage acceleration and deceleration values					
		Deceleration	OFF	Frequency output uses the initial acceleration 1 and deceleration 1 values					
Valid for inputs: □□□ I~□□□□				Example (default input configuration shown—see					
Require	d settings	A092, A093, A094=00		page 3–84):					
Notes:	on 8094 sole	cts the method for secon	nd	2CH					
		It must be set = 00 to se		7 6 5 4 3 2 1 L PLC P24					
the inp	the input terminal method in order for the [2CH] terminal assignment to operate.			· · · · · · · · · · · · · · · · · · ·					
				See I/O specs on page 4–6.					

# Free-run Stop

When the terminal [FRS] is turned ON, the inverter stops the output and the motor enters the free-run state (coasting). If terminal [FRS] is turned OFF, the output resumes sending power to the motor if the Run command is still active. The free-run stop feature works with other parameters to provide flexibility in stopping and starting motor rotation.

In the figure below, parameter **bobb** selects whether the inverter resumes operation from 0 Hz (left graph) or the current motor rotation speed (right graph) when the [FRS] terminal turns OFF. The application determines the best setting.

Parameter **b003** specifies a delay time before resuming operation from a free-run stop. To disable this feature, use a zero delay time.

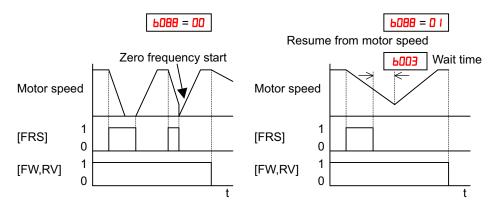


Option Code	Terminal Symbol	Function Name	State	Description	
11	FRS	Free-run Stop ON		Causes output to turn OFF, allowing motor to free run (coast) to stop	
			OFF	Output operates normally, so controlled deceleration and stops motor	
Valid for inputs: [00 1~[007			Example (requires input configuration—		
Required settings 6003, 6088, CO I		<b>6003</b> , <b>6088</b> , <b>COll to</b>	CO 17	see page 3–84):	
Notes:  • When you want the [FRS] terminal to be active low (normally closed logic), change the setting ([D]   to [D]  ) that corresponds to the input ([D]   to [D]  ) that is assigned the [FRS] function.			etting put	FRS  7 6 5 4 3 2 1 L PLC P24  See I/O specs on page 4–6.	

# **External Trip**

When the terminal [EXT] is turned ON, the inverter enters the trip state, indicates error code **E** 12, and stops the output. This is a general purpose interrupt type feature, and the meaning of the error depends on what you connect to the [EXT] terminal. Even if the [EXT] input is turned OFF, the inverter remains in the trip state. You must reset the inverter or cycle power to clear the error, returning the inverter to the Stop Mode.

In the graph below, the [EXT] input turns ON during normal Run Mode operation. The inverter lets the motor free-run to a stop, and the alarm output turns ON immediately. When the operator initiates a Reset command, the alarm and error are cleared. When the Reset is turned OFF, the motor begins rotation since the Run command is already active.

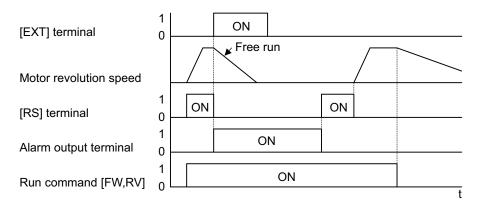


Option Code	Terminal Symbol	Function Name	State	Description	
15	IZ EXT External Trip ON		ON	When assigned input transitions OFF to ON,	
				inverter latches trip event and displays E 12	
			OFF	No trip event for ON to OFF, any recorded trip	
				events remain in history until Reset.	
Valid for inputs: [00 1~[00]			Example (requires input configuration—		
Required settings (none)			see page 3–84):		
Notes:  • If the USP (Unattended Start Protection) feature is in use, the inverter will not automatically restart after canceling the EXT trip event. In that case, it must receive either another Run command (OFF-to- ON transition), a keypad Reset command, or an [RS] intelligent terminal input signal.			lly t. In that pad	FEXT  7 6 5 4 3 2 1 L PLC P24  See I/O specs on page 4–6.	

### **Unattended Start Protection**

If the Run command is already set when power is turned ON, the inverter starts running immediately after powerup. The Unattended Start Protection (USP) function prevents that automatic startup, so that the inverter *will not* run without outside intervention. When USP is active and you need to reset an alarm and resume running, either turn the Run command OFF, or perform a reset operation by the terminal [RS] input or the keypad Stop/reset key.

In the figure below, the [USP] feature is enabled. When the inverter power turns ON, the motor does not start, even though the Run command is already active. Instead, it enters the USP trip state, and displays [3] error code. This requires outside intervention to reset the alarm by turning OFF the Run command per this example (or applying a reset). Then the Run command can turn ON again and start the inverter output.

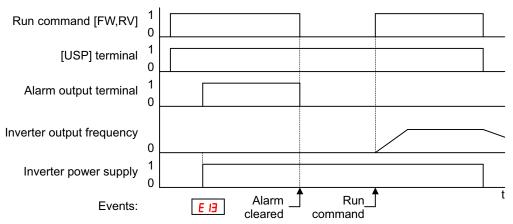

Option Code	Terminal Symbol	Function Name	State	Description	
13	USP	Unattended Start ON Protection		On powerup, the inverter will not resume a Run command (mostly used in the US)	
			OFF	On powerup, the inverter will resume a Run command that was active before power loss	
Valid fo	r inputs:	COO I~COO7		Example (default input configuration shown for	
Require	Required settings (none)		–FE and –FU models; –F models require input		
Notes:			configuration—see page 3–84):		
<ul> <li>Note that when a USP error occurs and it is canceled by a reset from a [RS] terminal input, the inverter restarts running immediately.</li> <li>Even when the trip state is canceled by turning the terminal [RS] ON and OFF after an under voltage protection ED9 occurs, the USP function will be performed.</li> <li>When the running command is active immediately after the power is turned ON, a USP error will occur. When this function is used, wait for at least three (3) seconds after the powerup to generate a Run command.</li> </ul>			7 6 5 4 3 2 1 L PLC P24  See I/O specs on page 4–6.		

	Commercial	power	source	switchover
--	------------	-------	--------	------------

Please do not use it.

# **Software Lock**

When the terminal [SFT] is turned ON, the data of all the parameters and functions (except the output frequency, depending on the setting of body) is locked (prohibited from editing). When the data is locked, the keypad keys cannot edit inverter parameters. To edit parameters again, turn OFF the [SFT] terminal input.

Use parameter **bO3** I to select whether the output frequency is excluded from the lock state or is locked as well.

Option Code	Terminal Symbol	Function Name	State	Description	
15	SFT	Software Lock ON		The keypad and remote programming devices are	
			OFF	prevented from changing parameters The parameters may be edited and stored	
Valid for inputs: COO I~COO↑  Required settings bO∃ (excluded from lock)		Example (requires input configuration— see page 3–84):			
<ul> <li>Notes:</li> <li>When the [SFT] terminal is turned ON, only the output frequency can be changed.</li> <li>Software lock can include the output frequency by setting bod I.</li> <li>Software lock by the operator is also possible without the [SFT] terminal being used (bod I).</li> </ul>			See I/O specs on page 4–6.		

# **Analog Input Current/Voltage Select**


• Be sure to set the frequency source setting ROD I=D I to select the analog input terminals.

The [AT] terminal selects whether the inverter uses the voltage [O] or current [OI] input terminals for external frequency control. When intelligent input [AT] is ON, you can set the output frequency by applying a current input signal at [OI]-[L]. When the [AT] input is OFF, you can apply a voltage input signal at [O]-[L] to set the output frequency. Note that you must also set parameter #DDI = DI to enable the analog

16	ΑT			Description					
	Ai	Analog Input Voltage/Current Select	ON OFF	See the table down below					
/alid for	r inputs:	COO I~COO7		Example (default input configuration shown					
Required	d settings	ADD I = D I		for –FE and –FU models; –F models require input configuration):					
input te OFF in Combina	erminal, then following tab	setting and [AT] input fo	Γ] =	7 6 5 4 3 2 1 L PLC P24					
R005	[AT] Input	Analog Input Configur	ation	HOOIL					
00	ON OFF	[OI] [O]							
02	ON OFF	Keypad Pot [O]		4-20 mA					
03	ON OFF	Keypad Pot [OI]		0-10 V					

#### **Reset Inverter**

The [RS] terminal causes the inverter to execute the reset operation. If the inverter is in Trip Mode, the reset cancels the Trip state. When the signal [RS] is turned ON and OFF, the inverter executes the reset operation. The minimum pulse width for [RS] must be 12 ms or greater. The alarm output will be cleared within 30 ms after the onset of the Reset command.

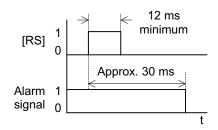



**WARNING:** After the Reset command is given and the alarm reset occurs, the motor will restart suddenly if the Run command is already active. Be sure to set the alarm reset after verifying that the Run command is OFF to prevent injury to personnel.

Option Code	Terminal Symbol	Function Name	State	Description						
18	RS	Reset Inverter	ON	The motor output is turned OFF, the Trip Mode is cleared (if it exists), and powerup reset is applied						
			OFF	Normal power ON operation						
Valid fo	r inputs:	COO I~COO7		Example (default input configuration shown):						
Require	ed settings	(none)		RS						
keypa	d displays alt	rminal [RS] input is ON ernating segments. Afte lay recovers automatica	er RS	7 6 5 4 3 2 1 L PLC P24						
can ge		Reset key of the digital on the digital of the digi		See I/O specs on page 4–6.						

- A terminal configured with the [RS] function can only be configured for normally open operation. The terminal cannot be used in the normally closed contact state.
- When input power is turned ON, the inverter performs the same reset operation as it does when a pulse on the [RS] terminal occurs.
- The Stop/Reset key on the inverter is only operational for a few seconds after inverter powerup when a hand-held remote operator is connected to the inverter.
- If the [RS] terminal is turned ON while the motor is running, the motor will be free running (coasting).
- If you are using the output terminal OFF delay feature (any of [ H5, [ H7, [ H9 > 0.0 sec.), the [RS] terminal affects the ON-to-OFF transition slightly. Normally (without using OFF delays), the [RS] input causes the motor output and the logic outputs to turn OFF together, immediately. However, when any output uses an OFF delay, then after the [RS] input turns ON, that output will remain ON for an additional 1 sec. period (approximate) before turning OFF.

### **Thermistor Thermal Protection**

Motors that are equipped with a thermistor can be protected from overheating. Input terminal [5] has the unique ability to sense a thermistor resistance. When the resistance value of the thermistor connected to terminal [PTC] (5) and [L] is more than 3 k $\Omega$  ±10%, the inverter enters the Trip Mode, turns OFF the output to the motor, and indicates the trip status £35. Use this function to protect the motor from overheating.

Option Code	Terminal Symbol	Function Name	State	Description								
19	PTC	Thermistor Thermal ON Protection		When a thermistor is connected to terminals [5] and [L], the inverter checks for over-temperature and will cause trip (£35) and turn OFF the output to the								
			OFF	motor  An open circuit in the thermistor causes a trip, the inverter turns OFF the output	and							
Valid fo	r inputs:	COO5 only		Example (requires input configuration—								
Require	d settings	(none)		see page 3–84):								
Notes:				PTC								
[5] and the invenoug	d [L]. If the reserverter will trip. h, the thermish to permit yo	stor is connected to term sistance is above the th When the motor cools stor resistance will char ou to clear the error. Pro- clear the error.	reshold down nge	7 6 5 4 3 2 1 L PLC P24								


#### **Three-wire Interface Operation**

The 3-wire interface is an industry standard motor control interface. This function uses two inputs for momentary contact start/stop control, and a third for selecting forward or reverse direction. To implement the 3-wire interface, assign 20 [STA] (Start), 21 [STP] (Stop), and 22 [F/R] (Forward/Reverse) to three of the intelligent input terminals. Use a momentary contact for Start and Stop. Use a selector switch, such as SPST for the Forward/Reverse input. Be sure to set the operation command selection RDD2=01 for input terminal control of motor.

If you have a motor control interface that needs logic-level control (rather than momentary pulse control), use the [FW] and [RV] inputs instead.

Option Code	Terminal Symbol	Function Name	State	Description							
50	STA	Start Motor	ON	Start motor rotation on momentary contact (uses acceleration profile)							
			OFF	No change to motor operation							
21	STP	Stop Motor	ON	No change to motor operation							
			OFF	Stop motor rotation on momentary contact (use deceleration profile)							
22	F/R	Forward/Reverse	ON	Select reverse direction of rotation							
			OFF	Select forward direction of rotation							
Valid for inputs: [00 1~[00]				Example (default input configuration shown):							
Require	ed settings	A005 = 0 I									
Notes:				F/R STP STA							
• The S	TP logic is in	verted. Normally the sw	itch will	7 6 5 4 3 2 1 L PLC P24							
way, a autom • When interfa autom	a broken wire atically (safe you configura ice control, the atically disab	pen the switch to stop. causes the motor to stong design). The inverter for 3-wire e dedicated [FW] terminated. The [RV] intelligent is also disabled.	op nal is	See I/O specs in chapter 4.							

The diagram below shows the use of 3-wire control. STA (Start Motor) is an edge-sensitive input; an OFF-to-ON transition gives the Start command. The control of direction is level-sensitive, and the direction may be changed at any time. STP (Stop Motor) is also a level-sensitive input.

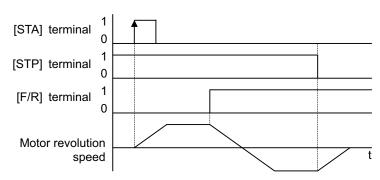

#### PID ON/OFF and PID Clear

The PID loop function is useful for controlling motor speed to achieve constant flow, pressure, temperature, etc. in many process applications. The PID Disable function temporarily suspends PID loop execution via an intelligent input terminal. It overrides the parameter ADT I (PID Enable) to stop PID execution and return to normal motor frequency output characteristics. The use of PID Disable on an intelligent input terminal is optional. Of course, any use of the PID loop control requires setting PID Enable function ADT I=D I.

The PID Clear function forces the PID loop integrator sum = 0. So, when you turn ON an intelligent input configured as [PIDC], the integrator sum is reset to zero. This is useful when switching from manual control to PID loop control and the motor is stopped.



**CAUTION:** Be careful not to turn PID Clear ON and reset the integrator sum when the inverter is in Run Mode (output to motor is ON). Otherwise, this could cause the motor to decelerate rapidly, resulting in a trip.


Option Code	Terminal Symbol	Function Name	State	Description					
23	PID	PID Disable	ON	Disables PID loop execution					
			OFF	Allows PID loop execution					
24	PIDC	PID Clear	ON	Force the value of the integrator to zero					
			OFF	No change in PID loop execution					
Valid fo	r inputs:	COO 1~COO7		Example (default input configuration shown):					
Require	ed settings	ADT I		PIDC PID					
option		nd [PIDC] terminals are	o	7 6 5 4 3 2 1 L PLC P24					
• Do no is runr	t enable/disa ning (inverter t turn ON the	ble PID control while the is in Run Mode). [PIDC] input while the in Run Mode).		See I/O specs on chapter 4.					

#### **Remote Control Up and Down Functions**

The [UP] [DWN] terminal functions can adjust the output frequency for remote control while the motor is running. The acceleration time and deceleration time of this function is same as normal operation ACC1 and DEC1 (2ACC1,2DEC1). The input terminals operate according to these principles:

- Acceleration When the [UP] contact is turned ON, the output frequency accelerates from the current value. When it is turned OFF, the output frequency maintains its current value at that moment.
- Deceleration When the [DWN] contact is turned ON, the output frequency decelerates from the current value. When it is turned OFF, the output frequency maintains its current value at that moment.

In the graph below, the [UP] and [DWN] terminals activate while the Run command remains ON. The output frequency responds to the [UP] and [DWN] commands.

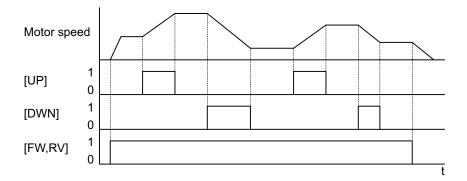

It is possible for the inverter to retain the frequency set from the [UP] and [DWN] terminals through a power loss. Parameter [ 10 I enables/disables the memory. If disabled, the inverter retains the last frequency before an UP/DWN adjustment. Use the [UDC] terminal to clear the memory and return to the original set output frequency.

Option Code	Terminal Symbol	Function Name	State	Description					
27	UP	Remote Control UP	ON	Accelerates (increases output frequency) motor					
		Function (motorized		from current frequency					
		speed pot.)	OFF	Output to motor operates normally					
28	DWN	Remote Control	ON	Decelerates (increases output frequency) motor					
		DOWN Function		from current frequency					
		(motorized speed	OFF	Output to motor operates normally					
		pot.)							
29	UDC	Remote Control Data	ON	Clears the Up/Down frequency memory					
		Clear	OFF	No effect on Up/Down memory					
Valid fo	r inputs:	COO 1~COO7		Example (default input configuration shown—see					
Require	ed settings	ADD 1 = D2		page 3–84):					
Notes:				DWN UP					
comm	This feature is available only when the frequency command source is programmed for operator control. Confirm RDD I is set to D2.		•	7 6 5 4 3 2 1 L PLC P24					
• This fu	unction is not	available when [JG] is in	use.						
	•	t frequency is 0 Hz to the frequency setting).	See I/O specs on page 4–6.						
• This s	etting modifie	s the inverter speed from	using F	O I output frequency setting as a starting point.					

# **Force Operation from Digital Operator**

This function permits a digital operator interface to override the following two settings in the inverter:

- ADD 1 Frequency source
- Run command source

When using the [OPE] terminal input, typically ROO I and ROO2 are configured for sources other than the digital operator interface for the output frequency and Run command sources, respectively. When the [OPE] input is ON, then user has immediate command of the inverter, to start or stop the motor and to set the speed.

Option Code	Terminal Symbol	Function Name	State					Des	crip	tion	ı			
31	OPE	Force Operation from Digital	ON	Forces		•								Run
		Operator		Comma							<i>,</i>			
		OFF		Parameters RDD I and RDD2 are in effect again, for the frequency source and the Run command source, respectively							d			
Valid fo	r inputs:	COO I~COO7		Example (default input configuration shown—see								ee		
Require	ed settings	RDD I (set not equal to RDD2 (set not equal to	page 3-	-84)	:									
Notes:										OPE				
		[OPE] state during Rur			7	6	5	4	3	2	1	L	PLC F	P24
		he motor), the inverter v e new [OPE] state takes								\				
operat	the motor before the new [OPE] state takes effect.  If the [OPE] input turns ON and the digital operator gives a Run command while the inverter is already running, the inverter stops the motor.  Then the digital operator can control the motor.				) spe	ecs o	on pa	age 4	4–6.					J

The inverter can store up to 16 different target frequencies (speeds) that the motor output uses for steady-state run condition. These speeds are accessible through programming seven of the intelligent terminals as bit-encoded inputs SF1 to SF7 per the table to the right. These can be any of the six inputs, and in any order. You can use fewer inputs if you need eight or fewer speeds.

	3rd	Speed			_				
	7th			_/_	<u> </u>		7		
	5th	***************************************		/	$\vdash -$	/	<b>\</b>		
	2nd			<b>/</b>	<u> </u>				
	1st 6th							_	
	4th							_	<b>.</b>
	0th							ļ	<b>\</b>
[SF1]	1 0		1						
[SF2]	1								
[SF3]	0 0 1				<u> </u>				
[SF4]	1 0 1								
[SF5]	0						<u> </u>		
[SF6]	1								
[SF7]	1								
[FW]	1								

Mult	-	Input Function									
spee	d	3F7	3F€	3Ft	3F₄	3FC	3F≨	3F1			
Speed 0	A050	0	0	0	0	0	0	0			
Speed 1	AOS 1	Χ	Χ	Χ	Х	Χ	Χ	1			
Speed 2	A055	Χ	Χ	Χ	Х	Χ	1	0			
Speed 3	RO23	Χ	Χ	Χ	Х	1	0	0			
Speed 4	P024	Х	Χ	Х	1	0	0	0			
Speed 5	R025	Х	Χ	1	0	0	0	0			
Speed 6	A056	Х	1	0	0	0	0	0			
Speed 7	R027	1	0	0	0	0	0	0			

The example with eight speeds in the figure below shows how input switches configured for SF1–SF7 functions can change the motor speed in real time.

**NOTE**: Speed 0 depends on **ROO!** parameter value.

Option Code	Terminal Symbol	Function Name	State	Description											
32~	SF1~SF7	Multistage Speed	ON	Makes multistage speed by combination of the											
38		~Bit Operation	OFF	inputs.											
Valid fo	Valid for inputs: [00 1~[00]				Example (default input configuration shown—see										
Require	ed settings	F00 I, A00 I=02,		page 3-	<del>-84</del> ):	:									
Require	eu settings	<b>A020</b> to <b>A035</b>													
Notes:					SF7	SF6	SF5	SF4	SF3	SF2	SF1				
	When programming the multi-speed settings, be     was to program the SET key each time and then set				7	6	5	4	3	2	1	L	. Р	LC F	P24
Sure it	sure to press the SET key each time and then set														T

the next multi-speed setting. Note that when the key is not pressed, no data will be set.
When a multi-speed setting more than 50Hz (60Hz) is to be set, it is necessary to program the

 When a multi-speed setting more than 50Hz (60Hz) is to be set, it is necessary to program the maximum frequency RDD4 high enough to allow that speed

# **Overload Restriction Source Changeover**

This function allows you to change the parameter sets of overload restriction. (Please refer to chapter 3 for the detailed description of the overload restriction function.)

Option Code	Terminal Symbol	Function Name	State	Description						
39	OLR	Overload restriction	ON	Parameter sets <b>b024</b> , <b>b025</b> , <b>b026</b> are enabled.						
		source changeover	OFF	Parameter sets 602 I, 6022, 6023 are enabled.						
Valid fo	r inputs:	COO I~COO7		Example (default input configuration shown—see						
Require	ed settings	602 I~6026		page 3–84):						
				OLR  7 6 5 4 3 2 1 L PCS P24  See I/O specs on page 4-6						
				See I/O specs on page 4–6.						

## **Torque Limit Selection**

This function is to select the torque limit mode. (Please refer to chapter 3 for the detailed description of the function.)

Code Symbol			Description
40 TL	Torque limit	ON	<b>Ы</b> ДЧО value is enabled as torque limit level
	selection	OFF	<b>Ы</b> ЗЧО value is disabled
Valid for inputs:	COO 1~COO7		Example (default input configuration shown—see
Required settings	6040~6044		page 3–84):
			TL  7 6 5 4 3 2 1 L PLC P24  See I/O specs on page 4–6.

# **Torque Limit Switch**

This function is to select the torque limit mode. (Please refer to for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description									
45	TRQ1 TRQ2	Torque limit switch 1, 2	ON OFF	Torque limit value of <b>bD4</b> I to <b>bD44</b> will be selected by the combination of the switches.								cted	
	r inputs:	COO 1~COO7	<u> </u>	Example (default input configuration shown—see							see		
Require	d settings	604 I ~ 6044		page 3–84):									
				TRQ2 TRQ1						P24			
				See I/O specs on page 4–6.									

#### **Brake Confirmation**

This function is for brake performance. Please refer to chapter 3 for the detailed description of the function.

			Description										
44 BOK	Brake confirmation	ON	Brake confirmation signal is being given										
		OFF	Brake confirmation signal is not given										
Valid for inputs:	COO I~COO7		Example (default input configuration shown—see										
Required settings	ь 120~ь 127, СО2 1~СО28	?	page 3–84):										
			Fee I/O specs on page 4–6.										

# **LAD Cancellation**

This function is for canceling the set ramp time and changes the output speed immediately according to the set speed. (Please refer to chapter3 for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description											
46	LAC	LAD cancellation	ON	Disabling the set ramp time and inverter output immediately follows the speed command.											
			OFF	Accelerates and decelerates according to the set ramp time									et		
Valid fo	r inputs:	COO I~COO7		Example (default input configuration shown—see							e				
Require	ed settings			page	3–8	<b>4</b> ):									
				_						LAC					_
					7	6	5	4	3	2	1	L	PLC	P24	
					/O s	pecs	on	page	e 4–(	6.					


# **Pulse Counter Clear**

This function is for clearing the accumulated pulse numbers in case of positioning. (Please refer to chapter 3 for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description
47	PCLR	Pulse counter clear	ON	Clears the accumulated pulse numbers.
			OFF	Does not clear the pulse numbers.
Valid fo	r inputs:	COO 1~COO7		Example (default input configuration shown—see
Require	ed settings			page 3–84):
				PCLR 7 6 5 4 3 2 1 L PLC P24  See I/O specs on page 4–6.

### **Add Frequency Enable**

The inverter can add or subtract an offset value to the output frequency setting which is specified by ROD I (will work with any of the five possible sources). The ADD Frequency is a value you can store in parameter R I45. The ADD Frequency is summed with or subtracted from the output frequency setting only when the [ADD] terminal is ON. Function R I45 selects whether to add or subtract. By configuring an intelligent input as the [ADD] terminal, your application can selectively apply the fixed value in R I45 to offset (positively or negatively) the inverter output frequency in real time.

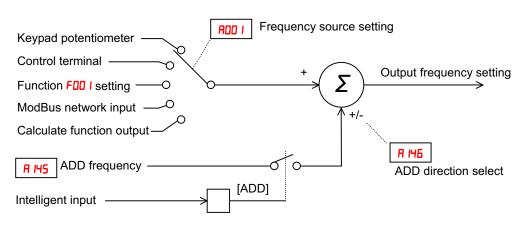

Option Code	Terminal Symbol	Function Name	State	Description										
50	ADD	ADD Frequency Enable	ON	Applies the R H5 Add Frequency value to the output frequency										
			OFF	Does not apply the Add frequency. The output frequency retains its normal value										
Valid fo	r inputs:	COO I~COO7		Example (default input configuration shown—see										
Require	ed settings	AOO I, A 145, A 146		page 3–84):										
will be	, ,	ny source; the Add Freq subtracted from that valu ncy value.		7 6 5 4 3 2 1 L PLC P24  See I/O specs on page 4–6.										

#### **Force Terminal Mode**

The purpose of this intelligent input is to allow a device to force the inverter to allow control of the following two parameters via the control terminals:

- ADD I Frequency source setting (D I = control terminals [FW] and [RV]
- ADD2 Run command source setting (D) = control terminals [O] or [OI]

Some applications will require one or both settings above to use a source other than the terminals. You may prefer to normally use the inverter's keypad and potentiometer, or to use the ModBus network for control, for example. However, an external device can turn ON the [F-TM] input to force the inverter to (temporarily) allow control (frequency source and Run command) via control terminals. When the [F-TM] input is OFF, then the inverter uses the regular sources specified by ROO I and ROO2 again.

Option Code	Terminal Symbol	Function Name	State	Description									
51	F-TM	Force Terminal Mode	ON	Forces ROD I=D I (frequency source setting = contro terminal), and ROD2=D I(Run command source setting = control terminal)									
OF				Inverter applies the user setting for ROD I and ROD2 normally									
Valid fo	Valid for inputs:			Example (default input configuration shown—see									
Require	Required settings			page 3–84):									
Notes:  When changing the [F-TM] state during Run Mode (inverter is driving the motor), the inverter will stop the motor before the new [F-TM] state takes effect.				7 6 5 4 3 2 1 L PLC P24									
				See I/O specs on page 4–6.									

# Permission for torque command input

This function is to permit the torque command input. (Please refer to chapter 3 for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description											
52	ATR	Permission for	ON	Inverter is ready to accept the torque command.											
		torque command input	OFF	Inverter is in a normal mode.											
Valid fo	r inputs:	COO 1~COO7		Exam		`	ault i	nput	t cor	nfigu	ratio	n sh	own	-se	е
Require	ed settings			page 3–84):											
Notes:				ATR											
					7	6	5	4	3	2	1	L	PLC	P24	
				_											
				See I/O specs					e 4–	6.					

# Clearance of cumulative power data

This function is to clear the cumulative input power data.

Option Code	Terminal Symbol	Function Name	State	Description
53	KHC	Clear watt-hour data	ON	Clear the cumulative power data
			OFF	Does not clear the data
Valid fo	r inputs:	COO 1~COO7		Example (default input configuration
Require	d settings			shown—see page 3–84):
Notes:				KHC
				7 6 5 4 3 2 1 L PLC P24
				See I/O specs on page 4–6.

# General Purpose Input (1)∼(7)

These functions are used with EzSQ function. Refer to a description of EzSQ for the details.

Option Code	Terminal Symbol	Function Name	State	Description
56~62	MI1~MI7	General purpose input	ON	General purpose input is made ON
		(1)~(7)	OFF	General purpose input is made OFF
Valid fo	r inputs:	COO 1~COO7		Example (default input configuration
Require	d settings		shown—see page 3–84):	
Notes:				MI7 MI6 MI5 MI4 MI3 MI2 MI1
				7 6 5 4 3 2 1 L PLC P24
				See I/O specs on page 4–6.


#### **Analog Command Hold**

This function allows you to make the inverter hold the analog command input via the external analog input terminal when the AHD terminal is made ON.

While the AHD is turned ON, the up/down function can be used based on the analog signal held by this function as reference data.

When "I" is specified for Up/down memory mode selection ([ 10 1), the result of up/down processing can be stored in memory.

If the inverter power is turned on or the RS terminal turned off with the AHD terminal left turned on, the data held immediately before power on or turning off the RS terminal will be used.

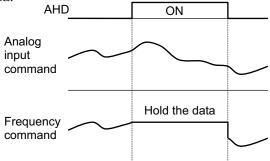



Set frequency remains when the inverter is switched with SET terminal with AHD on. Turn AHD terminal off to re-hold the set frequency.



Frequent use of this function may result in a shorter in memory component of the inverter.

Option Code	Terminal Symbol	Function Name	State	Description										
65	AHD	Analog command hold	ON	Hold the analog input value										
			OFF	Doe	s no	t ho	ld th	e an	alog	inpu	ıt va	lue		
Valid fo	r inputs:	COO I~COO7		Example (default input configuration										
Require	d settings		shown—see page 3–84):											
Notes:					_					AHD				
					7	6	5	4	3	2	1	L F	PLC F	24
				See I/O specs on page 4–6.										

#### Multistage-position switch (1)~(3)


When "55 (CP1)" to "58 (CP3)" are assigned to input terminals, you can select position settings from multistage positions 0 to 7.

Use multistage position settings 0 to 7 (PD50 to PD51) for the position settings. If no position settings are assigned to terminals, multistage position 0 (PD50) is assumed.

Position setting	Parameter	CP3	CP2	CP1
Multistage position 0	P060	0	0	0
Multistage position 1	P06 I	0	0	1
Multistage position 2	P062	0	1	0
Multistage position 3	P063	0	1	1
Multistage position 4	P064	1	0	0
Multistage position 5	P065	1	0	1
Multistage position 6	P066	1	1	0
Multistage position 7	P067	1	1	1

You can specify a delay to be applied at multistage position setting input, until the relevant terminal input is determined. Use this specification to prevent the application of fluctuating terminal input before it is determined.

You can adjust the determination time with the multistage speed/position determination time setting ([ 159). The input data is finally determined when the terminal input becomes stable after the delay set as [ 169]. (Note that a long determination time deteriorates the input terminal response.)

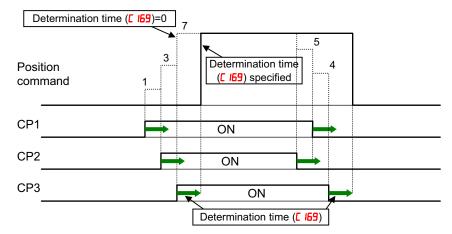


Option Code	Terminal Symbol	Function Name	State	State Description										
66~6 <del>8</del>	CP1~CP3	Multistage-position switch (1)~(3)	ON OFF	Multistage position is defined by combination of the inputs.									of	
Valid for inputs: [DD 1~[DD]														
	-			Example (default input configuration										
Require	ed settings	P060~P067		shown—see page 3–84):										
Notes:								CP3	CP2	CP1				
Notes.					7	6	5	4	3	2	1	L	PLC P	24
										1				
			See I/O specs on pa					pag	e 4–	6.				

## Limit signal of homing, Trigger signal of zero-return

These functions are used for homing performance.


One of three types of homing operations can be selected by homing mode selection (PD68). When a homing operation ends, the current position counter is cleared (to 0). Use homing direction selection (PD69) to select the direction of homing operation. If homing operation is not performed, position control is performed based on the assumption that the motor position detected at power-on is the origin.

#### <1> Low speed homing (**P068=00**)

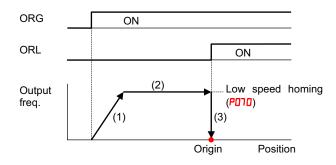

- The inverter accelerates the motor for the specified ramp time to the low speed homing.
- (2) It runs the motor at the low speed homing.
- (3) It performs positioning when the ORL signal is given.

#### <2> High speed homing (PO68=0 1)

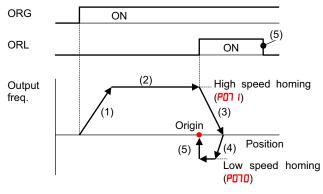

- The inverter accelerates the motor for the specified ramp time to the high speed homing.
- (2) It runs the motor at the high speed homing.
- (3) It starts deceleration when the ORL signal is turned on.
- (4) It runs the motor in the reverse direction at the low speed homing.
- (5) It performs positioning when the ORL signal is turned off.

### Speed/position changeover

To perform speed control operation in absolute position control mode, turn on the SPD terminal. While the SPD terminal is off, the current position count remains at 0. Therefore if the SPD terminal is turned off during operation, the control operation is switched to position control operation based on the position where the terminal is turned off. (Speed control operation is switched to position control operation.)

If the position setting is 0 at this time, the inverter stops the motor at that position. (Hunting may occur if a certain position loop gain value has been set.)

While the SPD terminal is on, the rotating direction depends on the operation command. When switching from speed control to position control, pay attention to the sign of the value set in the operation command.

Option Code	Terminal Symbol	Function Name	State	Description										
73	SPD	Speed/position	ON	Inver	ter is	s in a	spe	eed (	conti	rol m	ode			
		changeover	OFF	Inverter is in a position control mode										
Valid for inputs: [□□  ~[□□]				Exam						nfigu	ratio	n		
Required settings				shown—see page 3–84):										
Notes:										SPD				
Notes.					7	6	5	4	3	2	1	L	PLC	P24
				See I	/O s	pec	on	pag	e 4–	6.				

# **Emergency Stop Signals**

The function is Please refer to the relevant pages for the detailed explanation.

Option Code	Terminal Symbol	Function Name	State	Description						
רר	STO1	Emergency stop signals	ON							
78	STO2									
79	SS1		OFF							
80	SS2									
	Refer to Emergency Stop section									

# **Executing EzSQ program**

Option Code	Terminal Symbol	Function Name	State	Description					
82	PRG	Executing EzSQ program	ON OFF						
	Refer to EzSQ section								

# Retain output frequency

This function allows you to retain output frequency.

Option Code	Terminal Symbol	Function Name	State	Description					
83	HLD	Retain output frequency	ON						
			OFF						
Valid for inputs: [00 1~[007		COO I~COO7		Example (default input configuration					
Required settings				shown—see page 3–84):					
Notes:				HLD					
				7 6 5 4 3 2 1 L PLC P24					
				See I/O specs on page 4–6.					

#### **Permission of Run command**

This function allows you to accept run command.

Option Code	Terminal Symbol	Function Name	State	Description										
84	ROK	Permission of Run	ON	Run	com	man	d ca	n be	acc	epte	ed			
		command	OFF	Run command is ignored										
Valid for inputs: [□□  ~[□□]			Exar						nfigu	ratic	n			
Required settings				shown—see page 3–84):										
Notes:										ROK				
					7	6	5	4	3	2	1	L	PLC	P24
					See I/O specs on page 4–6.									

#### **Rotation direction detection**

Input terminal (7) is for inputting "B pulse", which is used for detecting the rotation direction.

Option Code	Terminal Symbol	Function Name	State	Description					
85	B5 EB Rotation direction		ON						
		detection	OFF						
Valid for inputs:		כססז		Example (default input configuration					
Required settings				shown—see page 3–84):					
Notes:									
EB input	terminal is d	edicated terminal (7).							
Maximui	m allowable ii	nput frequency is 2kHz.							
			See I/O specs on page 4–6.						

# **Display limitation**

This function is to show only the contents of doo I display.


Option Code	Terminal Symbol	Function Name	State	Description										
86	DISP	Display limitation	ON											
			OFF											
Valid for inputs:		COO 1~COO7		Example (default input configuration										
Require	d settings			shown—see page 3–84):										
Notes:										DISP				
1101001					7	6	5	4	3	2	1	L	PLC	P24
				See I	O s	oecs	on	page	e 4–0	6.				

# **Using Intelligent Output Terminals**

The intelligent output terminals are programmable in a similar way to the intelligent input terminals. The inverter has several output functions that you can assign individually to two physical logic outputs. One of the outputs is an open-collector transistor, and the other output is the alarm relay (form C – normally open and normally closed contacts). The relay is assigned the alarm function by default, but you can assign it to any of the functions that the open-collector output uses.


### Sinking Outputs, Open Collector

The open-collector transistor output can handle up to 50mA. We highly recommend that you use an external power source as shown at the right. It must be capable of providing at least 50mA to drive the output at full load. To drive loads that require more than 50mA, use external relay circuits as shown below right.

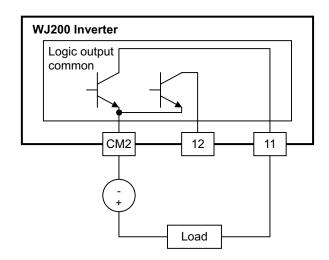


# Sinking Outputs, Open Collector

If you need output current greater than 50mA, use the inverter output to drive a small relay. Be sure to use a diode across the coil of the relay as shown (reverse-biased) in order to suppress the turn-off spike, or use a solid-state relay.

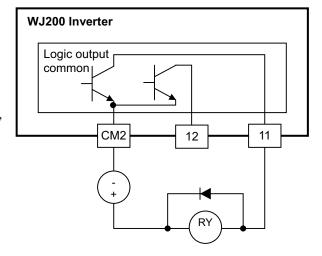

#### **Internal Relay Output**

The inverter has an internal relay output with normally open and normally closed contacts (Type 1 form C). The output signal that controls the relay is configurable; the Alarm Signal is the default setting. Thus, the terminals are labeled [AL0], [AL1], [AL2], as shown to the right. However, you can assign any one of the nine intelligent outputs to the relay. For wiring purposes, the general terminal functions are:

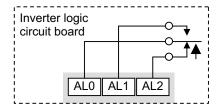

- [AL0] Common contact
- [AL1] Normally open contact
- [AL2] Normally closed contact


The relay itself can be configured as "normally open or closed." Parameter [0]5, Alarm Relay Active State, is the setting. This setting determines whether or not the relay coil is energized when its output signal is OFF:

- CO36=00 "Normally open" (relay coil is de-energized when output signal is OFF)
- CO36=01 "Normally closed" (relay coil is **energized** when the output signal is OFF)


Since the relay already has normally open [AL1] and normally closed [AL2] contacts, the purpose of the ability to invert the relay coil's active state may not be obvious. It allows you to determine whether or not an inverter power loss causes the relay to change state. The default relay configuration is the Alarm Signal (CO26=O5), as shown to the right. And, CO36=O1 sets the relay to "normally closed" (relay coil normally energized). The reason for this is that a typical system design will require an inverter power loss to assert an alarm signal to external devices.

The relay can be used for other intelligent output signals, such as the Run Signal (set \$\mathbb{L026=00}\)). For these remaining output signal types, the relay coil typically must NOT change state upon inverter power loss (set \$\mathbb{L036=00}\)). The figure to the right shows the relay settings for the Run Signal output.

If you assign the relay an output signal other than the Alarm Signal, the inverter can still have an Alarm Signal output. In this case, you can assign it to terminal [11], providing an open collector output.

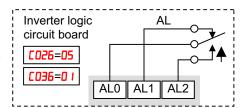

Relay shown with inverter power ON, Alarm Signal OFF

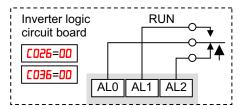


Relay shown with inverter power ON, Run Signal OFF

#### **Output Signal ON/OFF Delay Function**

Intelligent outputs including terminals [11], and the output relay, have configurable signal transition delays. Each output can delay either the OFF-to-ON or ON-to-OFF transitions, or both. Signal transition delays are variable from 0.1 to 100.0 seconds. This feature is useful in applications that must tailor inverter output signals to meet timing requirements of certain external devices.

The timing diagram below shows a sample output signal (top line) and the results of various ON/OFF delay configurations.

- Original signal This example signal waveform consists of three separate pulses named "A," "B," and "C."
- ...with ON delay Pulse A is delayed by the duration of the ON delay time. Pulses B and C do not appear at the output, because they are shorter than the ON delay.
- ...with OFF delay Pulse A is lengthened by the amount of the OFF delay time. The separation between pulses B and C does not appear at the output, because it is shorter than the OFF delay time.
- ...with ON/OFF delays Pulse A is delayed on both leading and trailing edges by the amounts of the ON and OFF delay times, respectively. Pulses B and C do not appear at the output, because they are shorter than the ON delay time.

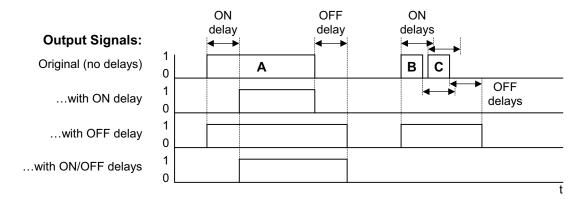


Func.	Description	Range	Default
C 130	Output [11] ON delay	0.0 to 100.0 sec.	0.0
E 13 1	Output [11] OFF delay	0.0 to 100.0 sec.	0.0
C 132	Output [12] ON delay	0.0 to 100.0 sec.	0.0
C 133	Output [12] OFF delay	0.0 to 100.0 sec.	0.0
C 140	Output relay ON delay	0.0 to 100.0 sec.	0.0
E 14 1	Output relay OFF delay	0.0 to 100.0 sec.	0.0

Use of the ON/OFF signal delay functions are optional. Note that any of the intelligent output assignments in this section can be combined with ON/OFF signal timing delay configurations.

## **Run Signal**


When the [RUN] signal is selected as an intelligent output terminal, the inverter outputs a signal on that terminal when it is in Run Mode. The output logic is active low, and is the open collector type (switch to ground).

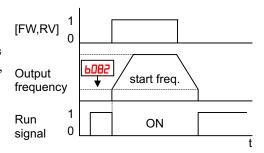


Option Code	Terminal Symbol	Function Name	State	Description				
00	DD RUN Run Signal ON N			when inverter is in Run Mode				
			OFF	when inverter is in Stop Mode				
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output				
Require	ed settings	(none)		configuration shown – see page 3-90):				

#### Notes:

- The inverter outputs the [RUN] signal whenever the inverter output exceeds the start frequency specified by parameter **bDB2**. The start frequency is the initial inverter output frequency when it turns ON.
- The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative going turn-off spike generated by the coil from damaging the inverter's output transistor.

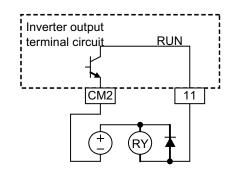

Example for terminal [AL0], [AL1], [AL2] (requires output configuration - see page 4-52 and 3-90):

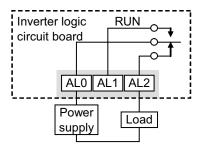

### Frequency Arrival Signals

The Frequency Arrival group of outputs helps coordinate external systems with the current velocity profile of the inverter. As the name implies, output [FA1] turns ON when the output frequency arrives at the standard set frequency (parameter F001). Output [FA2] relies on programmable accel/ decel thresholds for increased flexibility. For example, you can have an output turn ON at one frequency during acceleration, and have it turn OFF at a different frequency during deceleration. All transitions have hysteresis to avoid output chatter if the output frequency is near one of the thresholds.


Option Code	Terminal Symbol	Function Name	State	Description			
01	FA1	Frequency Arrival	ON	when output to motor is at the constant frequency			
		Type 1 – Constant Speed	OFF	when output to motor is OFF, or in any acceleration or deceleration ramp			
02	FA2	Frequency Arrival Type 2 – Over	ON	when output to motor is at or above the set frequency thresholds for, even if in acceleration or decel ramps			
		frequency	OFF	when output to motor is OFF, or during accel or decel before the respective thresholds are crossed			
06	FA3	Frequency Arrival	ON	when output to motor is at the set frequency			
		Type 3 – Set	OFF	when output to motor is OFF, or in any acceleration or			
		frequency		deceleration ramp			
24	FA4	Frequency Arrival Type 4 – Over	ON	when output to motor is at or above the set frequency thresholds for, even if in acceleration or decel ramps			
		frequency (2)	OFF	when output to motor is OFF, or during accel or decel			
				before the respective thresholds are crossed			
25	FA5	Frequency Arrival	ON	when output to motor is at the set frequency			
		Type 5 – Set	OFF	when output to motor is OFF, or in any acceleration or			
		frequency (2)		deceleration ramp			
Valid fo	r inputs:	11, 12, AL0 – AL2	•	Example for terminal [11] (default output configuration			
Require	ed	CO42, CO43, CO45, CO46,	,	shown – see page 3-90):			

Notes:


settings

 For most applications you will need to use only one type of frequency arrival outputs (see examples). However, it is possible assign both output terminals to output functions [FA1] and [FA2]

- For each frequency arrival threshold, the output anticipates the threshold (turns ON early) by 1.5Hz
- The output turns OFF as the output frequency moves away from the threshold, delayed by 0.5Hz
- The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative going turn-off spike generated by the coil from damaging the inverter's output transistor

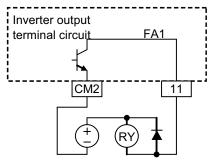


Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):

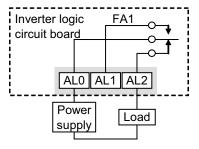


Frequency arrival output [FA1] uses the standard output frequency (parameter F001) as the threshold for switching. In the figure to the right, Frequency Arrival [FA1] turns ON when the output frequency gets within Fon Hz below or Fon Hz above the target constant frequency, where *Fon* is 1% of the set maximum frequency and Foff is 2% of the set maximum frequency. This provides hysteresis that prevents output chatter near the threshold value. The hysteresis effect causes the output to turn ON slightly early as the speed approaches the threshold. Then the turn-OFF point is slightly delayed. Note the active low nature of the signal, due to the open collector output.

Frequency arrival output [FA2/FA4] works the same way; it just uses two separate thresholds as shown in the figure to the right. These provide for separate acceleration and deceleration thresholds to provide more flexibility than for [FA1]. [FA2/FA4] uses CO42/CO45 during acceleration for the ON threshold, and CO43/CO46 during deceleration for the OFF threshold. This signal also is active low. Having different accel and decel thresholds provides an asymmetrical output function. However, you can use equal ON and OFF thresholds, if desired.


Frequency arrival output [FA3/FA5] works also the same way, only difference is arriving at set frequency.

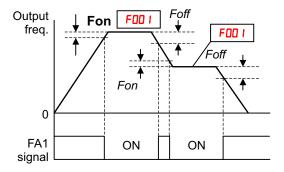

Fon=1% of max. frequency Foff=2% of max. frequency

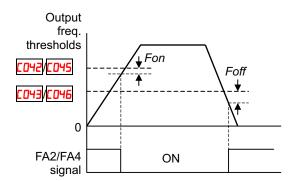


Fon=1% of max. frequency
Foff=2% of max. frequency

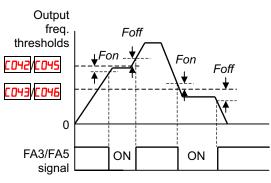

Fon=1% of max. frequency
Foff=2% of max. frequency

# **Overload Advance Notice Signal**

When the output current exceeds a preset value, the [OL] terminal signal turns ON. The parameter [OH] and [III] sets the overload threshold. (Two thresholds can be set.) The overload detection circuit operates during powered motor operation and during regenerative braking. The output circuits use open-collector transistors, and are active low.

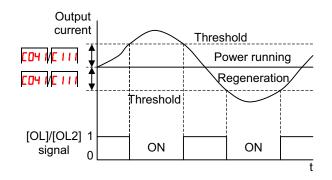


Option Code	Terminal Symbol	Function Name	State	Description
03	OL	Overload Advance Notice Signal	ON	when output current is more than the set threshold for the overload signal
			OFF	when output current is less than the set threshold for the overload signal
26	OL2	Overload Advance	ON	(Same as above)
		Notice Signal	OFF	(Same as above)
Valid fo	r inputs:	11. 12. AL0 – AL2		Example for terminal [11] (default output

Required settings [041, [111


#### Notes:

- The default value is 100%. To change the level from the default, set [04] (overload level) and/or [11] (overload level (2)).
- The accuracy of this function is the same as the function of the output current monitor on the [FM] terminal (see "Analog Output Operation" on page 4–55).
- The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.

Example for terminal [11] (default output configuration shown – see page 3-90):

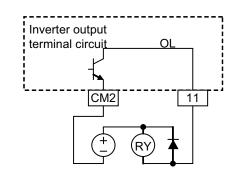


Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):

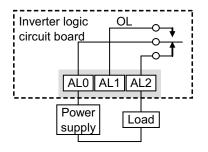

## **Output Deviation for PID Control**


The PID loop error is defined as the magnitude (absolute value) of the difference between the Setpoint (target value) and the Process Variable (actual value). When the error magnitude exceeds the preset value for **CO44**, the [OD] terminal signal turns ON. Refer to "PID Loop Operation" on page 4-56.

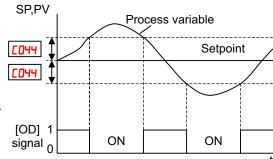


Option Code	Terminal Symbol	Function Name	State	Description
04	OD	Output Deviation for PID Control	ON	when PID error is more than the set threshold for the deviation signal.
			OFF	when PID error is less than the set threshold for the deviation signal
Valid for inputs:		11, 12, AL0 – AL2		Example for terminal [11] (default output
Required settings		C044	•	configuration shown – see page 3-90):

#### Notes:

- The default difference value is set to 3%. To change this value, change parameter [044] (deviation level).
- The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.

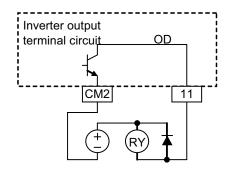


Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):

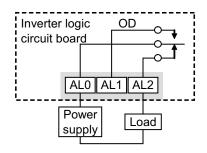

## **Alarm Signal**

The inverter alarm signal is active when a fault has occurred and it is in the Trip Mode (refer to the diagram at right). When the fault is cleared the alarm signal becomes inactive.

We must make a distinction between the alarm signal AL and the alarm relay contacts [AL0]. [AL1] and [AL2]. The signal AL is a logic function, which you can assign to the open collector output terminals [11], [12], or the relay outputs.

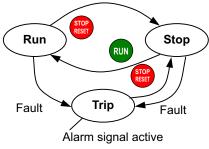

The most common (and default) use of the relay is for AL, thus the labeling of its terminals. Use an open collector output (terminal [11] or [12]) for a low-current logic signal interface or to energize a small relay (50 mA maximum). Use the relay output to interface to higher voltage and current devices (10 mA minimum).


Option Code	Terminal Symbol	Function Name	State	Description
05	AL	Alarm Signal	ON	when an alarm signal has occurred and has not been cleared
			OFF	when no alarm has occurred since the last clearing of alarm(s)
Valid for inputs:		11, 12, AL0 – AL2		Example for terminal [11] (default output

Required settings [031, 032, 036


#### Notes:

- By default, the relay is configured as normally closed ([036=0]). Refer to the next page for an explanation.
- In the default relay configuration, an inverter power loss turns ON the alarm output, the alarm signal remains ON as long as the external control circuit has power.
- When the relay output is set to normally closed, a time delay of less than 2 seconds occurs after powerup before the contact is closed.
- Terminals [11] and [12] are open collector outputs. so the electric specifications of [AL] are different from the contact output terminals [AL0], [AL1], [AL2].
- This signal output has the delay time (300 ms nominal) from the fault alarm output.
- The relay contact specifications are in "Control Logic Signal Specifications" on page 4-6. The contact diagrams for different conditions are on the next page.

configuration shown – see page 3-90):

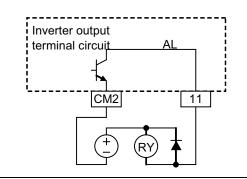


Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):

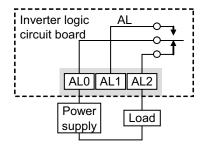

The alarm relay output can be configured in two main ways:

- Trip/Power Loss Alarm The alarm relay is configured as normally closed (CD35=DI) by default, shown below (left). An external alarm circuit that detects broken wiring also as an alarm connects to [AL0] and [AL1]. After powerup and short delay (< 2 seconds), the relay energizes and the alarm circuit is OFF. Then, either an inverter trip event or an inverter power loss will de-energize the relay and open the alarm circuit
- **Trip Alarm** Alternatively, you can configure the relay as normally open (CO36=OO), shown below (right). An external alarm circuit that detects broken wiring also as an alarm connects to [ALO] and [AL2]. After powerup, the relay energizes only when an inverter trip event occurs, opening the alarm circuit. However, in this configuration, an inverter power loss does not open the alarm circuit.

Be sure to use the relay configuration that is appropriate for your system design. Note that the external circuits shown assume that a closed circuit = no alarm condition (so that a broken wire also causes an alarm). However, some systems may require a closed circuit = alarm condition. In that case, then use the opposite terminal [AL1] or [AL2] from the ones shown.

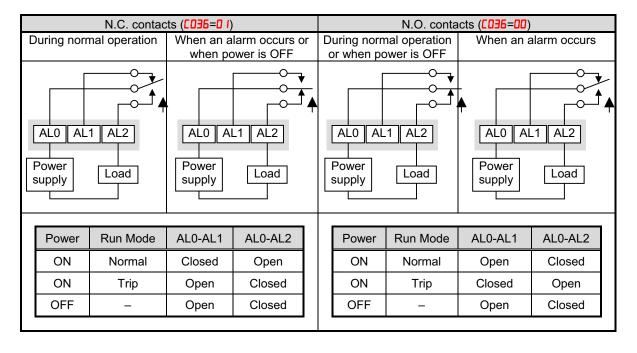

# **Over Torque Signal**

The inverter outputs the over torque signal when it detects that the estimated motor output torque exceeds the specified level.

To enable this function, assign "OTQ)" to an intelligent output terminal.

Option Code	Terminal Symbol	Function Name	State	Description
רם	OTQ	Over torque signal	ON	when the estimated output torque > [055~[058]
			OFF	when no over torque is detected
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	Required settings			configuration shown – see page 3-90):
<ul> <li>Notes:</li> <li>This function is effective only when the V/F characteristic curve selection PD44 is set to "D3 (SLV mode)". With any other V/F characteristic curve selection, the output of the OTQ signal is unpredictable.</li> <li>When using the inverter for a lift, use the OTQ signal as the trigger to stop braking. Use the frequency arrival signal as the trigger to start braking.</li> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>			Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic OTQ circuit board Load  Power supply	

# **Undervoltage Signal**

The inverter outputs the undervoltage signal when it detects that the inverter is in undervoltage situation.

To enable this function, assign " $\fill \cite{OS}$ " to an intelligent output terminal.

Option Code	Terminal Symbol	Function Name	State	Description
09	UV	Undervoltage signal	ON	Inverter is in undervoltage
			OFF	Inverter is in normal condition
Valid for inputs: 11, 12, AL0 – AL2			Example for terminal [11] (default output	
Require	Required settings			configuration shown – see page 3-90):
coil. N negati	ote the use o ve-going turn	for terminal [11] drives f a diode to prevent the -off spike generated by inverter's output transis	the coil	Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic UV circuit board Load
				See I/O specs on page 4-6

# **Torque Limited Signal**

The inverter outputs the torque limited signal when it is in torque limit operation. To enable this function, assign "  $\square$  (TRQ)" to an intelligent output terminal. Refer to section 3 for detailed explanation.

Option Code	Terminal Symbol	Function Name	State	Description
10	TRQ	Torque limited	ON	Inverter is in torque limiting mode
		signal	OFF	Inverter is not in torque limiting mode
Valid for inputs: 11, 12, AL0 – AL2			Example for terminal [11] (default output	
Required settings R044=03, 6040~6044			configuration shown – see page 3-90):	
coil. N negati	ote the use o ve-going turn	t for terminal [11] drives f a diode to prevent the -off spike generated by inverter's output transis	the coil	Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic TRQ circuit board
				See I/O specs on page 4-6

## **Running Time and Power On Time Over Signal**

The inverter outputs the operation time expiration signal and power on time expiration signal.

To enable this function, assign " | (RNT)", and/or " | (ONT)" to intelligent output terminals.

	erminal Symbol	Function Name	State	Description
11	RNT	Run time expiration	ON	Accumulated operation time of the inverter exceeds
		signal	OFF	the set value of b034  Accumulated operation time of the inverter does not
			011	exceed the set value of 6034
15	ONT	Power ON time	ON	Accumulated power on time of the inverter exceeds
		expiration signal	OFF	the set value of b034  Accumulated power on time of the inverter does not
			OFF	exceed the set value of b034
Valid for in	nputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Required s	settings	6034		configuration shown – see page 3-90):
coil. Note negative-	the use o	for terminal [11] drives f a diode to prevent the -off spike generated by inverter's output transis	the coil	Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic ONT circuit board Circuit b

#### **Electronic Thermal Warning Signal Output**

You can configure this function so that the inverter outputs a warning signal before the electronic thermal protection operates against motor overheat. You can also set the threshold level to output a warning signal with the electronic thermal warning level setting (CD5 I).

To output the warning signal, assign function " [3] (THM)" to one of the intelligent output terminals [11] to [12], or to the relay output terminal.

Option Code	Terminal Symbol	Function Name	State	Description
13	THM	Thermal warning	ON	Accumulated thermal level exceeds the electronic
		signal output		thermal warning level (CD5 I)
			OFF	Accumulated thermal level does not exceed the
				electronic thermal warning level ([06
	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings	C06 I		configuration shown – see page 3-90):
coil. N negati	ote the use o ve-going turn	t for terminal [11] drives f a diode to prevent the -off spike generated by inverter's output transis	the coil	Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic THM circuit board Load Load Load Load Load Load Load Loa
				See I/O specs on page 4-6

## **External Brake Related Output Signals**

These signals are used with brake control function.

To output the warning signals, assign function " (BRK)" and "20 (BER)" to the intelligent output terminals [11] and [12], or to the relay output terminal.

Refer to chapter 3 for detailed explanation of the brake control function.

BER Brake error signal ON Brake is ready to be released  BER Brake error signal ON Brake is not ready to be released  OFF Brake is not ready to be released  ON Brake error has occurred  OFF Brake is working properly  Valid for inputs: 11, 12, AL0 – AL2  Required settings b 120 – b 127  Notes:  The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.  Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):
BER Brake error signal ON Brake error has occurred OFF Brake is working properly  Valid for inputs: 11, 12, AL0 – AL2  Required settings b 120~b 121  Notes:  • The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.  Example for terminal [11] (default output configuration shown – see page 3-90):  Inverter output terminal circuit BRK/BER  Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic BRK/BER
Valid for inputs: 11, 12, AL0 – AL2  Required settings
Valid for inputs:  11, 12, AL0 – AL2  Required settings b   20 - b   27  Notes:  • The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.  Example for terminal [11] (default output configuration shown – see page 3-90):  Inverter output terminal circuit BRK/BER  Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):
Required settings   b   20~b   27   Configuration shown – see page 3-90):  Notes:  • The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.  Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):
Notes:  • The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.    Inverter output terminal circuit BRK/BER
The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.  Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter output terminal circuit  BRK/BER  Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):
AL0 AL1 AL2  Power supply Load  See I/O specs on page 4-6

## **Zero Hz Speed Detection Signal**

The inverter outputs the 0Hz speed detection signal when the inverter output frequency falls below the threshold level ([053).

To use this function, assign "21 (ZS)" to one of the intelligent output terminals.

Option Code	Terminal Symbol	Function Name	State	Description
21	ZS	Zero Hz speed	ON	Output frequency is less than [063
		detection signal	OFF	Output frequency is not less than [063
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings	C063		configuration shown – see page 3-90):
coil. N negati	ote the use o ve-going turn	t for terminal [11] drives if a diode to prevent the -off spike generated by inverter's output transis	the coil	Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic ZS circuit board AL0 AL1 AL2  Power supply Load
				See I/O specs on page 4-6

### **Speed Deviation Excessive Signal**

The inverter outputs the detection signal when the deviation between the set speed and actual motor speed becomes less the threshold level (PD27). This function is valid when connecting the encoder feedback to the inverter.

To use this function, assign "22 (DSE)" to one of the intelligent output terminals.

505   0   1   1   1   5   1   1   1   1   1   1	
DSE Speed deviation ON Deviation between the speed command	d and motor
excessive signal speed is less than PD27  OFF Deviation between the speed command	d and motor
speed exceeds PD27	
Valid for inputs: 11, 12, AL0 – AL2 Example for terminal [11] (default output	ıt
Required settings PD27 configuration shown – see page 3-90):	
Notes:  • The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.    Inverter output terminal circuit DSE	] (requires
See I/O specs on page 4-6	

## **Positioning Completion Signal**

Inverter gives out the positioning signal when positioning performance is done.

To use this function, assign "23 (POK)" to one of the intelligent output terminals.

Refer to chapter 4 for the details of the performance.

Option Code	Terminal Symbol	Function Name	State	Description
23	POK	Positioning	ON	Positioning performance is completed
		completion signal	OFF	Positioning performance is not completed
	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	d settings	PO 103~PO 15		configuration shown – see page 3-90):
Notes:  • The excoil. Notes:	kample circuit ote the use o ve-going turn	t for terminal [11] drives f a diode to prevent the -off spike generated by inverter's output transis	the coil	Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic POK circuit board AL0 AL1 AL2  Power supply Load
				See I/O specs on page 4-6

#### **Analog Input Disconnect Detect**

This feature is useful when the inverter receives a speed reference from an external device. Upon input signal loss at either the [O] or [OI] terminal, the inverter normally just decelerates the motor to a stop. However, the inverter can use the intelligent output terminal [Dc] to signal other devices that a signal loss has occurred.

Voltage signal loss at [O] terminal - Parameter book is the Start Frequency Adjustment. It sets the beginning (minimum) output frequency when the speed reference source is greater than zero. If the analog input at terminal [O] is less than the Start Frequency, the inverter turns ON the [Dc] output to indicate a signal loss condition.


Current signal loss at [OI] terminal - The [OI] terminal accepts a 4mA to 20mA signal, with 4mA representing the beginning of the input range. If the input current falls below 4mA, the inverter applies a threshold to detect signal loss.

Note that a signal loss is not an inverter trip event. When the analog input value is again above the book value, the [Dc] output turns OFF. There is no error condition to clear.


Option Code	Terminal Symbol	Function Name	State	Description
27	ODc	Analog voltage Input	ON	when signal loss is detected on [O] input
		Disconnect Detect	OFF	when no signal loss is detected on [O] input
28	OIDc	Analog current Input	ON	when signal loss is detected on [OI] input
		Disconnect Detect	OFF	when no signal loss is detected on [OI] input
Valid for inputs:		11, 12, AL0 – AL2		Example for terminal [11] (default output
Required settings		800 I=0 I 6082		configuration shown – see page 3-90):

#### Notes:

- The [Dc] output can indicate an analog signal disconnect when the inverter is in Stop Mode, as well as Run Mode.
- The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.

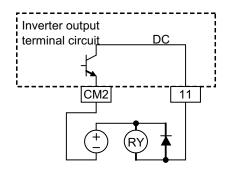

Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):

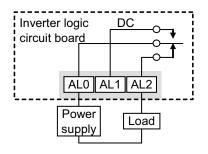

See I/O specs on page 4-6

#### **PID Second Stage Output**

The inverter has a built-in PID loop feature for *two-stage control*, useful for certain applications such as building ventilation or heating and cooling (HVAC). In an ideal control environment, a single PID loop controller (stage) would be adequate. However, in certain conditions, the maximum output energy from the first stage is not enough to maintain the Process Variable (PV) at or near the Setpoint (SP). And, the output of the first stage is in saturation. A simple solution is to add a second stage, which puts an additional and constant amount of energy into the system under control. When size properly, the boost from the second stage brings the PV toward the desired range, allowing the first stage PID control to return to its linear range of operation.


The two-stage method of control has some advantages for particular applications.

- The second stage is only ON in adverse conditions, so there is an energy savings during normal conditions.
- Since the second stage is simple ON/OFF control, it is less expensive to add than just duplicating the first stage.
- At powerup, the boost provided by the second stage helps the process variable reach the desired setpoint sooner than it would if the first stage acted alone.
- Even though the second stage is simple ON/OFF control, when it is an inverter you can still adjust the output frequency to vary the boost it provides.

Refer to the example diagram below. Its two stages of control are defined as follows:

- Stage 1 Inverter #1 operating in PID loop mode, with motor driving a fan
- Stage 2 Inverter #2 operating as an ON/OFF controller, with motor driving a fan


Stage #1 provides the ventilation needs in a building most of the time. On some days, there is a change in the building's air volume because large warehouse doors are open. In that situation, Stage #1 alone cannot maintain the desired air flow (PV sags under SP). Inverter #1 senses the low PV and its PID Second Stage Output at [FBV] terminal turns ON. This gives a Run FWD command to Inverter #2 to provide the additional air flow.

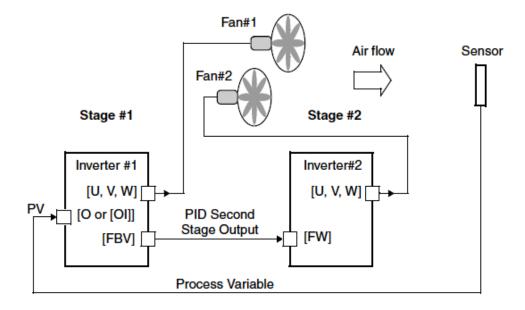

To use the PID Second Stage Output feature, you will need to choose upper and lower limits for the PV, via [053] and [052] respectively. As the timing diagram below shows, these are the thresholds Stage #1 inverter uses to turn ON or OFF Stage #2 inverter via the [FBV] output. The vertical axis units are percent (%) for the PID setpoint, and for the upper and lower limits. The output frequency, in Hz, is superimposed onto the same diagram.

When the system control begins, the following events occur (in sequence in the timing diagram):

- 1. Stage #1 inverter turns ON via the [FW] Run command.
- **2.** Stage #1 inverter turns ON the [FBV] output, because the PV is below the PV low limit **CO53**. So, Stage #2 is assisting in loop error correction from the beginning.
- **3.** The PV rises and eventually exceeds the PV high limit **CO52**. Stage #1 inverter then turns OFF the [FBV] output to Stage #2, since the boost is no longer needed.
- **4.** When the PV begins decreasing, only Stage #1 is operating, and it is in the linear control range. This region is where a properly configured system will operate most often.
- **5.** The PV continues to decrease until it crosses under the PV low limit (apparent external process disturbance). Stage #1 inverter turns ON the [FBV] output, and Stage #2 inverter is assisting again.
- **6.** After the PV rises above the PV low limit, the [FW] Run command to Stage #1 inverter turns OFF (as in a system shutdown).
- 7. Stage #1 inverter enters Stop Mode and automatically turns OFF the [FBV] output, which causes Stage #2 inverter to also stop.

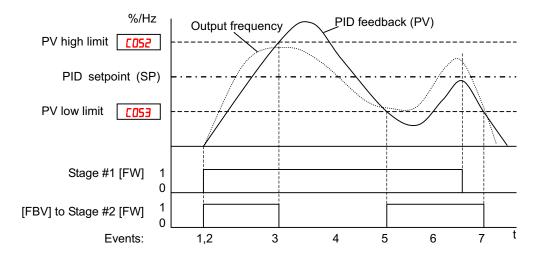

The terminal [FBV] configuration table is on the following page.

Option Code	Terminal Symbol	Function Name	State	Description
∃ I	FBV	Feedback Value Check	ON	Transitions to ON when the inverter is in RUN Mode and the PID Process Variable (PV) is less than the Feedback Low Limit ([05])
			OFF	<ul> <li>Transitions to OFF when the PID Feedback Value (PV) exceeds the PID High Limit (CD52)</li> <li>Transitions to OFF when the inverter goes from Run Mode to Stop Mode</li> </ul>
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings	A016, C052, C053		configuration shown – see page 3-90):
<ul> <li>Notes:</li> <li>The [FBV] is designed for implementing two-stage control. The PV high limit and PV low limit parameters, C052 and C053, do not function as process alarm thresholds. Terminal [FBV] does not provide a PID alarm function.</li> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				Inverter output terminal circuit FBV  CM2 11
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic FBV circuit board AL0 AL1 AL2

Power supply

See I/O specs on page 4-6


Load

Option Terminal

## **Communication signal Disconnect Detect**

This signal function is enabled only when ModBus-RTU has been selected for the communication. If a reception timeout occurs, the inverter continues to output the communication line disconnection signal until it receives the next data.


Specify the limit time for reception timeout by setting the communication trip time ([[]]).

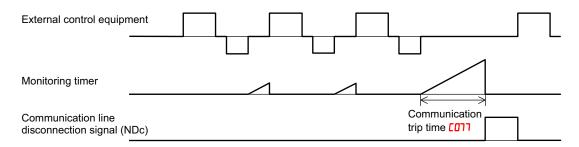

Code	Symbol	Function Name	State	Description
32	NDc	Communication signal disconnect	ON	When there is a disconnection in communication
		detection	OFF	When there is no disconnection in communication
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings	ררם		configuration shown – see page 3-90):
Notes:  • The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.		Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):		
				Inverter logic NDc circuit board  AL0 AL1 AL2  Power supply  See I/O specs on page 4-6

#### **Logic Output Function**

The inverter has a built-in logic output feature. Select any two operands out of all intelligent output options except LOG1~LOG3 and their operator out of AND, OR, or XOR (exclusive OR). The terminal symbol for the new output is [LOG]. Use [D]? I, [D]? or [D]? to route the logical result to terminal [11], [12] or the relay terminals.

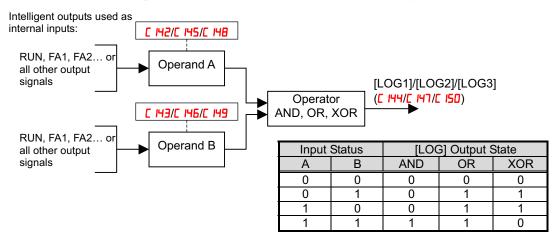

LOG1 LOG2 Function  Substitute of the provided HTML LOG2 Function  LOG2 LOG3  Substitute of the provided HTML LOG2 Function  When the Boolean operation specified by [ HM	Option Code	Terminal Symbol	Function Name	State	Description
OFF   When the Boolean operation specified by [   H4	33	LOG1		ON	
Valid for inputs: 11, 12, AL0 – AL2 Required settings	34	LOG2	Function		/E IH5/E IH7 has a logical "1" result
Valid for inputs: 11, 12, AL0 – AL2  Required settings	35	LOG3		OFF	when the Boolean operation specified by [ 144
Required settings [ IM I~[ ISD]   Configuration shown – see page 3-90):    Inverter output terminal circuit LOG1~3					
Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic LOG1-3 circuit board load	Valid fo	r inputs:	11, 12, AL0 – AL2		
Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic LOG1~3 circuit board  AL0   AL1   AL2   Power   Load	Require	ed settings	C 14 1~C 150		configuration shown – see page 3-90):
See I/O specs on page 4-6	Notes:				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic circuit board  AL0 AL1 AL2  Power supply Load

#### **Lifetime Warning Output Function**


**Capacitor life warning signal-** The inverter checks the operating life of the capacitors on the internal circuit board on the basis of the internal temperature and cumulative power on time. You can also monitor the state of the capacitor life warning signal (WAF) in dollar. If the WAC signal is given out, it is recommended to replace the main PCB and control PCB.

Cooling fan warning signal- The inverter gives out the cooling fan speed-drop signal (WAF) when it detects the rotation speed of the cooling fan drops down to approx. 75% of the full speed. If "01" has been selected for the cooling fan control (b092), the inverter will not give out the WAF signal even when the cooling fan is stopped. If the signal is given out, check the cooling fan cover for clogging. You can also monitor the state of WAF signal in d022.

Option Code	Terminal Symbol	Function Name	State	Description
39	WAC	Capacitor life warning signal	ON	Calculated lifetime of the electrolytic capacitor is expired
		warriing signal	OFF	Electrolytic capacitor is normal
40	WAF	Cooling fan warning	ON	Calculated lifetime of the cooling fan is expired
10		signal	OFF	Cooling fan is normal
Valid fo	or inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
	ed settings	,		configuration shown – see page 3-90):
Notes:				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic

### **Starting Contact Signal**

The inverter gives out the starting contact signal (FR) while it is receiving an operational command. The FR signal is given out, regardless the setting of the run command source setting (ADD2). If the forward operation (FW) and reverse operation (RV) are given at the same time, the inverter stops the motor operation.

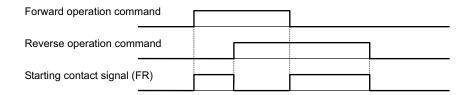

Option Code	Terminal Symbol	Function Name	State	Description
41	FR	Starting contact signal	ON	Either FW or RV is given, or no operation command is given
			OFF	Both FW and RV is given at the same time
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings			configuration shown – see page 3-90):
Notes:				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic FR circuit board


## **Heat Sink Overheat Warning**

The inverter monitors the temperature of its internal heatsink, and gives out the heat sink overheat warning signal (OHF) when the temperature exceeds the overheat warning level (CD64).

Option Code	Terminal Symbol	Function Name	State	Description
45	OHF	Heat sink overheat	ON	Heat sink temperature exceeds the CD54 set level
		warning	OFF	Heat sink temperature does not exceed the [064] set level
Valid for	or inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings	C064		configuration shown – see page 3-90):
Notes:				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic OHF circuit board  AL0 AL1 AL2  Power supply  See I/O specs on page 4-6

#### **Low Load Detection Signal**

The low load detection signal output indicates the general status of the inverter output current. When the output current becomes less than the value specified by [039], the LOC output turns ON.

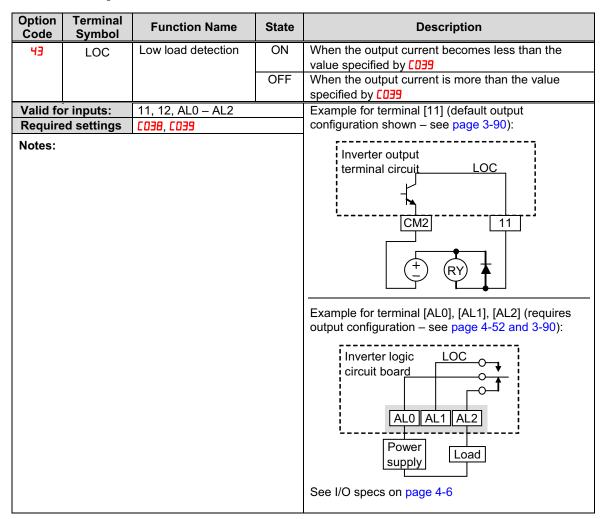

### General Input (1)~(3)

The functions are for EzSQ. Refer to a manual of EzSQ for detailed description.

Option Code	Terminal Symbol	Function Name	State	Description
44	MO1	General input (1)	ON	Each general output is turned on
45	MO2	General input (2)	OFF	Each general output is turned off
46	MO3	General input (3)	OFF	Lacif general output is turned on
Valid fo	r inputs:	11, 12, AL0 – AL2		
Require	d settings			
Notes:				
Refer to	a manual of	EzSQ for detailed expla	nation.	

## **Inverter Ready Signal**


The inverter outputs the inverter ready signal (IRDY) when it is ready for operation (i.e. when it can receive an operational command).

Option Code	Terminal Symbol	Function Name	State	Description
50	IRDY	Inverter ready signal	ON	The inverter is ready to accept the operation command
			OFF	The inverter is not ready to accept the operation command
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings	CO30, CO39		configuration shown – see page 3-90):
Notes: - The in commout - If the the in S, an	nverter can re nand is given IRDY signal i	ecognize only the operate while the IRDY signal is a not given out, check we pply voltage (connect to ) is within the range of	s given whether	Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic IRDY circuit board Load  See I/O specs on page 4-6

#### Forward Rotation, Reverse Rotation Signals

**Forward Rotation signal-** The inverter continues to output the forward rotation signal (FWR) while it is driving the motor for forward operation. The FWR signal is turned off while the inverter is driving the motor for reverse operation or stopping the motor.

**Reverse Rotation signal -** The inverter continues to output the forward rotation signal (RVR) while it is driving the motor for reverse operation. The RVR signal is turned off while the inverter is driving the motor for forward operation or stopping the motor.

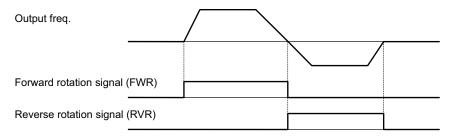

Option Code	Terminal Symbol	Function Name	State	Description
51	FWR	Forward rotation	ON	Inverter is driving the motor for forward operation
			OFF	Inverter is driving the motor for reverse operation, or the motor is stopped
52	RVR	Reverse rotation	ON	Inverter is driving the motor for reverse operation
			OFF	Inverter is driving the motor for forward operation, or the motor is stopped
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings			configuration shown – see page 3-90):
Notes:				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic FWR circuit board AL0 AL1 AL2  Power supply Load
				See I/O specs on page 4-6

## **Major Failure Signal**

The inverter gives out the major failure signal in addition to an alarm signal when it trips because of one of the errors listed in note down below.

Option Code	Terminal Symbol	Function Name	State	Description
53	MJA	Major failure signal	ON	
			OFF	
	or inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings			configuration shown – see page 3-90):
hardwar	e as shown l			Inverter output terminal circuit MJA
No.	Error code	Description		
1	E08.*	EEPROM error		i
2	E 10.*	CT error		CM2 11
3	E 11.*	CPU error		
4	E 14.*	Ground-fault at power ON		
5	E22.*	CPU error		( <u>+</u> ) (RY) ♠
6	E25.*	Main Circuit Error		
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic MJA circuit board circuit board Load  Power supply Load
				See I/O specs on page 4-6

### **Window Comparator for Analog Inputs**

The window comparator function outputs signals when the value of analog inputs [O] and [OI] are within the maximum and minimum limits specified for the window comparator. You can monitor analog inputs with reference to arbitrary levels (to find input terminal disconnection and other errors).

Refer to chapter 3 for detailed information.

Option Code	Terminal Symbol	Function Name	State	Description
54	WCO	Window comparator for	ON	[O] input is inside of the window comparator
		analog voltage input	OFF	[O] input is outside of the window comparator
55	WCOI	Window comparator for	ON	[OI] input is inside of the window comparator
		analog current input	OFF	[OI] input is outside of the window comparator
Valid fo	or inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	ed settings	6060~6065, 6070, 607 I		configuration shown – see page 3-90):
		DC and OIDc are the sam I WCOI, respectively.	e as	Inverter output terminal circuit WCO  CM2  THE RY  RY
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic

## Frequency Command Source, Run Command Source

Option Code	Terminal Symbol	Function Name	State	Description
58	FREF	Frequency command	ON	
		source	OFF	
59	REF	Run command source	ON OFF	
Valid fo	or inputs:	11, 12, AL0 – AL2	OII	Example for terminal [11] (default output
	ed settings	7.12		configuration shown – see page 3-90):
Notes:				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic FREF circuit board Load  Power supply  See I/O specs on page 4-6

## 2<sup>nd</sup> Motor Selection

Option

Terminal

This function allows you to switch the inverter setting to control two different types of motors. To use this function, assign function "DB" to one of the input terminal and make it on or off. When 2<sup>nd</sup> motor parameters are selected, output signal SETM turns on.

No.	Codes	Description	No.	Codes	Description
1	F202	Acceleration time (1)	22	A295	Acc1 to Acc2 frequency transition point
2	F203	Deceleration time (1)	23	A296	Dec1 to Dec2 frequency transition point
3	ASO 1	Frequency source	24	C24 I	Overload warning level
4	A505	Run command source	25	H202	Motor data selection
5	A203	Base frequency	26	H203	Motor capacity
6	A504	Maximum frequency	27	H204	Motor poles
7	A550	Multi-speed frequency 0	28	H205	Motor speed response
8	R24 I	Torque boost select	29	H206	Motor stabilization constant
9	A545	Manual torque boost value	30	H220	Motor constant R1 (Hitachi motor)
10	R243	Manual torque boost freq.	31	H22 I	Motor constant R2 (Hitachi motor)
11	A544	V/f characteristic curve	32	H222	Motor constant L (Hitachi motor)
12	A245	V/f gain	33	H223	Motor constant I0 (Hitachi motor)
13	A246	Voltage comp. gain for automatic torque boost	34	H254	Motor constant J (Hitachi motor)
14	A547	Slip comp. gain for automatic torque boost	35	H230	Motor constant R1 (Auto tuned data)
15	A26 I	Frequency upper limit	36	H23 I	Motor constant R2 (Hitachi motor)
16	A565	Frequency lower limit	37	H232	Motor constant L (Hitachi motor)
17	A28 I	AVR function select	38	H233	Motor constant I0 (Hitachi motor)
18	A585	AVR voltage select	39	H234	Motor constant J (Hitachi motor)
19	A292	Acceleration time (2)			
20	A293	Deceleration time (2)			
21	A294	Select method to switch to Acc2/Dec2 profile			

Option Code	Terminal Symbol	Function Name	State	Description
60	SETM	2 <sup>nd</sup> motor selection	ON OFF	2 <sup>nd</sup> motor parameter sets are selected  1 <sup>st</sup> motor parameter sets are selected
Valid fo	r inputs:	11, 12, AL0 – AL2		Example for terminal [11] (default output
Require	d settings			configuration shown – see page 3-90):
Notes:				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-52 and 3-90):  Inverter logic SETM AL0 AL1 AL2  Power supply Load
				See I/O specs on page 4-6

# **STO (Safe Torque Off) Performance Monitor**


This signal is specific for Emergency Stop function.

Option Code	Terminal Symbol	Function Name	State	Description
62	EDM	STO (Safe Torque Off) Performance Monitor (Output terminal 11 only)	ON OFF	
Valid fo	r inputs:	11, 12, AL0 – AL2		Dedicated to terminal [11]:
Require Notes:	ed settings			Inverter output terminal circuit EDM  CM2 11

## **Analog Input Operation**

The WJ200 inverters provide for analog input to command the inverter frequency output value. The analog input terminal group includes the [L], [OI], [O], and [H] terminals on the control connector, which provide for Voltage [O] or Current [OI] input. All analog input signals must use the analog ground [L].

If you use either the voltage or current analog input, you must select one of them using the logic input terminal function [AT] analog type. Refer to the table on next page showing the activation of each analog input by combination of RODS set parameter and [AT] terminal condition. The [AT] terminal function is covered in "Analog Input Current/Voltage Select" in section 4. Remember that you must also set ROD I = 0 I to select analog input as the frequency source.

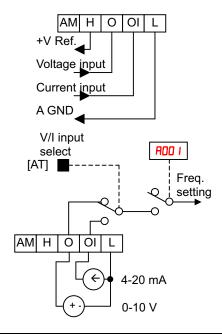





**NOTE**: If no logic input terminal is configured for the [AT] function, then inverter recognizes that [AT]=OFF and MCU recognizes [O]+[OI] as analog input.


Using an external potentiometer is a common way to control the inverter output frequency (and a good way to learn how to use the analog inputs). The potentiometer uses the built-in 10V reference [H] and the analog ground [L] for excitation, and the voltage input [O] for the signal. By default, the [AT] terminal selects the voltage input when it is OFF. Take care to use the proper resistance for the potentiometer, which is  $1{\sim}2~\mathrm{k}\Omega$ , 2 Watts.

**Voltage Input** – The voltage input circuit uses terminals [L] and [O]. Attach the signal cable's shield wire only to terminal [L] on the inverter. Maintain the voltage within specifications (do not apply negative voltage).

**Current Input** – The current input circuit uses terminals [OI] and [L]. The current comes from a *sourcing* type transmitter; a *sinking* type will not work! This means the current must flow into terminal [OI], and terminal [L] is the return back to the transmitter. The input impedance from [OI] to [L] is 100 Ohms. Attach the cable shield wire only to terminal [L] on the inverter.

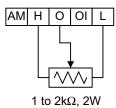

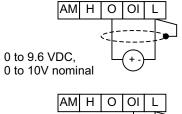

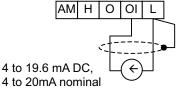

See I/O specs on page 4-6.

The following table shows the available analog input settings. Parameter #005 and the input terminal [AT] determine the External Frequency Command input terminals that are available, and how they function. The analog inputs [O] and [OI] use terminal [L] as the reference (signal return).


R005	[AT] Input	Analog Input Configuration
00	ON	[0]
UU	OFF	[OI]
02	ON	[O]
uc	OFF	Integrated POT on external panel
כח	ON	[OI]
03	OFF	Integrated POT on external panel

#### Other Analog Input-related topics:

- · "Analog Input Settings"
- · "Additional Analog Input Settings"
- · "Analog Signal Calibration Settings"
- · "Analog Input Current/Voltage Select"
- · "ADD Frequency Enable"
- · "Analog Input Disconnect Detect"

# **Pulse Train Input Operation**

The WJ200 inverter is capable of accepting pulse train input signals, that are used for frequency command, process variable (feedback) for PID control, and simple positioning. The dedicated terminal is called "EA" and "EB". Terminal "EA" is a dedicated terminal, and the terminal "EB" is an intelligent terminal, that has to be changed by a parameter setting.

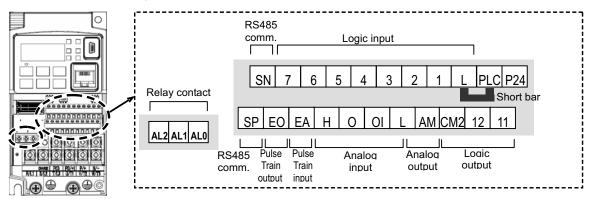

Terminal Name	Description	Ratings
EA	Pulse train input A	For frequency command, 32kHz max.
		Common is [L]
EB	Pulse train input B	27Vdc max.
(Input terminal 7)	(Set [007] to 85)	For frequency command, 2kHz max.
	,	Common is [PLC]

#### (1) Frequency Command by pulse train input

When using this mode, you should set #00 ! to 05. In this case the frequency is detected by input-capture, and calculated based on the ratio of designated max. frequency (under 32kHz). Only an input terminal "EA" will be used in this case.

#### (2) Using for process variable of PID control


You can use the pulse train input for process variable (feedback) of PID control. In this case you need to set AD75 to D3. Only "EA" input terminal is to be used.

#### (3) Simple positioning by pulse train input

This is to use the pulse train input like an encoder signal. You can select three types of operation.

# **Analog Output Operation**

In inverter applications it is useful to monitor the inverter operation from a remote location or from the front panel of an inverter enclosure. In some cases, this requires only a panel-mounted volt meter. In other cases, a controller such as a PLC may provide the inverter's frequency command, and require inverter feedback data (such as output frequency or output current) to confirm actual operation. The analog output terminal [AM] serves these purposes.

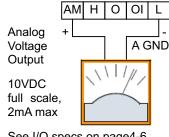

See I/O specs on page4-6

The inverter provides an analog voltage output on terminal [AM] with terminal [L] as analog GND reference. The [AM] can output inverter frequency or current output value. Note that the voltage range is 0 to +10V (positive-going only), regardless of forward or reverse motor rotation. Use **CO28** to configure terminal [AM] as indicated below.

Func.	Code	Description			
	00	Inverter output frequency			
	01	Inverter output current			
	02	Inverter output torque			
	03	Digital output frequency			
	04	Inverter output goltage			
	05	Inverter input power			
C028	06	Electronic Thermal Load			
	רם	LAD frequency			
	08	Digital current monitor			
	10	Cooling fin temperature			
	12	General purpose			
	15	Pulse train			
	16	Option			

The [AM] signal offset and gain are adjustable, as indicated below.


Func.	Description	Range	Default
C 106	[AM] output gain	0.~255.	100.
C 109	[AM] output offset	0.0~10.0	0.0

The graph below shows the effect of the gain and offset setting. To calibrate the [AM] output for your application (analog meter), follow the steps below:

- 1. Run the motor at the full scale speed, or most common operating speed.
  - a. If the analog meter represents output frequency, adjust offset ([109]) first, and then use [ 105 to set the voltage for full scale output.
  - b. If [AM] represents motor current, adjust offset ([ 109) first, and then use b[ 106 to set the voltage for full scale output. Remember to leave room at the upper end of the range for increased current when the motor is under heavier loads.

#### AM output offset adjustment

#### AM output gain adjustment

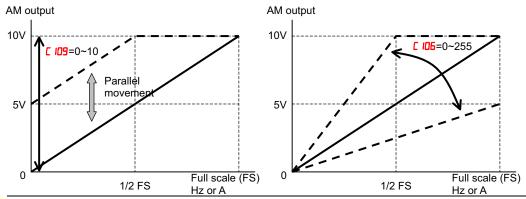



**NOTE**: As mentioned above, first adjust the offset, and then adjust the gain. Otherwise the required performance cannot be obtained because of the parallel movement of the offset adjustment.

# **Emergency Stop Function**

(To be finalized after TUV approval)


# **Inverter System Accessories**

In This Chapter	page
- Introduction	2
- Component Description	3

# Introduction

#### Introduction

A motor control system will obviously include a motor and inverter, as well as fuses for safety. If you are connecting a motor to the inverter on a test bench just to get started, that's all you may need for now. But a fully developed system can also have a variety of additional components. Some can be for noise suppression, while others may enhance the inverter's braking performance. The figure below shows a system with several possible optional components, and the table gives part number information.

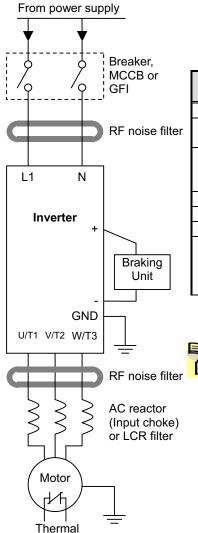

switch

Name	Part No.	See	
Name	Japan	USA	page
RF noise filter, input side	ZCL-xxx	ZCL-xxx	5-4
Braking resistor	JRB-xxx-x	JRB-xxx-x	5-5
	SRB-xxx-x	SRB-xxx-x	
Braking resistor	_	HRB-x,	5-5
NEMA-rated		NSRBx00-x	
		NJRB-xxx	
Braking unit	BRD-xxx	BRD-xxx	5-5
RF noise filter, output side	ZCL-xxx	ZCL-xxx	5-4
AC reactor, output side	ACL-x2-xxx	HRL-xxx	5-3
LCR filter	Combination:	HRL-xxC	5-3
	ACL-x2-xxx		
	LPF-xxx		
	R-2-xxx		

NOTE: The Hitachi part number series for accessories includes different sizes of each part type, specified by the –x suffix. Hitachi product literature can help match size and rating of your inverter to the proper accessory size.

Each inverter accessory comes with its own printed instruction manual. Please refer to those manuals for complete installation details. This chapter gives only an overview of these optional system devices.

# **Component Descriptions**

#### **AC Reactors, Output Side**

This reactor reduces the vibrations in the motor caused by the inverter's switching waveforms, by smoothing the waveforms to approximate commercial power quality. It is also useful to reduce the reflected voltage wave phenomenon when wiring from the inverter to the motor is more than 10m in length. Please refer to the documentation that comes with the AC reactor for installation instructions.

#### **Zero-phase Reactor (RF Noise Filter)**

The zero-phase reactor helps reduce radiated noise from the inverter wiring. It can be used on the input or output side of the inverter. The example zero-phase reactor shown to the right comes with a mounting bracket. The wiring must go through the opening to reduce the RF component of the electrical noise. Loop the wires three times (four turns) to attain the full RF filtering effect. For larger wire sizes, place multiple zero-phase reactors (up to four) side-by-side for a greater filtering effect.



# WJ200 Dynamic Braking Selection Tables

The WJ200 series inverter models have internal braking units. Additional stopping torque is available by adding external resistors. The required braking torque depends on your particular application. Other tables in this section will help you choose the proper resistor.

100V Class		Performance without resistor		Performance at Minimum Resistance			Min. Resistance at 100% Braking Duty Cycle	
WJ200 Model Number	HP	Integrated Resister	Braking Torque (%)	Min. Resistance (Ohoms)	Braking Torque (%)	Max. Braking Duty Cycle (%)	Min. Resistance at 100% Braking Duty Cycle (Ohoms)	Braking Torque (%)
004	1/2	N.A.	50	100	200	10	317	100
007	1	N.A.	50	50	200	10	159	100

# **Troubleshooting and Maintenance**

6

In This Chapter	page
- Troubleshooting	2
- Monitoring Trip Events, History, & Conditions	8
- Restoring Factory Default Settings	14
- Maintenance and Inspection	15
- Warranty	22

## **Troubleshooting**

#### **Safety Messages**

Please read the following safety messages before troubleshooting or performing maintenance on the inverter and motor system.



**WARNING:** Wait at least ten (10) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is a danger of electric shock.



**WARNING:** Make sure that only qualified personnel will perform maintenance, inspection, and part replacement. Before starting to work, remove any metallic objects from your person (wristwatch, bracelet, etc.). Be sure to use tools with insulated handles. Otherwise, there is a danger of electric shock and/or injury to personnel.



**WARNING:** Never remove connectors by pulling on its wire leads (wires for cooling fan and logic P.C.board). Otherwise, there is a danger of fire due to wire breakage and/or injury to personnel.

#### **General Precautions and Notes**

- Always keep the unit clean so that dust or other foreign matter does not enter the inverter.
- Take special care in regard to breaking wires or making connection mistakes.
- Firmly connect terminals and connectors.
- Keep electronic equipment away from moisture and oil. Dust, steel filings and other foreign matter can damage insulation, causing unexpected accidents, so take special care.

#### **Inspection Items**

This chapter provides instructions or checklists for these inspection items:

- Daily inspection
- Periodical inspection (approximately once a year)
- Insulation resistance (Megger) test (approximately once two years)

## **Troubleshooting Tips**

The table below lists typical symptoms and the corresponding solution(s).

### 1. Inverter does not power up.

Possible Cause(s)	Corrective Action
Power cable is incorrectly wired.	Check input wiring
Power cable is breaking.	Check input wiring.

### 2. Motor does not start.

Possible Cause(s)	Corrective Action
Incorrect RUN command source is	Check RUN command source (A002) for correct source.
selected.	Ex. Terminal (digital input): 01
	Operator (RUN key): 02
Incorrect frequency source is selected.	Check frequency source (A001) for correct source.
	Ex. Terminal (analog input): 01
	Operator (F001): 02
Frequency setting is 0Hz.	If frequency source is terminal (A001=01), check analog
	voltage or current signal at [O] or [OI] terminals.
	If frequency source is operator (A001=02), set frequency in
	F001.
	Depending on frequency source, input proper frequency
	reference.
	If frequency source is multi-speed operation, set frequency
	in A020 to A035 and A220.
RUN command is not set to input	If RUN command source is terminal (A002=01), set
terminal.	"forward" (00:FW) or "reverse" (01:RV) to any input
	terminals. In case of 3-wire control, set "3-wire start"
	(20:STA), "3-wire stop" (21:STP) and "3-wire FW/RV"
	(22:F/R) to any input terminals.
"Multi-speed input(s) (02 to 05:CF1 to	Deactivate the input(s).
CF4)" is (are) set to input terminal(s)	
and active.	
Both FWD and REV input are active.	If RUN command source is FWD/REV input, activate
	either FWD or REV input.
Rotation direction restriction (b035) is	Check b035.
enabled.	
Incorrect input wiring or short bar	Wire inputs correctly and/or install short bar. (ON/OFF
position	status of inputs are monitored in d005.)
Incorrect analog input or variable	Wire correctly.
resistor wiring	In case of analog voltage or variable resistor input, check
	voltage between [O] and [L] terminal.
	In case of analog current, check current between current
	source and [OI] terminal.
RUN command source is operator, but	Deactivate the input.
input terminal is set to "Force terminal"	
and active.	
RUN command source is terminal, but	Deactivate the input.
input terminal is set to "Force operator"	
and active.	n de la companya de l
Inverter is in trip status.	Reset inverter by STOP/RESET key and check error code.
(With ALARM LED and "Exxx"	
indication)	10.7
Emergency stop function is enabled and	If Emergency stop function is used, activate both GS1 and
either GS1 or GS2 input is inactive.	GS2. If not, disable safety function by dip switch.

Possible Cause(s)	Corrective Action
"18:RS", "14:CS" or "11:FRS" is set to	Deactivate the input.
input terminal and the input is active.	
"84:ROK" is set to input terminal and	Activate the input.
the input is active.	
Cable between inverter and motor or	Check the wiring.
internal cable of motor is breaking.	
Excess load.	Remove excess load.
Motor is locked.	Unlock the motor.

3. Motor does not accelerate to command speed.

Possible Cause(s)	Corrective Action
Bad connection of analog wiring.	Check the wiring.
	In case of analog voltage or variable resistor input, check
	voltage between [O] and [L] terminal.
	In case of analog current, check current between current
	source and [OI] terminal.
Overload restriction or OC suppression	Check the function level.
function works.	
Max. frequency (A004) or upper limit	Check the value.
(A061/A261) is lower than as expected.	
Acceleration time is excessive.	Change acceleration time (F002/A092/A292).
"Multi-speed input(s) (02 to 05:CF1 to	Deactivate the input(s).
CF4)" is (are) set to input terminal(s)	
and active.	
"06:JG" is set to input terminal and the	Deactivate the input.
input is active.	
Excess load.	Remove excess load.
Motor is locked.	Unlock the motor.

4. Inverter does not respond to changes in frequency setting from operator.

Possible Cause(s)	Corrective Action
Incorrect frequency source is selected.	Check frequency source (A001=02).
"51:F-TM" is set to input terminal and	Deactivate the input.
the input is active.	

5. A part of function codes is not displayed.

Possible Cause(s)	Corrective Action
"Function code display restriction" (b037)	Set 00 (all display) to b037.
is enabled.	
"86:DISP" is set to input terminal and	Deactivate the input.
the input is active.	

6. Operator (keypad) does not respond.

or operator (no)pad/ accommens	
Possible Cause(s)	Corrective Action
"86:DISP" is set to input terminal and	Deactivate the input.
the input is active.	

7. Parameter data does not change.

Possible Cause(s)	Corrective Action
	Stop the inverter, make sure the motor stops and try again. If "RUN mode edit" is enabled, a part of function codes can be changed in RUN status.
Software lock function (b031) is enabled.	Disable software lock function.

### 8. Motor rotates reverse direction with forward command.

Possible Cause(s)	Corrective Action
Incorrect power wiring.	Exchange any two of U/T1, V/T2 or W/T3.
Incorrect logic of direction signal in	Check the logic of input set as "22:F/R".
3-wire operation.	

9. Motor rotates reverse direction with RUN key of keypad.

Possible Cause(s)	Corrective Action
Keypad RUN key routing (F004) is	Check F004.
incorrectly set.	

10. Over current trip (E03)

Possible Cause(s)	Corrective Action
Acceleration time is short.	Change acceleration time (F002/A092/A292).
	Enable "acceleration hold" function (A069,A070)
Excess load.	Remove excess load.
	Enable torque boost function.
	Set free V/f in V/F characteristic curve selection
	(A044/A244=02)
Overload restriction (b021) is disabled	Enable overload restriction (b021=01/02/03).
(00).	

When the inverter trips due to Over current(E03), despite overload restriction is enabled(b021=01/02/03).

Overload restriction level (b022/b025) is	Set overload restriction level (b022/b025) lower.
high.	
Deceleration rate at overload restriction	Set deceleration rate at overload restriction (b023/b026)
(b023/b026) is too short.	longer.

11. STOP/RESET key does not respond.

THE TOTAL PRODUCTION TO THE TENTE OF THE TEN	
Possible Cause(s)	Corrective Action
STOP/RESET key disabled.	Check "STOP key enable" function. (b087)
Deceleration overvoltage suppression (b130) or controlled deceleration on power loss (b050) function is enabled.	Check b130 and b050.

### 12. Sound noise of motor or machine.

Possible Cause(s)	Corrective Action
Carrier frequency is low.	Set carrier frequency (b083) higher. (This could cause
	electric noise and leak current higher.)
Machine frequency and motor frequency	Change output frequency slightly. If resonating in
are resonated.	accel/deceleration, use jump frequency function (A063-68)
	to avoid machine frequency.
Over excitation	Set base frequency (A003/A203) and AVR voltage
	(A082/A282) according to motor rating. If not improved,
	reduce V/f gain (A045/A245) slightly or change V/f curve
	(A044/A244) as free V/f.

### 13. Overload trip (E05).

Possible Cause(s)	Corrective Action
Improper electronic thermal level	Check electronic thermal setting (b012/b013)

### 14. Over voltage trip (E07).

Possible Cause(s)	Corrective Action
Short deceleration time	Change deceleration time. (F003/F203/A093/A293)
Overvoltage suppression during deceleration (b130) is disabled (00).	Enable overvoltage suppression (b130=01/02).
When the inverter trips due to over voltage	, despite over voltage suppression is enabled.
Improper overvoltage suppression propotional gain (b134) or integral time (135).	Check overvoltage suppression proportional gain (b134) and integral time (b135).
Overvoltage suppression level (b131) is high.	Set Overvoltage suppression level (b131) lower. (Lower limit of parameter b131 must be (input voltage) $\times \sqrt{2} \times 1.1$ .)

### 15. Thermistor error trip (E35).

Possible Cause(s)	Corrective Action
Thermistor is set to input [5] and DC24V	Check setting of input terminal [5] (C005).
is supplied.	

### 16. Unstable output frequency.

Possible Cause(s)	Corrective Action
Improper parameters	Set output frequency slightly smaller or bigger value than
	power source frequency.
	Change motor stabilization constant (H006/H203).
Load variation is excessive.	Change motor and inverter to one size bigger.
Power voltage variation is excessive.	Check power source.

### 17. Output torque is not sufficient.

Possible Cause(s)	Corrective Action
Improper parameters [Acceleration]	Increase torque boost (A042/A242-A043/A243)
	Reduce carrier frequency (A083).
	Change V/f curve (A044/A244) to SLV.
	Change torque boost select (A041/A241) to automatic.
Improper parameters [Deceleration]	Increase deceleration time (F003/F203/A093/A293).
	Disable AVR function (A081/A281).
	Install dynamic braking resistor or regenerative braking
	unit.

18. If cable to operator is disconnected, inveter will trip or stop.

Possible Cause(s)	Corrective Action
Improper setting of b165.	Set ex.operator com loss action (b165) to 02.

### 19. No response over Modbus communication.

Possible Cause(s)	Corrective Action
New parameter is not updated.	If C071, C074 or C075 is changed, cycle power or reset
	inverter by turning RS terminal ON and OFF.
Incorrect setting of RUN command source (A002/A202).	Set RUN command source (A002/A202) to 03.
Incorrect setting of Frequency source (A001/A201).	Set frequency source (A001/A201) to 03.
Incorrect setting of com. speed.	Check communication speed (A071).
Incorrect setting or duplication of	Check Modbus address (A072).
Modbus address.	
Incorrect setting of com. parity.	Check communication parity (A074).
Incorrect setting of com. stop bit.	Check communication stop bit (A075).
Incorrect wiring.	Check communication wiring at SP,SN terminals.

20. When inverter starts, ECB (Earth leakage Circuit Breaker) trips.

Possible Cause(s)	Corrective Action
Leak current of inverter is excessive.	Reduce carrier frequency (A083).
	Increase current sensor level of ECB or replace ECB with
	another one having higher current sensor level.

### 21.DC braking doesn't work

Possible Cause(s)	Corrective Action
DC braking force for deceleration (A054) isn't set. (Defaults (0.))	Set DC braking force for deceleration (A054).
DC braking time for deceleration (A055) isn't set. (Defaults (0.0))	Set DC braking time for deceleration (A055).

### 22.Under-voltage error

Possible Cause(s)	Corrective Action
Decrease in input voltage due to capacity	Make capacity of electric source larger.
shortage of electric source.	

### 23.TV or radio near inverter receives noises


Possible Cause(s)	Corrective Action
The radiation noise generated by the inverter.	Put away those devices from the inverter as far as possible.

# **Monitoring Trip Events, History, & Conditions**

### **Fault Detection and Clearing**

The microprocessor in the inverter detects a variety of fault conditions and captures the event, recording it in a history table. The inverter output turns OFF, or "trips" similar to the way a circuit breaker trips due to an over-current condition. Most faults occur when the motor is running (refer to the diagram to the right). However, the inverter could have an internal fault and trip in Stop Mode.

In either case, you can clear the fault by pressing the Stop/Reset key. Additionally, you can clear the inverter's cumulative trip history by performing the procedure "Restoring Factory Default Settings" on page 6–14 (setting boby=00 will clear the trip history but leave inverter settings intact).

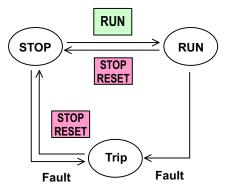

### **Error Codes**

An error code will appear on the display automatically when a fault causes the inverter to trip. The following table lists the cause associated with the error.

Error Code	Name	Cause(s)
E0 1	Over-current event while at constant speed	The inverter output was short-circuited, or the motor shaft is locked or has a heavy load. These
E02	Over-current event during deceleration	conditions cause excessive current for the inverter, so the inverter output is turned OFF.
E03	Over-current event during acceleration	The dual-voltage motor is wired incorrectly.
E04	Over-current event during other conditions	
E05	Overload protection	When a motor overload is detected by the electronic thermal function, the inverter trips and turns OFF its output.
E06	Braking resistor overload protection	When the BRD operation rate exceeds the setting of "b090", this protective function shuts off the inverter output and displays the error code.
EO7	Over-voltage protection	When the DC bus voltage exceeds a threshold, due to regenerative energy from the motor.
E08	EEPROM error	When the built-in EEPROM memory has problems due to noise or excessive temperature, the inverter trips and turns OFF its output to the motor.
E09	Under-voltage error	A decrease of internal DC bus voltage below a threshold results in a control circuit fault. This condition can also generate excessive motor heat or cause low torque. The inverter trips and turns OFF its output.
E 10	Current detection error	If an error occurs in the internal current detection system, the inverter will shut off its output and display the error code.

Error Code	Name	Cause(s)
EII	CPU error	A malfunction in the built-in CPU has occurred, so the inverter trips and turns OFF its output to the motor.
E 12	External trip	A signal on an intelligent input terminal configured as EXT has occurred. The inverter trips and turns OFF the output to the motor.
E 13	USP	When the Unattended Start Protection (USP) is enabled, an error occurred when power is applied while a Run signal is present. The inverter trips and does not go into Run Mode until the error is cleared.
E 14	Ground fault	The inverter is protected by the detection of ground faults between the inverter output and the motor upon during powerup tests. This feature protects the inverter, and does not protect humans.
E 15	Input over-voltage	The inverter tests for input over-voltage after the inverter has been in Stop Mode for 100 seconds. If an over-voltage condition exists, the inverter enters a fault state. After the fault is cleared, the inverter can enter Run Mode again.
E2 1	Inverter thermal trip	When the inverter internal temperature is above the threshold, the thermal sensor in the inverter module detects the excessive temperature of the power devices and trips, turning the inverter output OFF.
E22	CPU communication error	When communication between two CPU fails, inverter trips and displays the error code.
E25	Main circuit error (*3)	The inverter will trip if the power supply establishment is not recognized because of a malfunction due to noise or damage to the main circuit element.
E30	Driver error	An internal inverter error has occurred at the safety protection circuit between the CPU and main driver unit. Excessive electrical noise may be the cause. The inverter has turned OFF the IGBT module output.
E35	Thermistor	When a thermistor is connected to terminals [5] and [L] and the inverter has sensed the temperature is too high, the inverter trips and turns OFF the output.
E36	Braking error	When "01" has been specified for the Brake Control Enable (b120), the inverter will trip if it cannot receive the braking confirmation signal within the Brake Wait Time for Confirmation (b124) after the output of the brake release signal.
E37 E38	Emergency Stop  Low-speed overload protection	Emergency stop signal is given.  If overload occurs during the motor operation at a very low speed, the inverter will detect the overload and shut off the inverter output.

Error Code	Name	Cause(s)
E40	Operator connection	When the connection between inverter and operator keypad failed, inverter trips and displays the error code.
E4 1	Modbus communication error	When "trip" is selected (C076=00) as a behavior in case of communication error, inverter trips when timeout happens.
E43	EzSQ invalid instruction	The program stored in inverter memory has been destroyed, or the PRG terminal was turned on without a program downloaded to the inverter.
E44	EzSQ nesting count error	Subroutines, if-statement, or for-next loop are nested in more than eight layers
E45	EzSQ instruction error	Inverter found the command which cannot be executed.
to E59	EzSQ user trip (0 to 9)	When user –defined trip happens, inverter trips and displays the error code.
E60	Option error (DeviceNet Communications error)	If the disconnection due to the Bus-Off signal or timeout occurs during the operation using DeviceNet commands, the inverter will shut off its output and display the error code shown on the right.  (The inverter will trip according to the settings of "p45" and "P048".)
E6 I	Option error (duplicated MACID)	If two or more devices having the same MAC ID are detected in the same network, the inverter will display the error code shown on the right.
E62	Option error (External trip)	If the Force Fault/Trip bit of Attribute 17 in the Instance 1 of the Control Supervisory object is set to "1", the inverter will shut off its output and display the error code shown on the right.
E63 to E68	Option error	The inverter detects errors in the option board mounted in the optional slot. For details, refer to the instruction manual for the mounted option board.
E69	Option error (inverter communication error)	If timeout occurs during the communication between the inverter and DeviceNet option board, the inverter will shut off its output and display the error code shown on the right.
E80	Encoder disconnection	If the encoder wiring is disconnected, an encoder connection error is detected, the encoder fails, or an encoder that does not support line driver output is used, the inverter will shut off its output and display the error code shown on the right.
E8 1	Excessive speed	If the motor speed rises to "maximum frequency (A004) x over-speed error detection level (P026)" or more, the inverter will shut off its output and display the error code shown on the right.
E83	Positioning range error	If current position exceeds the position range (P072-P073), the inverter will shut off its output and display the error code.

Error Code	Name	Descriptions
SSSS Rotating	Reset	RS input is ON or STOP/RESET key is pressed.
	Undervoltage	If input voltage is under the allowed level, inverter shuts off output and wait with this indication.
0000	Waiting to restart	This indication is displayed after tripping before restarting.
0000	Restricted operation command	Commanded RUN direction is restricted in b035.
L HE	Trip history initializing	Trip history is being initialized.
	No data (Trip monitor)	No trip/waning data exists.
Blinking	Communication error	Communication between inverter and digital operator fails.
0	Auto-tuning completed	Auto-tuning is completed properly.
	Auto-tuning error	Auto-tuning fails.



**NOTE**: Reset is not allowed in 10 second after trip.

**NOTE**: When error E08, E14 and E30 occur, reset operation by RS terminal or STOP/RESET key is not accepted. In this case, reset by cycling power. If still same error occurs, perform initialization.

## **Warning Codes**

If set parameter is conflicted to other parameters, warning code is displayed as follows.


Warning Code	Warning condition					
H00 I	Frequency upper limit (ADE I)	>	Max. Frequency (ADD4)			
H005	Frequency lower limit (AD62)	>	Max. Frequency (ADD4)			
H005	Output Frequency setting (FOO I) Multi-speed freq. 0 (RO20)	>	Max. Frequency (ADD4)			
HO 15	Output Frequency setting (FOO I) Multi-speed freq. 0 (RO20)	>	Frequency upper limit (ADS 1)			
8025	Frequency lower limit (AD62)	>	Output Frequency setting (FOO I) Multi-speed freq. 0 (AO2O)			
H031	Start frequency (ADB2)	>	Frequency upper limit (AOE I)			
R035	Start frequency (ADB2)	>	Frequency lower limit (A062)			
H035	Start frequency (ADB2)	>	Output Frequency setting (FOO I) Multi-speed freq. 0 (ROZO)			
H036	Start frequency (ADB2)	>	Multi-speed freq. 1-15 (AO2 I-AO35)			
8037	Start frequency (ADB2)	>	Jogging frequency (ADB)			

Warning Code	Warning condition						
H085	Output Frequency setting (FOO I) Multi-speed freq. 0 (ROZO)		Jump frequency (A063/A063/A063±A064/A066/A068)				
H086	Multi-speed freq. 1-15 (AO2 I-AO35)		(1003/1003/1003/1000/1000/				
H09 I	Free setting V/f frequency 7	>	Frequency upper limit (ADS I)				
H092	Free setting V/f frequency 7	>	Frequency lower limit (AD62)				
H095	Free setting V/f frequency 7	>	Output Frequency setting (FOO I) Multi-speed freq. 0 (RO20)				
H20 I	Frequency upper limit (A25 I)	>	Max. Frequency (A204)				
8505	Frequency lower limit (A262)	>	Max. Frequency (A204)				
H205	Output Frequency setting (FOO I) Multi-speed freq. 0 (A220)	>	Max. Frequency (A204)				
H2 15	Output Frequency setting (FOO I) Multi-speed freq. 0 (A220)	>	Frequency upper limit (A26 1)				
H225	Frequency lower limit (A262)	>	Output Frequency setting (FOO I) Multi-speed freq. 0 (R220)				
H53 I	Start frequency (ADB2)	>	Frequency upper limit (A25 I)				
H232	Start frequency (ADD2)	>	Frequency lower limit (A262)				
H235	Start frequency (ROB2)	>	Output Frequency setting (FOO I) Multi-speed freq. 0 (R220)				
H285	Output Frequency setting (FOO I) Multi-speed freq. 0 (A220)	=	Jump frequency (A063/A063/A063±A064/A066/A068)				
H29 I	Free setting V/f frequency 7	>	Frequency upper limit (A25 I)				
H292	Free setting V/f frequency 7	>	Frequency lower limit (A262)				
H295	Free setting V/f frequency 7	>	Output Frequency setting (FOO I) Multi-speed freq. 0 (R220)				

### **Trip History and Inverter Status**

We recommend that you first find the cause of the fault before clearing it. When a fault occurs, the inverter stores important performance data at the moment of the fault. To access the data, use the monitor function (dxxx) and select dOB I details about the present fault. The previous 5 faults are stored in dOB2 to dOB6. Each error shifts dOB I-dOB5 to dOB2-dOB6, and writes the new error to dOB I.

The following Monitor Menu map shows how to access the error codes. When fault(s) exist, you can review their details by first selecting the proper function: does is the most recent, and does is the oldest.

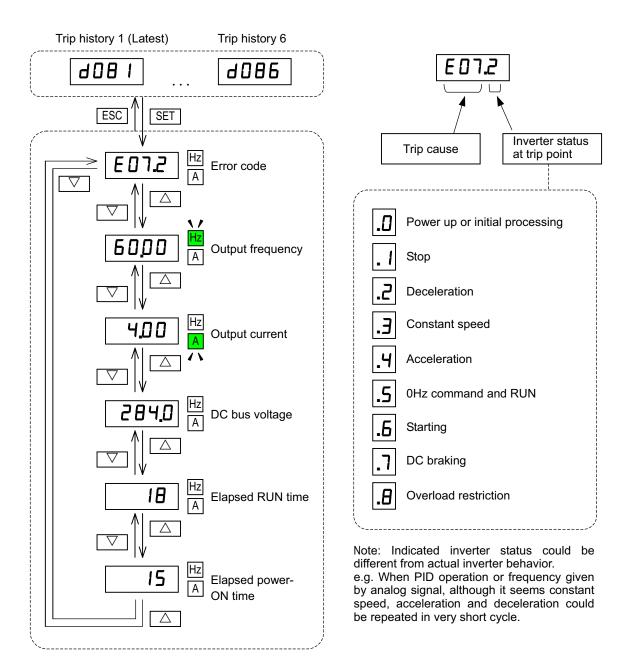


# **Restoring Factory Default Settings**

You can restore all inverter parameters to the original factory (default) settings according to area of use. After initializing the inverter, use the powerup test in Chapter 2 to get the motor running again. If operation mode (std. or high frequency) mode is changed, inverter must be initialized to activate new mode. To initialize the inverter, follow the steps below.

- (1) Select initialization mode in **b084**.
- (2) If **6084=02**, **03** or **04**, select initialization target data in **6094**.
- (3) If **6084=02**, **03** or **04**, select country code in **6085**.
- (4) Set 0 I in b 180.
- (5) The following display appears for a few seconds, and initialization is completed with doo I displayed.

### Display during initialization

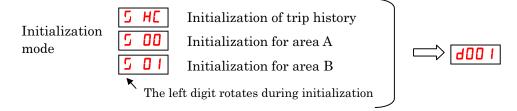

	"B" Function					
Func. Code	Name	Description				
6084	Initialization mode (parameters or trip history)	Select initialized data, five option codes:  ODInitialization disabled  OIClears Trip history  OZInitializes all Parameters  OJClears Trip history and initializes all parameters  OHClears Trip history and initializes all parameters and EzSQ program				
ь094	Initialization target data setting	Select initialized parameters, four option codes:  OAll parameters  IAll parameters except in/output terminals and communication.  OOnly registered parameters in Uxxx.  OAll parameters except registered parameters in Uxxx and body.				
ь085	Initial value select	Select default parameter values:  Oarea A  Oarea B				
ь 180	Initialization trigger	This is to perform initialization by parameter input with 6084, 6085 and 6094. Two option codes:  OInitialization disable  OPerform initialization				

Data of b084 is not saved in EEPROM to avoid unintentional initializing.

# **Maintenance and Inspection**

**Daily and Yearly Inspection Chart** 

	Inspected	Check for	Inspec Cyc		Inspection Method	Criteria
			Daily	Year	Method	
	Ambient environment	humidity	<b>✓</b>		Thermometer, hygrometer	Ambient temperature between -10 to 50°C, Humidity 90% or less non-condensing
Overall	Major devices	Abnormal noise & vib.	✓		Visual and aural	Stable environment for electronic controls
	Power supply voltage	Voltage tolerance	<b>✓</b>		Digital volt meter, measure between inverter terminals [L1], [N]	50/60 Hz 100 to 120V (-15/+10%)
	Ground Insulation	Adequate resistance		<b>✓</b>	Refer to P6-16	$5~\mathrm{M}\Omega$ or greater
	Mounting	No loose screws		✓	Torque wrench	M3.5: 1.0Nm M4: 1.4Nm
	Components	Overheating		✓	Thermal trip events	No trip events
Main	IGBT	Resistance value		✓	Refer to P6-17	
circuit	Terminal block	Secure connections		✓	Visual	No abnormalities
	Smoothing capacitors	Leaking, swelling	<b>✓</b>		Visual	No abnormalities
	Relay(s)	Chattering		✓	Aural	Single click when switching ON or OFF
	Resistors	Cracks or discoloring		✓	Visual	Check Ohms of optional braking res.
	Function	Voltage balance between phases		✓	Measure voltage between U,V,W	Difference must be 2% or less.
Control circuit		Protection circuit		✓	e.g. Input Ex.trip signal and check inverter behavior and alarm signal.	Functions properly.
	Overall	No odor, discoloring, corrosion		<b>✓</b>	Visual	No abnormalities
	Capacitor	Leaking, swelling	✓		Visual	Undistorted appearance
	Cooling fan	Noise	✓		Power down, manually rotate	Rotation must be smooth
Cooling		Dust	✓		Visual	Vacuum to clean
		Mounting	✓		Visual	Mounted firmly
	Heat sink	Dust	✓		Visual	Vacuum to clean
Display	LEDs	Legibility			Visual	All LED segments work

**Note 1:** The life of a capacitor is affected by the ambient temperature. See page 6–21.

**Note 2:** Designed life of a cooling fan is.10 years. However, it is affected by the ambient temperature and other environmental conditions.


**Note 3:** The inverter must be cleaned periodically. If dust accumulates on the fan and heat sink, it can cause overheating of the inverter.

### Megger test

The *megger* is a piece of test equipment that uses a high voltage to determine if an insulation degradation has occurred. For inverters, it is important that the power terminals be isolated from the Earth GND terminal via the proper amount of insulation.

The circuit diagram below shows the inverter wiring for performing the megger test. Just follow the steps to perform the test:

- 1. Remove power from the inverter and wait at least 5 minutes before proceeding.
- 2. Open the front housing panel to access the power wiring.
- **3.** Remove all wires to terminals [L1,N, +,-, U/T1, V/T2, and W/T3]. Most importantly, the input power and motor wires will be disconnected from the inverter.
- **4.** Use a bare wire and short terminals [L1,N, +,-, U/T1, V/T2, and W/T3] together as shown in the diagram.
- 5. Connect the megger to the inverter Earth GND and to the shorted power terminals as shown. Then perform the megger test at 500 VDC and verify  $5M\Omega$  or greater resistance.

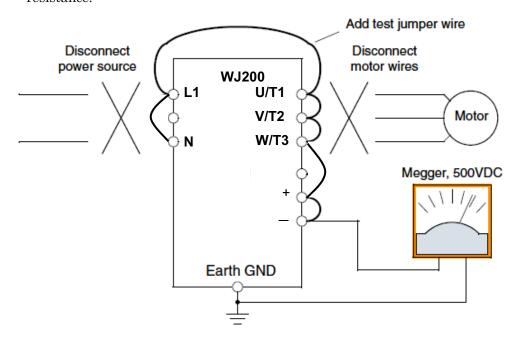

- **6.** After completing the test, disconnect the megger from the inverter.
- 7. Reconnect the original wires to terminals [L1,N, +,-, U/T1, V/T2, and W/T3].



**CAUTION:** Do not connect the megger to any control circuit terminals such as intelligent I/O, analog terminals, etc. Doing so could cause damage to the inverter.



**CAUTION:** Never test the withstand voltage (HIPOT) on the inverter. The inverter has a surge protector between the main circuit terminals above and the chassis ground.




**CAUTION**: Power terminal assignment is different compared to old models such as L100, L200 series, etc., Pay attention when wiring the power cable.

### **IGBT Test Method**

The following procedure will check the inverter transistors (IGBTs) and diodes:

- 1. Disconnect input power to terminals [L1 and N] and motor terminals [U/T1, V/T2, and W/T3].
- **2.** Disconnect any wires from terminals [+] and [-] for regenerative braking.
- 3. Use a Digital Volt Meter (DVM) and set it for  $1\Omega$  resistance range. You can check the status of the charging state of terminals [L1,N, U/T1, V/T2, W/T3, +, and -] of the inverter and the probe of the DVM by measuring the charging state.

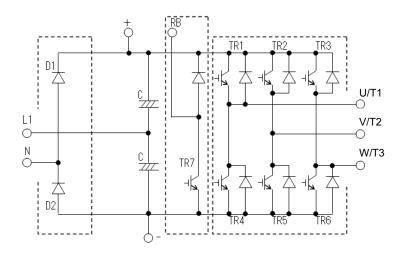

**Table Legend** Almost infinite resistance:  $\cong \infty \Omega$  Almost zero resistance:  $\cong 0 \Omega$ 

Part	DV	/M	Measured	Part	DI	/M	Measured	Part	DV	M	Measured
Tart	+	_	Value	1 art	+	_	Value	1 art	+	_	Value
D1	[N]	[+]	$\cong \infty \Omega$	TR1	[U]	[+]	$\Omega \cong \Xi$	TR5	[V]	[–]	$\cong 0 \Omega$
DI	[+]	[N]	$\cong 0 \Omega$	1101	[+]	[U]	$\cong 0 \Omega$	110	Ι	[V]	$\Omega \cong \cong$
D2	[N]	Ι	$\cong 0 \Omega$	TR2	[V]	[+]	$\cong \infty \Omega$	TR6	[W]		$\cong 0 \Omega$
D2	[]	[N]	$\cong \infty \Omega$	1112	[+]	[V]	$\cong 0 \Omega$	110	Ι	[W]	$\cong \infty \Omega$
				TR3	[W]	[+]	$\cong \infty \Omega$		[RB]	[+]	$\cong \infty \Omega$
				110	[+]	[W]	$\cong 0 \Omega$	TR7	[+]	[RB]	$\cong 0 \Omega$
				TR4	[U]	[–]	$\cong 0 \Omega$	1107	[W]	[–]	$\Omega \cong \Xi$
				1114	[_]	[U]	$\cong \infty \Omega$		[–]	[W]	$\cong \infty \Omega$



NOTE: The resistance values for the diodes or the transistors will not be exactly the same, but they will be close. If you find a significance difference, a problem may exist.



NOTE: Before measuring the voltage between [+] and [-] with the DC current range, confirm that the smoothing capacitor is discharged fully, then execute the tests.

### **General Inverter Electrical Measurements**


The following table specifies how to measure key system electrical parameters. The diagrams on the next page show inverter-motor systems and the location of measurement points for these parameters.

Parameter	Circuit location of measurement	Measuring instrument	Notes	Reference Value
Supply voltage E <sub>1</sub>	E <sub>1</sub> – across L1 and N	Moving-coil type voltmeter or rectifier type voltmeter	Fundamental wave effective value	Commercial supply voltage: 100–120V, 50/60 Hz
Supply current $I_1$	$I_1 = L1$		Total effective value	_
Supply power W <sub>1</sub>	W <sub>1</sub> – across L1 and N		Total effective value	_
Supply power factor Pf <sub>1</sub>	$Pf_1$ =	_		
Output voltage Eo	$E_U-across\ U/T1\ and$ $V/T2$ $E_V-across\ V/T2\ and$ $W/T3$ $E_W-across\ W/T3\ and$ $U/T1$	Rectifier type voltmeter	Total effective value	
Output current Io	$\begin{split} &I_U - U/T1 \\ &I_V - V/T2 \\ &I_W - W/T3 \end{split}$	Moving-coil type ammeter	Total effective value	_
Output power Wo	$W_{01}$ – across U/T1 and V/T2 $W_{02}$ – across V/T2 and W/T3	Electronic type wattmeter	Total effective value	_
Output power factor Pf <sub>0</sub>	Calculate the output pow output current I, and out $Pf_O = -$			

- **Note 1:** Use a meter indicating a fundamental wave effective value for voltage, and meters indicating total effective values for current and power.
- **Note 2:** The inverter output has a distorted waveform, and low frequencies may cause erroneous readings. However, the measuring instruments and methods listed above provide comparably accurate results.
- **Note 3:** A general-purpose digital volt meter (DVM) is not usually suitable to measure a distorted waveform (not pure sinusoid).


The figures below show measurement locations for voltage, current, and power measurements listed in the table on the previous page. The voltage to be measured is the fundamental wave effective voltage. The power to be measured is the total effective power.

### **Single-phase Measurement Diagram**

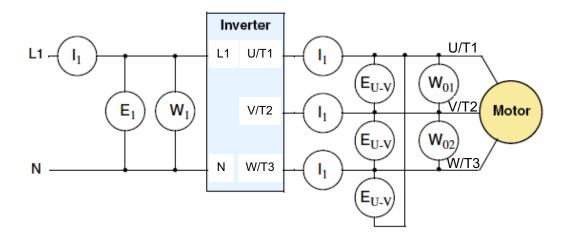

### **Inverter Output Voltage Measurement Techniques**

Taking voltage measurements around drives equipment requires the right equipment and a safe approach. You are working with high voltages and high-frequency switching waveforms that are not pure sinusoids. Digital voltmeters will not usually produce reliable readings for these waveforms. And, it is usually risky to connect high voltage signals to oscilloscopes. The inverter output semiconductors have some leakage, and no-load measurements produce misleading results. So, we highly recommend using the following circuits to measure voltage for performing the equipment inspections.

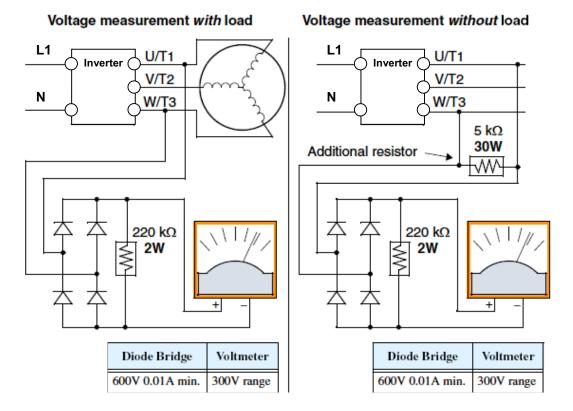





**HIGH VOLTAGE:** Be careful not to touch wiring or connector terminals when working with the inverters and taking measurements. Be sure to place the measurement circuitry components above in an insulated housing before using them.

### **Capacitor Life Curves**

The DC bus inside the inverter uses a large capacitor as shown in the diagram below. The capacitor handles high voltage and current as it smoothes the power for use by the inverter. So, any degradation of the capacitor will affect the performance of the inverter.

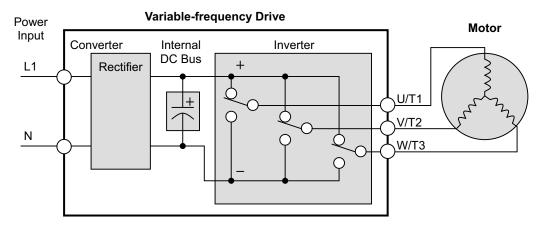

Capacitor life is reduced in higher ambient temperatures, as the graph below demonstrates. Under the condition of average ambient temperature 40degC, 80% load, 24 hours operation, the lifetime is 10years. Be sure to keep the ambient temperature at acceptable levels, and perform maintenance inspections on the fan, heat sink, and other components. If the inverter is installed on a cabinet, the ambient temperature is the temperature inside the cabinet.

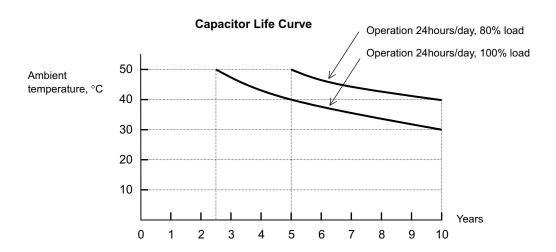

# Warranty

### **Warranty Terms**

The warranty period under normal installation and handling conditions shall be two (2) years from the date of manufacture, or one (1) year from the date of installation, whichever occurs first. The warranty shall cover the repair or replacement, at Hitachi's sole discretion, of ONLY the inverter that was installed.

- **1.** Service in the following cases, even within the warranty period, shall be charged to the purchaser:
  - **a.** Malfunction or damage caused by mis-operation or modification or improper repair
  - **b.** Malfunction or damage caused by a drop after purchase and transportation
  - **c.** Malfunction or damage caused by fire, earthquake, flood, lightening, abnormal input voltage, contamination, or other natural disasters
- **2.** When service is required for the product at your work site, all expenses associated with field repair shall be charged to the purchaser.
- **3.** Always keep this manual handy; please do not lose it. Please contact your Hitachi distributor to purchase replacement or additional manuals.

# Glossary and Bibliography



In This Appendix	page
- Glossary	2
- Bibliography	8

# **Glossary**

Ambient Temperature The air temperature in the chamber containing a powered electronic unit. A unit's heat sinks rely on a lower ambient temperature in order to dissipate heat away from sensitive electronics.

**Arrival Frequency** 

The arrival frequency refers to the set output frequency of the inverter for the constant speed setting. The arrival frequency feature turns on an output when the inverter reaches the set constant speed. The inverter has various arrival frequencies and pulsed or latched logic options.

Auto-tuning

The ability of a controller to execute a procedure that interacts with a load to determine the proper coefficients to use in the control algorithm. Auto-tuning is a common feature of process controllers with PID loops. Hitachi inverters feature auto tuning to determine motor parameters for optimal commutation. Auto-tuning is available as a special command from a digital operator panel. See also *Digital Operator Panel*.

**Base Frequency** 

The power input frequency for which an AC induction motor is designed to operate. Most motors will specify a 50 to 60 Hz value. The Hitachi inverters have a programmable base frequency, so you must ensure that parameter matches the attached motor. The term *base frequency* helps differentiate it from the carrier frequency. See also *Carrier Frequency* and *Frequency Setting*.

**Braking Resistor** 

An energy-absorbing resistor that dissipates energy from a decelerating load. Load inertia causes the motor to act as a generator during deceleration. For the X200 inverter models, the braking unit and braking resistor are optional (external) components. See also Four-quadrant Operation and Dynamic Braking.

Break-away Torque

The torque a motor must produce to overcome the static friction of a load, in order to start the load moving.

Carrier Frequency

The frequency of the constant, periodic, switching waveform that the inverter modulates to generate the AC output to the motor. See also *PWM*.

 $\mathbf{CE}$ 

A regulatory agency for governing the performance of electronic products in Europe. Drive installations designed to have CE approval must have particular filter(s) installed in the application.

Choke

An inductor that is tuned to react at radio frequencies is called a "choke," since it attenuates (chokes) frequencies above a particular threshold. Tuning is often accomplished by using a movable magnetic core. In variable-frequency drive systems, a choke positioned around high-current wiring can help attenuate harmful harmonics and protect equipment. See also *Harmonics*.

### DC Braking

The inverter DC braking feature stops the AC commutation to the motor, and sends a DC current through the motor windings in order to stop the motor. Also called "DC injection braking," it has little effect at high speed, and is used as the motor is nearing a stop.

### Deadband

In a control system, the range of input change for which there is no perceptible change in the output. In PID loops, the error term may have a dead band associated with it. Deadband may or may not be desirable; it depends on the needs of the application.

### Digital Operator Panel

For Hitachi inverters, "digital operator panel" (DOP) refers first to the operator keypad on the front panel of the inverter. It also includes hand-held remote keypads, which connect to the inverter via a cable. Finally, the DOP Professional is a PC-based software simulation of the keypad devices.

### Diode

A semiconductor device that has a voltage-current characteristic that allows current to flow only in one direction, with negligible leakage current in the reverse direction. See also *Rectifier*.

### **Duty Cycle**

- 1. The percent of time a square wave of fixed frequency is ON (high) versus OFF (low).
- 2. The ratio of operating time of a device such as a motor to its resting time. This parameter usually is specified in association with the allowable thermal rise for the device.

### **Dynamic Braking**

For the X2002 inverter models, the braking unit and braking resistor are optional (external) components. The dynamic braking feature shunts the motor-generated EMF energy into a special braking resistor. The added dissipation (braking torque) is effective at higher speeds, having a reduced effect as the motor nears a stop.

### **EDM**

[Functional Safety Related Term] External Device Monitoring, the output signal from inverter to external device in order to feed back the status that the both safety path working properly. Safety certificate is issued based on the condition that this EDM signal is interfaced to certified external device to avoid restarting or to inform in case of failure in safety path.

### Error

In process control, the error is the difference between the desired value or setpoint (SP) and the actual value of a the process variable (PV). See also *Process Variable* and *PID Loop*.

### **EMI**

Electromagnetic Interference - In motor/drive systems, the switching of high currents and voltages creates the possibility of generating radiated electrical noise that may interfere with the operation of nearby sensitive electrical instruments or devices. Certain aspects of an installation, such as long motor lead wire lengths, tend to increase the chance of EMI. Hitachi provides accessory filter components you can install to decrease the level of EMI.

# Four-quadrant operation

Referring to a graph of torque versus direction, a four-quadrant drive can turn the motor either forward or reverse, as well as decelerate in either direction (see also *reverse torque*). A load that has a relatively high inertia and must move in both directions and change directions rapidly requires four-quadrant capability from its drive.

### Free-run Stop

A method of stopping a motor, caused when the inverter simply turns OFF its motor output connections. This may allow the motor and load to coast to a stop, or a mechanical brake may intervene and shorten the deceleration time.

### **Frequency Setting**

While frequency has a broad meaning in electronics, it typically refers to motor speed for variable-frequency drives (inverters). This is because the output frequency of the inverter is variable, and is proportional to the attained motor speed. For example, a motor with a base frequency of 60 Hz can be speed controlled with an inverter output varying form 0 to 60 Hz. See also *Base Frequency, Carrier Frequency*, and *Slip*.

### Harmonics

A *harmonic* is a whole number multiple of a base of fundamental frequency. The square waves used in inverters produce high frequency harmonics, even though the main goal is to produce lower-frequency sine waves. These harmonics can be harmful to electronics (including motor windings) and cause radiated energy that interferes with nearby electronic devices. Chokes, line reactors, and filters are sometimes used to suppress the transmission of harmonics in an electrical system. See also *Choke*.

### Horsepower

A unit of physical measure to quantify the amount of work done per unit of time. You can directly convert between horsepower and Watts as measurements of power.

### **IGBT**

Insulated Gate Bipolar Transistor(IGBT) – A semiconductor transistor capable of conducting very large currents when in saturation and capable of withstanding very high voltages when it is OFF. This high-power bipolar transistor is the type used in Hitachi inverters.

### Inertia

The natural resistance a stationary object to being moved by an external force. See also *Momentum*.

### **Intelligent Terminal**

A configurable input or output logic function on the Hitachi inverters. Each terminal may be assigned one of several functions.

### Inverter

A device that electronically changes DC to AC current through an alternating process of switching the input to the output, inverted and non-inverted. A variable speed drive such as the Hitachi X2002 is also called an inverter, since it contains three inverter circuits to generate 3-phase output to the motor.

### Isolation Transformer

A transformer with 1:1 voltage ratio that provides electrical isolation between its primary and secondary windings. These are typically used on the power input side of the device to be protected. An isolation transformer can protect equipment from a ground fault or other malfunction of nearby equipment, as well as attenuate harmful harmonics and transients on the input power.

**Jogging Operation** 

Usually done manually, a jog command from an operator's panel requests the motor/drive system to run indefinitely in a particular direction, until the machine operator ends the jog operation.

Jump Frequency

A *jump frequency* is a point on the inverter output frequency range that you want the inverter to skip around. This feature may be used to avoid a resonant frequency, and you can program up to three jump frequencies in the inverter.

Momentum

The physical property of a body in motion that causes it to remain in motion. In the case of motors, the rotor and attached load are rotating and possesses angular momentum.

Multi-speed Operation

The ability of a motor drive to store preset discrete speed levels for the motor, and control motor speed according to the currently selected speed preset. The Hitachi inverters have 16 preset speeds.

Motor Load

In motor terminology, motor load consists of the inertia of the physical mass that is moved by the motor and the related friction from guiding mechanisms. See also *Inertia*.

NEC

The National Electric Code is a regulatory document that governs electrical power and device wiring and installation in the United States.

**NEMA** 

The National Electric Manufacturer's Association. NEMA Codes are a published series of device ratings standards. Industry uses these to evaluate or compare the performance of devices made by various manufacturers to a known standard.

Open-collector Outputs A common logic-type discrete output that uses an NPN transistor that acts as a switch to a power supply common, usually ground. The transistor's *collector* is *open* for external connection (not connected internally). Thus, the output *sinks* external load current to ground.

**Power Factor** 

A ratio that expresses a phase difference (timing offset) between current and voltage supplied by a power source to a load. A perfect power factor = 1.0 (no phase offset). Power factors less than one cause some energy loss in power transmission wiring (source to load).

PID Loop

Proportional - Integral-Derivative - A mathematical model used for process control. A process controller maintains a process variable (PV) at a setpoint (SP) by using its PID algorithm to compensate for dynamic conditions and vary its output to drive the PV toward the desired value. For variable-frequency drives, the process variable is the motor speed. See also *Error*.

**Process Variable** 

A physical property of a process that is of interest because it affects the quality of the primary task accomplished by the process. For an industrial oven, temperature is the process variable. See also *PID Loop* and *Error*.

**Proof Test** 

[Functional Safety Related Term] The test to be carried out periodically to confirm the proper working of safety path. Safety certificate is issued based on the condition that this proof test is carried out at least once a year.

**PWM** 

Pulse-width modulation: A type of AC adjustable frequency drive that accomplishes frequency and voltage control at the output section (inverter) of the drive. The drive output voltage waveform is at a constant amplitude, and by "chopping" the waveform (pulsewidth-modulating), the average voltage is controlled. The chopping frequency is sometimes called the *Carrier Frequency*.

Reactance

The impedance of inductors and capacitors has two components. The resistive part is constant, while the reactive part changes with applied frequency. These devices have a complex impedance (complex number), where the resistance is the real part and the reactance is the imaginary part.

Rectifier

An electronic device made of one or more diodes that converts AC power into DC power. Rectifiers are usually used in combination with capacitors to filter (smooth) the rectified waveform to closely approximate a pure DC voltage source.

Regenerative Braking A particular method of generating reverse torque to a motor, an inverter will switch internally to allow the motor to become a generator and will either store the energy internally, deliver the braking energy back to the main power input, or dissipate it with a resistor.

Regulation

The quality of control applied to maintain a parameter of interest at a desired value. Usually expressed as a percent (±) from the nominal, motor regulation usually refers to its shaft speed.

Reverse Torque

The torque applied in the direction opposite to motor shaft rotation. As such, reverse torque is a decelerating force on the motor and its external load.

Rotor

The windings of a motor that rotate, being physically coupled to the motor shaft. See also *Stator*.

Saturation Voltage

For a transistor semiconductor device, it is in saturation when an increase in input current no longer results in an increase in the output current. The saturation voltage is the voltage drop across the device. The ideal saturation voltage is zero.

Sensorless Vector Control A technique used in some variable-frequency drives (featured in some other Hitachi inverter model families) to rotate the force vector in the motor without the use of a shaft position sensor (angular). Benefits include an increase in torque at the lowest speed and the cost savings from the lack of a shaft position sensor.

### Setpoint (SP)

The *setpoint* is the desired value of a process variable of interest. See also *Process Variable (PV)* and *PID Loop*.

### Single-phase power

An AC power source consisting of Hot and Neutral wires. An Earth Ground connection usually accompanies them. In theory, the voltage potential on Neutral stays at or near Earth Ground, while Hot varies sinusoidally above and below Neutral. This power source is named Single Phase to differentiate it from three-phase power sources. Some Hitachi inverters can accept single phase input power, but they all output three-phase power to the motor. See also Three-phase.

### Slip

The difference between the theoretical speed of a motor at no load (determined by its inverter output waveforms) and the actual speed. Some slip is essential in order to develop torque to the load, but too much will cause excessive heat in the motor windings and/or cause the motor to stall.

### Squirrel Cage

A "nick-name" for the appearance of the rotor frame assembly for an AC induction motor.

### Stator

The windings in a motor that are stationary and coupled to the power input of the motor. See also *Rotor*.

### **Tachometer**

- 1. A signal generator usually attached to the motor shaft for the purpose of providing feedback to the speed controlling device of the motor.
- 2. A speed-monitoring test meter that may optically sense shaft rotation speed and display it on a readout.

### Thermal Switch

An electromechanical safety device that opens to stop current flow when the temperature at the device reaches a specific temperature threshold. Thermal switches are sometimes installed in the motor in order to protect the windings from heat damage. The inverter can use thermal switch signals to trip (shut down) if the motor overheats. See also *Trip*.

### **Thermistor**

A type of temperature sensor that changes its resistance according to its temperature. The sensing range of thermistors and their ruggedness make them ideal for motor overheating detection. Hitachi inverters have built-in thermistor input circuits, which can detect an overheated motor and shut off (trip) the inverter output.

Torque

The rotational force exerted by a motor shaft. The units of measurement consist of the distance (radius from shaft center axis) and force (weight) applied at that distance. Units are usually given as pound-feet, ounce-inches, or Newton-meters.

**Transistor** 

A solid state, three-terminal device that provides amplification of signals and can be used for switching and control. While transistors have a linear operating range, inverters use them as high-powered switches. Recent developments in power semiconductors have produced transistors capable of handling high voltages and currents, all with high reliability. The saturation voltage has been decreasing, resulting in less heat dissipation. Hitachi inverters use state-of-the-art semiconductors to provide high performance and reliability in a compact package. See also *IGBT* and *Saturation Voltage*.

Trip Event

An event that causes the inverter to stop operation is called a "trip" event (as in *tripping* a circuit breaker). The inverter keeps a history log of trip events. They also require an action to clear.

Watt Loss

A measure of the internal power loss of a component, the difference between the power it consumes and what its output delivers. An inverter's watt loss is the input power minus the power delivered to the motor. The watt loss is typically highest when an inverter is delivering its maximum output. Therefore, watt loss is usually specified for a particular output level. Inverter watt loss specifications are important when designing enclosures.

# **Bibliography**

Title	Author and Publisher
Variable Speed Drive Fundamentals, 2nd Ed.	Phipps, Clarence A.
	The Fairmont Press, Inc. / Prentice-Hall, Inc. 1997
Electronic Variable Speed Drives	Brumbach, Michael E.
	Delmar Publishers 1997
	ISBN 0-8273-6937-9
Hitachi Inverter Technical Guide Book	Published by Hitachi, Ltd. Japan 1995
	Publication SIG-E002

# ModBus Network Communications




In This Appendix		page
-	Introduction	2
-	Connecting the Inverter to ModBus	3
-	Network Protocol Reference	5
_	ModBus Data Listing	24

## Introduction

WJ200 Series inverters have built-in RS-485 serial communications, featuring the ModBus RTU protocol. The inverters can connect directly to existing factory networks or work with new networked applications, without any extra interface equipment. The specifications are in the following table.


Item	Specifications	User-selectable
Transmission speed	2400 / 4800 / 9600 / 19.2k / 38.4k / 57.6k / 76.8k / 115.2k bps	✓
Communication mode	Asynchronous	X
Character code	Binary	X
LSB placement	Transmits LSB first	×
Electrical interface	RS-485 differential transceiver	X
Data bits	8-bit (ModBus RTU mode)	X
Parity	None / even / odd	✓
Stop bits	1 or 2 bits	✓
Startup convention	One-way start from host device	X
Wait time for response	0 to 1000 msec.	✓
Connections	Station address numbers from 1 to 32	✓
Connector	Terminal connector	_
Error check	Overrun, Framing block check code, CRC-16, or horizontal parity	-
Cable length	500m maximum	· 

The network diagram below shows a series of inverters communicating with a host computer. Each inverter must have a unique address, from 1 to 32, on the network. In a typical application, a host computer or controller is the master and each of the inverter(s) or other devices is a slave.

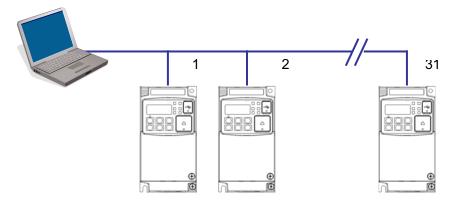

# Connecting the Inverter to ModBus

Modbus connector is in control terminal block as below. Note that RJ45 connector (RS-422) is used for external operator only.

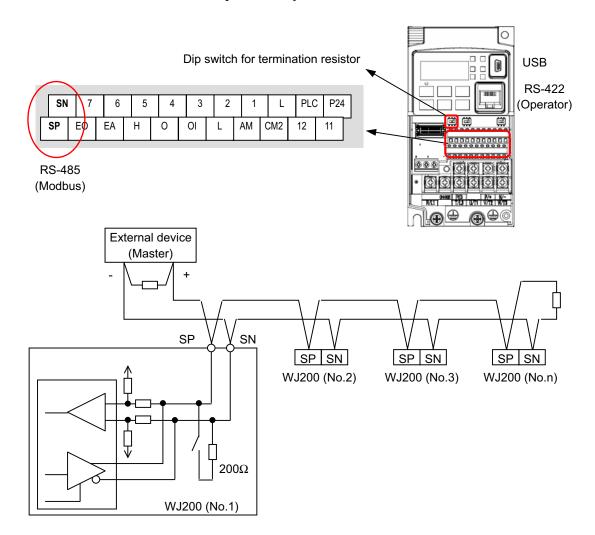

Terminate Network Wiring - The RS-485 wiring must be terminated at each physical end to suppress electrical reflections and help decrease transmission errors. WJ200 has a built-in  $200\Omega$  resistor activated by a dip switch. Select termination resistors that match the characteristic impedance of the network cable. The diagram above shows a network with the needed termination resistor at each end.

**Inverter Parameter Setup** - The inverter has several settings related to ModBus communications. The table below lists them together. The Required column indicates which parameters *must* be set properly to allow communications. You may need to refer to the host computer documentation in order to match some of its settings.

Func. Code	Name	Required	Settings
A001	Frequency source	<b>√</b>	00Keypad potentiometer 01Control terminal 02Function F001 setting 03ModBus network input 10Calculate function output
A002	Run command source	✓	01Control terminal 02Run key on keypad, or digital operator 03 ModBus network input
C071	Communication speed	<b>✓</b>	03 2400 bps 044800 bps 05 9600 bps 06 19.2k bps 0738.4k bps 0857.6k bps 0976.8k bps 10 115.2k bps
C072	Modbus Address	✓	Network address, range is 1 to 247
C074	Communication parity	<b>✓</b>	00No parity 01Even parity 02Odd parity
C075	Communication stop bit	✓	Range is 1 or 2
C076	Communication error select	-	00Trip (Error code E60) 01Decelerate to a stop and trip 02Disable 03Free run stop (coasting) 04Decelerate to a stop
C077	Communication error time-out	_	Comm. Watchdog timer period, range is 0.00 to 99.99 sec.
C078	Communication wait time	✓	Time the inverter waits after receiving a message before it transmits. Range is 0. to 1000. ms




NOTE: When you change any of the parameters above, the inverter power must be rebooted in order to activate new parameters. Instead of rebooting, turning ON/OFF of reset terminal works as same.

# **Network Protocol Reference**

### **Transmission procedure**

The transmission between the external control equipment and the inverter takes the procedure below.

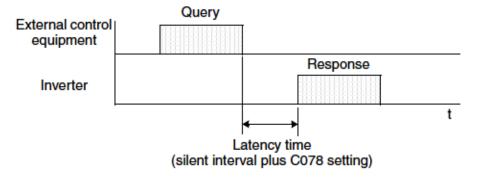

- Query A frame sent from the external control equipment to the inverter
- Response A frame returned from inverter to the external control equipment

The inverter returns the response only after the inverter receives a query from the external control equipment and does not output the response positively. Each frame is formatted (with commands) as follows:

Frame Format
Header (silent interval)
Slave address
Function code
Data
Error check
Trailer (silent interval)

### **Message Configuration: Query**

### Slave address:

- This is a number of 1 to 32 assigned to each inverter (slave). (Only the inverter having the address given as a slave address in the query can receive the query.)
- When slave address "0" is specified, the query can be addressed to all inverters simultaneously. (Broadcasting)
- In broadcasting, you cannot call and loop back data.
- Slave Address 1-247 in Modbus specification. When master address the slave 250-254, broadcast toward specific slave address. Slave doesn't answer back. And this function is valid for the write command (05h, 06h, 0Fh, 10h)

Slave address	Broadcast to
250 (FAh)	Broadcast to Slave address 01to 09
251 (FBh)	Broadcast to Slave address 10 to 19
252 (FCh)	Broadcast to Slave address 20 to 29
253 (FDh)	Broadcast to Slave address 30 to 39
254 (FEh)	Broadcast to Slave address 40 to 247

### Data:

- A function command is set here.
- The data format used in the X2002 series is corresponding to the Modbus data format below.

Name of Data	Description
Coil	Binary data that can be referenced and changed (1 bit long)
Holding Register	16-bit data that can be referenced and changed

### Function code:

Specify a function you want to make the inverter execute. Function codes available to the X2002 series are listed below.

Function Code	Function	Maximum data size (bytes available per message)	Maximum number of data elements available per message
0 1 h	Read Coil Status	4	32 coils (in bits)
0 3 h	Read Holding Resistor	32	16 registers (in bytes)
0 5 h	Write in Coil	2	1 coil (in bits)
0 6 h	Write in Holding Register	2	1 register (in bytes)
0 8 h	Loopback Test	_	_
0 F h	Write in Coils	4	32 coils (in bits)
1 0 h	Write in Registers	32	16 registers (in bytes)
17 h	Read/Write Holding Registor	32	16 registers (in bytes)

### Error check:

Modbus-RTU uses CRC (Cyclic Redundancy Check) for error checking.

- The CRC code is 16-bit data that is generated for 8-bit blocks of arbitrary length.
- The CRC code is generated by a generator polynomial CRC-16 (X16+ X15+ X2+ 1).

### Header and trailer (silent interval):

Latency is the time between the reception of a query from the master and transmission of a response from the inverter.

- 3.5 characters (24 bits) are always required for latency time. If the latency time shorter than 3.5 characters, the inverter returns no response.
- The actual transmission latency time is the sum of silent interval (3.5 characters long) + C078 (transmission latency time).

### **Message Configuration: Response**

### Transmission time required:

- A time period between reception of a query from the master and transmission of a response from the inverter is the sum of the silent interval (3.5 characters long) + C078 (transmission latency time).
- The master must provide a time period of the silent interval (3.5 characters long or longer) before sending another query to an inverter after receiving a response from the inverter.

### Normal response:

- When receiving a query that contains a function code of Loopback (08h), the inverter returns a response of the same content of the query.
- When receiving a query that contains a function code of Write in Register or Coil (05h, 06h, 0Fh, or 10h), the inverter directly returns the query as a response.
- When receiving a query that contains a function code of Read Register or Coil (01h or 03h), the inverter returns, as a response, the read data together with the same slave address and function code as those of the query.

### Response when an error occurs:

- When finding any error in a query (except for a transmission error), the inverter returns an exception response without executing anything.
- You can check the error by the function code in the response. The function code of the exception response is the sum of the function code of the query and 80h.
- The content of the error is known from the exception code.

Field Configuration	
Slave address	
Function code	
Exception code	
CRC-16	

Exception Code	Description	
0 1 h	The specified function is not supported.	
0 2 h	The specified function is not found.	
0 3 h	The format of the specified data is not acceptable.	
2 1 h	The data to be written in a holding register is outside the inverter.	
2 2 h	<ul> <li>The data to be written in a holding register is outside the inverter.</li> <li>The specified functions are not available to the inverter.</li> <li>Function to change the content of a register that cannot be changed while the inverter is in service</li> <li>Function to submit an ENTER command during running (UV)</li> <li>Function to write in a register during tripping (UV)</li> <li>Function to change the I/O terminal configuration which is not allowed.</li> <li>Function to change active state of RS (reset) terminal</li> <li>Function to write in a register during auto-tuning</li> <li>Function to write in a register locked by password</li> </ul>	
2 3h	The register (or coil) to be written in is read-only	

#### No response occurs:

In the cases below, the inverter ignores a query and returns no response.

- When receiving a broadcasting query
- When detecting a transmission error in reception of a query
- When the slave address set in the query is not equal to the slave address of the inverter
- When a time interval between data elements constituting a message is shorter than 3.5 characters
- When the data length of the query is invalid
- When broadcast message received.



NOTE: Provide a timer in the master and make the master retransmit the same query when no response is made within a preset time period after the preceding query was sent.

# **Explanation of function codes**

#### Read Coil Status [01h]:

This function reads the status (ON/OFF) of selected coils. An example follows below.

- Read intelligent input terminals [1] to [5] of an inverter having a slave address "8."
- This example assumes the intelligent input terminals have terminal states listed below.

Item	Data				
Intelligent input terminal	[1]	[2]	[3]	[4]	[5]
Coil number	7	8	9	10	11
Coil Status	ON	OFF	ON	OFF	OFF

Query:

No.	Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	01
3	Coil start address *4 (high order)	00
4	Coil start address *4 (low order)	06
5	Number of coils (high order *2)	00
6	Number of coils (low order *2)	05
7	CRC-16 (high order)	1C
8	CRC-16 (low order)	91

Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	01
3	Data size (in bytes)	01
4	Coil data *3	05
5	CRC-16 (high order)	92
6	CRC-16 (low order)	17

- **Note 1:** Broadcasting is disabled.
- **Note 2:** When 0 or more than 31 is specified as a number of coils, error code "03h" is returned.
- **Note 3:** Data is transferred by the specified number of data bytes (data size).
- Note 4: The PDU Coils are addressed starting at zero. Therefore coils numbered 1-31 are addressed as 0-30. Coil address value (transmitted on Modbus line) is 1 less than the Coil Number.
- The data set in the response shows terminal state of coils 0007h~000Dh.
- Data "05h = 00000101b" indicates the following assuming coil 7 is the LSB.

Item	Data							
Coil Number	14	13	12	11	10	9	8	7
Coil Status	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON

- When a read coil is outside the defined coils, the final coil data to be transmitted contains "0" as the status of the coil outside the range.
- When the Read Coil Status command cannot be executed normally, see the exception response.

# Read Holding Register [03h]:

This function reads the contents of the specified number of consecutive holding registers (of specified register addresses). An example follows below.

- Reading Trip monitor 1 factor and trip frequency, current, and voltage from an inverter having a slave address "1"
- This example assumes the previous three trip factors are as follows:

X2002 Command	D081 (factor)	D081 (frequency)	D081 (output current)	D081 (DC-bus Voltage)
Register Number	0012h	0014h	0016h	0017h
Trip factor	Over-Current (E03)	9.9Hz	3.0A	284V

Query:

No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	03
3	Register start address *3 (high order)	00
4	Register start address *3 (low order)	11
5	Number of holding registers (high order)	00
6	Number of holding registers(low order)	06
7	CRC-16 (high order)	95
8	CRC-16 (low order)	CD

Response:

No.	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes) *2	0C
4	Register data 1 (high order)	00
5	Register data 1 (high order)	03
6	Register data 2 (high order)	00
7	Register data 2 (low order)	00
8	Register data 3 (high order)	00
9	Register data 3 (low order)	63
10	Register data 4 (high order)	00
11	Register data 4 (low order)	00
12	Register data 5 (high order)	00
13	Register data 5 (low order)	1E
14	Register data 6 (high order)	01
15	Register data 6 (low order)	1C
16	CRC-16 (high order)	AF
17	CRC-16 (low order)	6D

- **Note 1:** Broadcasting is disabled.
- **Note 2:** Data is transferred by the specified number of data bytes (data size). In this case, 6 bytes are used to return the content of three holding registers.
- Note 3: The PDU Register Number are addressed starting at zero. Therefore register numbered "0012h" are addressed as "0011h". Register address value (transmitted on Modbus line) is 1 less than the Register Number.

The data set in the response is as follows:

Response Buffer	4-8	5	6	-7	8	-9
Register Number	12+0 (high	12+0	12+1	12+1 (low	12+2	12+2 (low
	order)	(low	(high	order)	(high	order)
		order)	order)		order)	
Register Data	0003	3h	00h	00h	00	63h
Trip data	Trip facto	or (E03)	Not	used	Frequenc	ey (9.9Hz)
Response Buffer	10-1	l <b>1</b>	12	-13	14	-15
Register Number	12+3 (high	12+3	12+4	12+4 (low	12+5	12+5 (low
	order)	(low	(high	order)	(high	order)
		order)	order)		order)	
Register Data	00h	00h	001	lEh	013	1Ch
Trip data	Not u	sed	Output cur	rrent (3.0A)	DC-bus vol	tage (284V)

When the Read Holding Register command cannot be executed normally, refer to the exception response.

#### Write in Coil [05h]:

This function writes data in a single coil. Coil status changes are as follows:

Data	Coil Status			
Data	OFF to ON	ON to OFF		
Change data (high order)	FFh	00h		
Change data (low order)	00h	00h		

An example follows (note that to command the inverter, set A002=03):

• Sending a RUN command to an inverter having slave address "8"

Example

(Hex)

00

8C

A3

• This example writes in coil number "1."

Field Name

Change data (low order)

CRC-16 (high order)

CRC-16 (low order)

Query:

1	Slave address *1	08
2	Function code	05
3	Coil start address *2 (high order)	00
4	Coil start address *2 (low order)	00
5	Change data (high order)	FF

Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	05
3	Coil start address *2 (high order)	00
4	Coil start address *2 (low order)	00
5	Change data (high order)	FF
6	Change data (low order)	00
7	CRC-16 (high order)	8C
8	CRC-16 (low order)	A3

**Note 1:** No response is made for a broadcasting query.

Note 2: The PDU Coils are addressed starting at zero. Therefore coils numbered 1-31 are addressed as 0-30. Coil address value (transmitted on Modbus line) is 1 less than the Coil Number.

When writing in a selected coil fails, see the exception response.

### Write in Holding Register [06h]:

This function writes data in a specified holding register. An example follows:

- Write "50Hz" as the first Multi-speed 0 (A020) in an inverter having slave address "5."
- This example uses change data "500(1F4h)" to set "50Hz" as the data resolution of the register "1029h" holding the first Multi-speed 0 (A020) is 0.1Hz

Query:

Example No. Field Name (Hex) Slave address \*1 08 Function code 06 Register start address 10 (high order) Register start address 4 28 (low order) Change data 01 (high order) Change data F4 (low order) CRC-16 (high order) 0DCRC-16 (low order) 8 8C

Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	06
3	Register start address *2 (high order)	10
4	Register start address *2 (low order)	28
5	Change data (high order)	01
6	Change data (low order)	F4
7	CRC-16 (high order)	0D
8	CRC-16 (low order)	8C

**Note 1:** No response is made for a broadcasting query.

Note 2: The PDU Register Number are addressed starting at zero. Therefore register numbered "1029h" are addressed as "1028h". Register address value (transmitted on Modbus line) is 1 less than the Register Number.

When writing in a selected holding register fails, see the exception response.

# Loopback Test [08h]:

This function checks a master-slave transmission using any test data. An example follows:

• Send test data to an inverter having slave address "1" and receiving the test data from the inverter (as a loopback test).

Query:

Quei	y ·	
No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	08
3	Test subcode	00
	(high order)	
4	Test subcode	00
	(low order)	
5	Data (high order)	Any
6	Data (low order)	Any
7	CRC-16 (high order)	CRC
8	CRC-16 (low order)	CRC

Response:

No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	08
3	Test subcode	00
	(high order)	
4	Test subcode	00
	(low order)	
5	Data (high order)	Any
6	Data (low order)	Any
7	CRC-16 (high order)	CRC
8	CRC-16 (low order)	CRC

Note 1: Broadcasting is disabled.

When test sub code is for echo (00h, 00h) only and not available to the other commands.

# Write in Coils [0Fh]:

This function writes data in consecutive coils. An example follows:

- Change the state of intelligent input terminal [1] to [5] of an inverter having a slave address "8."
- This example assumes the intelligent input terminals have terminal states listed below.

Item	Data				
Intelligent input terminal	[1]	[2]	[3]	[4]	[5]
Coil Number	7	8	9	10	11
Terminal status	ON	ON	ON	OFF	ON

No.	Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	0F
3	Coil start address *3 (high order)	00
4	Coil start address *3 (low order)	06
5	Number of coils (high order)	00
6	Number of coils (low order)	05
7	Byte number *2	02
8	Change data (high order)	17
9	Change data (low order)	00
10	CRC-16 (high order)	83
11	CRC-16 (low order)	EA

Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	0F
3	Coil start address *3	00
	(high order)	
4	Coil start address *3	06
	(low order)	
5	Number of coils	00
	(high order)	
6	Number of coils	05
	(low order)	
7	CRC-16 (high order)	75
8	CRC-16 (low order)	50

- Note 1: Broadcasting is disabled.
- Note 2: The change data is a set of high-order data and low-order data. So when the size (in bytes) of data to be changed is an odd start coil number ("7"), add "1" to the data size (in bytes) to make it an even number.
- Note 3: The PDU Coils are addressed starting at zero. Therefore coils numbered 1-31 are addressed as 0-30. Coil address value (transmitted on Modbus line) is 1 less than the Coil Number.

#### Write in Holding Registers [10h]:

This function writes data in consecutive holding registers. An example follows:

- Write "3000 seconds" as the first acceleration time 1 (F002) in an inverter having a slave address "8."
- This example uses change data "300000(493E0h)" to set "3000 seconds" as the data resolution of the registers "1014h" and "1015h" holding the first acceleration time 1 (F002) is 0.01 second.

Query:

No.	y: Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	10
3	Start address *3 (high order)	10
4	Start address *3 (low order)	13
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	02
7	Byte number *2	04
8	Change data 1 (high order)	00
9	Change data 1 (low order)	04
10	Change data 2 (high order)	93
11	Change data 2 (low order)	E0
12	CRC-16 (high order)	7D
13	CRC-16 (low order)	53

Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	10
3	Start address *3 (high order)	10
4	Start address *3 (low order)	13
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	02
7	CRC-16 (high order)	B4
8	CRC-16 (low order)	54

- **Note 1:** Broadcasting is disabled.
- **Note 2:** This is not the number of holding registers. Specify the number of bytes of data to be changed.
- Note 3: The PDU Register Number are addressed starting at zero. Therefore register numbered "1014h" are addressed as "1013h". Register address value (transmitted on Modbus line) is 1 less than the Register Number.

When writing in selected holding registers fails, see the exception response.

# Write in Holding Registers [17h]:

This function is to read and write data in consecutive holding registers. An example follows:

• Write "50.0Hz" as the set frequency (F001) in an inverter having a slave address "1" and then to read out the output frequency (d001).

Query:

Quer	y:	_
No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	17
3	Start address to read *3 (high order)	10
4	Start address to read *3 (low order)	00
5	Number of holding registers to read (high order)	00
6	Number of holding registers to read (low order)	02
7	Start address to write *3 (high order)	00
8	Start address to write *3 (low order)	00
9	Number of holding registers to write (high order)	00
10	Number of holding registers to write (low order)	02
11	Byte number to write*2	04
12	Change data 1 (high order)	00
13	Change data 1 (low order)	00
14	Change data 2 (high order)	13
15	Change data 2 (low order)	88
16	CRC-16 (high order)	F4
17	CRC-16 (low order)	86

Response:

No.	Field Name	Example (Hex)
1	Slave address	01
2	Function code	17
3	Byte number n	04
4	Register Data 1 (high order)	00
5	Register Data 1 (low order)	00
6	Register Data 2 (high order)	13
7	Register Data 2 (low order)	88
8	CRC-16 (high order)	F4
9	CRC-16 (low order)	71

**Note 1:** Register address value (transmitted on Modbus line) is 1 less than the Register Number.

When writing in selected holding registers fails, see the exception response.

### **Exception Response:**

When sending a query (excluding a broadcasting query) to an inverter, the master always requests a response from the inverter. Usually, the inverter returns a response according to the query. However, when finding an error in the query, the inverter returns an exception response. The exception response consists of the fields shown below.

Field Configuration
Slave address
Function code
Exception code
CRC-16

The content of each field is explained below. The function code of the exception response is the sum of the function code of the query and 80h. The exception code indicates the factor of the exception response.

Function Code		
Query	Exception Response	
0 1 h	8 1 h	
0 3 h	8 3 h	
0 5 h	8 5 h	
0 6 h	8 6 h	
0 F h	8 F h	
1 0 h	9 0 h	

Exception Code		
Code	Description	
0 1 h	The specified function is not supported.	
0 2 h	The specified function is not found.	
0 3 h	The format of the specified data is not acceptable.	
2 1 h	The data to be written in a holding register is outside the inverter.	
	The specified functions are not available to the inverter.	
	Function to change the content of a register that cannot be changed while	
2 2 h	the inverter is in service	
2 2 11	Function to submit an ENTER command during running (UV)	
	Function to write in a register during tripping (UV)	
	Function to write in a read-only register (or coil)	

# Store New Register Data (ENTER command)

After being written in a selected holding register by the Write in Holding Register command (06h) or in selected holding registers by the Write in Holding Registers command (10h), new data is temporary and still outside the storage element of the inverter. If power to the inverter is shut off, this new data is lost and the previous data returns. The ENTER command is used to store this new data in the storage element of the inverter. Follow the instructions below to submit the ENTER command.

#### Submitting an ENTER Command:

• Write any data in all memory (of a holding register at 0900h) by the Write in Holding Register command [06h].




**NOTE**: The ENTER command takes much time to run. You can check its progress by monitoring the Data Writing signal (of a coil at 001Ah).



**NOTE**: The service life of the storage element of the inverter is limited (to about 100,000 write operations). Frequent use of the ENTER command may shorten its service life.

# **EzCOM (Peer-to-Peer communication)**

- Besides standard Modbus-RTU communication (slave), WJ200 supports Peer-to-Peer communication between multiple inverters.
- The max. number of inverter in the network is up to 247 (32 without repeater).
- One administrator inverter is necessary in the network, and the other inverters behave as master or slave.
- Be sure to set station No.1 as an administrator inverter, which controls master inverter according to user setting. The others will be slave inverters. An admin. inverter is fixed, but a master inverter always turns by rotation. For this reason, an admin. inverter can be a master or a slave.
- A master inverter is able to write data to any holding register of designated slave inverter. The max. number of holding register is up to 5. After writing data completed, a master inverter will be shift to the next inverter.
- The max. number of master inverter is 8.

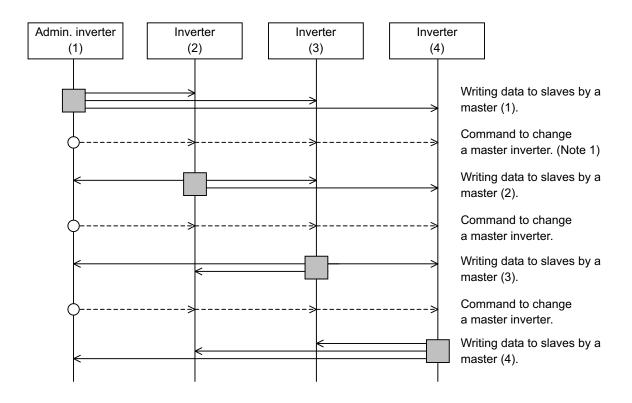

: Master inverter

Note 1: The command to change a master is issued by an admin. inverter automatically, which users do not have to take care.

Note2: The command to change a master from 01 to 02 is issued after the data is sent from master inverter 01 to slave and silent interval plus communication wait time (C078) passed.

Note 3: Administrative inverter issues the next command to change a master after the data from master inverters is sent and silent interval plus communication wait time (C078) passed. In case the data from master inverter cannot be received within the communication timeout (C077), then the inverter timeouts and the behaves according to the communication error selection.

Note 4: Please set the communication timeout as it is valid (C077=0.01~99.99). If it is disabled (C077=0.0), EzCOM function is interrupted in case the data from master inverter was not received. In case it is interrupted, please turn on/off the power or reset (reset terminal on/off).

Func. code	Name	Data/Range	For	Description
C072	Modbus address	1 to 247	ALL	Network address
00.2	1120 do do dada obo	00	ALL	tripping
			ALL	tripping after decelerating
		01		and stopping the motor
COTA	Selection of the operation after	02	ALL	ignoring errors
C076	communication error	0.0	ALL	stopping the motor after
		03		free-running
		0.4	ALL	decelerating and stopping
		04		the motor
C077	Communication times and limit	0.00	ALL	Disabled
C077	Communication timeout limit	0.01~99.99	ALL	[sec.]
C078	Communication wait time	0.~1000.	ALL	[ms]
		00	-	Modbus-RTU
Cood		01	В	EzCOM
C096	Communication selection	22		EzCOM
		02	A	< Admin. inverter >
C098	EzCOM start adr. of master	01 to 08	A	
C099	EzCOM end adr. of master	01 to 08	A	
C100	E-COM starting trianger	00	A	Input terminal (Note 2)
C100	EzCOM starting trigger	01	A	Always
P140	EzCOM the number of data	1 to 5	M	
P141	EzCOM destination 1 adderss	1 to 247	M	(Note 3)
P142	EzCOM destination 1 register	0000 to FFFF	M	
P143	EzCOM source 1 register	0000 to FFFF	M	
P144	EzCOM destination 2 adderss	1 to 247	M	
P145	EzCOM destination 2 register	0000 to FFFF	M	
P146	EzCOM source 2 register	0000 to FFFF	M	
P147	EzCOM destination 3 adderss	1 to 247	M	
P148	EzCOM destination 3 register	0000 to FFFF	M	
P149	EzCOM source 3 register	0000 to FFFF	M	
P150	EzCOM destination 4 adderss	1 to 247	M	
P151	EzCOM destination 4 register	0000 to FFFF	M	
P152	EzCOM source 4 register	0000 to FFFF	M	
P153	EzCOM destination 5 adderss	1 to 247	M	
P154	EzCOM destination 5 register	0000 to FFFF	M	
P155	EzCOM source 5 register	0000 to FFFF	M	
C001~	Input terminal function	81	Α	485: start EzCOM
C007	input terminar function	01	Л	400. Start EZCOW

#### Which parameters to be set?

ALL: Set all inverters in the network.

A : Set admin. inverter (address=1) only.B : Set all inverters except admin. inverter.

M : Set master inverters configured in C098 to C099 of admin. inverter.

Note 5: Address of Administrative inverter is to be set 01 (C072=01).

Note 6: When selection of operation after communication error is set other than "ignoring errors (C076=02)", EzCOM function is interrupted in case of communication timeout on administrative inverter. In this case, please power off/on or reset (on/off RES terminal) to recover.

Note 7:.If EzCOM starting trigger is set as input terminal (C100=00), be sure to configure 81 in one of input terminals.

Note 8: If EzCOM starting trigger is set as always (C100=01), administrative inverter starts to send the

data immediately after power on. In case the establishment of the inverter to be assigned as master of delays and fail to receive the command to change the master, the data cannot be sent from master and administrative inverter time-outs. When C100=01 selected, please be sure to power up the administrative inverter at last after reconfirming the establishment of inverters other than administrative inverters.

Note 9: Although slave addresses are set in a master inverter, data is sent as broadcast address (00). If a slave inverter receives data to another slave, it will be ignored.

Note 10:As EzCOM source and destination register, please set the number minus one from the value listed in the table in "modbus data listing".

Note 11: Be sure to avoid to set "08FFh(EEPROM writing)" and "0901h(EEPROM

Note 12: If above parameter is changed, the inverter power must be rebooted in order to activate new parameters. Instead of rebooting, turning ON/OFF of reset terminal works as same.

#### Basic function (in case the number of data is 1 (P140=1))

- A master inverter sends data in holding register P143 of the master to a slave inverter of address P141 and overwrites on holding register P142.
- A master inverter is changed to the next inverter, and repeats same procedure according to setting of new master inverter.

# **ModBus Data Listing**

#### **ModBus Coil List**

The following tables list the primary coils for the inverter interface to the network. The table legend is given below.

- **Coil Number** The network *register address offset* for the coil. The coil data is a single bit (binary) value.
- Name The functional name of the coil
- R/W The read-only (R) or read-write (R/W) access permitted to the inverter data
- **Description** The meaning of each of the states of the coils

Coil No.	Item	R/W	Setting
0000h	unused	-	(Inaccessible)
0001h	Operation command	R/W	1: Run, 0: Stop (valid when A002 = 03)
0002h	Rotation direction command	R/W	1: Reverse rotation, 0: Forward rotation (valid when A002 = 03)
0003h	External trip (EXT)	R/W	1: Trip
0004h	Trip reset (RS)	R/W	1: Reset
0005h	(Reserved)	-	-
0006h	(Reserved)	-	-
0007h	Intelligent input terminal [1]	R/W	1: ON, 0: OFF (*1)
0008h	Intelligent input terminal [2]	R/W	1: ON, 0: OFF (*1)
0009h	Intelligent input terminal [3]	R/W	1: ON, 0: OFF (*1)
000Ah	Intelligent input terminal [4]	R/W	1: ON, 0: OFF (*1)
000Bh	Intelligent input terminal [5]	R/W	1: ON, 0: OFF (*1)
000Ch	Intelligent input terminal [6]	R/W	1: ON, 0: OFF (*1)
000Dh	Intelligent input terminal [7]	R/W	1: ON, 0: OFF (*1)
000Eh	(Reserved)	-	-
000Fh	Operation status	R	1: Run, 0: Stop (interlocked to "d003")
0010h	Rotation direction	R	1: Reverse rotation, 0: Forward rotation (interlocked to "d003")
0011h	Inverter ready	R	1: Ready, 0: Not ready
0012h	(Reserved)	-	-
0013h	RUN (running)	R	1: Tripping, 0: Normal
0014h	FA1 (constant-speed reached)	R	1: ON, 0: OFF
0015h	FA2 (set frequency overreached)	R	1: ON, 0: OFF
0016h	OL (overload advance notice (1))	R	1: ON, 0: OFF
0017h	OD (output deviation for PID control)	R	1: ON, 0: OFF
0018h	AL (alarm signal)	R	1: ON, 0: OFF
0019h	FA3 (set frequency reached)	R	1: ON, 0: OFF
001Ah	OTQ (over-torque)	R	1: ON, 0: OFF
001Bh	(Reserved)	-	-
001Ch	UV (undervoltage)	R	1: ON, 0: OFF
001Dh	TRQ (torque limited)	R	1: ON, 0: OFF
001Eh	RNT (operation time over)	R	1: ON, 0: OFF
001Fh	ONT (plug-in time over)	R	1: ON, 0: OFF
0020h	THM (thermal alarm signal)	R	1: ON, 0: OFF
0021h	(Reserved)	-	-
0022h	(Reserved)	-	-
0023h	(Reserved)	-	-
0024h	(Reserved)	-	-
0025h	(Reserved)	-	-
0026h	BRK (brake release)	R	1: ON, 0: OFF
0027h	BER (brake error)	R	1: ON, 0: OFF
0028h	ZS (0 Hz detection signal)	R	1: ON, 0: OFF
0029h	DSE (speed deviation maximum)	R	1: ON, 0: OFF
002Ah	POK (positioning completed)	R	1: ON, 0: OFF
002Bh	FA4 (set frequency overreached 2)	R	1: ON, 0: OFF
002Ch	FA5 (set frequency reached 2)	R	1: ON, 0: OFF

Coil No.	Item	R/W	Setting
002Dh	OL2 (overload notice advance (2))	R	1: ON, 0: OFF
002Eh	Odc: Analog O disconnection	_	1: ON, 0: OFF
UUZLII	detection	_	1. ON, 0. OFF
002Fh	OIDc: Analog OI disconnection	_	1: ON, 0: OFF
	detection		1. 011, 0. 011
0030h	(Reserved)	-	-
0031h	(Reserved)	-	-
0032h	FBV (PID feedback comparison)	R	1: ON, 0: OFF
0033h	NDc (communication train disconnection)	R	1: ON, 0: OFF
0034h	LOG1 (logical operation result 1)	R	1: ON, 0: OFF
0035h	LOG2 (logical operation result 2)	R	1: ON, 0: OFF
0036h	LOG3 (logical operation result 3)	R	1: ON, 0: OFF
0037h	(Reserved)	-	-
0038h	(Reserved)	-	-
0039h	(Reserved)	-	-
003Ah	WAC (capacitor life warning)	R	1: ON, 0: OFF
003Bh	WAF (cooling-fan speed drop)	R	1: ON, 0: OFF
003Ch	FR (starting contact signal)	R	1: ON, 0: OFF
003Dh	OHF (heat sink overheat warning)	R	1: ON, 0: OFF
003Eh	LOC (low-current indication signal)	R	1: ON, 0: OFF
003Fh	M01 (general output 1)	R	1: ON, 0: OFF
0040h	M02 (general output 2)	R	1: ON, 0: OFF
0041h	M03 (general output 3)	R	1: ON, 0: OFF
0042h	(Reserved)	-	-
0043h	(Reserved)	-	-
0044h	(Reserved)	-	-
0045h	IRDY (inverter ready)	R	1: ON, 0: OFF
0046h	FWR (forward rotation)	R	1: ON, 0: OFF
0047h	RVR (reverse rotation)	R	1: ON, 0: OFF
0048h	MJA (major failure)	R	1: ON, 0: OFF
0049h	Data writing in progress	R	1: Writing in progress, 0: Normal status
004Ah	CRC error	R	1: Error detected, 0: No error (*2)
004Bh	Overrun	R	1: Error detected, 0: No error (*2)
004Ch	Framing error	R	1: Error detected, 0: No error (*2)
004Dh	Parity error	R	1: Error detected, 0: No error (*2)
004Eh	Sum check error	R	1: Error detected, 0: No error (*2)
004Fh	(Reserved)	-	-
0050h	WCO (window comparator O)	R	1: ON, 0: OFF
0051h	WCOI (window comparator OI)	R	1: ON, 0: OFF
0052h	(Reserved)	-	-
0053h	OPDc (option disconnection)	R	1: ON, 0: OFF
0054h	FREF (FQ command source)	R	1: Operator, 0: Others
0055h	REF (RUN command source)	R	1: Operator, 0: Others
0056h	SETM (2nd motor selected)	R	1: 2nd motor selected, 0: 1st motor selected
0057h	(Reserved)	-	- 4. ON 0. OFF
0058h	EDM (Gate suppress monitor)	R	1: ON, 0: OFF
0059h-	unused	R	inaccessible

- \*1 Normally, this coil is turned on when the corresponding intelligent input terminal on the control circuit terminal block is turned on or the coil itself is set to on. In this regard, the operation of the intelligent input terminal has priority over the operation of the coil. If disconnection of the communication train has disabled the master system from turning off the coil, turn the corresponding intelligent input terminal on the control circuit block on and off. This operation turns off the coil.
- \*2 Communication error data is retained until an error reset command is input. (The data can be reset during the inverter operation.)

### **ModBus Holding Registers**

The following tables list the holding registers for the inverter interface to the network. The table legend is given below.

- **Function Code** The inverter's reference code for the parameter or function (same as inverter keypad display)
- Name The standard functional name of the parameter or function for the inverter
- **R/W** The read-only(R) or read-write access(R/W) permitted to the data in the inverter
- **Description** How the parameter or setting works (same as Chapter 3 description).
- **Reg.** The network *register address offset* for the value. Some values have a high-byte and low-byte address.
- Range The numerical range for the network value that is sent and/or received



TIP: The network values are binary integers. Since these values cannot have an embedded decimal point, for many parameters it represents the actual value (in engineering units) multiplied by a factor of 10 or 100. Network communications must use the listed range for network data. The inverter automatically divides received values by the appropriate factor in order to establish the decimal point for internal use. Likewise, the network host computer must apply the same factor when it needs to work in engineering units. However, when sending data to the inverter, the network host computer must scale values to the integer range listed for network communications.

• **Resolution** - This is the quantity represented by the LSB of the network value, in engineering units. When the network data range is greater than the inverter's internal data range, this 1-bit resolution will be fractional.

Register No.	Function name	Function code	R/W	Monitoring ar	nd setting items	Data resolution
0000h	unused	-	-	Inaccessible		
0001h	Frequency source	F001 (high)	R/W	0 to 40000 (valid when	A001 = 03)	0.01 [Hz]
0002h	riequency source	F001 (low)	R/W			0.01 [112]
0003h	Inverter status A	-	R	0: Initial status 2: Stopping 3: Running 4: Free-run stop 5: Jogging	6: DC braking 7: Retrying 8: Tripping 9: Undervoltage (UV),	-
0004h	Inverter status B	-	R	0: Stopping, 1: Running	g, 2: Tripping	-
0005h	Inverter status C	-	R	0: 1: Stopping 2: Decelerating 3: Constant-speed operation 4: Accelerating 5: Forward rotation	6: Reverse rotation 7: Switching from fwd. to rev. rotation, 8: Switching from rev. to fwd. rotation, 9: Starting fwd. 10: Starting rev.	-
0006h	PID feedback	-	R/W	0 to 10000		0.01 [%]
0007h to 0010h	(Reserved)	-	R	-		-

Mode	Register	Function name	Function	R/W	Monitoring and setting items	Data
10012h   Trip info. 1 (inverter status)   10013h   Trip info. 1 (inverter status)   10014h   Trip info. 1 (inverter status)   10016h   Trip info. 1 (frequency) (high)   10017h   Trip info. 1 (current)   10018h   Trip info. 2 (current)   10028h   Trip info. 2 (current)   10028h   Trip info. 2 (current)   10028h   Trip info. 2 (current)   10008h   10028h   Trip info. 2 (current)   10008h   10028h   Trip info. 3 (current)   10008h	No.	Trip Counter	code	P		resolution
10013h   Trip info. 1 (inverter status)			4000	IX.		1 1
0.011						<del>-</del>
0.016   Trip info. 1 (current)   0.01[A]   0					•	
Application					0 to 100000	0.01[Hz]
DC input voltage at tripping   1[V]			1004	_	Output current at tripping	0.01[A]
Dot 18   Trip info. 1 (running time) (high)			d081	R		
Controllative furning time (tow)						
Cumulative power-on time at tripping   1[h]					Cumulative running time at tripping	1[h]
Controllative power-on time at tripping   1[h]	001Ah				Cumulativa naviar antima at trianing	1[h]
See the list of inverter trip factors below   -001	001Bh				Cumulative power-on time at tripping	ilui
Octobe   Trip info. 2 (trequency) (high)	001Ch	Trip info. 2 (factor)			See the list of inverter trip factors below	-
O020h   Trip info. 2 (urning time) (high)	001Dh				See the list of inverter trip factors below	-
Output current at tripping   Output current					0 to 100000	0.01[Hz]
O021h   Trip info. 2 (vottage)   O022h   Trip info. 2 (running time) (low)   O025h   Trip info. 2 (running time) (low)   O026h   Trip info. 2 (running time) (low)   O026h   Trip info. 2 (power-on time) (low)   O026h   Trip info. 3 (factor)   O027h   Trip info. 3 (frequency) (high)   O027h   Trip info. 3 (frequency) (high)   O028h   Trip info. 3 (frequency) (low)   O028h   Trip info. 3 (frequency) (low)   O028h   Trip info. 3 (vottage)   O026h   Trip info. 3 (running time) (low)   O026h   Trip info. 3 (running time) (low)   O027h   Trip info. 3 (running time) (low)   O027h   Trip info. 3 (running time) (low)   O028h   Trip info. 3 (running time) (low)   O028h   Trip info. 4 (frequency) (high)   O028h   Trip info. 4 (frequency) (high)   O038h   Trip info. 4 (running time) (low)   O038h   Trip info. 5 (running time) (low)   O038h   Trip info. 6 (r						
DC input voltage at tripping   1 V			4082	R		
Cumulative power-on time at tripping   1[h]			4002	- 1	DC input voltage at tripping	1[V]
10024h   Trip info. 2 (power-on time) (low)					Cumulative running time at tripping	1[h]
Dozsh   Trip info. 2 (power-on time) (low)					- amanana amang ama an anppang	.[]
Output current at tripping   1[h]					Cumulative power-on time at tripping	1[h]
DO27h   Trip info. 3 (inverter status)   DO28h   Trip info. 3 (frequency (lngh)					•	
Oct					<u>'</u>	-
0029h         Trip info. 3 (trequency (low)           002Ah         Trip info. 3 (current)           002Bh         Trip info. 3 (current)           002Ch         Trip info. 3 (running time) (high)           002Eh         Trip info. 3 (running time) (low)           002Eh         Trip info. 3 (running time) (low)           002Eh         Trip info. 3 (power-on time) (low)           003Eh         Trip info. 3 (power-on time) (low)           003Dh         Trip info. 4 (factor)           003Dh         Trip info. 4 (frequency) (high)           0032h         Trip info. 4 (frequency) (low)           0033h         Trip info. 4 (frequency) (low)           0033h         Trip info. 4 (frequency) (low)           0034h         Trip info. 4 (running time) (low)           0037h         Trip info. 4 (running time) (low)           0038h         Trip info. 4 (power-on time) (low)           0038h         Trip info. 4 (power-on time) (low)           0038h         Trip info. 5 (inverter status)           003Ch         Trip info. 5 (inverter status)           003Ch         Trip info. 5 (warent)           003Bh         Trip info. 5 (warent)           003Ch         Trip info. 5 (valtage)           004Dh         Trip info. 5 (valtage)					See the list of inverter trip factors below	-
Output current at tripping   Output current					0 to 100000	0.01[Hz]
DC input voltage at tripping   1[V]					Output augrent at trianing	
Output current at tripping   1[h]			d083	R		
Output current at tripping   1[h]					DC Input voltage at inppling	۱[۷]
O02Eh   Trip info. 3 (power-on time) (high)   O02Fh   Trip info. 3 (power-on time) (low)   O030h   Trip info. 4 (frequency) (high)   O032h   Trip info. 4 (frequency) (high)   O033h   Trip info. 4 (frequency) (high)   O035h   Trip info. 4 (current)   O035h   Trip info. 4 (current)   O036h   Trip info. 4 (current)   O037h   Trip info. 4 (current)   O037h   Trip info. 4 (current)   O037h   Trip info. 4 (curning time) (high)   O038h   Trip info. 4 (power-on time) (low)   O038h   Trip info. 4 (power-on time) (low)   O038h   Trip info. 5 (frequency) (high)   O039h   Trip info. 5 (frequency) (high)   O039h   Trip info. 5 (inverter status)   O030h   Trip info. 5 (inverter status)   O030h   Trip info. 5 (current)   O037h   Trip info. 5 (current)   O037h   Trip info. 5 (current)   O038h   Trip info. 5 (current)   O038h   Trip info. 5 (current)   O038h   Trip info. 5 (current)   O048h   Trip info. 6 (frequency) (high)   O049h   Trip info. 6 (current)   O049h   Trip info. 6 (curr					Cumulative running time at tripping	1[h]
O02Fh Trip info. 3 (power-on time) (low) O030h Trip info. 4 (factor) O031h Trip info. 4 (factor) O032h Trip info. 4 (frequency (high) O033h Trip info. 4 (frequency (low) O034h Trip info. 4 (requency (low) O034h Trip info. 4 (current) O036h Trip info. 4 (current) O037h Trip info. 4 (running time) (high) O037h Trip info. 4 (running time) (high) O038h Trip info. 4 (running time) (low) O039h Trip info. 4 (power-on time) (low) O039h Trip info. 5 (factor) O030h Trip info. 5 (frequency (low) O030h Trip info. 5 (frequency (low) O031h Trip info. 5 (frequency (low) O032h Trip info. 6 (frequency (low) O032h Trip info. 6 (frequency (low) O034h Trip info. 6 (frequency (low) O042h Trip info. 5 (frequency (low) O042h Trip info. 6 (factor) O045h Trip info. 6 (factor) O046h Trip info. 6 (frequency (low) O047h Trip info. 6 (frequency (low) O048h Trip info. 6 (frequency (low) O049h Trip info. 6 (frequency (low) O049h Trip info. 6 (current) O049h Trip info. 6 (curnoning time) (low)						
O030h   Trip info. 4 (factor)   See the list of inverter trip factors below   - O031h   Trip info. 4 (inverter status)   O032h   Trip info. 4 (frequency) (high)   O033h   Trip info. 4 (frequency) (low)   O034h   Trip info. 4 (current)   O035h   Trip info. 4 (current)   O035h   Trip info. 4 (running time) (high)   O037h   Trip info. 4 (running time) (low)   O038h   Trip info. 4 (running time) (low)   O039h   Trip info. 4 (running time) (low)   O039h   Trip info. 5 (factor)   O0308h   Trip info. 5 (factor)   O0308h   Trip info. 5 (frequency) (high)   O0308h   Trip info. 5 (frequency) (high)   O0309h   Trip info. 5 (running time) (low)   O040h   Trip info. 5 (running time) (low)   O042h   Trip info. 5 (running time) (low)   O042h   Trip info. 5 (running time) (low)   O044h   Trip info. 6 (current)   O044h   Trip info. 6 (frequency) (high)   O044h   Trip info. 6 (current)   O048h   Trip info. 6 (current)   O048h   Trip info. 6 (current)   O049h   Trip in					Cumulative power-on time at tripping	1[h]
O031h   Trip info. 4 (inverter status)					See the list of inverter trip factors below	_
Oto 100000   Oto						-
0034h Trip info. 4 (frequency (low) 0034h Trip info. 4 (current) 0035h Trip info. 4 (current) 0036h Trip info. 4 (running time) (high) 0037h Trip info. 4 (running time) (low) 0038h Trip info. 4 (running time) (low) 0039h Trip info. 4 (power-on time) (high) 0039h Trip info. 5 (factor) 0030h Trip info. 5 (factor) 0030h Trip info. 5 (frequency (low) 0030h Trip info. 5 (frequency (low) 0031h Trip info. 5 (frequency (low) 0032h Trip info. 5 (frequency (low) 0032h Trip info. 5 (frequency (low) 0035h Trip info. 5 (current) 0036h Trip info. 5 (current) 0037h Trip info. 5 (current) 0038h Trip info. 5 (current) 0039h Trip info. 5 (current) 0040h Trip info. 5 (current) 0041h Trip info. 5 (current) 0042h Trip info. 5 (power-on time) (low) 0042h Trip info. 6 (factor) 0043h Trip info. 6 (frequency (low) 0044h Trip info. 6 (frequency (low) 0047h Trip info. 6 (frequency (low) 0048h Trip info. 6 (frequency (low) 0049h Trip info. 6 (frequency (low) 0049h Trip info. 6 (current)					·	0.04511-1
0034h Trip info. 4 (current) 0035h Trip info. 4 (voltage) 0036h Trip info. 4 (running time) (high) 0037h Trip info. 4 (running time) (low) 0038h Trip info. 4 (power-on time) (low) 0038h Trip info. 4 (power-on time) (low) 0039h Trip info. 4 (power-on time) (low) 0039h Trip info. 5 (factor) 0039h Trip info. 5 (factor) 0039h Trip info. 5 (frequency) (high) 0030h Trip info. 5 (frequency) (high) 0030h Trip info. 5 (frequency) (low) 0032h Trip info. 5 (running time) (low) 0034h Trip info. 5 (running time) (high) 0040h Trip info. 5 (running time) (low) 0041h Trip info. 5 (running time) (low) 0042h Trip info. 5 (power-on time) (low) 0043h Trip info. 6 (factor) 0045h Trip info. 6 (frequency) (high) 0047h Trip info. 6 (frequency) (high) 0048h Trip info. 6 (frequency) (high) 0049h Trip info. 6 (frequency) (high) 0049h Trip info. 6 (running time) (high) 0040h Trip info. 6 (running time) (high)					0 to 100000	0.01[HZ]
DC input voltage at tripping   1[V]	0034h		4004	В	Output current at tripping	0.01[A]
O037h Trip info. 4 (running time) (low) O038h Trip info. 4 (power-on time) (high) O039h Trip info. 4 (power-on time) (low) O030h Trip info. 5 (factor) O030h Trip info. 5 (factor) O030h Trip info. 5 (inverter status) O030h Trip info. 5 (frequency) (high) O030h Trip info. 5 (frequency) (high) O030h Trip info. 5 (trequency) (high) O030h Trip info. 5 (current) O030h Trip info. 5 (current) O030h Trip info. 5 (current) O030h Trip info. 5 (running time) (high) O040h Trip info. 5 (running time) (high) O041h Trip info. 5 (running time) (low) O042h Trip info. 5 (power-on time) (low) O044h Trip info. 6 (factor) O046h Trip info. 6 (frequency) (high) O047h Trip info. 6 (frequency) (high) O049h Trip info. 6 (current)	0035h	Trip info. 4 (voltage)	u004	K	DC input voltage at tripping	1[V]
Output current at tripping   Output current	0036h				Cumulative rupping time at tripping	1[h]
0039h Trip info. 4 (power-on time) (low) 003Ah Trip info. 5 (factor) 003Bh Trip info. 5 (inverter status) 003Ch Trip info. 5 (frequency) (high) 003Bh Trip info. 5 (frequency (low) 003Ch Trip info. 5 (current) 003Ch Trip info. 5 (current) 003Ch Trip info. 5 (current) 003Ch Trip info. 5 (frequency (low) 003Ch Trip info. 5 (current) 004Ch Trip info. 5 (current) 004Ch Trip info. 5 (running time) (high) 004Ch Trip info. 6 (frequency (low) 004Ch Trip info. 6 (frequency (low) 004Ch Trip info. 6 (running time) (high) 004Ch Trip info. 6 (running time) (low) 004Ch Trip info. 6 (running time) (low) 004Ch Trip info. 6 (running time) (low) 004Ch Trip info. 6 (power-on time) (low) 004Ch Trip info. 6 (running time) (low) 004Ch Trip info. 6 (power-on time) (low)					Cumulative running time at tripping	יניין
0039h   Trip info. 4 (power-on time) (low) 003Ah   Trip info. 5 (factor) 003Bh   Trip info. 5 (inverter status) 003Ch   Trip info. 5 (frequency) (high) 003Dh   Trip info. 5 (frequency) (low) 003Eh   Trip info. 5 (running time) (high) 0040h   Trip info. 5 (running time) (low) 0042h   Trip info. 5 (power-on time) (low) 0043h   Trip info. 5 (power-on time) (low) 0044h   Trip info. 6 (factor) 0046h   Trip info. 6 (frequency) (high) 0047h   Trip info. 6 (frequency) (high) 0048h   Trip info. 6 (frequency) (low) 0048h   Trip info. 6 (running time) (high) 0048h   Trip info. 6 (running time) (low) 0048h   Trip info. 6 (running time) (low) 0048h   Trip info. 6 (running time) (high) 0048h   Trip info. 6 (running time) (low) 0048h   Trip info. 6 (running time) (low) 0048h   Trip info. 6 (running time) (high) 0048h   Trip info. 6 (running time) (high) 0048h   Trip info. 6 (running time) (low) 0048h   Trip info. 6 (running time) (low) 0048h   Trip info. 6 (running time) (high) 0048h   Trip info. 6 (running time) (low)					Cumulative power-on time at tripping	1[h]
003Bh Trip info. 5 (inverter status) 003Ch Trip info. 5 (frequency) (high) 003Dh Trip info. 5 (frequency (low) 003Eh Trip info. 5 (current) 003Fh Trip info. 5 (voltage) 0040h Trip info. 5 (running time) (high) 0041h Trip info. 5 (running time) (low) 0042h Trip info. 5 (power-on time) (high) 0043h Trip info. 5 (power-on time) (low) 0044h Trip info. 6 (factor) 0046h Trip info. 6 (frequency) (high) 0047h Trip info. 6 (frequency) (high) 0048h Trip info. 6 (current) 0049h Trip info. 6 (current) 0040h Trip info. 6 (running time) (high) 0040h Trip info. 6 (current)					•	.[]
003Ch Trip info. 5 (frequency) (high) 003Dh Trip info. 5 (frequency (low) 003Eh Trip info. 5 (current) 003Fh Trip info. 5 (voltage) 0040h Trip info. 5 (running time) (high) 0041h Trip info. 5 (running time) (low) 0042h Trip info. 5 (power-on time) (low) 0043h Trip info. 5 (power-on time) (low) 0044h Trip info. 6 (factor) 0045h Trip info. 6 (inverter status) 0046h Trip info. 6 (frequency) (high) 0047h Trip info. 6 (frequency) (high) 0048h Trip info. 6 (current) 0049h Trip info. 6 (voltage) 0040h Trip info. 6 (running time) (high) 0040h Trip info. 6 (power-on time) (high)					<u>'</u>	
003Dh Trip info. 5 (frequency (low) 003Eh Trip info. 5 (current) 003Fh Trip info. 5 (voltage) 0040h Trip info. 5 (running time) (high) 0041h Trip info. 5 (running time) (low) 0042h Trip info. 5 (power-on time) (low) 0043h Trip info. 5 (power-on time) (low) 0044h Trip info. 6 (factor) 0045h Trip info. 6 (inverter status) 0046h Trip info. 6 (inverter status) 0047h Trip info. 6 (frequency) (high) 0048h Trip info. 6 (current) 0049h Trip info. 6 (current) 0049h Trip info. 6 (running time) (high) 0040h Trip info. 6 (power-on time) (high) 0040h Trip info. 6 (power-on time) (high) 0040h Trip info. 6 (power-on time) (high)					See the list of inverter trip factors below	-
003Eh Trip info. 5 (trequency (low) 003Fh Trip info. 5 (current) 0040h Trip info. 5 (running time) (high) 0041h Trip info. 5 (running time) (low) 0042h Trip info. 5 (running time) (low) 0043h Trip info. 5 (power-on time) (low) 0044h Trip info. 6 (factor) 0045h Trip info. 6 (frequency) (high) 0047h Trip info. 6 (frequency) (high) 0048h Trip info. 6 (current) 0049h Trip info. 6 (current) 0049h Trip info. 6 (running time) (high) 004Ah Trip info. 6 (running time) (high) 004Ah Trip info. 6 (running time) (high) 004Ch Trip info. 6 (power-on time) (high) 005Curput current at tripping 005Curput current at tripping 005Curput current at tripping 005Curput voltage at tripping 005Curput current at tripping 005Curput current at tripping 005Curput current at tripping 005Curput current at tripping 005Curput voltage at tripping 005Curput current at tripping 005Curput current at tripping 005Curput current at tripping 005Curput voltage at tripping 005Curput current at tripping 005C					0 to 100000	0.01[Hz]
003Fh Trip info. 5 (voltage) 0040h Trip info. 5 (running time) (high) 0041h Trip info. 5 (running time) (low) 0042h Trip info. 5 (power-on time) (high) 0043h Trip info. 5 (power-on time) (low) 0044h Trip info. 6 (factor) 0045h Trip info. 6 (inverter status) 0046h Trip info. 6 (inverter status) 0047h Trip info. 6 (frequency) (high) 0048h Trip info. 6 (current) 0049h Trip info. 6 (voltage) 004Ah Trip info. 6 (running time) (high) 004Bh Trip info. 6 (running time) (high) 004Ch Trip info. 6 (power-on time) (high)					Output current of trianing	
0040h       Trip info. 5 (running time) (high)         0041h       Trip info. 5 (running time) (low)         0042h       Trip info. 5 (power-on time) (high)         0043h       Trip info. 5 (power-on time) (low)         0044h       Trip info. 6 (factor)         0045h       Trip info. 6 (inverter status)         0046h       Trip info. 6 (frequency) (high)         0047h       Trip info. 6 (frequency (low)         0048h       Trip info. 6 (current)         0049h       Trip info. 6 (voltage)         004Ah       Trip info. 6 (running time) (high)         004Bh       Trip info. 6 (running time) (low)         004Ch       Trip info. 6 (power-on time) (high)     Cumulative running time at tripping  Other trip info. 6 (running time) (low)  Cumulative running time at tripping  1[h]  Cumulative running time at tripping  1[h]  Cumulative running time at tripping  Cumulative running time at tripping  1[h]  Cumulative running time at tripping  1[h]  Cumulative running time at tripping  Cumulative running time at tripping  1[h]  Cumulative running time at tripping  1[h]  Cumulative running time at tripping  C			d085	R		
0041h       Trip info. 5 (running time) (low)         0042h       Trip info. 5 (power-on time) (high)         0043h       Trip info. 5 (power-on time) (low)         0044h       Trip info. 6 (factor)         0045h       Trip info. 6 (inverter status)         0046h       Trip info. 6 (frequency) (high)         0047h       Trip info. 6 (frequency) (low)         0048h       Trip info. 6 (current)         0049h       Trip info. 6 (voltage)         004Ah       Trip info. 6 (running time) (high)         004Bh       Trip info. 6 (running time) (low)         004Ch       Trip info. 6 (power-on time) (high)     Cumulative running time at tripping  1[h]  Cumulative running time at tripping						ι[V]
0042h       Trip info. 5 (power-on time) (high)         0043h       Trip info. 5 (power-on time) (low)         0044h       Trip info. 6 (factor)         0045h       Trip info. 6 (inverter status)         0046h       Trip info. 6 (frequency) (high)         0047h       Trip info. 6 (frequency) (low)         0048h       Trip info. 6 (current)         0049h       Trip info. 6 (voltage)         004Ah       Trip info. 6 (running time) (high)         004Bh       Trip info. 6 (running time) (low)         004Ch       Trip info. 6 (power-on time) (high)     Cumulative power-on time at tripping  1[h]  Cumulative running time at tripping  Cumulative power-on time at tripping  1[h]					Cumulative running time at tripping	1[h]
0043h       Trip info. 5 (power-on time) (low)       Cumulative power-on time at tripping       I[II]         0044h       Trip info. 6 (factor)       See the list of inverter trip factors below       -         0045h       Trip info. 6 (inverter status)       See the list of inverter trip factors below       -         0046h       Trip info. 6 (frequency) (high)       0 to 100000       0.01[Hz]         0048h       Trip info. 6 (current)       Output current at tripping       0.01[A]         0049h       Trip info. 6 (voltage)       DC input voltage at tripping       1[V]         004Bh       Trip info. 6 (running time) (high)       Cumulative running time at tripping       1[h]         004Ch       Trip info. 6 (power-on time) (high)       Cumulative power-on time at tripping       1[h]						+
0044h       Trip info. 6 (factor)         0045h       Trip info. 6 (inverter status)         0046h       Trip info. 6 (frequency) (high)         0047h       Trip info. 6 (frequency (low)         0048h       Trip info. 6 (current)         0049h       Trip info. 6 (voltage)         004Ah       Trip info. 6 (running time) (high)         004Bh       Trip info. 6 (running time) (low)         004Ch       Trip info. 6 (power-on time) (high)     See the list of inverter trip factors below  - Output current at tripping  Output current at tripping  DC input voltage at tripping  Cumulative running time at tripping  1[h]  Cumulative power-on time at tripping  1[h]  Cumulative power-on time at tripping  1[h]  Cumulative power-on time at tripping  1[h]  Trip info. 6 (power-on time) (high)  Trip info. 6 (power					Cumulative power-on time at tripping	1[h]
0045h       Trip info. 6 (inverter status)         0046h       Trip info. 6 (frequency) (high)         0047h       Trip info. 6 (frequency (low)         0048h       Trip info. 6 (current)         0049h       Trip info. 6 (voltage)         004Ah       Trip info. 6 (running time) (high)         004Bh       Trip info. 6 (running time) (low)         004Ch       Trip info. 6 (power-on time) (high)     See the list of inverter trip factors below  - 0 to 100000  0.01[Hz]  Output current at tripping DC input voltage at tripping Cumulative running time at tripping 1[h]  Cumulative power-on time at tripping 1[h]  Cumulative power-on time at tripping 1[h]  Cumulative power-on time at tripping 1[h]  The content of the content		, , ,			See the list of inverter trip factors below	+ -
0046h     Trip info. 6 (frequency) (high)       0047h     Trip info. 6 (frequency (low)       0048h     Trip info. 6 (current)       0049h     Trip info. 6 (voltage)       004Ah     Trip info. 6 (running time) (high)       004Bh     Trip info. 6 (running time) (low)       004Ch     Trip info. 6 (power-on time) (high)    O to 100000  Output current at tripping  DC input voltage at tripping  Cumulative running time at tripping  1[h]  Cumulative power-on time at tripping  Cumulative power-on time at tripping  1[h]						-
0047h Trip info. 6 (frequency (low) 0048h Trip info. 6 (current) 0049h Trip info. 6 (voltage) 004Ah Trip info. 6 (running time) (high) 004Bh Trip info. 6 (running time) (low) 004Ch Trip info. 6 (power-on time) (high)  Cumulative running time at tripping 1[h]  Cumulative power-on time at tripping 1[h]						0.045
0048h     Trip info. 6 (current)     d086       0049h     Trip info. 6 (voltage)     DC input voltage at tripping     1[V]       004Ah     Trip info. 6 (running time) (high)     Cumulative running time at tripping     1[h]       004Ch     Trip info. 6 (power-on time) (high)     Cumulative power-on time at tripping     1[h]					U to 100000	U.U1[Hz]
0049h     Trip info. 6 (voltage)       004Ah     Trip info. 6 (running time) (high)       004Bh     Trip info. 6 (running time) (low)       004Ch     Trip info. 6 (power-on time) (high)    Cumulative running time at tripping  1[h]  Cumulative power-on time at tripping  1[h]			4000	-	Output current at tripping	0.01[A]
004Ah     Trip info. 6 (running time) (high)       004Bh     Trip info. 6 (running time) (low)       004Ch     Trip info. 6 (power-on time) (high)   Cumulative running time at tripping  1[h]  Cumulative power-on time at tripping  1[h]		, ,	ausb	K		
004Bh Trip info. 6 (running time) (low) 004Ch Trip info. 6 (power-on time) (high)  Cumulative power-on time at tripping  [In]						
004Ch Trip info. 6 (power-on time) (high)					Cumulative running time at tripping	ı[n]
	004Ch				Cumulative newer on time at trianing	1fh1
		Trip info. 6 (power-on time) (low)			Cumulative power-on time at impping	1[[1]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
004Eh	Programming error monitoring	d090	R	Warning code	-
004Fh to 006Ch	(reserved)	-	-	-	-
006Dh to 08Efh	(reserved)	-	-	-	-
0900h	Writing to EEPROM	-	W	Motor constant recalculation     Save all data in EEPROM     Other: Motor constant recalculation and save all data in EEPROM	1
0901h	Unused	-	-	Inaccessible	-
0902h	EEPROM write mode	-	W	0 (invalid) / 1 (valid)	
0903h to 1000h	Unused	-	-	Inaccessible	-

- Note 1: Assume that the rated current of the inverter is "1000".
- Note 2: If a number not less than "1000" (100.0 seconds) is specified, the second value after the decimal point will be ignored.
- Note 3: 0902h setting is referred for one time when following 06H command is executed.

List of inverter trip factors

Upper part of trip factor code (indicating the factor)	Lower part of trip factor code (indicating the inverter status)		
Name	Code	Name	Code
No trip factor	0	Resetting	0
Over-current event while at constant speed	1	Stopping	1
Over-current event during deceleration	2	Decelerating	2
Over-current event during acceleration	3	Constant-speed operation	3
Over-current event during other conditions	4	Accelerating	4
Overload protection	5	Operating at zero frequency	5
Braking resistor overload protection	6	Starting	6
Overvoltage protection	7	DC braking	7
EEPROM error	8	Overload restricted	8
Undervoltage protection	9		
Current detection error	10		
CPU error	11		
External trip	12		
USP error	13		
Ground-fault protection	14		
Input overvoltage protection	15		
Inverter thermal trip	21		
CPU error	22		
Main circuit error	25		
Driver error	30		
Thermistor error	35		
Braking error	36		
Safe Stop	37		
Low-speed overload protection	38		
Operator connection	40		
Modbus communication error	41		
Easy sequence error (invalid instruction)	43		
Easy sequence error (invalid nesting count)	44		
Easy sequence execution error 1	45		
Easy sequence user trip 0 to 9	50 to 59		
Option error 0 to 9	60 to 69		
Encoder disconnection	80		
Excessive speed	81		
Position control range trip	83		

(iii) List of registers (monitoring)

Register	of registers (monitoring)				Data
No.	Function name	Function code	R/W	Monitoring and setting items	resolution
1001h 1002h	Output frequency monitor	d001 (high) d001 (low)	R	0 to 40000(100000)	0.01 [Hz]
1003h	Output current monitor	d002	R	0 to 65530	0.1 [A]
	Rotation direction monitoring	d003	R	0: Stopping, 1: Forward rotation, 2: Reverse rotation	0.1 [Hz]
1005h 1006h	Process variable (PV), PID feedback monitoring	d004 (high) d004 (low)	R	0 to 1000000	0.1
1007h	Intelligent input terminal status	d005	R	2^0: Terminal 1 to 2^6: Terminal 7	1 bit
1008h	Intelligent output terminal status	d006	R	2^0: Terminal 11 to 2^1: Terminal 12/ 2^2: Relay Terminal	1 bit
1009h 100Ah	Scaled output frequency monitor	d007 (high) d007 (low)	R	0 to 4000000(10000000)	0.01
100Bh 100Ch	Actual-frequency monitor	d008 (high) d008 (low)	R R	-100000 to +100000	0.01 [Hz]
100Dh	Torque command monitor	d009	R	-200 to +200	1 [%]
100Eh	Torque bias monitor	d010	R	-200 to +200	1 [%]
100Fh	(Reserved)	-		-	-
1010h	Torque monitor	d012	R	-200 to +200	1 [%]
1011h	Output voltage monitor	d013	R	0 to 6000	0.1 [V]
1012h	Power monitor	d014	R	0 to 1000	0.1 [kW]
1013h 1014h	Watt-hour monitor	d015 (high) d015 (low)	R	0 to 9999000	0.1
1015h 1016h	Elapsed RUN time monitor	d016 (high) d016 (low)	R	0 to 999900	1 [h]
1017h 1018h	Elapsed power-on time monitor	d017 (high) d017 (low)	R	0 to 999900	1 [h]
1019h	Heat sink temperature monitor	d018	R	-200 to 1500	0.1 [℃]
101Ah to 101Ch	(Reserved)	-	-	-	-
101Dh	Life-check monitor	d022	R	2^0: Capacitor on main circuit board	1 bit
101Eh	EzSQ program counter	d023	R	0~1024	
101Fh	EzSQ program number	d024	R	0~9999	
1020h~ 1025h	(Reserved)	-	-	-	-
1026h	DC voltage monitoring (across P and N)	d102	R	0 to 10000	0.1 [V]
1027h	BRD load factor monitoring	d103	R	0 to 1000	0.1 [%]
1028h	Electronic thermal overload monitoring	d104	R	0 to 1000	0.1 [%]
1029h to 102Dh	(Reserved)	-	-	-	-
102Eh 102Fh	User monitor 1	d025(HIGH) d025(LOW)	R R	-2147483647 to 2147483647	1
1030h 1031h	User monitor 2	d026(HIGH) d026(LOW)	R R	-2147483647 to 2147483647	1
1032h 1033h	User monitor 3	d027(HIGH) d027(LOW)	R R	-2147483647 to 2147483647	1
1034h to 1035h	(Reserved)	-	-	-	-
1036h 1037h	Position setting monitor	d029(HIGH) d029(LOW)	R R	-268435455 to 268435455	1
1038h 1039h	Position feedback monitor	d030(HIGH) d030(LOW)	R R	-268435455 to 268435455	1
103Ah to 1056h	(reserved)	-	-	-	-
1057h	Inverter mode monitor	d060	R	O(IM CT) 2(IM High Freq mode)	
1058h to 1102h	unused	-	-	Inaccessible	-

(iv) List of registers

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1103h	Acceleration time (1)	F002 (high)	R/W	1 to 360000	0.01 [sec.]
1104h	Acceleration time (1)	F002 (low)		1 10 300000	0.01 [Sec.]
1105h	Deceleration time (1)	F003 (high)	R/W	1 to 360000	0.01 [sec.]
1106h	Deceleration time (1)	F003 (low)	IX/VV	1 10 300000	0.01 [Sec.]
1107h	Keypad Run key routing	F004	R/W	0 (forward rotation), 1 (reverse rotation)	-
1108h to 1200h	Unused	•	1	Inaccessible	-

# (v) List of registers (function modes)

Parameter group A

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1201h	Frequency source	A001	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
1202h	Run command source (*)	A002	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
1203h	Base frequency	A003	R/W	300 to "maximum frequency"	0.1 [Hz]
1204h	Maximum frequency	A004	R/W	300 to 4000(10000)	0.1 [Hz]
1205h	[AT] selection	A005	R/W	0 (switching between O and OI terminals), 2 (switching between O terminal and keypad potentiometer), 3 (switching between OI terminal and keypad potentiometer)	-
1206h to 120Ah	(Reserved)	-	-	-	-
120Bh 120Ch	[O] input active range start frequency	A011 (high) A011 (low)	R/W	0 to 40000(100000)	0.01 [Hz]
120Dh 120Eh	[O] input active range end frequency	A012 (high) A012 (low)	R/W	0 to 40000(100000)	0.01 [Hz]
120Fh	[O] input active range start voltage	A013	R/W	0 to "[O]-[L] input active range end voltage"	1 [%]
1210h	[O] input active range end voltage	A014	R/W	"[O]-[L] input active range start voltage" to 100	1 [%]
1211h	[O] input start frequency select	A015	R/W	0 (external start frequency), 1 (0 Hz)	ı
1212h	Analog input filter.	A016	R/W	1 to 30 or 31 (500 ms filter ±0.1 Hz with hysteresis)	1
1213h	EzSQ selection	A017	R/W	0 (disabling), 1 (PRG terminal), 2 (Always)	-
1214h	(Reserved)	-	-	-	-
1215h	Multi speed operation selection	A019	R/W	0 (binary), 1 (bit)	-
1216h 1217h	Multi-speed freq. 0	A020 (high) A020 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1218h 1219h	Multi-speed freq. 1	A021 (high) A021 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Ah 121Bh	Multi-speed freq. 2	A022 (high) A022 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Ch 121Dh	Multi-speed freq. 3	A023 (high) A023 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Eh 121Fh	Multi-speed freq. 4	A024 (high) A024 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1220h 1221h	Multi-speed freq. 5	A025 (high) A025 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1222h 1223h	Multi-speed freq. 6	A026 (high) A026 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1224h 1225h	Multi-speed freq. 7	A027 (high) A027 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]

After changing the setting, keep the time 40ms or longer before actually give run command

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1226h	Multi-speed freq. 8	A028 (high)	R/W	0 or "start frequency" to "maximum	0.01 [Hz]
1227h 1228h		A028 (low) A029 (high)	R/W R/W	frequency"  0 or "start frequency" to "maximum	
1229h	Multi-speed freq. 9	A029 (low)	R/W	frequency"	0.01 [Hz]
122Ah	Multi apped frog 10	A030 (high)	R/W	0 or "start frequency" to "maximum	0.01 [Hz]
122Bh	Multi-speed freq. 10	A030 (low)	R/W	frequency"	0.01 [HZ]
122Ch 122Dh	Multi-speed freq. 11	A031 (high)	R/W	0 or "start frequency" to "maximum	0.01 [Hz]
122Dh 122Eh		A031 (low) A032 (high)	R/W R/W	frequency"  0 or "start frequency" to "maximum	
122Fh	Multi-speed freq. 12	A032 (low)	R/W	frequency"	0.01 [Hz]
1230h	Multi-speed freg. 13	A033 (high)	R/W	0 or "start frequency" to "maximum	0.01 [Hz]
1231h	ividiti-speed freq. 15	A033 (low)	R/W	frequency"	0.01 [112]
1232h 1233h	Multi-speed freq. 14	A034 (high) A034 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1233h		A034 (low) A035 (high)	R/W	0 or "start frequency" to "maximum	
1235h	Multi-speed freq. 15	A035 (low)	R/W	frequency"	0.01 [Hz]
1236h	(Reserved)	-	-	-	-
1237h	(Reserved)	-	-	-	-
1238h	Jog frequency	A038	R/W	0.0, "Start frequency" to 999(10000)  0 (free-running after jogging stops [disabled]	0.01 [Hz]
1239h	Jog stop mode	A039	R/W	during operation]) 1 (deceleration and stop after jogging stops [disabled during operation]) 2 (DC braking after jogging stops [disabled during operation]) 3 (free-running after jogging stops [enabled during operation]) 4 (deceleration and stop after jogging stops [enabled during operation]) 5 (DC braking after jogging stops [enabled during operation])	-
123Ah	(Reserved)	-	-	-	-
123Bh	Torque boost method selection	A041	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
123Ch	Manual torque boost value	A042	R/W	0 to 200	0.1 [%]
123Dh	Manual torque boost frequency	A043	R/W	0 to 500	0.1 [%]
123Eh	V/F characteristic curve selection, 1st motor	A044	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control),	-
123Fh	V/f gain	A045	R/W	20 to 100	1 [%]
1240h	Voltage compensation gain setting for automatic torque boost, 1st motor	A046	R/W	0 to 255	1 [%]
1241h	Slippage compensation gain setting for automatic torque boost, 1st motor	A047	R/W	0 to 255	1 [%]
1242h to1244h	(Reserved)	-	-	-	-
1245h	DC braking enable	A051	R/W	0 (disabling), 1 (enabling), 2 (output freq < [A052])	_
1246h	DC braking frequency	A052	R/W	0 to 6000	0.01 [Hz]
1247h	DC braking wait time	A053	R/W	0 to 50	0.1 [sec.]
1248h	DC braking force during deceleration	A054	R/W	0 to 100	1 [%]
1249h	DC braking time for deceleration	A055	R/W	0 to 600	0.1 [sec.]
124Ah	DC braking/edge or level detection for [DB] input	A056	R/W	0 (edge operation), 1 (level operation)	-
124Bh	DC braking force for starting	A057	R/W	0 to 100	1 [%]
124Ch	DC braking time for starting	A058	R/W	0 to 600	0.1 [sec.]
124Dh	DC braking carrier frequency setting	A059	R/W	20 to 150	0.1 [kHz]
124Eh	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
124Fh	Frequency upper limit	A061 (high)	R/W	0 or "maximum frequency limit" to	0.01 [Hz]
1250h	requeries apper minit	A061 (low)	R/W	"maximum frequency"	0.01 [112]
1251h	Frequency lower limit	A062 (high)	R/W	0 or "maximum frequency limit" to	0.01 [Hz]
1252h	requeries lower minic	A062 (low)	R/W	"maximum frequency"	0.01 [112]
1253h	Jump freg. (center) 1	A063 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1254h	1 1 ( )	A063 (low)	R/W	0 10 40000(100000)	0.01 [112]
1255h	Jump freq. width (hysteresis) 1	A064	R/W	0 to 1000(10000)	0.01 [Hz]
1256h	Jump freg. (center) 2	A065 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1257h	,	A065 (low)	R/W	0 to 40000(100000)	0.01 [112]
1258h	Jump freq. width (hysteresis) 2	A066	R/W	0 to 1000(10000)	0.01 [Hz]
1259h	Jump freg. (center) 3	A067 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
125Ah	Sump freq. (center) 3	A067 (low)	R/W	0 (0 40000(100000)	0.01 [112]
125Bh	Jump freq. width (hysteresis) 3	A068	R/W	0 to 1000(10000)	0.01 [Hz]
125Ch	Acceleration hold frequency	A069 (high)	R/W	0 to 40000	0.01 [Hz]
125Dh	Acceleration floid frequency	A069 (low)	R/W	0 10 40000	0.01 [HZ]
125Eh	Acceleration hold time	A070	R/W	0 to 600	0.1 [sec.]
125Fh	PID Function Enable	A071	R/W	0 (disabling), 1 (enabling), 2 (enabling inverted-data output)	-
1260h	PID proportional gain	A072	R/W	0 to 2500	0.10
1261h	PID integral time constant	A073	R/W	0 to 36000	0.1 [sec.]
1262h	PID derivative gain	A074	R/W	0 to 10000	0.01 [sec.]
1263h	PV scale conversion	A075	R/W	1 to 9999	0.01
1264h	PV source	A076	R/W	0 (input via OI), 1 (input via O), 2 (external communication), 3 (pulse train frequency input), 10 (operation result output)	-
1265h	Reverse PID	A077	R/W	00 (disabling), 01 (enabling)	-
1266h	PID output limiter	A078	R/W	0 to 1000	0.1 [%]
1267h	PID feed forward selection	A079	R/W	0 (disabled), 1(O input), 2 (OI input)	-
1268h	(Reserved)	-	R/W	-	-
1269h	AVR function select	A081	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
126Ah	AVR voltage select	A082	R/W	0 (200)/1 (215)/2 (220)/3 (230)/4 (240)	-
126Bh	AVR filter time constant	A083	R/W	0.000 to 10.00	0.001[sec]
126Ch	AVR deceleration gain	A084	R/W	50 to 200	1[%]
126Dh	Energy-saving operation mode	A085	R/W	0 (normal operation), 1 (energy-saving operation)	-
126Eh	Energy-saving mode tuning	A086	R/W	0 to 1000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
126Fh to 1273h	(Reserved)	-	-	-	
1274h	Acceleration time (2)	A092 (high)	R/W	1 to 360000	0.01 [sec.]
1275h	/ toocieration time (2)	A092 (low)	R/W	1 10 000000	0.01 [000.]
1276h	Deceleration time (2)	A093 (high)	R/W	1 to 360000	0.01 [sec.]
1277h	Decement and (2)	A093 (low)	R/W		0.01 [000.]
1278h	Select method to switch to Acc2/Dec2 profile	A094	R/W	0 (switching by 2CH terminal), 1 (switching by setting) 2 (Forward and reverse)	-
1279h	Acc1 to Acc2 frequency	A095 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ah	transition point	A095 (low)	R/W	0 10 40000(100000)	0.01 [112]
127Bh	Dec1 to Dec2 frequency	A096 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ch	transition point	A096 (low)	R/W	,	0.01 [112]
127Dh	Acceleration curve selection	A097	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve) 0 (linear), 1 (S curve), 2 (U curve), 3	-
127Eh	Deceleration curve setting	A098	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Fh	(Reserved)	-	-	-	-
1280h	(Reserved)	-	-	-	-
1281h	[OI] input active range start	A101 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1282h	frequency	A101 (low)	R/W	0 to 40000(100000)	0.01 [112]
1283h	[OI] input active range end	A102 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1284h	frequency	A102 (low)	R/W	0 to 40000(100000)	0.01 [112]
1285h	[OI] input active range start current	A103	R/W	0 to "[OI]-[L] input active range end current"	1 [%]
1286h	[OI] input active range end current	A104	R/W	"[OI]-[L] input active range start current" to 100	1 [%]
1287h	[OI] input start frequency select	A105	R/W	0 (external start frequency), 1 (0 Hz)	-
1288h to 12A4h	(Reserved)	-	-	-	-
12A5h	Acceleration curve constant	A131	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A6h	Deceleration curve constant	A132	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A7h to 12AEh	(Reserved)		-	-	-
12AFh	Operation-target frequency selection 1	A141	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option), 7 (pulse train frequency input)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
12B0h	Operation-target frequency selection 2	A142	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option), 7 (pulse train frequency input)	-
12B1h	Operator selection	A143	R/W	0 (addition: A141 + A142), 1 (subtraction: A141 - A142), 2 (multiplication: A141 x A142)	-
12B2h	(Reserved)	-	-	-	-
12B3h 12B4h	Frequency to be added	A145 (high) A145 (low)	R/W R/W	0 to 40000(100000)	0.01 [Hz]
12B5h	Sign of the frequency to be added	A146	R/W	00 (frequency command + A145), 01 (frequency command - A145)	-
12B6h to 12B8h	(Reserved)	-	-	-	-
12B9h	EL-S-curve acceleration/deceleration ratio 1	A150	R/W	0 to 50	1 [%]
12BAh	EL-S-curve acceleration/deceleration ratio 2	A151	R/W	0 to 50	1 [%]
12BBh	EL-S-curve deceleration/deceleration ratio 1	A152	R/W	0 to 50	1 [%]
12BCh	EL-S-curve deceleration/deceleration ratio 2	A153	R/W	0 to 50	1 [%]
12BDh	Deceleration hold	A154 (high)	R/W	0~40000(100000)	0.01 [Hz]
12BEh	frequency	A154 (low)		,	
12BFh	Deceleration hold time	A155	R/W	0~600	0.1 [sec.]
12C0h	PID sleep function	A156 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C1h 12C2h	triggering level PID sleep function action delay time	A156 (low) A157	R/W	0~255	0.1 [sec.]
12C3h to 12C5h	(Reserved)	-	-	-	-
12C6h 12C7h	[VR] input active range start frequency	A161 (high) A161 (low)	R/W	0~40000(100000)	0.01 [Hz]
12C8h 12C9h	[VR] input active range end frequency	A162 (high) A162 (low)	R/W	0~40000(100000)	0.01 [Hz]
12CAh	[VR] input active range start %	A163	R/W	0~100	1 [%]
12CBh	[VR] input active range end %	A164	R/W	0~100	1 [%]
12CCh	[VR] input start frequency select	A165	R/W	0(start frequency A161) / 1(0Hz)	-
12CDh to 1300h	unused	-	-	Inaccessible	-

# Parameter group B

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1301h	Restart mode on power failure / under-voltage trip	b001	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
1302h	Allowable under-voltage power failure time	b002	R/W	3 to 250	0.1 [sec.]
1303h	Retry wait time before motor restart	b003	R/W	3 to 1000	0.1 [sec.]
1304h	Instantaneous power failure/under-voltage trip alarm enable	b004	R/W	0 (disabling), 1 (enabling), 2 (disabling during stopping and decelerating to stop)	-
1305h	Number of restarts on power failure/under-voltage trip events	b005	R/W	0 (16 times), 1 (unlimited)	-
1306h	(Reserved)	-	-	-	-
1307h	Restart frequency threshold	b007 (high)	R/W	0 to 40000	0.01 [Hz]
1308h 1309h	Restart mode on over voltage / over current	b007 (low) b008	R/W R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
130Ah	(Reserved)	-	-	-	-
130Bh	Number of retry on over voltage / over current	b010	R/W	1 to 3	1 [time]
130Ch	Retry wait time on over voltage / over current	b011	R/W	3 to 1000	0.1 [sec.]
130Dh	Level of electronic thermal	b012	R/W	200 to 1000	0.1 [%]
130Eh	Electronic thermal characteristic	b013	R/W	(reduced-torque characteristic),     (constant-torque characteristic),     (free setting)	-
130Fh	(Reserved)	-	-	Inaccessible	-
1310h	Free setting, electronic thermal frequency (1)	b015	R/W	0 to 400	1 [Hz]
1311h	Free setting, electronic thermal current (1)	b016	R/W	0 to Rated current	0.1 [A]
1312h	Free setting, electronic thermal frequency (2)	b017	R/W	0 to 400	1 [Hz]
1313h	Free setting, electronic thermal current (2)	b018	R/W	0 to Rated current	0.1 [A]
1314h	Free setting, electronic thermal frequency (3)	b019	R/W	0 to 400	1 [Hz]
1315h	Free setting, electronic thermal current (3)	b020	R/W	0 to Rated current	0.1 [A]
1316h	Overload restriction operation mode	b021		0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
1317h	Overload restriction level	b022	R/W	200 to 2000	0.1 [%]
1318h	Deceleration rate at overload restriction	b023	R/W	1 to 30000	0.1 [sec.]
1319h	Overload restriction operation mode (2)	b024	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
131Ah	Overload restriction level 2	b025	R/W	200 to 2000	0.1 [%]
131Bh	Deceleration rate at overload restriction (2)	b026	R/W	1 to 30000	0.1 [sec.]
131Ch	Overcurrent suppression enable	b027	R/W	0 (disabling), 1 (enabling)	-
131Dh	Current level of active freq. matching	b028	R/W	100 to 2000	0.1 [%]
131Eh	Deceleration rate of active freq. matching	b029	R/W	1 to 30000	0.1 [sec.]

No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
	Start freq. of active frequency matching	b030	R/W	0 (frequency at the last shutoff), 1 (maximum frequency), 2 (set frequency)	-
1320h	Software lock mode selection	b031	R/W	0 (disabling change of data other than "b031" when SFT is on), 1 (disabling change of data other than "b031" and frequency settings when SFT is on), 2 (disabling change of data other than "b031"), 3 (disabling change of data other than "b031" and frequency settings), 10 (enabling data changes during operation)	-
1321h	(Reserved)	-	-	-	-
132ZN	Motor cable length parameter	b033	R/W	5 to 20	-
1323h 1324h	Run/power-on warning time	b034 (high) b034 (low)	R/W R/W	0 to 65535	1 [10h]
1325h	Rotation direction restriction	b035	R/W	0( Enable for both dir)/ 1 (Enable for forward only)/ 2 (Enable for reverse only)	-
	Reduced voltage start selection	b036	R/W	0 (minimum reduced voltage start time) to 255 (maximum reduced voltage start time)	-
132711	Function code display restriction	b037	R/W	0 (full display), 1 (function-specific display), 2 (user setting), 3 (data comparison display), 4 (basicdisplay), 5(monitor display)	-
	Initial display selection	b038	R/W	001-060	-
	Automatic user parameter registration	b039	R/W	0 (disabling), 1 (enabling)	-
132Ah	Torque limit selection	b040	R/W	00 (quadrant-specific setting), 01 (switching by terminal), 02 (analog input)	-
132Bh	Torque limit 1 (fwd-power in 4-quadrant mode)	b041	R/W	0 to 200/255 (no)	1 [%]
132Ch	Torque limit 2 (rev/regen. in 4-quadrant mode)	b042	R/W	0 to 200/255 (no)	1 [%]
132Dh	Torque limit 3 (rev/power in 4-quadrant mode)	b043	R/W	0 to 200/255 (no)	1 [%]
132Eh	Torque limit 4 (fwd/regen. in 4-quadrant mode)	b044	R/W	0 to 200/255 (no)	1 [%]
132Fh	Torque limit LADSTOP enable	b045	R/W	0 (disabling), 1 (enabling)	-
1330h	Reverse Run protection enable	b046	R/W	0 (disabling), 1 (enabling)	-
1331h to 1332h	(Reserved)	-	-	-	-
	Dual Rating Selection	b049	R/W	0(CT mode), VT mode Not available	-
	Controlled deceleration on power loss	b050	R/W	0 (disabling), 1 (enabling), 2, (nonstop operation at momentary power failure (no restoration)) 3, (nonstop operation at momentary power failure (restoration to be done))	-
1335h	DC bus voltage trigger level of ctrl. decel.	b051	R/W	0 to 999.9	0.1 [V]
1336h	Over-voltage threshold of ctrl. decel.	b052	R/W	0 to 999.9	0.1 [V]
1337h 1338h	Deceleration time of ctrl. decel.	b053 (high) b053 (low)	R/W R/W	0.01 to 36000	0.01 [sec.]
	Initial freq. drop of ctrl. decel.	b054	R/W	0 to 1000	0.01 [Hz]
133Ah to 133Eh	(Reserved)	-	-	-	-
	Maximum-limit level of window comparators O	b060	R/W	0. to 100. (lower limit : b061 + b062 *2) (%)	1 [%]
	Minimum-limit level of window comparators O	b061	R/W	0. to 100. (lower limit : b060 - b062*2) (%)	1 [%]
13/1h	Hysteresis width of window comparators O	b062	R/W	0. to 10. (lower limit : b061 - b062 / 2) (%)	1 [%]
1342h	Maximum-limit level of window comparators OI	b063	R/W	0. to 100. (lower limit : b064 + b066 *2) (%)	1 [%]
13/13h	Minimum-limit level of window comparators OI	b064	R/W	0. to 100. (lower limit : b063 - b066 *2) (%)	1 [%]
, ,	Hysteresis width of window	b065	R/W	0. to 10. (lower limit : b063 - b064 / 2) (%)	1 [%]

Register		Function	D // A /	M 10 1 10 10 10	Data
No.	Function name	code	R/W	Monitoring and setting items	resolution
1345h to	(Reserved)	_	_	_	
1348h	,				
1349h	Operation level at O disconnection	b070	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Ah	Operation level at OI disconnection	b071	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Bh to	(reserved)	-	-	-	-
134Dh 134Eh	,	L075	DAM	40 +- 50	1 [°C]
134Fh to	Ambient temperature	b075	R/W	-10 to 50	Τ[C]
1350	(reserved)	-	-	-	-
	Cumulative input power data				
1351h	clearance	b078	R/W	Clearance by setting "1"	-
1352h	Watt-hour display gain	b079	R/W	1 to 1000	1
1353h to	(Reserved)	_	_	_	_
1354h	,				_
1355h	Start frequency	b082	R/W	10 to 999	0.01 [Hz]
1356h	Carrier frequency	b083	R/W	20 to 150	0.1 [kHz]
1357h	Initialization mode (parameters or trip history)	b084	R/W	0,1 (clearing the trip history), 2 (initializing the data), 3 (clearing the trip history and initializing the data), 4 (clearing the trip history and initializing the data and EzSQ program)	-
1358h	Country code for initialization	b085	R/W	0 (area A), 1 (area B)	-
1359h	Frequency scaling conversion factor	b086	R/W	1 to 9999	0.01
135Ah	STOP key enable	b087	R/W	0 (enabling), 1 (disabling), 2 (disabling only stop)	-
135Bh	Restart mode after FRS	b088	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (starting with active matching frequency)	-
135Ch	Automatic carrier frequency reduction	b089	R/W	0(disabling) 1(enabling( output current controlled)) 2(enabling( fin temperature controlled))	
135Dh	Dynamic braking usage ratio	b090	R/W	0 to 1000	0.1 [%]
135Eh	Stop mode selection	b091	R/W	0 (deceleration until stop), 1 (free-run stop)	-
135Fh	Cooling fan control	b092	R/W	Not available	-
1360h	Clear elapsed time of cooling fan	b093	R/W	0(count)/1(clear)	-
1361h	Initialization target data	b094	R/W	0 to 3	-
1362h	Dynamic braking control	b095	R/W	0 (disabling), 1 (enabling [disabling while the motor is stopped]), 2 (enabling [enabling also while the motor is stopped])	
1363h	Dynamic braking activation level	b096	R/W	330 to 380	1. [V]
1364h to 1366h	(Reserved)	-	-	-	-
1366h	Free-setting V/f frequency (1)	b100	R/W	0. to "free-setting V/f frequency (2)"	1 [Hz]
1368h	Free-setting V/I requerity (1)	b100	R/W	0. to 8000	0.1 [V]
1369h	Free-setting V/f frequency (2)	b102	R/W	0. to "free-setting V/f frequency (3)"	1 [Hz]
136Ah	Free-setting V/f voltage (2)	b103	R/W	0. to 8000	0.1 [V]
136Bh	Free-setting V/f frequency (3)	b104	R/W	0. to "free-setting V/f frequency (4)"	1 [Hz]
136Ch	Free-setting V/f voltage (3)	b105	R/W	0. to 8000	0.1 [V]
136Dh	Free-setting V/f frequency (4)	b106	R/W	0. to "free-setting V/f frequency (5)"	1 [Hz]
136Eh	Free-setting V/f voltage (4)	b107	R/W	0. to 8000	0.1 [V]
136Fh	Free-setting V/f frequency (5)	b108	R/W	0. to "free-setting V/f frequency (6)"	1 [Hz]
1370h	Free-setting V/f voltage (5)	b109	R/W	0. to 8000	0.1 [V]
1371h	Free-setting V/f frequency (6)	b110	R/W	0. to "free-setting V/f frequency (7)"	1 [Hz]
1372h	Free-setting V/f voltage (6)	b111	R/W	0. to 8000	0.1 [V]
1373h 1374h	Free-setting V/f frequency (7) Free-setting V/f voltage (7)	b112	R/W R/W	0. to 400. 0. to 8000	1 [Hz]
13/411	riee-setting v/i voltage (7)	b113	r\/ VV	υ. ιο ο <del>υ</del> υυ	0.1 [V]

Register	Function name	Function	R/W	Monitoring and setting items	Data
No. 1375h to		code		0 0	resolution
137Ah	(Reserved)	-	-	-	-
137Bh	Brake Control Enable	b120	R/W	0 (disabling), 1 (enabling)	-
137Ch	Brake Wait Time for Release	b121	R/W	0 to 500	0.01 [sec.]
137Dh	Brake Wait Time for Acceleration	b122	R/W	0 to 500	0.01 [sec.]
137Eh	Brake Wait Time for Stopping	b123	R/W	0 to 500	0.01 [sec.]
137Fh	Brake Wait Time for Confirmation	b124	R/W	0 to 500	0.01 [sec.]
1380h	Brake Release Frequency	b125	R/W	0 to 40000	0.01 [Hz]
1381h	Brake Release Current	b126	R/W	0 to 2000	0.1 [%]
1382h	Braking frequency	b127	R/W	0 to 40000	0.01 [Hz]
1383h	(Reserved)	-	-	-	-
1384h	(Reserved)	-	-	-	-
1385h	Deceleration overvoltage suppression enable	b130	R/W	0 (disabling), 1 (enabling), 2 (enabling with acceleration)	-
1386h	Decel. overvolt. suppress level	b131	R/W	330 to 390 (V)	1 [V]
1387h	Decel. overvolt. suppress const.	b132	R/W	10 to 3000	0.01 [sec.]
1388h	Decel. overvolt. suppress propotional gain	b133	R/W	0 to 500	0.01
1389h	Decel. overvolt. suppress Integral time	b134	R/W	0 to 1500	0.1 [sec.]
138Ah to 1393h	(Reserved)	-	-	-	-
1394h	GS input mode	b145	R/W	0(non Trip) /1(Trip)	-
1395h $\sim$ 1399h	(Reserved)	-	-	-	-
139Ah	Display ex.operator connected	b150	R/W	001 to 060	-
139Bh $\sim$	(D 1)				-
13A2h	(Reserved)	-	-	-	
13A3h	1st parameter of Dual Monitor	b160	R/W	001 to 030	-
13A4h	2nd parameter of Dual Monitor	b161	R/W	001 to 030	-
13A5h	(Reserved)	-	-	-	-
13A6h	Freq. set in monitoring	b163	R/W	0 (disabling), 1 (enabling),	-
13A7h	Automatic return to the initial display	b164	R/W	0 (disabling), 1 (enabling),	-
13A8h	Ex. operator com. loss action	b165	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
13A9h∼ 13ADh	(Reserved)	-	-	-	-
13AEh	Inverter mode selection	b171	R/W	0 (disabling), 1 (IM mode), 2 (High Freq. mode)	-
13AFh∼ 13B6h	(Reserved)	-	-	-	-
13B7h	Initialization trigger	b180	R/W	0 (disabling), 1 (enabling),	-
13B8h $\sim$	unused	_	_	Inaccessible	_
1400h	unassa	_	_	III GOOGGINIO	_

# Parameter group C

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1401h	Input [1] function	C001	R/W	1 (RV: Reverse RUN), 2 (CF1: Multispeed 1 setting), 3 (CF2: Multispeed 2 setting), 4 (CF3: Multispeed 3 setting), 5 (CF4: Multispeed 4 setting), 6 (JG: Jogging), 7 (DB: external DC braking), 8 (SET: Set 2nd motor data), 9 (2CH: 2-stage acceleration/deceleration), 11 (FRS: free-run stop), 12	-
1402h	Input [2] function	C002	R/W	(EXT: external trip), 13 (USP: unattended start protection), 14: (CS: commercial power source enable), 15 (SFT: software lock), 16 (AT: analog input voltage/current select), 18 (RS: reset), 20 (STA: starting by 3-wire input), 21 (STP: stopping by 3-wire input), 22 (F/R: forward/reverse switching by 3-wire	-
1403h	Input [3] function	C003	R/W	input), 23 (PID: PID disable), 24 (PIDC: PID reset, 27 (UP: remote control UP function), 28 (DWN: remote control DOWN function), 29 (UDC: remote control data clearing), 31 (OPE: forcible operation), 32 (SF1: multispeed bit 1), 33 (SF2: multispeed bit 2), 34 (SF3: multispeed bit 3), 35 (SF4: multispeed bit 4), 36 (SF5:	-
1404h	Input [4] function	C004	R/W	multispeed bit 5), 37 (SF6: multispeed bit 6), 38 (SF7: multispeed bit 7), 39 (OLR: overload restriction selection), 40 (TL: torque limit enable), 41 (TRQ1: torque limit selection bit 1), 42 (TRQ2: torque limit selection bit 2), 44 (BOK: braking confirmation), 46 (LAC: LAD cancellation), 47 (PCLR: clearance of	-
1405h	Input [5] function	C005	R/W	position deviation), 50 (ADD: trigger for frequency addition [A145]), 51 (F-TM: forcible-terminal operation), 52 (ATR: permission of torque command input), 53 (KHC: cumulative power clearance), 56 (MI1: general-purpose input 1), 57 (MI2: general-purpose input 2), 58 (MI3: general-purpose	-
1406h	Input [6] function	C006	R/W	input 3), 59 (MI4: general-purpose input 4), 60 (MI5: general-purpose input 5), 61 (MI6: general-purpose input 6), 62 (MI7: general-purpose input 7), 65 (AHD: analog command holding), 66 (CP1: multistage position settings selection 1), 67 (CP2: multistage position settings selection 2), 68 (CP3: multistage	-
1407h	Input [7] function	C007	R/W	position settings selection 3), 69 (ORL: Zero-return limit function), 70 (ORG: Zero-return trigger function), 73 (SPD: speed / position switching), 77 (GS1: safety input 1), 78 (GS2: safety input 2), 81 (485: EzCOM), 82 (PRG: executing EzSQ program), 83 (HLD: retain output frequency), 84 (ROK: permission of run command), 85 (EB: Rotation direction detection(for V/f with ENC), 86 (DISP: Display limitation), 255 (no: no assignment),	-
1408h to 140Ah	(Reserved)	-	-	Inaccessible	-
140Bh	Input [1] active state	C011	R/W	0 (NO), 1 (NC)	-
140Ch	Input [2] active state	C012	R/W	0 (NO), 1 (NC)	-
140Dh	Input [3] active state	C013	R/W	0 (NO), 1 (NC)	-
140Eh	Input [4] active state	C014	R/W	0 (NO), 1 (NC)	-
140Fh	Input [5] active state	C015	R/W	0 (NO), 1 (NC)	-
1410h	Input [6] active state	C016	R/W	0 (NO), 1 (NC)	-
1411h	Input [7] active state	C017	R/W	0 (NO), 1 (NC)	-
1412h to 1414h	(Reserved)	-	-	Inaccessible	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1415h	Output [11] function	C021	R/W	0 (RUN: running), 1 (FA1: constant-speed reached), 2 (FA2: set frequency overreached), 3 (OL: overload notice advance signal (1)), 4 (OD: output deviation for PID control), 5 (AL: alarm signal), 6 (FA3: set frequency reached), 7 (OTQ: over-torque), 9 (UV: undervoltage), 10 (TRQ: torque limited), 11 (RNT: operation time over), 12 (ONT: plug-in time over), 13 (THM: thermal alarm signal), 19 (BRK: brake release), 20 (BER: braking error), 21 (ZS: 0 Hz detection signal), 22 (DSE: speed deviation maximum), 23 (POK: positioning completed), 24 (FA4: set frequency	-
1416h	Output [12] function	C022	R/W	overreached 2), 25 (FA5: set frequency reached 2), 26 (OL2: overload notice advance signal (2)), 31 (FBV: PID feedback comparison), 32 (NDc: communication line disconnection), 33 (LOG1: logical operation result 1), 34 (LOG2: logical operation result 2), 35 (LOG3: logical operation result 3), 39 (WAC: capacitor life warning), 40 (WAF: cooling-fan), 41 (FR: starting contact signal), 42 (OHF: heat sink overheat warning), 43 (LOC: low-current indication signal), 44 (M01: general-purpose output 1), 45 (M02: general-purpose output 2), 46 (M03: general-purpose output 3), 50	-
1421h to 1423h	(Reserved)	-	-	(IRDY: inverter ready), 51 (FWR: forward rotation), 52 (RVR: reverse rotation), 53 (MJA: major failur)	-
141Ah	Alarm relay function	C026	R/W	54 (WCO: window comparator O), 55 (WCO: window comparator OI), 58(FREF),59(REF),60(SETM),62(EDM),63(OPO:Opti on)	-
141Bh	[EO] terminal selection	C027	R/W	0 (output frequency), 1 (output current), 2 (output torque), 3 (digital output frequency), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 8 (digital current monitoring), 10 (heat sink temperature), 12 (general-purpose output YAO), 15, 16(option)	-
141Ch	[AM] terminal selection	C028	R/W	0 (output frequency), 1 (output current), 2 (output torque), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 10 (heat sink temperature), 11 (output torque [signed value]), 13 (general-purpose output YA1),16(option)	-
141Dh	(reserved)	-	-	-	-
141Eh	Digital current monitor reference value	C030	R/W	200 to 2000	0.1 [%]
141Fh	Output [11] active state	C031	R/W	0 (NO), 1 (NC)	-
1420h	Output [12] active state	C032	R/W	0 (NO), 1 (NC)	-
1421h to 1423h	(Reserved)	-	-	-	-
1424h	Alarm relay active state	C036	R/W	0 (NO), 1 (NC)	-
1425h	(Reserved)	-	-	O (output during appolaration/decalaration and	-
1426h	Output mode of low current detection	C038	R/W	0 (output during acceleration/deceleration and constant-speed operation), 1 (output only during constant-speed operation)	-
1427h	Low current detection level	C039	R/W	0 to 2000	0.1 [%]
1428h	Overload signal output mode	C040	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1429h	Overload warning level	C041	R/W	0 to 2000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
142Ah 142Bh	Frequency arrival setting for accel.	C042 (high) C042 (low)	R/W R/W	0 to 40000	0.01 [Hz]
142Ch 142Dh	Frequency arrival setting for decel.	C043 (high) C043 (low)	R/W R/W	0 to 40000	0.01 [Hz]
142Eh	PID deviation level	C044	R/W	0 to 1000	0.1 [%]
142Fh	Frequency arrival setting 2 for	C045 (high)	R/W	0 to 40000	0.01 [Hz]
1430h	accel.	C045 (low)	R/W	0 10 40000	0.01 [112]
1431h	Frequency arrival setting 2 for	C046 (high)	R/W	0 to 40000	0.01 [Hz]
1432h 1433h	decel. Pulse train input scale conversion	C046 (low) C047	R/W R/W	0.01 – 99.99	-
1434h to	for EO output (Reserved)	-	-	-	-
1437h 1438h	Maximum PID feedback data	C052	R/W	0 to 1000	0.1 [%]
1439h	Minimum PID feedback data	C052	R/W	0 to 1000	0.1 [%]
143Ah	Over-torque/under-torqueselection	C054	R/W	0(Over torque)/1(under torque)	-
143Bh	Over-torque (forward-driving) level	C055	R/W	0 to 200	
-	setting Over-torque (reverse				1 [%]
143Ch	regenerating) level setting Over-torque (reverse driving) level	C056	R/W	0 to 200	1 [%]
143Dh	setting	C057	R/W	0 to 200	1 [%]
143Eh	Over-torque (forward regenerating) level setting	C058	R/W	0 to 200	1 [%]
143Fh	Signal output mode of Over/under torque	C059	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1440h	(Reserved)	-	-	-	-
1441h	Electronic thermal warning level	C061	R/W	0 to 100	1 [%]
1442h	(Reserved)	-		-	- 0.04 [1.1–1
1443h 1444h	Zero speed detection level Heat sink overheat warning level	C063 C064	R/W R/W	0 to 10000 0 to 110	0.01 [Hz] 1 [°C]
1445h to 144Ah	(Reserved)	-	-	-	-
144Bh	Communication speed	C071	R/W	03(2400bps), 04(4800bps), 05(9600bps) 06(19.2kbps), 07(38.4kbps),,08(57.6kbps), 09(76.8kbps), 10(115.2kbps)	-
144Ch	Modbus address	C072	R/W	1. to 247.	-
144Dh	(Reserved)	-	ı	-	-
144Eh	Communication parity	C074	R/W	00 (no parity), 01 (even parity), 02 (odd parity)	-
144Fh	Communication stop bit	C075	R/W	1 (1 bit), 2 (2 bits)	-
1450h	Selection of the operation after communication error	C076	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1451h	Communication timeout limit	C077	R/W	0 to 9999	0.01 [sec.]
1452h	Communication wait time	C078	R/W	0 to 1000	1 [msec.]
1453h to 1454h	(Reserved)	-	-	-	-
1455h	[O] input span calibration	C081	R/W	0 to 2000	0.1
1456h	[OI] input span calibration	C082	R/W	0 to 2000	0.1
1457h to 1458h	(Reserved)		-	-	-
1459h	Thermistor input tuning	C085	R/W	0 to 2000	0.1
145Ah to 145Eh	(Reserved)	-	-	-	-
145Fh	Debug mode enable	C091	R	0/1	-
1460h to 1463h	(Reserved)	-		-	-
1464h	Communication selection	C096	R/W	0(Modbus-RTU) 1(EzCOM)	-

				2(EzCOM <administrator>)</administrator>	
1465h	(Reserved)	-	-	-	-
1466h	EzCOM start adr. of master	C098	R/W	1~8	
1467h	EzCOM end adr. of master	C099	R/W	1~8	
1468h	EzCOM starting trigger	C100	R/W	00(Input terminal), 01(Always)	
1469h	Up/Down memory mode selection	C101	R/W	0 (not storing the frequency data), 1 (storing the frequency data)	-
146Ah	Reset mode selection	C102	R/W	0 (resetting the trip when RS is on), 1 (resetting the trip when RS is off), 2 (enabling resetting only upon tripping [resetting when RS is on]), 3(resetting only trip)	-
146Bh	Restart mode after reset	C103	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (restarting with active matching frequency)	-
146Ch	UP/DWN clear mode	C104	R/W	0 (0Hz)/1 (EEPROM data)	-
146Dh	FM gain adjustment	C105	R/W	50 to 200	1 [%]
	AM gain adjustment	C106	R/W	50 to 200	1 [%]
146Fh	(Reserved)	-	-	Inaccessible	1 [%]
	AM bias adjustment	C109	R/W	0 to 100	1 [%]
1472h	(Reserved)	-	-	-	1 [%]
1473h	Overload warning level 2	C111	R/W	0 to 2000	0.1 [%]
1474h to 1485h	(Reserved)	-	-	-	-
1486h	Output [11] on-delay time	C130	R/W	0 to 1000	0.1 [sec.]
1487h	Output [11] off-delay time	C131	R/W	0 to 1000	0.1 [sec.]
1488h	Output [12] on-delay time	C132	R/W	0 to 1000	0.1 [sec.]
1489h	Output [12] off-delay time	C133	R/W	0 to 1000	0.1 [sec.]
148Ah to		0100	10/00	0 10 1000	0.1 [300.]
148F	(Reserved)	-	-	-	-
1490h	Output RY on-delay time	C140	R/W	0 to 1000	0.1 [sec.]
1491h	Output RY off-delay time	C141	R/W	0 to 1000	0.1 [sec.]
	Logic output 1 operand A	C142	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1493h	Logic output 1 operand B	C143	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1494h	Logical output 1 operator	C144	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1495h	Logic output 2 operand A	C145	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1496h	Logic output 2 operand B	C146	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1497h	Logical output 2 operator	C147	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1498h	Logic output 3 operand A	C148	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1499h	Logic output 3 operand B	C149	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
149Ah	Logical output 3 operator	C150	R/W	0 (AND), 1 (OR), 2 (XOR)	-
149Bh to 14A3h	(Reserved)	•	-	-	-
14A4h	Input [1] response time	C160	R/W	0 to 200	
14A5h	Input [2] response time	C161	R/W	0 to 200	
14A6h	Input [3] response time	C162	R/W	0 to 200	
14A7h	Input [4] response time	C163	R/W	0 to 200	
14A8h	Input [5] response time	C164	R/W	0 to 200	
14A9h	Input [6] response time	C165	R/W	0 to 200	
14AAh	Input [7] response time	C166	R/W	0 to 200	
14ABh to 14ACh	(Reserved)	-	-	-	
14ADh	Multistage speed/position determination time	C169	R/W	0 to 200	
14A4h to 1500h	unused	-	-	Inaccessible	-

# Parameter group H

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1501h	Auto-tuning Setting	H001	R/W	0 (disabling auto-tuning), 1 (auto-tuning without rotation), 2 (auto-tuning with rotation)	-
1502h	Motor data selection, 1st motor	H002	R/W	0 (Hitachi standard data), 2 (auto-tuned data)	-
1503h	Motor capacity, 1st motor	H003	R/W	00(0.1kW)- 15 (18.5kW)	-
1504h	Motor poles setting, 1st motor	H004	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles), 3 (8 poles), 4 (10 poles)	-
1505h	(Reserved)	-	-	-	-
1506h	Motor speed constant, 1st motor	H005	R/W	0 to 1000	1[%]
1508h∼ 1514h	(Reserved)	-	-	-	-
1516h	Motor stabilization constant, 1st motor	H006	R/W	0 to 255	1
1517h	(Reserved)	-	-	-	-
1516h	Motor constant R1, 1st motor	H020	R/W	1 to 65530	0.001 [Ω]
1517h	(Reserved)	-	-	-	-
1518h	Motor constant R2, 1st motor	H021	R/W	1 to 65530	0.001 [Ω]
1519h	(Reserved)	-	-	-	-
151Ah	Motor constant L, 1st motor	H022	R/W	1 to 65530	0.01 [mH]
151Bh	(Reserved)	-	-	-	-
151Ch	Motor constant lo	H023	R/W	1 to 65530	0.01 [A]
151Dh	Motor constant J	H024 (high)	R/W	1 to 9999000	0.001
151Eh	INICIO CONSTANTO	H024 (low)	R/W	1 10 3933000	0.001
151Hf~ 1524h	(Reserved)	-	1	-	-
1525h	Auto constant R1, 1st motor	H030	R/W	1 to 65530	0.001 [Ω]
1526h	(Reserved)	-	1	Inaccessible	-
1527h	Auto constant R2, 1st motor	H031	R/W	1 to 65530	0.001 [Ω]
1528h	(Reserved)	-	-	-	-
1529h	Auto constant L, 1st motor	H032	R/W	1 to 65530	0.01 [mH]
152Ah	(Reserved)	-	-	Inaccessible	-
152Bh	Auto constant lo, 1st motor	H033	R/W	1 to 65530	0.01 [A]
152Ch	Auto constant J, 1st motor	H034 (high)	R/W	1 to 9999000	0.001
152Dh	, ideo conotanto, rot motor	H034 (low)	R/W	. 10 000000	0.001
152Eh∼ 153Ch	(Reserved)	-	-	-	-
153Dh	Slip compensation P gain for V/f control with FB	H050	R/W	0 to 10000	0.1
153Eh	Slip compensation P gain for V/f control with FB	H051	R/W	0 to 10000	1
153Fh~ 1600h	unused	-	-	Inaccessible	2

# Parameter group P

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1601h	Operation mode on expansion card 1 error	P001	R/W	0 (tripping), 1 (continuing operation)	-
1602h	(Reserved)	-	-	-	-
1603h	[EA] terminal selection	P003	R/W	00 (Speed reference, incl. PID) 01 (Encoder feedback) 02 (Extended terminal for EzSQ)	
1604h	Pulse train input mode for feedback	P004	R/W	00 (Single-phase pulse [EA]) 01 (2-phase pulse [90° difference] 1 ([EA] and [EB])) 02 (2-phase pulse [90° difference] 2 ([EA] and [EB])) 03 (Single-phase pulse [EA] and direction signal [EB])	
1605h to 160Ah	(Reserved)	-	-	-	-
160Bh	Encoder pulse-per-revolution (PPR) setting	P011	R/W	32 to 1024	1
160Ch	Simple positioning selection	P012	R/W	00 (simple positioning deactivated) 02 (simple positioning activated)	-
160Dh to 160Eh	(Reserved)	-	-	-	-
160Fh	Creep speed	P015	R/W	"start frequency" to 1000	0.01 [Hz]
1610h to 1619h	(Reserved)	-	-	-	-
161Ah	Over-speed error detection level	P026	R/W	0 to 1500	0.1 [%]
161Bh	Speed deviation error detection level	P027	R/W	0 to 12000	0.01 [Hz]
161Ch to 161Eh	(Reserved)	-	-	-	-
161Fh	Accel/decel time input selection	P031	R/W	0 (digital operator), 3 (easy sequence)	-
1620h	(Reserved)	-	-	-	-
1621h	Torque command input selection	P033	R/W	0 (O terminal), 1 (OI terminal), 3 (digital operator), 06 (Option)	-
1622h 1623h	Torque command setting	P034 -	R/W	0 to 200	1 [%]
1623fi 1624h	(Reserved) Torque bias mode	P036	- R/W	0 (disabling the mode),	-
1625h	Torque bias value	P037	R/W	1 (digital operator), -200 to +200	1 [%]
1626h	Torque bias polarity selection	P038	R/W	0 (as indicated by the sign), 1 (depending on the operation direction), 05(Option)	-
1627h	Speed limit for torque-controlled	P039 (high)	R/W	0 to 12000	0.01 [Hz]
1628h	operation (forward rotation)	P039 (low)	R/W	3 12 12 000	0.01 [112]
1629h 162Ah	Speed limit for torque-controlled operation (reverse rotation)	P040 (high) P040 (low)	R/W R/W	0 to 12000	0.01 [Hz]
162Bh	Speed / torque control switching time	P041	R/W	0 to 1000	-
162Ch to 162Dh	(Reserved)	-	-	-	-
162Eh	Communication watchdog timer	P044	R/W	0 to 9999	0.01 [sec.]
162Fh	Inverter action on communication error	P045	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1630h	DeviceNet polled I/O: Output instance number	P046	R/W	0-20	-
1631h	(Reserved)	-	-		-
1632h	Inverter action on communication idle mode	P048	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-

Register	Function name	Function code	R/W	Monitoring and setting items	Data
No.	- and an indirection			o o	resolution
1633h	Motor poles setting for RPM	P049	R/W	0 (0 pole), 1 (2 poles), 2 (4 poles), 3 (6 poles),4 (8 poles),5 (10 poles), 6 (12 poles),7 (14 poles),8 (16 poles), 9 (18 poles), 10 (20 poles),11 (22 poles), 12 (24 poles),13 (26 poles),14 (28 poles), 15 (30 poles), 16 (32 poles),17 (34 poles), 18 (36 poles), 19 (38 poles)	-
1634h to 1638h	(Reserved)	-	-	-	-
1639h	Pulse train frequency scale	P055	R/W	10 to 320 (input frequency corresponding to the allowable maximum frequency)	0.1 [kHz]
163Ah	Time constant of pulse train frequency filter	P056	R/W	1 to 200	0.01 [sec.]
163Bh	Pulse train frequency bias	P057	R/W	-100 to +100	1 [%]
163Ch	Pulse train frequency limit	P058	R/W	0 to 100	1 [%]
163Dh	(Reserved)	-	1	-	-
163Eh	Multistage position 0	P060(HIGH)	R/W		1
163Fh	ividitistage position o	P060(LOW)	R/W		'
1640h	Multistage position 1	P061(HIGH)	R/W		1
1641h	Waltadage position 1	P061(LOW)	R/W		
1642h	Multistage position 2	P062(HIGH)	R/W		1
1643h	manadage poonen <u>-</u>	P062(LOW)	R/W		·
1644h	Multistage position 3	P063(HIGH)	R/W		1
1645h		P063(LOW)	R/W		
1646h	Multistage position 4	P064(HIGH)	R/W	4	1
1647h		P064(LOW)	R/W		
1648h 1649h	Multistage position 5	P065(HIGH)	R/W R/W	4	1
164Ah		P065(LOW) P066(HIGH)	R/W		
164Bh	Multistage position 6	P066(LOW)	R/W	-	1
164Ch		P067(HIGH)	R/W		
164Dh	Multistage position 7	P067(LOW)	R/W	-	1
164Eh	Homing mode selection	P068	R/W	0(Low) / 1(High)	
164Fh	Homing direction	P069	R/W	0(FW) / 1(RV)	
1650h	Low-speed homing frequency	P070	R/W	0 to 1000	
1651h	High-speed homing frequency	P071	R/W	0 to 40000	
1652h		P072(HIGH)	R/W		
1653h	Position range (forward)	P072(LOW)	R/W	0 to 268435455	1
1654h	Desition range (correct)	P073(HIGH)	R/W	269425455 to 0	
1655h	Position range (reverse)	P073(LOW)	R/W	-268435455 to 0	1
1656h	(Reserved),		-		_
1657h	Positioning mode	P075	R/W	00With limitation 01No limitation (fastest control)	
1658h	(Reserved),	-	-	<b> -</b>	-
1659h	Encoder disconnection timeout	P077	R/W	0 to 100	0.1[sec.]
165Ah to 1665h	(Reserved),	-	-	-	-
1656h to 1665h	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1666h	EzSQ user parameter U (00)	P100	R/W	0 to 65530	1
1667h	EzSQ user parameter U (01)	P101		0 to65530	1
1668h	EzSQ user parameter U (02)	P102		0 to 65530	1 1
1669h	EzSQ user parameter U (03)	P103		0 to 65530	1
166Ah	EzSQ user parameter U (04)	P104		0 to 65530	1
166Bh	EzSQ user parameter U (05)	P105		0 to 65530	1
166Ch	EzSQ user parameter U (06)	P106		0 to 65530	1
166Dh	EzSQ user parameter U (07)	P107		0 to 65530	1
166Eh	EzSQ user parameter U (08)	P108		0 to 65530	1
166Fh	EzSQ user parameter U (09)	P109		0 to 65530	1 1
1670h	EzSQ user parameter U (10)	P110		0 to 65530	1
1671h	EzSQ user parameter U (11)	P111		0 to 65530	1 1
1672h	EzSQ user parameter U (12)	P112		0 to 65530	1 1
1673h	EzSQ user parameter U (13)	P113		0 to 65530	1
1674h	EzSQ user parameter U (14)	P114		0 to 65530	1 1
1675h	EzSQ user parameter U (15)	P115		0 to 65530	1 1
1676h	EzSQ user parameter U (16)	P116		0 to 65530	1 1
1677h	EzSQ user parameter U (17)	P117		0 to 65530	1 1
1678h	EzSQ user parameter U (18)	P118		0 to 65530	1 1
1679h	EzSQ user parameter U (19)	P119		0 to 65530	1 1
167Ah	EzSQ user parameter U (20)	P120		0 to 65530	1 1
167Bh	EzSQ user parameter U (21)	P121		0 to 65530	1 1
167Ch	EzSQ user parameter U (22)	P122		0 to 65530	1 1
167Dh	EzSQ user parameter U (23)	P123		0 to 65530	1 1
167Eh	EzSQ user parameter U (24)	P124		0 to 65530	1 1
167Fh	EzSQ user parameter U (25)	P125		0 to 65530	1 1
1680h	EzSQ user parameter U (26)	P126		0 to 65530	-
1681h	EzSQ user parameter U (27)	P127		0 to 65530	
1682h	EzSQ user parameter U (28)	P128		0 to 65530	1
1683h	EzSQ user parameter U (29)	P129		0 to 65530	1 1
1684h	EzSQ user parameter U (30)	P130		0 to 65530	1
1685h	EzSQ user parameter U (31)	P131		0 to 65530	1
1686h to 168Dh	(Reserved),	-	-	-	-
168Eh	EzCOM number of data	P140	R/W	1 to 5	
168Fh	EzCOM destination 1 adderss	P141		1 to 247	
1690h	EzCOM destination 1 register	P142		0000 to FFFF	
1691h	EzCOM source 1 register	P143		0000 to FFFF	
1692h	EzCOM destination 2 adderss	P144		1 to 247	
1693h	EzCOM destination 2 register	P145	R/W	0000 to FFFF	
1694h	EzCOM source 2 register	P146		0000 to FFFF	
1695h	EzCOM destination 3 adderss	P147		1 to 247	
1696h	EzCOM destination 3 register	P148		0000 to FFFF	
1697h	EzCOM source 3 register	P149	R/W	0000 to FFFF	
1698h	EzCOM destination 4 adderss	P150	R/W	1 to 247	
1699h	EzCOM destination 4 register	P151		0000 to FFFF	
169Ah	EzCOM source 4 register	P152		0000 to FFFF	
169Bh	EzCOM destination 5 adderss	P153		1 to 247	
169Ch	EzCOM destination 5 register	P154		0000 to FFFF	
169Dh	EzCOM source 5 register	P155		0000 to FFFF	
169Eh $\sim$	(Reserved),				

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
16A2h	Option I/F command register to write 1	P160	R/W	0000 to FFFF	-
16A3h	Option I/F command register to write 2	P161		0000 to FFFF	_
16A4h	Option I/F command register to write 3	P162		0000 to FFFF	-
16A5h	Option I/F command register to write 4	P163	R/W	0000 to FFFF	-
16A6h	Option I/F command register to write 5	P164	R/W	0000 to FFFF	-
16A7h	Option I/F command register to write 6	P165	R/W	0000 to FFFF	-
16A8h	Option I/F command register to write 7	P166		0000 to FFFF	-
16A9h	Option I/F command register to write 8	P167		0000 to FFFF	-
16AAh	Option I/F command register to write 9	P168	R/W	0000 to FFFF	-
16ABh	Option I/F command register to write 10	P169	R/W	0000 to FFFF	-
16ACh	Option I/F command register to read 1	P170	R/W	0000 to FFFF	-
16ADh	Option I/F command register to read 2	P171		0000 to FFFF	-
16AEh	Option I/F command register to read 3	P172		0000 to FFFF	-
16AFh	Option I/F command register to read 4	P173		0000 to FFFF	-
16B0h	Option I/F command register to read 5	P174		0000 to FFFF	-
16B1h	Option I/F command register to read 6	P175		0000 to FFFF	-
16B2h	Option I/F command register to read 7	P176		0000 to FFFF	-
16B3h	Option I/F command register to read 8	P177		0000 to FFFF	-
16B4h	Option I/F command register to read 9	P178	R/W	0000 to FFFF	-
16B5h	Option I/F command register to read 10	P179	R/W	0000 to FFFF	-
16B6h	Profibus Node address	P180	R/W	0 to 125	-
	Profibus Clear Node address	P181	R/W	0(clear)/1(not clear)	-
16B8h	Profibus Map selection	P182	R/W	0(PPO)/1(Comvertional)	-
16B9h to 16BAh	(Reserved),	-	-	-	-
16BBh	CANopen Node address	P185	R/W	0 to 127	
	CAN open communication speed	P186	R/W	0 (automatic) 5 (250kbps) 1 (10kbps) 6 (500kbps) 2 (20kbps) 7 (800kbps) 3 (50kbps) 8 (1Mbps) 4 (125kbps)	
16BDh to 1E00h	Unused	-	-	-	-
1E01h	Coil data 1	-	R/W	2 : coil number 001Fn -	-
1E02h	Coil data 2	-	R/W	2 <sup>1</sup> : coil number 0020h – 2 <sup>15</sup> : coil number 002Fh -	-
1E03h	Coil data 3	-	R/W	2 <sup>1</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1E04h	Coil data 4	-	R/W	2 <sup>1</sup> : coil number 0030h – 2 <sup>15</sup> : coil number 003Fh -	-
1E05h	Coil data 5	-	R/W	2 <sup>1</sup> : coil number 0040h – 2 <sup>15</sup> : coil number 004Fh -	-
1E06h to 1F18h	(reserved)	-	-	-	-
1E19h to 1F00h	Unused	-	-	-	-
1F01h	Coil data 0	-	R/W	2 <sup>1</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1F02h to 1F1Dh	(reserved)	-	-	(note: 2)	-
1F1Eh to 2102h	Unused	-	-	Inaccessible	-

Note 1: above register (coil data 0 to 5) is consisted with 16 coil data. EzCOM communication (inverter to inverter) doesn't support coil, but only register is support, in case of need to access coil, please use above registers.

Note 2: Be sure not to write into above 1F02h to 1F1Dh.

(vi) List of registers (2nd control settings)

<u> </u>	0 (	0 /			
Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2103h	Acceleration time (1),	F202 (high)	R/W	1 to 360000	0.01 [sec.]
2104h	2nd motor	F202 (low)	R/W	1 10 300000	0.01 [Sec.]
2105h	Deceleration time (1),	F203 (high)	R/W	1 to 360000	0.01 [sec.]
2106h	2nd motor	F203 (low)	R/W	1 10 000000	0.01 [300.]
2107h to 2200h	unused		-	Inaccessible	-

(vii) List of registers (function modes for the 2nd control settings)

Register	f registers (function modes	Function			Data
No.	Function name	code	R/W	Monitoring and setting items	resolution
2201h	Frequency source, 2nd motor	A201	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
2202h	Frequency source, 2nd motor	A202	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
2203h	Base frequency, 2nd motor	A203	R/W	300 to "maximum frequency, 2nd motor"	0.1 [Hz]
2204h	Maximum frequency, 2nd motor	A204	R/W	300 to 4000	0.1 [Hz]
2205h to 2215h	(Reserved)	-	-	Inaccessible	-
2216h	Multispeed frequency setting,	A220 (high)	R/W	0 or "start frequency" to "maximum	0.01 [Hz]
2217h	2nd motor	A220 (low)	R/W	frequency, 2nd motor"	0.01 [112]
2218h to 223Ah	(Reserved)	-	-	Inaccessible	-
223Bh	Torque boost method selection, 2nd motor	A241	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
223Ch	Manual torque boost value, 2nd motor	A242	R/W	20 to 200	1 [%]
223Dh	Manual torque boost frequency, 2nd motor	A243	R/W	0 to 255	1 [%]
223Eh	V/F characteristic curve selection, 2nd motor	A244	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control)	-
223Fh	V/f gain, 2nd motor	A245	R/W	20 to 100	1 [%]
2240h	Voltage compensation gain setting for automatic torque boost, 2nd motor	A246	R/W	0 to 255	1
2241h	Slippage compensation gain setting for automatic torque boost, 2nd motor	A247	R/W	0 to 255	1
2242h to 224Eh	(Reserved)	-	-	Inaccessible	-
224Fh	Frequency upper limit,	A261 (high)	R/W	00 or "2nd minimum frequency limit"	0.01 [Hz]
2250h	2nd motor	A261 (low)	R/W	to "maximum frequency, 2nd motor"	0.01 [112]
2251h	Frequency lower limit,	A262 (high)	R/W	00 or "start frequency" to "maximum	0.01 [Hz]
2252h	2nd motor	A262 (low)	R/W	frequency, 2nd motor limit"	
2253h to 2268h	(Reserved)	-	-	Inaccessible	-
2269h	AVR function select, 2nd motor	A281	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
226Ah	AVR voltage select, 2nd motor	A282	R/W	0 (200)/1 (215)/2 (220)/3 (230)/4 (240)	
226Bh to 226Eh	(Reserved)	-	-	Inaccessible	-

					Data
Register	Function name	Function	R/W	Monitoring and setting items	resoluti
No.		code			on
226Fh	Acceleration time (2),	A292 (high)	R/W	1 to 360000	0.01
2270h	2nd motor	A292 (low)	R/W	1 10 360000	[sec.]
2271h	Deceleration time (2),	A293 (high)	R/W	1 to 360000	0.01
2272h	2nd motor	A293 (low)	R/W	1 10 300000	[sec.]
2273h	Select method to switch to Acc2/Dec2, 2nd motor	A294	R/W	(switching by 2CH terminal),     (switching by setting), 2 (switching only when the rotation is reversed)	-
2274h	Acc1 to Acc2 frequency	A295 (high)	R/W	0 to 40000 (100000)	0.01
2275h	transition point, 2nd motor	A295 (low)	R/W	0 10 40000 (100000)	[Hz]
2276h	Dec1 to Dec2 frequency	A296 (high)	R/W	0 to 40000 (100000)	0.01
2277h	transition point, 2nd motor	A296 (low)	R/W	0 10 40000 (100000)	[Hz]
2278h to 230Bh	(Reserved)	-	-	-	-
230Ch	Level of electronic thermal, 2nd motor	b212	R/W	200 to 1000	0.1 [%]
230Dh	Electronic thermal characteristic, 2nd motor	b213	R/W	(reduced-torque characteristic),     (constant-torque characteristic),     (free setting)	-
230Eh to 2315h	(Reserved)	-	-	-	-
2316h	Overload restriction operation mode, 2nd motor	b221	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
2317h	Overload restriction level, 2nd motor	b222	R/W	100 to 2000	0.1[%]
2318h	Deceleration rate at overload restriction, 2nd motor	b223	R/W	1 to 30000	0.1 [sec.]
2319h to 2428h	unused	-	-	Inaccessible	-
2429h	Overload warning level 2, 2nd motor	C241	R/W	0 to 2000	0.1[%]
242Ah to 2501h	Unused	-	-	Inaccessible	-
2502h	Motor data selection, 2nd motor	H202	R/W	0 (Hitachi standard data), 2 (auto-tuned data),	-
2503h	Motor capacity, 2nd motor	H203	R/W	00(0.1kW)- 15 (18.5kW)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2504h	Motor poles setting, 2nd motor	H204	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles), 3 (8 poles), 4 (10 poles)	-
2505h	Motor speed constant,	H205 (high)	R/W	1 to 1000	0.001
2506h	2nd motor	H205 (low)	R/W		0.001
2507h	Motor stabilization constant, 2nd motor	H206	R/W	0 to 255	1
2508h to 2515h	(Reserved)	-	-	-	-
2516h	Motor constant R1, 2nd motor	H220 (high)	R/W	1 to 65535	0.001 [Ω]
2517h	(Reserved)	-	-	-	-
2518h	Motor constant R2, 2nd motor	H221 (high)	R/W	1 to 65535	0.001 [Ω]
2519h	(Reserved)	-	-	-	-
251Ah	Motor constant L, 2nd motor	H222 (high)	R/W	1 to 65535	0.01 [mH]
251Bh	(Reserved)	-	-	-	-
251Ch	Motor constant lo, 2nd motor	H223 (high)	R/W	1 to 65535	0.01 [A]
251Dh	Motor constant J, 2nd	H224 (high)	R/W	1 to 9999000	0.001
251Eh	motor	H224 (low)	R/W	1 10 9999000	0.001
251Fh to 2524h	(Reserved)	-	-	-	-
2525h	Auto constant R1, 2nd motor	H230 (high)	R/W	1 to 65530	0.001 [Ω]
2526h	(Reserved)	-	-	-	-
2527h	Auto constant R2, 2nd motor	H231 (high)	R/W	1 to 65530	0.001 [Ω]
2528h	(Reserved)	-	-	-	-
2529h	Auto constant L, 2nd motor	H232 (high)	R/W	1 to 65530	0.01 [mH]
252Ah	(Reserved)	-	-	-	-
252Bh	Auto constant lo, 2nd motor	H233 (high)	R/W	1 to 65530	0.01 [A]
252Ch	Auto constant J, 2nd	H234 (high)	R/W	1 to 9999000	0.001
252Dh	motor	H234 (low)	R/W	1 10 3333000	0.001
252Eh ∼	Unused	-	-	Inaccessible	-

# Drive Parameter Setting Tables



In This	Appendix	page
-	Introduction	2
_	Parameter Settings for Keypad Entry	2

# Introduction

This appendix lists the user-programmable parameters for the WJ200 series inverters and the default values for European and U.S. product types. The right-most column of the tables is blank, so you can record values you have changed from the default. This involves just a few parameters for most applications. This appendix presents the parameters in a format oriented toward the keypad on the inverter.

# Parameter Settings for Keypad Entry

WJ200 series inverters provide many functions and parameters that can be configured by the user. We recommend that you record all parameters that have been edited, in order to help in troubleshooting or recovery from a loss of parameter data.

Inverter model	WJ200	1	This information is printed on the specification label
MFG. No.			located on the right side of the inverter

### **Main Profile Parameters**



**NOTE**:. Mark "✓" in B031=10 shows the accessible parameters when B031 is set "10", nigh level access.

	"F" Func	Run	Defau	lts	
Func. Code	Name	Description	Mode Edit	Initial data	Units
F00 I	Output frequency setting	Standard default target frequency that determines constant motor speed, range is 0.0 / start frequency to maximum frequency (A004)	<b>√</b>	0.0	Hz
F002	Acceleration time (1)	Standard default acceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
F202	Acceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	sec.
F003	Deceleration time (1)	Standard default deceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
F203	Deceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	sec.
F004	Keypad RUN key routing	Two options; select codes:  ODForward  OIReverse	×	00	_

## **Standard Functions**



NOTE: Mark "✓" in B031=10 shows the accessible parameters when B031 is set "10", high level access.

	"A" Function			n Defaults		
Func. Code	Nama		Mode Edit	Initial data	Units	
A00 I	Frequency source	Eight options; select codes:  ODPOT on ext. operator  OIControl terminal	×	02	_	
A50 I	Frequency source,  2 <sup>nd</sup> motor	O2Function F001 setting O3ModBus network input O4Option O5Pulse train input O7via EzSQ OCalculate function output	×	02	_	
A005	Run command source	Four options; select codes:  O!Control terminal  O?Run key on keypad,	×	02	_	
A202	Run command source, $2^{ m nd}$ motor	or digital operator  OBModBus network input  OHOption	×	02	_	
A003	Base frequency	Settable from 30 Hz to the maximum frequency(FDD4)	×	60.0	Hz	
A203	Base frequency, 2 <sup>nd</sup> motor	Settable from 30 Hz to the 2 <sup>nd</sup> maximum frequency(F204)	×	60.0	Hz	
A004	Maximum frequency	Settable from the base frequency to 400 Hz	×	60.0	Hz	
A504	Maximum frequency, 2 <sup>nd</sup> motor	Settable from the 2 <sup>nd</sup> base frequency to 400 Hz	×	60.0	Hz	
A005	[AT] selection	Three options; select codes:  ODSelect between [O] and [OI] at [AT] (ON=OI, OFF=O)  OZSelect between [O] and external POT at [AT] (ON=POT, OFF=O)  OJSelect between [OI] and external POT at [AT] (ON=POT, OFF=OI)	×	00	-	
A0 1 1	[O] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0	×	0.00	Hz	
A0 15	[O] input active range end frequency	The output frequency corresponding to the analog input range ending point, range is 0.0 to 400.0	×	0.00	Hz	
AO 13	[O] input active range start voltage	The starting point (offset) for the active analog input range, range is 0. to 100.	×	0.	%	

	"A" Func	tion	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
AD 14	[O] input active range end voltage	The ending point (offset) for the active analog input range, range is 0. to 100.	×	100.	%
AO 15	[O] input start frequency enable	Two options; select codes:  ODUse offset (AD I I value)  O IUse OHz	×	01	_
AO 16	Analog input filter	Range n = 1 to 31, 1 to 30: $\times$ 2ms filter 31: 500ms fixed filter with $\pm$ 0.1kHz hys.	×	8.	Spl.
רו מא			✓	00	-
AO 19	Multi-speed operation selection	Select codes:  ODBinary operation (16 speeds selectable with 4 terminals)  O IBit operation (8 speeds selectable with 7 terminals)	×	00	-
A050	Multi-speed freq. 0	Defines the first speed of a multi-speed profile, range is 0.0 / start frequency to 400Hz  ROZO = Speed 0 (1st motor)	<b>✓</b>	0.0	Hz
A550	Multi-speed freq. 0, 2 <sup>nd</sup> motor	Defines the first speed of a multi-speed profile or a 2nd motor, range is 0.0 / start frequency to 400Hz  R220 = Speed 0 (2nd motor)	✓	0.0	Hz
HO2 I to HO35	Multi-speed freq. 1 to 15 (for both motors)	Defines 15 more speeds, range is $0.0$ / start frequency to $400$ Hz. RO2 I=Speed $1 \sim RO35$ =Speed15	<b>✓</b>	See next row	Hz
		RO2 I ~ RO35	✓	0.0	$_{ m Hz}$
A038	Jog frequency	Defines limited speed for jog, range is from start frequency to 9.99 Hz	<b>√</b>	6.00	Hz
R039	Jog stop mode	Define how end of jog stops the motor; six options:  ODFree-run stop (invalid during run)  OIControlled deceleration (invalid during run)  OZDC braking to stop(invalid during run)  OJFree-run stop (valid during run)  OHControlled deceleration (valid during run)  OHControlled deceleration (valid during run)  OSDC braking to stop(valid during run)	×	04	_
A04 I	Torque boost select	Two options: 00Manual torque boost	×	00	_

	"A" Func	tion	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A54 I	Torque boost select, 2 <sup>nd</sup> motor	🛛 IAutomatic torque boost	×	00	_
A042	Manual torque boost value	Can boost starting torque between 0 and 20% above normal V/f curve,	<b>√</b>	1.0	%
A242	Manual torque boost value, 2 <sup>nd</sup> motor	range is 0.0 to 20.0%	✓	1.0	%
A043	Manual torque boost frequency	Sets the frequency of the V/f breakpoint A in graph (top of previous page) for torque boost,	<b>✓</b>	5.0	%
A243	Manual torque boost frequency, 2 <sup>nd</sup> motor	range is 0.0 to 50.0%	✓	5.0	%
A044	V/f characteristic curve	Four available V/f curves;  OConstant torque  IReduced torque (1.7)	×	00	_
A544	V/f characteristic curve, 2 <sup>nd</sup> motor	02Free V/F 03Sensorless vector (SLV)	×	00	_
A045	V/f gain	Sets voltage gain of the inverter, range is 20. to 100.%	✓	100.	%
A245	V/f gain, 2 <sup>nd</sup> motor		✓	100.	%
A046	Voltage compensation gain for automatic torque boost	Sets voltage compensation gain under automatic torque boost, range is 0. to 255.	<b>√</b>	100.	_
A246	Voltage compensation gain for automatic torque boost, 2nd motor	G	<b>√</b>	100.	_
ПСРОВ	Slip compensation gain for automatic torque boost	Sets slip compensation gain under automatic torque boost, range is 0. to 255.	✓	100.	_
A547	Slip compensation gain for automatic torque boost, 2 <sup>nd</sup> motor	Tunge is of to 200.	<b>√</b>	100.	_
A05 I	DC braking enable	Three options; select codes:  ODDisable  OIEnable during stop  OZFrequency detection	×	00	_
A052	DC braking frequency	The frequency at which DC braking begins, range is from the start frequency (6082) to 60Hz	×	0.5	Hz
A053	DC braking wait time	The delay from the end of controlled deceleration to start of DC braking (motor free runs until DC braking begins), range is 0.0 to 5.0 sec.	×	0.0	sec.
A054	DC braking force for deceleration	Level of DC braking force, settable from 0 to 100%	×	50.	%

	"A" Func	tion	Run	Defau	ılts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A055	DC braking time for deceleration	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	×	0.5	sec.
A056	DC braking / edge or level detection for [DB] input	Two options; select codes:  ODEdge detection  O ILevel detection	×	01	_
R057	DC braking force at start	Level of DC braking force at start, settable from 0 to 100%	×	0.	%
A058	DC braking time at start	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	×	0.0	sec.
A059	Carrier frequency during DC braking	Carrier frequency of DC braking performance, range is from 2.0 to 15.0kHz	×	5.0	sec.
A06 1	Frequency upper limit	Sets a limit on output frequency less than the maximum frequency (ADD4). Range is from frequency lower limit (AD62) to maximum frequency (ADD4). 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz
A26 I	Frequency upper limit, 2nd motor	Sets a limit on output frequency less than the maximum frequency (A204). Range is from frequency lower limit (A262) to maximum frequency (A204). 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz
A062	Frequency lower limit	Sets a limit on output frequency greater than zero. Range is start frequency ( <b>b082</b> ) to frequency upper limit ( <b>R05</b> I) 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz
A565	Frequency lower limit, 2nd motor	Sets a limit on output frequency greater than zero. Range is start frequency (bob2) to frequency upper limit (A25 I) 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz
A063 A065 A067	Jump freq. (center) 1 to 3	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency) Range is 0.0 to 400.0 Hz	×	0.0 0.0 0.0	Hz
9064 9066 9068	Jump freq. width (hysteresis) 1 to 3	Defines the distance from the center frequency at which the jump around occurs Range is 0.0 to 10.0 Hz	×	0.5 0.5 0.5	Hz
A069	Acceleration hold frequency	Sets the frequency to hold acceleration, range is 0.0 to 400.0Hz	×	0.00	Hz

	"A" Func	tion	Run	Defau	ılts
Func. Code	Name	Description	Mode Edit	Initial data	Units
םרם א	Acceleration hold time	Sets the duration of acceleration hold, range is 0.0 to 60.0 seconds	×	0.0	sec.
ו רם	PID enable	Enables PID function, three option codes:  OOPID Disable OIPID Enable OZPID Enable with reverse output	×	00	_
ADJ 2	PID proportional gain	Proportional gain has a range of 0.00 to 25.00	<b>✓</b>	1.0	-
ECON	PID integral time constant	Integral time constant has a range of 0.0 to 3600 seconds	✓	1.0	sec.
АОЛЧ	PID derivative time constant	Derivative time constant has a range of 0.0 to 100 seconds	✓	0.00	sec.
A075	PV scale conversion	Process Variable (PV), scale factor (multiplier), range of 0.01 to 99.99	×	1.00	-
A076	PV source	Selects source of Process Variable (PV), option codes:  OO[OI] terminal (current in) OI[O] terminal (voltage in) OZModBus network OJPulse train input IOCalculate function output	×	00	_
ררם	Reverse PID action	Two option codes:  OOPID input = SP-PV  O IPID input = -(SP-PV)	×	00	-
ADJB	PID output limit	Sets the limit of PID output as percent of full scale, range is 0.0 to 100.0%	×	0.0	%
POT9	PID feed forward selection	Selects source of feed forward gain, option codes:  ODisabled  I[O] terminal (voltage in)  C[OI] terminal (current in)	×	00	-
A08 I	AVR function select	Automatic (output) voltage regulation, selects from three type of AVR functions, three	×	02	_
A28 I	AVR function select, 2 <sup>nd</sup> motor	option codes:  ODAVR enabled  OIAVR disabled  OZAVR enabled except during deceleration	×	02	_
A085	AVR voltage select	200/215/220/230/240	×	200	V
A585	AVR voltage select, 2 <sup>nd</sup> motor		×	200	V
R083	AVR filter time constant	Define the time constant of the AVR filter, range is 0 to 10 sec.	×	0.300	sec.

	"A" Fund	tion	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
R084	AVR deceleration gain	Gain adjustment of the braking performance, range is 50 to 200%	×	100.	%
A085	Energy-saving operation mode	Two option codes:  ONormal operation  IEnergy-saving operation	×	00	_
A086	Energy-saving mode tuning	Range is 0.0 to 100 %.	×	50.0	%
A092	Acceleration time (2)	Duration of 2 <sup>nd</sup> segment of acceleration, range is: 0.01 to 3600 sec.	<b>✓</b>	10.00	sec.
A592	Acceleration time (2), 2 <sup>nd</sup> motor		✓	10.00	sec.
A093	Deceleration time (2)	Duration of 2 <sup>nd</sup> segment of deceleration, range is: 0.01 to 3600 sec.	<b>√</b>	10.00	sec.
A293	Deceleration time (2), 2 <sup>nd</sup> motor		<b>√</b>	10.00	sec.
A094	Select method to switch to Acc2/Dec2 profile	Three options for switching from 1st to 2nd accel/decel:  OD2CH input from terminal	×	00	_
A294	Select method to switch to Acc2/Dec2 profile, 2 <sup>nd</sup> motor	□ 1Transition frequency □2Forward and reverse	×	00	-
A095	Acc1 to Acc2 frequency transition point	Output frequency at which Accel1 switches to Accel2, range is 0.0 to 400.0 Hz	×	0.0	Hz
A295	Acc1 to Acc2 frequency transition point, 2 <sup>nd</sup> motor		×	0.0	Hz
A096	Dec1 to Dec2 frequency transition point	Output frequency at which Decel1 switches to Decel2, range is 0.0 to 400.0 Hz	×	0.0	Hz
A296	Dec1 to Dec2 frequency transition point, 2 <sup>nd</sup> motor	Trange is one to Toolo 112	×	0.0	Hz
R097	Acceleration curve selection	Set the characteristic curve of Acc1 and Acc2, five options:  ODlinear  OIS-curve  OZU-curve  OJInverse U-curve  OHEL S-curve	×	01	-
A098	Deceleration curve selection	Set the characteristic curve of Dec1 and Dec2, options are same as above (RD91)	×	01	_
A 10 I	[OI] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	×	0.00	Hz
A 102	[OI] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	×	0.0	Hz

"A" Function		Run	Defaults		
Func. Code	Name	Description	Mode Edit	Initial data	Units
A 103	[OI] input active range start current	The starting point (offset) for the current input range, range is 0. to 100.%	×	20.	%
A 104	[OI] input active range end current	The ending point (offset) for the current input range, range is 0. to 100.%	X	100.	%
A 105	[OI] input start frequency select	Two options; select codes:  ODUse offset (A IO I value)  O IUse 0Hz	×	00	_
A 13 I	Acceleration curve constant	Range is 01 to 10.	×	02	-
A 132	Deceleration curve constant	Range is 01 to 10.	×	02	-
A 14 I	A input select for calculate function	Seven options:  ODOperator  OIVR  OZTerminal [O] input  OHRS485  ODOption  OHPulse train input	×	02	-
A 142	B input select for calculate function	Seven options:  ODOperator  OIVR  OZTerminal [O] input  OHRS485  ODOption  OHPulse train input	×	03	_
A 143	Calculation symbol	Calculates a value based on the A input source (A IM I selects) and B input source (A IM2 selects).  Three options:  ODADD (A input + B input)  OISUB (A input * B input)  OZMUL (A input * B input)	×	00	-
A 145	ADD frequency	An offset value that is applied to the output frequency when the [ADD] terminal is ON. Range is 0.0 to 400.0 Hz	<b>✓</b>	0.00	Hz
A 146	ADD direction select	Two options:  ODPlus (adds # 145 value to the output frequency setting)  OIMinus (subtracts # 145 value from the output frequency setting)	×	00	-
A 150	Curvature of EL-S-curve at the start of acceleration	Range is 0 to 50%	×	10.	%

# C-10

	"A" Func	etion	Run	Defau	ılts
Func. Code	Name	Description	Mode Edit	Initial data	Units
A 15 I	Curvature of EL-S-curve at the end of acceleration	Range is 0 to 50%	×	10.	%
A 152	Curvature of EL-S-curve at the start of deceleration	Range is 0 to 50%	×	10.	%
A 153	Curvature of EL-S-curve at the end of deceleration	Range is 0 to 50%	×	10.	%
A 154	Deceleration hold frequency	Sets the frequency to hold deceleration, range is 0.0 to 400.0Hz	×	0.0	Hz
A 155	Deceleration hold time	Sets the duration of deceleration hold, range is 0.0 to 60.0 seconds	×	0.0	sec.
A 156	PID sleep function action threshold	Sets the threshold for the action, set range 0.0~400.0 Hz	×	0.00	Hz
A 157	PID sleep function action delay time	Sets the delay time for the action, set range 0.0~25.5 sec.	×	0.0	sec.
A 16 I	[VR] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	×	0.00	Hz
A 162	[VR] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	×	0.00	Hz
A 163	[VR] input active range start %	The starting point (offset) for the current input range, range is 0. to 100.%	×	0.	%
A 164	[VR] input active range end %	The ending point (offset) for the current input range, range is 0. to 100.%	×	100.	%
A 165	[VR] input start frequency select	Two options; select codes:  ODUse offset (A 16 1 value)  O 1Use 0Hz	×	01	_

# **Fine Tuning Functions**

	"b" Fun	etion	Run	Defaul	ts
Func. Code	Name	Description	Mode Edit	Initial data	Units
Ь00 I	Restart mode on power failure / under-voltage trip	Select inverter restart method, Five option codes:  ODAlarm output after trip, no automatic restart  OlRestart at OHz	×	00	-
		02Resume operation after frequency matching 03Resume previous freq. after			
		freq. matching, then decelerate to stop and display trip info			
		<b>D4</b> Resume operation after active freq. matching			
P005	Allowable under-voltage power failure time	The amount of time a power input under-voltage can occur without tripping the power failure alarm. Range is 0.3 to 25 sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	×	1.0	sec.
ь003	Retry wait time before motor restart	Time delay after under-voltage condition goes away, before the inverter runs motor again. Range is 0.3 to 100 seconds.	×	1.0	sec.
6004	Instantaneous power failure / under-voltage trip alarm enable	Three option codes:  ODDisable  OIEnable  OZDisable during stop and decelerates to a stop	×	00	_
ь005	Number of restarts on power failure / under-voltage trip events	Two option codes:  ODRestart 16 times  O IAlways restart	×	00	_
ьоол	Restart frequency threshold	Restart the motor from 0Hz if the frequency becomes less than this set value during the motor is coasting, range is 0 to 400Hz	×	0.00	Hz
6008	Restart mode on over voltage / over current trip	Select inverter restart method, Five option codes:  ODAlarm output after trip, no automatic restart  OIRestart at OHz  OZResume operation after frequency matching  OJResume previous freq. after active freq. matching, then decelerate to stop and display trip info  OHResume operation after active freq. matching	×	00	_
ьо 10	Number of retry on over voltage / over current trip	Range is 1 to 3 times	×	3	times

# C-12

	"b" Fur	ection	Run	Default	S
Func. Code	Name	Description	Mode Edit	Initial data	Units
ьо п	Retry wait time on over voltage / over current trip	Range is 0.3 to 100 sec.	×	1.0	sec.
PO 15	Level of electronic thermal	Set a level between 20% and 100% for the rated inverter current.	×	Rated current for	A
PS 15	Level of electronic thermal, 2 <sup>nd</sup> motor		×	each inverter model *1	A
ьо 13	Electronic thermal characteristic	Select from three curves, option codes:	×	01	_
62 I3	Electronic thermal characteristic, 2 <sup>nd</sup> motor	00Reduced torque 01Constant torque 02Free setting	×	01	_
ьо 15	Free setting electronic thermal ~freq.1	Range is 0 to 400Hz	×	0.0	Hz
ьо 16	Free setting electronic thermal ~current1	Range is 0 to inverter rated current Amps	×	0.00	Amps
ып	Free setting electronic thermal ~freq.2	Range is 0 to 400Hz	×	0.0	Hz
PO 18	Free setting electronic thermal ~current2	Range is 0 to inverter rated current Amps	×	0.00	Amps
ьо 19	Free setting electronic thermal ~freq.3	Range is 0 to 400Hz	×	0.0	Hz
P050	Free setting electronic thermal ~current3	Range is 0 to inverter rated current Amps	×	0.00	Amps
POS 1	Overload restriction operation mode	Select the operation mode during overload conditions, four options,	×	01	_
P55 I	Overload restriction operation mode, 2 <sup>nd</sup> motor	option codes:  OODisabled  OIEnabled for acceleration and constant speed  OZEnabled for constant speed only  OJEnabled for acceleration and constant speed, increase speed at regen.	×	01	_
P055	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter,	×	Rated current x 1.5	Amps
P555	Overload restriction level, 2 <sup>nd</sup> motor	setting resolution is 1% of rated current	×	Rated current x 1.5	Amps
P053	Deceleration rate at overload restriction	Sets the deceleration rate when inverter detects overload, range is	×	1.0	sec.
P553	Deceleration rate at overload restriction, 2 <sup>nd</sup> motor	0.1 to 3000.0, resolution 0.1	×	1.0	sec.

	"b" Fun	etion	Run	Defaul	ts
Func. Code	Name	Description	Mode Edit	Initial data	Units
6024	Overload restriction operation mode 2	Select the operation mode during overload conditions, four options, option codes:  ODDisabled OIEnabled for acceleration and constant speed OZEnabled for constant speed only OJEnabled for acceleration and constant speed, increase speed at regen.	×	01	
6025	Overload restriction level 2	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	×	Rated current x 1.5	
P052	Deceleration rate 2 at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	×	1.0	sec.
6027	OC suppression selection *	Two option codes: ODDisabled O IEnabled	×	01	_
P058	Current level of active freq. matching	Sets the current level of active freq. matching restart, range is 0.1*inverter rated current to 2.0*inverter rated current, resolution 0.1	×	Rated current	A
6029	Deceleration rate of active freq. matching	Sets the deceleration rate when active freq. matching restart, range is 0.1 to 3000.0, resolution 0.1	×	0.5	sec.
ь030	Start freq. of active freq. matching	Three option codes:  ODfreq at previous shutoff  OIstart from max. Hz  OZstart from set frequency	×	00	-
ь03 I	Software lock mode selection	Prevents parameter changes, in five options, option codes:  OOall parameters except bod I are locked when [SFT] terminal is ON  OIall parameters except bod I are locked when [SFT] terminal is ON  OZall parameters except bod I are locked when [SFT] terminal is ON  OZall parameters except bod I are locked  OJall parameters except bod I are locked  OJall parameters except bod I are locked  IOHigh level access including bod I  See appendix C for the accessible parameters in this mode.	×	01	-
ь033	Motor cable length parameter	Set range is 5 to 20.	×	10.	_

	"b" Fur	action	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
6034	Run/power ON warning time	Range is,  0.:Warning disabled  1. to 9999.:  10~99,990 hrs (unit: 10)  1000 to 5553:  100,000~655,350 hrs (unit: 100)	×	0.	Hrs.
ь035	Rotation direction restriction	Three option codes:  OONo restriction OIReverse rotation is restricted OOForward rotation is restricted	×	00	_
6036	Reduced voltage start selection	Set range, 0 (disabling the function), I (approx. 6ms) to 255 (approx. 1.5s)	×	2	_
ь037	Function code display restriction	Six option codes:  ODFull display  OIFunction-specific display  OZUser setting (and bOJ7)  OJData comparison display  OYBasic display  OSMonitor display only	×	04	_
6038	Initial display selection	000Func. code that SET key pressed last displayed.(*) 00 1~030d00 1~d030 displayed 20 1F00 1 displayed 202B display of LCD operator	×	001	_
ь039	Automatic user parameter registration	Two option codes:  ODisable  IEnable	×	00	
6040	Torque limit selection	Three option codes:  ODQuadrant-specific setting mode  OlTerminal-switching mode  OcAnalog voltage input mode(O)	×	00	
604 I	Torque limit 1 (fwd/power)	Torque limit level in forward powering quadrant, range is 0 to 200%/no(disabled)	×	200	%
P045					
ь0чЭ	Torque limit 3 (rev/power)	Torque limit level in reverse powering quadrant, range is 0 to 200%/no(disabled)	×	200	%
ь0чч	Torque limit 4 (fwd/regen.)	Torque limit level in forward regen. quadrant, range is 0 to 200%/no(disabled)	×	200	%
ь045	Torque LAD STOP selection	Two option codes:  ODisable  IEnable	×	00	
6046	Reverse run protection	Two option codes:  ODNo protection  O IReverse rotation is protected	×	01	_
6049	Dual Rating Selection	Please do not use it.	×	00	

	"b" Fun	etion	Run	Defaul	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь050	Controlled deceleration on power loss	Four option codes:  ODTrips OIDecelerates to a stop O2Decelerates to a stop with DC bus voltage controlled O3Decelerates to a stop with DC bus voltage controlled, then restart	×	00	-
605 I	DC bus voltage trigger level of ctrl. decel.	Setting of DC bus voltage to start controlled decel. operation. Range is 0.0 to 1000.0	×	220.0	V
605Z	Over-voltage threshold of ctrl. decel.	Setting the OV-LAD stop level of controlled decel. operation. Range is 0.0 to 1000.0	×	360.0	V
ь053	Deceleration time of ctrl. decel.	Range is 0.01 to 3600.0	×	1.0	sec.
6054	Initial freq. drop of ctrl. decel.	Setting of initial freq. drop. Range is 0.0 to 10.0 Hz	×	0.0	Hz
ь060	Maximum-limit level of window comparator (O)	Set range, {Minlimit level (b05 l) + hysteresis width (b052)x2} to 100 % (Minimum of 0%)	×	100.	%
ь06 і	Minimum-limit level of window comparator (O)	Set range, 0 to {Max.·limit level (b0b0) · hysteresis width (b0b2)x2} % (Maximum of 0%)	<b>&gt;</b>	0.	%
P065	Hysteresis width of window comparator (O)	Set range, 0 to {Maxlimit level (b050) - Minlimit level (b05 1)}/2 % (Maximum of 10%)	<b>✓</b>	0.	%
6063	Maximum-limit level of window comparator (OI)	Set range, {Minlimit level (b064 + hysteresis width (b065)x2} to 100 % (Minimum of 0%)	<b>→</b>	100.	%
6064	Minimum-limit level of window comparator (OI)	Set range, 0 to {Maxlimit level (b063) - hysteresis width (b065)x2} % (Maximum of 0%)	<b>&gt;</b>	0.	%
ь065	Hysteresis width of window comparator (OI)	Set range, 0 to {Maxlimit level (b063) - Minlimit level (b064)}/2 % (Maximum of 10%)	<b>√</b>	0.	%
ьото	Operation level at O disconnection	Set range, 0 to 100%, or "no" (ignore)	×	no	-
ьол і	Operation level at OI disconnection	Set range, 0 to 100%, or "no" (ignore)	×	no	_
ь075	Ambient temperature setting	Set range is, -10~50 °C	✓	40	°C
6078	Watt-hour clearance	Two option codes:  ODOFF  O ION (press STR then clear)	<b>✓</b>	00	-
ь079	Watt-hour display gain	Set range is, 1.~1000.	✓	1.	
P085	Start frequency	Sets the starting frequency for the inverter output, range is 0.10 to 9.99 Hz	×	0.50	Hz
ь083	Carrier frequency	Sets the PWM carrier (internal switching frequency), range is 2.0 to 15.0 kHz	×	2.0	kHz

	"b" Fur	etion	Run	Defaul	ts
Func. Code	Name	Description	Mode Edit	Initial data	Units
ьовч	Initialization mode (parameters or trip history)	Select initialized data, five option codes:  OOInitialization disabled OIClears Trip history OOInitializes all Parameters OOClears Trip history and initializes all parameters OHClears Trip history and initializes all parameters and EzSQ program	×	00	-
ь085	Country for initialization	Select default parameter values for country on initialization, two option codes:  ODarea A  OIarea B	×	00	_
ь086	Frequency scaling conversion factor	Specify a constant to scale the displayed frequency for dDD7 monitor, range is 0.01 to 99.99	×	1.00	_
ь087	STOP key enable	Select whether the STOP key on the keypad is enabled, three option codes:  OEnabled  IDisabled always Disabled for stop	×	00	_
ь088	Restart mode after FRS	Selects how the inverter resumes operation when free-run stop (FRS) is cancelled, three options:  ODRestart from 0Hz  OIRestart from frequency detected from real speed of motor (freq. matching)  OZRestart from frequency detected from real speed of motor (active freq. matching)	×	00	
ь089	Automatic carrier frequency reduction	Three option codes:  ODDisabled  OIEnabled, depending on the output current  OZEnabled, depending on the heat-sink temperature	×	01	_
ь090	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 sec. intervals, range is 0.0 to 100%.  0%: Function disabled >0%: Enabled, per value	×	0.0	%
609 I	Stop mode selection	Select how the inverter stops the motor, two option codes:  ODDEC (decelerate to stop)  OlFRS (free-run to stop)	×	00	_
P035	Cooling fan control	The cooling fan is not applying.	×	01	_
ь093	Clear elapsed time of cooling fan	The cooling fan is not applying.	×	00	_

"b" Function		Run			
Func. Code	Name	Description	Mode Edit	Initial data	Units
6094	Initialization target data	Select initialized parameters, four option codes:  ODAll parameters  O IAll parameters except in/output terminals and communication.  O2Only registered parameters in Uxxx.  O3All parameters except registered parameters in Uxxx and bO37.	×	00	
ь095	Dynamic braking control (BRD) selection	Three option codes:  OODisable  OIEnable during run only  OZEnable always	×	01	_
ь096	BRD activation level	Range is: 330 to 380V	×	360	V
ь 100	Free V/F setting, freq.1	Set range, 0 ~ value of <b>b</b> 102	×	0.	Hz
ь 10 1	Free V/F setting, voltage.1	Set range, $0 \sim 800V$	×	0.0	V
P 105	Free V/F setting, freq.2	Set range, value of <b>b</b> 100 ~ <b>b</b> 104	×	0.	Hz
ь 103	Free V/F setting, voltage.2	Set range, $0 \sim 800V$	×	0.0	V
ь 104	Free V/F setting, freq.3	Set range, value of <b>b</b> 102 ~ <b>b</b> 105	×	0.	Hz
ь 105	Free V/F setting, voltage.3	Set range, $0 \sim 800V$	×	0.0	V
ь 106	Free V/F setting, freq.4	Set range, value of <b>b</b> 104 ~ <b>b</b> 108	×	0.	Hz
ь 107	Free V/F setting, voltage.4	Set range, 0 ~ 800V	×	0.0	V
ь 108	Free V/F setting, freq.5	Set range, value of <b>b</b> 108 ~ <b>b</b> 100	×	0.	Hz
ь 109	Free V/F setting, voltage.5	Set range, $0 \sim 800 \text{V}$	×	0.0	V
ь і ю	Free V/F setting, freq.6	Set range, value of <b>b</b> 108 ~ <b>b</b> 112	×	0.	Hz
ЬПП	Free V/F setting, voltage.6	Set range, $0 \sim 800 \text{V}$	×	0.0	V
P 1 15	Free V/F setting, freq.7	Set range, <b>b</b>   10 ~ 400	×	0.	Hz
6113	Free V/F setting, voltage.7	Set range, $0 \sim 800 \text{V}$	×	0.0	V
P 150	Brake control enable	Two option codes:  ODDisable  O IEnable	×	00	_
P 15 I	Brake Wait Time for Release	Set range: 0.00 to 5.00 sec.	×	0.00	sec.
P 155	Brake Wait Time for Acceleration	Set range: 0.00 to 5.00 sec.	×	0.00	sec.
P 153	Brake Wait Time for Stopping	Set range: 0.00 to 5.00 sec.	×	0.00	sec.
ь 124	Brake Wait Time for Confirmation	Set range: 0.00 to 5.00 sec.	×	0.00	sec.
ь 125	Brake release freq.	Set range: 0 to 400Hz	×	0.00	sec.

	"b" Fur	etion	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь 126	Brake release current	Set range: 0~200% of inverter rated current	×	(rated current)	A
6 127	Braking freq. setting	Set range: 0 to 400Hz	×	0.00	Hz
ь 130	Deceleration overvoltage suppression enable	OODisabled O IEnabled OZEnabled with accel.	×	00	-
ь 13 1	Decel. overvolt. suppress level	DC bus voltage of suppression. Range is:330 to 395	×	380	V
ь 132	Decel. overvolt. suppress const.	Accel. rate when b130=02. Set range: $0.10 \sim 30.00$ sec.	×	1.00	sec.
ь 133	Decel. overvolt. suppress proportional gain	Proportional gain when b130=01. Range is: 0.00 to 5.00	✓	0.20	-
ь 134	Decel. overvolt. suppress integral time	Integration time when b130=01. Range is: 0.00 to 150.0	✓	1.0	sec.
ь 145	GS input mode	Two option codes:  ODNo trip (Hardware shutoff only)  O ITrip	×	00	_
ь 150	Display ex.operator connected	When an external operator is connected via RS-422 port, the built-in display is locked and shows only one "d" parameter configured in:	×	001	
ь 160	1st parameter of Dual Monitor	Set any two "d" parameters in b160 and b161, then they can be	×	001	_
ь 16 1	2nd parameter of Dual Monitor	monitored in d050. The two parameters are switched by up/down keys. Set range: d00 I ~ d030	×	002	_
ь 163	Frequency set in monitoring	Two option codes:  ODFreq. set disabled  O IFreq. set enabled	<b>√</b>	00	-
ь 164	Automatic return to the initial display	10 min. after the last key operation, display returns to the initial parameter set by <b>b038</b> . Two option codes: <b>00Disable 01Enable</b>	<b>√</b>	00	-
ь 165	Ex. operator com. loss action	Five option codes:  OOTrip OITrip after deceleration to a stop OZIgnore OBCoasting (FRS) OHDecelerates to a stop	<b>✓</b>	02	-
ьПІ	Inverter mode selection	Three option codes:  OONo function OIStd. IM (Induction Motor) OBPM(Permanent Magnet Motor)	×	00	_

	"b" Function			Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ь 180	Initialization trigger (*)	This is to perform initialization by parameter input with <b>b084</b> , <b>b085</b> and <b>b094</b> . Two option codes: <b>00</b> Initialization disable <b>0</b> Perform initialization	×	00	-
ь 190	Password Settings A	0000(Invalid Password) 0001-FFFF(Password)	×	0000	_
ь 19 1	Password authentication A	0000-FFFF	×	0000	_
ь 192	Password Settings B	0000(Invalid Password) 0001-FFFF(Password)	×	0000	_
ь 193	Password authentication B	0000-FFFF	×	0000	_

# **Intelligent Terminal Functions**

	"C" F	unction	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
COO 1	Input [1] function	Select input terminal [1] function, 68 options (see next section)	×	00 [FW]	-
C002	Input [2] function	Select input terminal [2] function, 68 options (see next section)	×	01 [RV]	_
C003	Input [3] function [GS1 assignable]	Select input terminal [3] function, 68 options (see next section)	×	02 [CF1]	_
C004	Input [4] function [GS2 assignable]	Select input terminal [4] function, 68 options (see next section)	×	03 [CF2]	_
C005	Input [5] function [PTC assignable]	Select input terminal [5] function, 68 options (see next section)	×	09 [2CH]	_
C006	Input [6] function	Select input terminal [6] function, 68 options (see next section)	×	18 [RS]	_
רססס	Input [7] function	Select input terminal [7] function, 68 options (see next section)	×	13 [USP]	_
<u> </u>	Input [1] active state	Select logic conversion, two option codes:	×	00	_
<u> </u>	Input [2] active state	ODnormally open [NO]	×	00	_
CO 13	Input [3] active state	01normally closed [NC]	×	00	_
CO 14	Input [4] active state		×	00	_
CO 15	Input [5] active state		×	00	_
CO 16	Input [6] active state		×	00	_
רו םם	Input [7] active state		×	00	_
COS 1	Output [11] function  [EDM assignable]	48 programmable functions available for logic (discrete)	×	01 [FA1]	_
C022	Output [12] function	outputs (see next section)	×	00 [RUN]	_
C026	Alarm relay function	48 programmable functions available for logic (discrete) outputs (see next section)	×	05 [AL]	_
C027	[EO] terminal selection (Pulse/PWM output)	13 programmable functions:  00Output frequency (PWM)  0 !Output current (PWM)  02Output torque (PWM)  03Output frequency (Pulse train)  04Output voltage (PWM)  05Input power (PWM)  06Electronic thermal load ratio (PWM)  07LAD frequency (PWM)  08Output current (Pulse train)  10Heat sink temperature (PWM)  12General output (PWM)  15Pulse train input monitor  16Option(PWM)	×	07	_

	"C" F	unction	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
C028	[AM] terminal selection (Analog voltage output 010V)	11 programmable functions:  00Output frequency  01Output current  02Output torque  04Output voltage  05Input power  06Electronic thermal load ratio  07LAD frequency  10Heat sink temperature  11Output torque (with code)  13General output  15Option	×	07 [LAD]	_
C030	Digital current monitor reference value	Current with digital current monitor output at 1,440Hz Range is 20%~200% of rated current	✓	Rated current	A
CO3 I	Output [11] active state	Select logic conversion, two option codes:	×	00	_
C035	Output [12] active state	ODnormally open [NO]	×	00	_
C036	Alarm relay active state	O Inormally closed [NC]	×	01	_
C038	Output mode of low current detection	Two option codes:  ODDuring acceleration, deceleration and constant speed  OIDuring constant speed only	×	01	_
C039	Low current detection level	Set the level of low load detection, range is 0.0 to 2.0*inverter rated current	×	INV rated current	A
C040	Output mode of overload warning	Two option codes:  ODDuring accel./ decel. and constant speed  OIDuring constant speed only	×	01	-
C04 I	Overload warning level	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	×	Rated current x 1.15	A
C24 I	Overload warning level, $2^{\mathrm{nd}}$ motor	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	×	Rated current x 1.15	A
C042	Frequency arrival setting for acceleration	Sets the frequency arrival setting threshold for the output frequency during acceleration, range is 0.0 to 400.0 Hz	×	0.0	Hz
СОЧЭ	Frequency arrival setting for deceleration	Sets the frequency arrival setting threshold for the output frequency during deceleration, range is 0.0 to 400.0 Hz	×	0.0	Hz
C044	PID deviation level	Sets the allowable PID loop error magnitude (absolute value), SP-PV, range is 0.0 to 100%	×	3.0	%
C045	Frequency arrival setting 2 for acceleration	Set range is 0.0 to 400.0 Hz	×	0.00	Hz
C046	Frequency arrival setting 2 for deceleration	Set range is 0.0 to 400.0 Hz	×	0.00	Hz

	"C" F	unction	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
רוים	Pulse train input/output scale conversion	If EO terminal is configured as pulse train input (C027=15), scale conversion is set in C047. Pulse-out = Pulse-in × (C047) Set range is 0.01 to 99.99	<b>✓</b>	1.00	
C052	PID FBV output high limit	When the PV exceeds this value, the PID loop turns OFF the PID second stage output, range is 0.0 to 100%	×	100.0	%
C053	PID FBV output low limit	When the PV goes below this value, the PID loop turns ON the PID second stage output, range is 0.0 to 100%	×	0.0	%
C054	Over-torque/under-torque selection	Two option codes:  DDOver-torque  D1Under-torque	×	00	_
C055	Over/under-torque level (Forward powering mode)	Set range is 0 to 200%	×	100.	%
C056	Over/under-torque level (Reverse regen. mode)	Set range is 0 to 200%	×	100.	%
C057	Over/under-torque level (Reverse powering mode)	Set range is 0 to 200%	×	100.	%
C058	Over/under-torque level (Forward regen. mode)	Set range is 0 to 200%	×	100.	%
C059	Signal output mode of Over/under-torque	Two option codes:  DDDuring accel., decel. and constant speed  D1During constant speed only	×	01	_
C06 I	Electronic thermal warning level	Set range is 0 to 100% Setting 0 means disabled.	×	90	%
C063	Zero speed detection level	Set range is 0.0 to 100.0Hz	×	0.00	$_{ m Hz}$
C064	Heat sink overheat warning	Set range is 0 to 110 °C	×	100.	$^{\circ}\mathrm{C}$
ו רם	Communication speed	Eight option codes:  032,400 bps  044,800 bps  059,600 bps  0519,200 bps  0738,400 bps  0857,600 bps  0976,800 bps  10115,200 bps	×	05	baud
ברם	Modbus address	Set the address of the inverter on the network. Range is 1 to 247	×	1.	_
ברם	Communication parity	Three option codes:  ODNo parity  DIEven parity  OZOdd parity	×	00	-
C075	Communication stop bit	Two option codes:  11 bit 22 bit	×	1	bit

	"C" F	unction	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
C076	Communication error select	Selects inverter response to communications error. Five options:  ODTrip  OIDecelerate to a stop and trip  OZDisable  OJFree run stop (coasting)  OHDecelerates to a stop	×	02	-
ררם	Communication error time-out	Sets the communications watchdog timer period. Range is 0.00 to 99.99 sec. 0.0 = disabled	×	0.00	sec.
פרסם	Communication wait time	Time the inverter waits after receiving a message before it transmits.  Range is 0. to 1000. ms	×	0.	msec.
C08 I	O input span calibration	Scale factor between the external frequency command on terminals L–O (voltage input) and the frequency output, range is 0.0 to 200%	<b>→</b>	100.0	%
C082	OI input span calibration	Scale factor between the external frequency command on terminals L–OI (voltage input) and the frequency output, range is 0.0 to 200%	✓	100.0	%
C085	Thermistor input (PTC) span calibration	Scale factor of PTC input. Range is 0.0 to 200%	✓	100.0	%
C09 I	Debug mode enable *	Displays debug parameters. Two option codes: ODisable IEnable <do not="" set=""> (for factory use)</do>	✓	00	_
C096	Communication selection	OOModbus-RTU O I EzCOM O2 EzCOM <administrator></administrator>	×	00	_
C098	EzCOM start adr. of master	01-08	×	01	_
C099	EzCOM end adr. of master	01-08	×	01	-
C 100	EzCOM starting trigger	00 Input terminal 01 Always	×	00	-
C 10 I	Up/Down memory mode selection	Controls speed setpoint for the inverter after power cycle.  Two option codes:  ODClear last frequency (return to default frequency \( \pi \) \	×	00	_

	"C" Function		Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
C 102	Reset selection	Determines response to Reset input [RS]. Four option codes:  ODCancel trip state at input signal ON transition, stops inverter if in Run Mode  O ICancel trip state at signal OFF transition, stops inverter if in Run Mode  OZCancel trip state at input ON transition, no effect if in Run Mode  OJClear the memories only related to trip status	×	00	
C 103	Restart mode after reset	Determines the restart mode after reset is given, three option codes:  ODStart with 0 Hz  OIStart with freq. matching  OZStart with active freq.  matching	×	00	_
C 104	UP/DWN clear mode	Freq. set value when UDC signal is given to the input terminal, two option codes:  OD0 Hz  O IOriginal setting (in the EEPROM memory at power on)	×	00	_
C 105	EO gain adjustment	Set range is 50 to 200%	✓	100.	%
C 106	AM gain adjustment	Set range is 50 to 200%	✓	100.	%
C 109	AM bias adjustment	Set range is 0 to 100%	✓	0.	%
	Overload warning level 2	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	<b>√</b>	Rated current x 1.15	A
C 130	Output [11] on delay	Set range is 0.0 to 100.0 sec.	×	0.0	sec.
[ []			×	0.0	sec.
C 132	Output [12] on delay	Set range is 0.0 to 100.0 sec.	×	0.0	sec.
C 133	Output [12] off delay		×	0.0	sec.
C 140	Relay output on delay	Set range is 0.0 to 100.0 sec.	×	0.0	sec.
E 14 1	Relay output off delay		×	0.0	sec.
E 142	Logic output 1 operand A	All the programmable functions available for logic (discrete)	×	00	_
E 143	Logic output 1 operand B	outputs except LOG1 to LOG3, OPO, no	×	00	-
C 144	Logic output 1 operator  Logic output 2 operand A	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OI[LOG] = A OR B  OZ[LOG] = A XOR B  All the programmable functions	×	00	_
	- 3 tp 2 operand 11	F-50-55-55-55-55-55-55-55-55-55-55-55-55-	_ ^	00	

	"C" F	unction	Run	Defau	lts
Func. Code	Name	Description	Mode Edit	Initial data	Units
C 146	Logic output 2 operand B	available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	×	00	_
C 147	Logic output 2 operator	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OI[LOG] = A OR B  OZ[LOG] = A XOR B	×	00	-
C 148	Logic output 3 operand A	All the programmable functions	×	00	_
[ 149	Logic output 3 operand B	available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	×	01	_
C 150	Logic output 3 operator	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OI[LOG] = A OR B  OZ[LOG] = A XOR B	×	00	_
C 160	Input [1] response time	Sets response time of each input	×	1.	_
C 16 1	Input [2] response time	terminal, set range:  0 (x 2 [ms]) to <b>200</b> (x 2 [ms])	×	1.	_
C 162	Input [3] response time	(0 to 400 [ms])	×	1.	_
C 163	Input [4] response time		×	1.	_
C 164	Input [5] response time		×	1.	_
C 165	Input [6] response time		×	1.	_
C 166	Input [7] response time		×	1.	_
C 169	Multistage speed/position determination time	Set range is 0. to 200. (x 10ms)	×	0.	ms

# **Motor Constants Functions**

	"H" Fu	ınction	Run	Default	s
Func. Code	Name	Description	Mode Edit	Initial data	Units
ноо і	Auto-tuning selection	Three option codes:  ODisabled  IEnabled with motor stop  CEnabled with motor rotation	×	00	-
H002	Motor constant selection	Two option codes:  OHitachi standard motor  CAuto tuned data	×	00	-
H202	Motor constant selection, $2^{\mathrm{nd}}$ motor		×	00	-
H003	Motor capacity	Eleven selections: 0.1/0.2/0.4/0.75/1.5/2.2/3.7/ 5.5/7.5/11/15/18.5	×	Specified by the capacity	kW
H203	Motor capacity, 2 <sup>nd</sup> motor	0.01/11/10/110.0	×	of each inverter model	kW

	"H" Fu	ınction	Run	Default	S
Func. Code	Name	Description	Mode Edit	Initial data	Units
H004	Motor poles setting	Five selections: 2/4/6/8/10	X	4	poles
H204	Motor poles setting, 2 <sup>nd</sup> motor	2747070710	×	4	poles
H005	Motor speed response constant	Set range is 1 to 1000	✓	100.	-
H205	Motor speed response constant, 2 <sup>nd</sup> motor		✓	100.	-
H006	Motor stabilization constant	Motor constant (factory set), range is 0 to 255	✓	100.	_
H206	Motor stabilization constant, 2 <sup>nd</sup> motor	Tange is 0 to 255	✓	100.	_
H020	Motor constant R1 (Hitachi motor)	0.001~65.535 ohms	×	Specified by	Ohm
H220	Motor constant R1,  2 <sup>nd</sup> motor (Hitachi motor)		×	the capacity of each	Ohm
HD2 I	Motor constant R2 (Hitachi motor)	0.001~65.535 ohms	×	inverter mode	Ohm
H25 I	Motor constant R2, 2 <sup>nd</sup> motor (Hitachi motor)		×		Ohm
HD55	Motor constant L (Hitachi motor)	0.01~655.35mH	×		mH
H255	Motor constant L,		×		mН
H023	2nd motor (Hitachi motor)  Motor constant IO	0.01~655.35A	×		A
H223	(Hitachi motor)  Motor constant IO,		×		A
H024	2nd motor (Hitachi motor)  Motor constant J	0.001~9999 kgm <sup>2</sup>	×		kgm <sup>2</sup>
H224	(Hitachi motor)  Motor constant J,		×		kgm <sup>2</sup>
HD30	2 <sup>nd</sup> motor (Hitachi motor)  Motor constant R1	0.001~65.535 ohms	×	Specified by	
H230	(Auto tuned data) Motor constant R1,		×	the capacity of each	ohm
	2 <sup>nd</sup> motor (Auto tuned data)  Motor constant R2	0.001~65.535 ohms		inverter mode	ohm
H03 I	(Auto tuned data)  Motor constant R2,	0.001 *05.555 0mms	×		ohm
H23 I	2 <sup>nd</sup> motor (Auto tuned data)		×		ohm
H032	Motor constant L (Auto tuned data)	0.01~655.35mH	×		mH
H232	$egin{aligned} & Motor \ constant \ L, \ & 2^{nd} \ motor \ \emph{(Auto tuned data)} \end{aligned}$		×		mH
н033	Motor constant I0 (Auto tuned data)	0.01~655.35A	×		A
H233	Motor constant I0, 2 <sup>nd</sup> motor <b>(Auto tuned data)</b>		×		A
H034	Motor constant J (Auto tuned data)	0.001~9999 kgm <sup>2</sup>	×		kgm²
H234	Motor constant J, 2nd motor (Auto tuned data)		×		kgm <sup>2</sup>
H050	Slip compensation P gain for V/f control with FB	0.00-10.00	×	0.2	Times

"H" Function			Run	Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
H05 I	Slip compensation I gain for V/f control with FB	01000.	×	2.	(s)

**Expansion Card Functions**"P" parameters will be appeared when the expansion option is connected.

	"P" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Initial data	Units
P00 I	Reaction when option card error occurs	Two option codes:  ODInverter trips  O IIgnores the error (Inverter continues operation)	×	00	_
P003	[EA] terminal selection	Three option codes:  ODSpeed reference (incl. PID)  OIFor control with encoder feedback  OZExtended terminal for EzSQ	×	00	-
P004	Pulse train input mode selection for feedback	Four option codes:  ODSingle-phase pulse [EA]  OI2-phase pulse (90° difference) 1 ([EA] and [EB])  OZ2-phase pulse (90° difference) 2 ([EA] and [EB])  OJSingle-phase pulse [EA] and direction signal [EB]	×	00	-
PO 11	Encoder pulse setting	Sets the pulse number (ppr) of the encoder, set range is 32~1024 pulses	×	512.	_
PO 12	Simple positioning selection	Two option codes:  ODsimple positioning deactivated  O Isimple positioning activated	×	00	-
PO 15	Creep Speed	Set range is start frequency (6082) ~10.00 Hz	×	5.00	Hz
P026	Over-speed error detection level	Set range is 0~150%	×	115.0	%
P027	Speed deviation error detection level	Set range is 0~120 Hz	×	10.00	Hz
P03 I					
P033	Torque command input selection	Three option codes:  ODAnalog voltage input [O]  OIAnalog current input [OI]  OBOperator, ObOption	×	00	_
P034	Torque command level input	Set range is 0~200%	✓	0.	%
P036	Torque bias mode selection	Two option codes:  ODNo bias  O IOperator	×	00	-
POBT	Torque bias value setting	Range is -200~200%	✓	0.	%

	"P" Fun	ction	Run	Defa	ılts
Func. Code	Name	Description	Mode Edit	Initial data	Units
P038	Torque bias polar selection	Two option codes:  ODAccording to the sign  OIAccording to the rotation direction  O5Option	×	00	-
P039	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
P040	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
P04 I	Speed / Torque control switching time	Set range is 0 to 1000 ms	×	0.	ms
P044	Communication watchdog timer (for option)	Set range is 0.00 to 99.99s	×	1.00	s
P045	Inverter action on communication error (for option)	OO(tripping), O I(tripping after decelerating and stopping the motor), O≥(ignoring errors), O∃(stopping the motor after free-running), OԿ(decelerating and stopping the motor)	×	00	-
P046	DeviceNet polled I/O: Output instance number	00-20	×	1	_
P048	Inverter action on communication idle mode	<ul> <li>OD(tripping),</li> <li>O I(tripping after decelerating and stopping the motor),</li> <li>OZ(ignoring errors),</li> <li>O3(stopping the motor after free-running),</li> <li>O4(decelerating and stopping the motor)</li> </ul>	×	00	-
P049	Motor poles setting for RPM	0/2/4/6/8/10/12/14/16/18/20/22/24/ 26/28/ 30/32/34/36/38/40/42/44/46/48	×	0	Poles
P055	Pulse train input frequency scale setting	Sets the pulse numbers at max. frequency, set range is 1.0~32.0 kHz	×	25.0	kHz
P056	Pulse train input frequency filter time constant setting	Set range is 0.01~2.00 sec.	×	0.10	sec.
P057	Pulse train input bias setting	Set range is -100~100 %	×	0.	%
P058	Limitation of the pulse train input setting	Set range is 0~100 %	×	100.	%
P060	Multistage position 0	P073 to P072	✓	0	Pulses
P06 I	Multistage position 1	(Displayed higher 4-digits only)	✓	0	Pulses
P062	Multistage position 2		✓	0	Pulses
P063	Multistage position 3		✓	0	Pulses
P064	Multistage position 4		✓	0	Pulses
P065	Multistage position 5		✓	0	Pulses
P066	Multistage position 6		✓	0	Pulses
P067	Multistage position 7		✓	0	Pulses

	"P" Function		Run	Defa	ılts
Func. Code	Name	Description	Mode Edit	Initial data	Units
P068	Homing mode selection	OOLow speed mode O IHigh speed mode	✓	00	_
P069	Homing direction	ODForward rotation side O IReverse rotation side	<b>✓</b>	01	_
סרם	Low speed homing freq.	0 to 10Hz	✓	5.00	Hz
ו רם	High speed homing freq.	0 to 400Hz	✓	5.00	Hz
POTE	Position range (Forward)	0 to +268435455(Higher 4-digits displayed)	✓	+26843 5455	Pulses
РОТЭ	Position range (Reverse)	-268435455 to 0(Higher 4-digits displayed)	✓	-268435 455	Pulses
P075	Positioning mode selection	ODWith limitation O INo limitation (shorter route) P004 is to be set 00 or 01	×	00	_
ררם	Encoder disconnection timeout	0.0 to 10.0 s	✓	1.0	s
P 100 ~ P 13 1	EzSQ user parameter $U(00) \sim U(31)$	Each set range is 0~65535	✓	0.	-
P 140	EzCOM number of data	1 to 5	✓	5	_
P 14 1	EzCOM destination 1 adderss	1 to 247	✓	1	_
P 142	EzCOM destination 1 register	0000 to FFFF	✓	0000	-
P 143	EzCOM source 1 register	0000 to FFFF	✓	0000	_
P 144	EzCOM destination 2 adderss	1 to 247	✓	2	_
P 145	EzCOM destination 2 register	0000 to FFFF	✓	0000	_
P 146	EzCOM source 2 register	0000 to FFFF	✓	0000	_
P 147	EzCOM destination 3 adderss	1 to 247	✓	3	_
P 148	EzCOM destination 3 register	0000 to FFFF	✓	0000	_
P 149	EzCOM source 3 register	0000 to FFFF	<b>✓</b>	0000	_
P 150	EzCOM destination 4 adderss	1 to 247	<b>✓</b>	4	-
P 15 I	EzCOM destination 4 register	0000 to FFFF	✓	0000	-
P 152	EzCOM source 4 register	0000 to FFFF	✓	0000	_
P 153	EzCOM destination 5 adderss	1 to 247	✓	5	_
P 154	EzCOM destination 5 register	0000 to FFFF	✓	0000	_
P 155	EzCOM source 5 register	0000 to FFFF	✓	0000	_
P 160	Option I/F command register to write 1	0000 to FFFF	✓	0000	_
P 16 1	Option I/F command register to write 2	0000 to FFFF	✓	0000	_
P 162	Option I/F command register to write 3	0000 to FFFF	✓	0000	_
P 163	Option I/F command register to write 4	0000 to FFFF	✓	0000	-
P 164	Option I/F command register to write 5	0000 to FFFF	<b>√</b>	0000	-
P 165	Option I/F command register to write 6	0000 to FFFF	✓	0000	_

# C-30

	"P" Fun	ction	Run	Defa	ılts
Func. Code	Name	Description	Mode Edit	Initial data	Units
P 166	Option I/F command register to write 7	0000 to FFFF	✓	0000	_
P 167	Option I/F command register to write 8	0000 to FFFF	✓	0000	_
P 168	Option I/F command register to write 9	0000 to FFFF	✓	0000	_
P 169	Option I/F command register to write 10	0000 to FFFF	✓	0000	_
P 170	Option I/F command register to read 1	0000 to FFFF	✓	0000	_
РΠΙ	Option I/F command register to read 2	0000 to FFFF	✓	0000	_
P 172	Option I/F command register to read 3	0000 to FFFF	✓	0000	_
Р ПЭ	Option I/F command register to read 4	0000 to FFFF	✓	0000	_
P 174	Option I/F command register to read 5	0000 to FFFF	✓	0000	_
P 175	Option I/F command register to read 6	0000 to FFFF	✓	0000	_
Р 176	Option I/F command register to read 7	0000 to FFFF	✓	0000	_
ררו ף	Option I/F command register to read 8	0000 to FFFF	✓	0000	_
P 178	Option I/F command register to read 9	0000 to FFFF	✓	0000	_
P 179	Option I/F command register to read 10	0000 to FFFF	✓	0000	_
P 180	Profibus Node address	0 to 125	×	0.	_
P 18 1	Profibus Clear Node address	00 01	×	00	_
P 182	Profibus Map selection	00 0 I	×	00	-

# Additional function For Version 2



In This Chapter	page
- PM Motor Drive	2
- Dynamic Braking related functions	15
- Read/Copy	16
- Inverter mode	16
- Thermal detection system Error	17
- ModBus Data Listing	18
- Drive Parameter Setting Tables	48



# **PM motor Drive**

## 14.1.1 Limitation

There is a limitation in the PM drive. Please note it.

#### ① About the specification

- 1. Please use for the application of reduced torque with the starting torque less than 50%. In case of use other than above, or in combination with the motor other than Hitachi standard motor, performance cannot be guaranteed to be sufficient.
- 2. It is not suitable for at the usage the constant-torque, the rapid acceleration/deceleration and low speed driving. Please never use it for the transportation machine, especially the gravity load usage such as elevators.
- 3. PM motor cannot be drive by the commercial power source.
- 4. The motor can drive at load moment of inertia 50 times or less the motor moment of inertia. When over 50 times the motor moment of inertia, you may not be able to obtain adequate motor characteristics.
- 5. Two or more motors cannot be driven with one inverter.
- 6. When the DC braking function is used and the inverter trips by over voltage, use a braking resistor.
- 7. Please let me drive the motor after the brake is released when there is a maintenance brake. The motor may generate out-of-step if timing is not suitable.
- 8. When starting, the motor may reverse. Please use the initial magnet position estimation function when Trouble is caused when reverse run.
- 9. When you use the inverter to drive a motor of which the rated current of the motor exceeds the rated current of the inverter, and the capacity is two classes lower than the maximum applicable capacity of the inverter, you may not be able to obtain adequate motor characteristics.
- 10. Please adjust the motor constant settings to the motor to be driven by the inverter. The motor constant data corresponding to the date of one phase of Y connection.
- 11. When the motor cable for the long (more than 20m as reference) distance, you may not be able to obtain adequate motor characteristics.
- 12. Please do not drive the motor that the maximum current of the motor (demagnetization level) falls below about 300% of the rated current of the inverter. The motor may be demagnetization. Degauss (magnetic conditioning).
  - Please note the effective value and the peak value. The rated current of the inverter in the manual is the
- 13. Please set carrier frequency (b083) 8.0kHz or higher.
- 14. Please set electric thermal setting (b012) to the rated current of motor (same as H105).

#### ②About the function

- 1. When the motor rotating at the speed of 50% or less of the base frequency (A003) is used the restarting with active matching frequency, the motor may restart 0Hz at retry.
- 2. When use the restarting with active matching frequency, the motor may generate over current trip if the motor direction of the rotation changes in free running.
- 3. When use the restarting with active matching frequency at 120Hz or more, generated the over current trip.
- 4. When the motor cable for the long (more than 20m as reference) distance if use the restarting with active matching frequency, the motor may generate over current trip.
  - Please restart after stopping the motor with the DC braking function or the external brake, etc.
- 5. A part of function cannot be used. Please refer to other material "14.1.2 Invalid functions" for details.

<u>14.1.2 Invalid functions</u>
The following functions invalids in the PM drive.

Function	Related code	Limitation method
	Item of *2**	
2nd control	Intelligent input terminal:SET(08)	
	Intelligent output terminal:SETM(60)	
Tangua manitan	C027,C028	02(Output torque)
Torque monitor · limit · control	d009,d010,d012,b040~b045,C054~C059,P033,P034,P036~P041	
illilit - control	Intelligent input terminal:TL(40),TRQ1(41),TRQ2(42),ATR(52)	
	Intelligent output terminal:OTQ(07),TRQ(10)	
	P003	01(Encoder feedback)
Encoder feedback	d008,d029,d030,H050,H051,P004,P011,P012,P015,P026,P027,P0 60~P073,P075,P077	
Encoder feedback	Intelligent input terminal:PCLR(47),CP1(66)~CP3(68),ORL(69),ORG(70),SPD(73), EB(85)	
	Intelligent output terminal:DES(22),POK(23)	
Jog	A038,A039	
aog	Intelligent input terminal:JG(06)	
IM control	A041~A044,A046,A047,b100~b113,H002~H006,H020~H024,H03 0~H034	
V/f gain	A045	
AVR	A081,A083,A084	
Automatic	A085,A086	
energy-saving drive	11000,11000	-
Restarting with	b001,b008	04(Restarting with active matching frequency)
active matching frequency	b088,C103	02(Restarting with active matching frequency)
	b028~b030	
Over current suppression	b027	
Reduced voltage start	b036	
Reverse run protection	b046	
	b120~b127	
Brake control	Intelligent input terminal:BOK(44)	
	Intelligent output terminal:BRK(19),BER(20)	
Offline auto-tuning	H001	02(Enable • rotati on)
Dual Rating	b049	,
Commercial power source switching	Intelligent input terminal:CS(14)	
LAD cancellation	Intelligent input terminal:LAC(46)	
		l .




## 14.1.3 PM mode switching


It changes to the PM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 03, and initialization is executed.

- ■When using this mode, observe the following precautions.
- ① hen 01 is set on the initialization trigger (b180), and SET key is pressed, initialization starts immediately and there is not any way to restore the previous parameter setting.
- ② All data will be initialized regardless the setting of b094. b094
- ③ The settings of "P100" to "P131", running time data, and power on time data cannot be cleared.
- 4 When display is restricted by the function code display restriction function (b037) or software is locked by the software lock function (b031), you cannot initialize because the function codes of initialization are no-display. If you forget password that restrict setting (b031) and (b037), you cannot cancel it. (So you cannot initialize when software lock is active, you note that the setting password. (See section 7.6.11 the password function.))

Item	Function code	Data or range of data	Description
Inverter mode selection	b171	00	No
	D171	03	PM mode
T.:'4'-1'4' 4-:'	1.100	00	No action
Initialization trigger	b180	01	Initialize

# ■ Way to PM mode switching

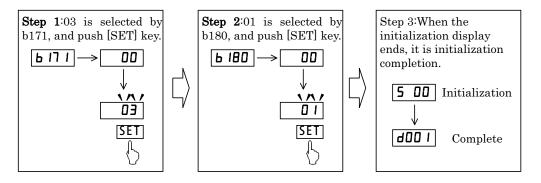

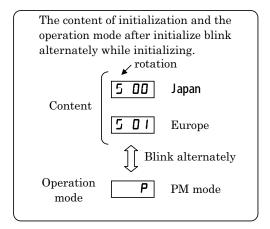

- Note 1: For prevent from initializing by mistake, (b084) and (b180) restore 00 after initialize or Re-power supply. Every time, please set it every time if you initialize.
- Note 2: Even if initialize, the initial data select (b085), the input span calibration (C081, C082), and the thermistor input (PTC) span calibration (C085) don't initialize.
- Note 3: There is not any way to restore the previous parameter setting after initialize.



# 14.1.4 Motor constants selection

- ·When PM dive, adjust the motor constant settings to the motor to be driven by the inverter.
- ·You can select the motor constants from the following three types:
  - (1) Motor constants of Hitachi standard motor
    - ⇒ When 00 is set on PM motor code setting (H102), motor constants use (H106~H110). Initial values of (H106~H110) are set on motor constants of Hitachi standard motor.
  - (2) Motor constants tuned by offline auto-tuning
    - ⇒ When 01 is set on PM motor code setting (H102) after the offline auto-tuning allows, motor constants use automatically measure values (H111~H113) and Hitachi standard motor values (H109~H110).
  - (3) Arbitrarily set motor constants
    - ⇒ In above-mentioned both (1) and (2) cases, motor constants can be changed to the given value. Please change the value of (H106~H113) in the value of (H102).

Item	Function code	Data or range of data	Description
Base frequency (*1)	A003	30.0~Maximum frequency [Hz]	The base frequency of motor is set.
Maximum frequency (*1)	A004	Base frequency~400.0 [Hz]	The max frequency of motor is set.
PM motor code setting	H102	00	Hitachi standard (Use 106~H110 at motor constants)
I'M motor code setting	11102	01	Auto-Tuning (Use 106~H110 at motor constants)
PM motor capacity (*2)	H103	0.1~18.5 [kW]	The capacity of motor is set.
PM motor pole setting	H104	2/4/6/8/··/48 [pole]	The pole of motor is set.
PM Rated Current	H105	(0.00~1.00)×Rated current of the inverter [A]	The rated current of motor is set.
Motor constants of Hitachi standard m	notor		Motor constants setting when auto-tuning don't use. The initial values are motor constants of Hitachi standard motor.
PM const R(Resistance)	H106	0.001~65.535 [Ω]	
PM const Ld(d-axis inductance)	H107	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H108	0.01~655.35 [mH]	
PM const Ke(Induction voltage constant) (*3)	H109	0.0001~6.5535 [V/(rad/s)]	
PM const J(Moment of inertia) (*4)	H110	0.001~9999.000 [kgm <sup>2</sup> ]	
Motor constants tuned by offline auto-	tuning		Automatically measured motor constants when the offline auto-tuning is executed, and they are set. After auto-tuning, you can be changed to the given value.
PM const R (Resistance)	H111	0.001~65.535 [Ω]	
PM const Ld(d-axis inductance)	H112	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H113	0.01~655.35 [mH]	

<sup>\*1</sup> The base frequency (the maximum frequency) calculates to the following by the rated revolution (the maximum revolution) of the motor and motor pole.

Base frequency (Maximum frequency)  $[Hz] = \frac{\text{Rated revolution (Maxmum revolution) } [\min^{-1}] \times \text{pole}}{120}$ 

120

<sup>\*2</sup> Please pay attention that settings of H104 to H110, A003 and A004 will be changed automatically, when PM



motor capacity (H103) is changed.

- \*3 PM induction voltage constant Ke is the peak voltage of one phase of per electrical angle speed (rad/s).
- \*4 PM moment of inertia J is value (kgm²) that added the moment of inertia of the load machine that converting the moment of inertia into the motor shaft data to the moment of inertia of the motor.



## 14.1.5 PM offline auto-tuning function

PM offline auto-tuning automatically measures motor constants necessary for sensorless vector control at special driving pattern different from usually besides driving, and accuracy of vector control is improved. PM induction voltage constant Ke and PM moment of inertia J cannot measure because motor don't revolute. Please set the induction voltage constant is the peak voltage of one phase of per electrical angle speed (rad/s), and the moment of inertia is value (kgm²) that added the moment of inertia of the load machine that converting the moment of inertia into the motor shaft data to the moment of inertia of the motor, by manual.

- ■When using this mode, observe the following precautions.
- ①When you use vector control by the motor that doesn't understand constants, please measure motor constants by offline auto-tuning.
- ② The measured motor constant is the data of one phase of Y connection.
- ③ Please use auto-tuning with the motor has stopped. If the motor rotates, correct constant data may not be obtained. (In such cases, the auto-tuning operation may not be completed. If the auto-tuning operation is not completed, press the STOP/RESET key. The operation will end with an error code displayed.)
- 4 Adjust the settings of base frequency (A003), maximum frequency (A004), AVR voltage select (A082), PM motor capacity (H103), PM motor pole setting (H104) and PM Rated Current (H105) to the motor specifications before use auto-tuning. When motor of outside set range of these parameters, correct constant data may not be obtained. (In such cases, the auto-tuning operation may not be completed. If the auto-tuning operation is not completed, press the STOP/RESET key. The operation will end with an error code displayed.)
- (5) This function can properly apply to only the motors in the maximum applicable capacity class of your inverter or one class lower than the capacity class of your inverter. If this function is used for motors with other capacities, correct constant data may not be obtained. (In such cases, the auto-tuning operation may not be completed. If the auto-tuning operation is not completed, press the STOP/RESET key. The operation will end with an error code displayed.)
- (6) Specify "00" (disabling) for the DC braking enable. (The default setting is "00".) If "01" (enabling) is specified for the DC braking enable (A051), motor constants cannot be measured by offline auto-tuning.
- When the motor cable for the long (more than 20m as reference) distance, correct constant data may not be obtained. Please set the motor cable length parameter (b033) according to the motor cable, and use auto-tuning. (The motor cable length parameter setting is a parameter that corrects the current detection accuracy by the difference of the length of the motor cable. The capacity of inverter of 11kW and 15kW need not be set.)
- ® The motor may rotate slightly during auto-tuning, but this is not abnormal behavior.
- (9) The allophone and the vibration may generate during auto-tuning, but this is not abnormal behavior.
- <sup>®</sup> Please do not use auto-turning with the shaft of the motor fixed with external brake etc. Otherwise correct motor constants may not be obtained.
- ① Please use auto-turning with the load machine attached to the motor. Otherwise right motor constants may not be obtained.

Item	Function code	Data or range of data	Description
Base frequency (*1)	A003	30.0~Maximum frequency [Hz]	The base frequency of motor is set.
Maximum frequency (*1)	A004	Base frequency~400.0 [Hz]	The max frequency of motor is set.
DC barbin a carable	A071	00	OFF
DC braking enable	A051	01	ON
AVR voltage select	A082	200/215/220/230/240	When 200 V class inverter models.
Avit voltage select	A002	380/400/415/440/460/480	When 400 V class inverter models.
Motor cable length parameter	b033	5~20	According to the motor cable
Auto-tuning Setting	H001	00	OFF
Auto tuning Setting	11001	01	ON(STOP)
	11400	00	Hitachi standard (Use 106~H110 at motor constants)
PM motor code setting	H102	01	Auto-Tuning (Use 106~H110 at motor constants)
PM motor capacity (*2)	H103	0.1~18.5 [kW]	The capacity of motor is set.
PM motor pole setting	H104	2/4/6/8/···/48 [pole]	The pole of motor is set.
PM Rated Current	H105	(0.00~1.00)×Rated current of the inverter [A]	The rated current of motor is set.
Motor constants of Hitachi standard m	otor		Motor constants setting when auto-tuning don't use. The initial values are motor constants of Hitachi standard motor.
PM const R(Resistance)	H106	0.001~65.535 [Ω]	
PM const Ld(d-axis inductance)	H107	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H108	0.01~655.35 [mH]	
PM const Ke(Induction voltage constant) (*3)	H109	0.0001~6.5535 [V/(rad/s)]	
PM const J(Moment of inertia) (*4)	H110	0.001~9999.000 [kgm <sup>2</sup> ]	
Motor constants tuned by offline auto-	tuning		Automatically measured motor constants when the offline auto-tuning is executed, and they are set. After auto-tuning, you can be changed to the given value.
PM const R (Resistance)	H111	0.001~65.535 [Ω]	
PM const Ld(d-axis inductance)	H112	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H113	0.01~655.35 [mH]	



\*1 The base frequency (the maximum frequency) calculates to the following by the rated revolution (the maximum revolution) of the motor and motor pole.

Base frequency (Maximum frequency) 
$$[Hz] = \frac{Rated\ revolution\ (Maxmum\ revolution)\ [min^{-1}] \times pole}{120}$$

- \*2 Please pay attention that settings of H104 to H110, A003 and A004 will be changed automatically, when PM motor capacity (H103) is changed.
- \*3 PM induction voltage constant Ke is the peak voltage of one phase of per electrical angle speed (rad/s).
- \*4 PM moment of inertia J is value (kgm²) that added the moment of inertia of the load machine that converting the moment of inertia into the motor shaft data to the moment of inertia of the motor.
- \*5 Even if the auto-tuning has ended normally, you cannot operate the inverter with the tuning data left. If you intend to operate the inverter with the tuning data left, be sure to switch the setting of motor constant selection (H102) to "01".
- \*6 If the auto-tuning has ended abnormally, you confirm the motor cable and the parameter setting, and retry it.
- \*7 If you cancel the auto-tuning midway with a stop command (by pressing the STOP/RESET key or turning off the operation command), the constants set for auto-tuning may remain in the inverter. Before retrying the auto-tuning, initialize the inverter, and then readjust the settings for the auto-tuning. (Perform the same procedure also when you proceed to the normal inverter operation.)

# ■Operating procedure

**Step 1**:Set to motor capacity, motor pole and motor current according to the motor.

H IO3 Motor

H 104 Motor pole

auto-tuning, display of

**H 105** Motor

After completing

auto-tuning result.

\_\_\_0

\_\_\_\_


Step 2:Set to base frequency, maximum frequency and motor voltage according to the motor.

**A003** Base

**ADD4** Maximum

**ADB2** Motor voltage

Step 3:02 is set to Auto-tuning Setting (H001).

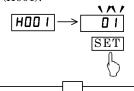

Step 4:The operation command is input according to setting the run command source (A002).

Automatic driving begins.




Normal

Abnormal

Step 5: After completing auto-tuning, to clear the result display, press the STOP/RESET key.




**Step 6**:Measured motor constants is reflected in driving data.

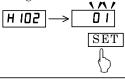

When the operation command is input, the inverter performs an automatic operation in the following steps:

- (1) Initial Magnet Position Estimation (Motor don't revolution)
- (2) First DC excitation (Motor don't revolution)  $\downarrow$
- (3) First AC excitation (Motor don't revolution)
- (4) Second AC excitation (Motor don't revolution)
- (5) Display of auto-tuning result

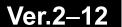

# 14.1.6 PM drive

- ·This function estimates magnet position of PM by output voltage and current of inverter and setting motor constants, and drive PM.
- ·Before using this function, be sure to make optimum constant settings for the motor with reference to Section 14.1.4, "Motor constant selection."

Item	Function code	Data or range of data	Description
Level of electric thermal (*1)	b012	(0.2~1.0)× Rated current of inverter [A]	
Carrier frequency (*2)	b083	2.0~15.0 [kHz]	
PM Speed Response	H116	1~1000 [%]	
PM Starting Current	H117	20.00~100.00 [%]	Current value for starting (100[%]=H105) (*3) (*4)
PM Starting Time	H118	0.01~60.00 [s]	Time of DC current passing for starting
PM Stabilization Constant	H119	0~120 [%]	(*5)
PM Minimum Frequency	H121	0.0~25.5 [%]	Frequency of control switching (100[%]=A003)
PM No-Load Current	H122	0.00~100.00 [%]	Current value for no-load (100[%]=H105)
DM Ct. d' M d 1 C 1 d	11100	00	Normal
PM Starting Method Select	H123	01	Initial Magnet Position Estimation (*6) (*7)
PM Initial Magnet Position Estimation 0V Wait Times	H131	0~255	Number of times of 0V waiting in initial magnet position estimation.
PM Initial Magnet Position Estimation Detect Wait Times	H132	0~255	Number of times until current detecting in initial magnet position estimation.
PM Initial Magnet Position Estimation Detect Times	H133	0~255	Number of times of current detecting in initial magnet position estimation.
PM Initial Magnet Position Estimation Voltage Gain	H134	0~200	Output voltage gain in initial magnet position estimation.

<sup>\*1</sup> Please set electric thermal setting (b012) to the rated current of motor (same as H105).

<sup>\*2</sup> Please set carrier frequency (b083) 8.0kHz or higher.

<sup>\*3</sup> automatically reduces the carrier frequency according to the PM Starting Current setting.

<sup>\*4</sup> When too great setting, motor may generate overload trip.

<sup>\*5</sup> When too small setting, you may not be able to obtain motor torque, and motor generate impact or generate over current trip near H121 setting.

<sup>\*6</sup> The allophone may generate during initial magnet position estimation, but this is not abnormal behavior.

<sup>\*7</sup> When use initial magnet position estimation, please start with the motor has stopped. When start with the motor has rotated, motor may rotate greatly or generate out-of-step.

- ·When using this function, observe the following precautions:
- ① In combination with the motor other than Hitachi standard motor, performance cannot be guaranteed to be sufficient.
- ② If you cannot obtain the desired characteristics from the motor driven under the sensorless vector control, readjust the motor constants according to the symptom, as described in the table below

Operation status	Symptom	Adjustment method	Adjustme nt item
	Trouble is caused when reverse run.	Enable to the initial magnet position estimation function.  - The motor may rotate slightly, but this is not abnormal behavior.	H123
Starting	Generate out-of-step. Generate over current	Increase the starting current Note the electronic thermal protection function.	H117
	trip.	Increase the starting time.	H118
	Need for early starting.	Enable to the initial magnet position estimation function, and reduce the starting time.	H118,H12 3
	Motor runs unsteadily.	Increase the starting current - Note the electronic thermal protection function.	H117
Less than H121 (PM		Reduce the motor constant R step by step from the set value down to 0.7 times as high as the set value.	H106,H11 1
minimum frequency) setting	Motor generate hunting.	Increase the motor constant Ld step by step from the set value up to 1.3 times as high as the set value. Increase the motor constant Lq step by step from the set value up to 1.3 times as high as the set value Please adjust to Ld $\leq$ Lq.	H107,H11 2 H108,H11 3
Near H121	Motor generates an	Adjust the speed response.	H116
(PM minimum frequency) setting	impact. Generate over current trip.	Adjust the minimum frequency when a load changes.	H121
More than		Adjust the speed response.	H116
H121(PM	Motor generate	Increase the no-load current.	H122
minimum frequency) setting	hunting.	Increase the carrier frequency current if low setting.	b083

# Ver.2-14

		Reduce the PM Initial Magnet Position Estimation 0V Wait Times When too small setting, motor may rotate greatly or generate out-of-step.	H131
	Need for short time of Initial magnet position estimation	Reduce the PM Initial Magnet Position Estimation Detect Wait Times When too small setting, motor may rotate greatly or generate out-of-step.	H132
Initial magnet		Reduce the PM Initial Magnet Position Estimation Detect Times When too small setting, motor may rotate greatly or generate out-of-step.	H133
position estimating		Increase the PM Initial Magnet Position Estimation 0V Wait Times.	H131
		Increase the PM Initial Magnet Position Estimation Detect Wait Times	H132
	Motor rotates greatly	Increase the PM Initial Magnet Position Estimation Detect Times	H133
		Increase the PM Initial Magnet Position Estimation Voltage Gain step by step too great setting, may generate over current trip.	H134
	Generate over current trip.	Reduce the PM Initial Magnet Position Estimation Voltage Gain step by step When too small setting, motor may rotate greatly or generate out-of-step.	H134


# **Dynamic Braking related functions**

**Dynamic Braking related functions:** b090, b095, b095, b095, b097 – These parameters are for using the internal brake chopper so to get more regeneration torque of the motor.



**NOTE**:. Mark "✓" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access.

	"b" Function			Default	s
Func. Code	Name	Description	Run Mode Edit	Lnitial data	Units
ь0 <b>9</b> 0	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 s intervals, range is 0.0 to the value calcurated by the inverter with b097. If the connected register's allowable range is narrow than above range, the register's range is prior.  0%: Function disabled >0%: Enabled, per value	×	0.0	%
ь095	Dynamic braking control (BRD) selection	Three option codes:  ODDisable  O IEnable during run only  OZEnable always	×	01	-
6096 6096	BRD activation level (As DC Voltage)	If DC Voltage > b096, the register consume. regeneration power. Range is: 330 to 380V (200V class) 660 to 760V (400V class)	×	360/ 720	V
ь097	BRD register	Set the value of the register connected to the inverter. By this setting, b090's upper limit as the inverter hardware is calcurated automatically. So, you can focus the usage ratio as the connected register.  Range is minimum connectable register Rbmin to $600.0[\Omega]$	×	Min. Resistance	Ω

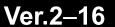

## Data Read/Write selection

Setting b166 to "01", you can inhibit <u>both</u> Read, Write function by WOP. This function is different from "software lock function".



**NOTE**: Mark " $\checkmark$ " in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access.

	"b" Function		Run	Defaul	ts
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
ь 166	Data Read/Write selection	ODRead/Write enable O Iboth Read, Write disable	×	00	-

## Inverter mode selection

- · Current mode of the inverter is displayed in d060.
- When initializing or clearing trip history under PM operation mode, please set b084,b085 and b094, which is the same as a normal procedure of initialization, and execute initialization by setting the initialization trigger (b180) to 01. b171 setting is not needed.
- · When changing the operation mode from PM mode to IM, same parameters will be used.

It changes to the PM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 03, and initialization is executed.

Oppositely, it changes to the IM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 01, and initialization is executed.

- ■When changing inverter mode, observe the following precautions.
- ① The Factory default is IM mode.
- ② When inverter mode changing, b084 setting is not needed.
- ③ When PM mode, "Dual Rating Selection" is only "CT mode".
- 4 When 01 is set on the initialization trigger (b180), and SET key is pressed, initialization starts immediately and there is not any way to restore the previous parameter setting.
- ⑤ All data will be initialized independent of b094.
- (6) The settings of "P100" to "P131", running-time data, and power-on time data cannot be cleared.
- The When display is restricted by the function code display restriction function (b037) or software is locked by the software lock function (b031), you cannot initialize because the function codes of initialization are no-display. If you forget password that restrict setting (b031) and (b037), you cannot cancel it. (So you cannot initialize when software lock is active, you note that the setting password. (See section 7.6.11 the password function.))



NOTE:. Mark "✓" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level

	"b" Function			Defaults	
Func. Code	Name	Description	Run Mode Edit	Lnitial data	Units
ЬΠΙ	Inverter mode selection	ODNot change inverter mode OIIM mode OBPM mode	×	00	-
ь 180	Initialization trigger	OD No action I Initialize	×	00	_

# Thermal detection system Error

Error Code	Name	Cause(s)
E 19	Inverter thermal detection system error	When the thermal sensor in the inverter module is not connected.

# **ModBus Data Listing**

# **ModBus Coil List**

The following tables list the primary coils for the inverter interface to the network. The table legend is given below.

- Coil Number The network register address offset for the coil. The coil data is a single bit (binary) value
- Name The functional name of the coil
- R/W The read-only (R) or read-write (R/W) access permitted to the inverter data
- Description The meaning of each of the states of the coils

Coil	Item	R/W	Setting
No.	item	10/00	Jetting .
0000h	unused	-	(Inaccessible)
0001h	Operation command	R/W	1: Run, 0: Stop (valid when A002 = 03)
0002h	Rotation direction command	R/W	1: Reverse rotation, 0: Forward rotation (valid when A002 = 03)
0003h	External trip (EXT)	R/W	1: Trip
0004h	Trip reset (RS)	R/W	1: Reset
0005h	(Reserved)	-	-
0006h	(Reserved)	-	-
0007h	Intelligent input terminal [1]	R/W	1: ON, 0: OFF (*1)
0008h	Intelligent input terminal [2]	R/W	1: ON, 0: OFF (*1)
0009h	Intelligent input terminal [3]	R/W	1: ON, 0: OFF (*1)
000Ah	Intelligent input terminal [4]	R/W	1: ON, 0: OFF (*1)
000Bh	Intelligent input terminal [5]	R/W	1: ON, 0: OFF (*1)
000Ch	Intelligent input terminal [6]	R/W	1: ON, 0: OFF (*1)
000Dh	Intelligent input terminal [7]	R/W	1: ON, 0: OFF (*1)
000Eh	(Reserved)	-	-
000Fh	Operation status	R	1: Run, 0: Stop (interlocked to "d003")
0010h	Rotation direction	R	1: Reverse rotation, 0: Forward rotation (interlocked to "d003")
0011h	Inverter ready	R	1: Ready, 0: Not ready
0012h	(Reserved)	-	-
0013h	RUN (running)	R	1: Tripping, 0: Normal
0014h	FA1 (constant-speed reached)	R	1: ON, 0: OFF
0015h	FA2 (set frequency overreached)	R	1: ON, 0: OFF
0016h	OL (overload advance notice (1))	R	1: ON, 0: OFF
0017h	OD (output deviation for PID control)	R	1: ON, 0: OFF
0018h	AL (alarm signal)	R	1: ON, 0: OFF
0019h	FA3 (set frequency reached)	R	1: ON, 0: OFF
001Ah	OTQ (over-torque)	R	1: ON, 0: OFF
001Bh	(Reserved)	-	-
001Ch	UV (undervoltage)	R	1: ON, 0: OFF
001Dh	TRQ (torque limited)	R	1: ON, 0: OFF
001Eh	RNT (operation time over)	R	1: ON, 0: OFF
001Fh	ONT (plug-in time over)	R	1: ON, 0: OFF
0020h	THM (thermal alarm signal)	R	1: ON, 0: OFF
0021h	(Reserved)	-	-
0022h	(Reserved)	-	-
0023h	(Reserved)	-	
0024h	(Reserved)	-	-
0025h 0026h	(Reserved)	- D	- 1. ON 0. OFF
0026h 0027h	BRK (brake release) BER (brake error)	R R	1: ON, 0: OFF 1: ON, 0: OFF
0027h 0028h		R	1: ON, 0: OFF 1: ON, 0: OFF
0028h	ZS (0 Hz detection signal) DSE (speed deviation maximum)	R	1: ON, 0: OFF
0029h	POK (positioning completed)	R	1: ON, 0: OFF
002An	FA4 (set frequency overreached 2)	R	1: ON, 0: OFF
002Bh	FA5 (set frequency reached 2)	R	1: ON, 0: OFF
UUZUII	i Ab (Set frequency reached 2)	ιĸ	1. UN, U. UFF

Coil No.	Item	R/W	Setting
002Dh	OL2 (overload notice advance (2))	R	1: ON, 0: OFF
002Eh	Odc: Analog O disconnection detection	-	1: ON. 0: OFF
002Fh	OIDc: Analog OI disconnection	_	1: ON, 0: OFF
0030h	detection (Reserved)		-
0031h	(Reserved)		_
0032h	FBV (PID feedback comparison)	R	1: ON, 0: OFF
0033h	NDc (communication train disconnection)	R	1: ON, 0: OFF
0034h	LOG1 (logical operation result 1)	R	1: ON, 0: OFF
0035h	LOG2 (logical operation result 2)	R	1: ON, 0: OFF
0036h	LOG3 (logical operation result 3)	R	1: ON, 0: OFF
0037h	(Reserved)	-	-
0038h	(Reserved)	_	-
0039h	(Reserved)	-	_
003Ah	WAC (capacitor life warning)	R	1: ON, 0: OFF
003Bh	WAF (cooling-fan speed drop)	R	1: ON. 0: OFF
003Ch	FR (starting contact signal)	R	1: ON, 0: OFF
003Dh	OHF (heat sink overheat warning)	R	1: ON. 0: OFF
003Eh	LOC (low-current indication signal)	R	1: ON, 0: OFF
003Fh	M01 (general output 1)	R	1: ON. 0: OFF
0040h	M02 (general output 2)	R	1: ON, 0: OFF
0041h	M03 (general output 3)	R	1: ON. 0: OFF
0042h	(Reserved)	-	-
0043h	(Reserved)	-	-
0044h	(Reserved)	-	-
0045h	IRDY (inverter ready)	R	1: ON, 0: OFF
0046h	FWR (forward rotation)	R	1: ON, 0: OFF
0047h	RVR (reverse rotation)	R	1: ON, 0: OFF
0048h	MJA (major failure)	R	1: ON, 0: OFF
0049h	Data writing in progress	R	1: Writing in progress, 0: Normal status
004Ah	CRC error	R	1: Error detected, 0: No error (*2)
004Bh	Overrun	R	1: Error detected, 0: No error (*2)
004Ch	Framing error	R	1: Error detected, 0: No error (*2)
004Dh	Parity error	R	1: Error detected, 0: No error (*2)
004Eh	Sum check error	R	1: Error detected, 0: No error (*2)
004Fh	(Reserved)	-	-
0050h	WCO (window comparator O)	R	1: ON, 0: OFF
0051h	WCOI (window comparator OI)	R	1: ON, 0: OFF
0052h	(Reserved)		-
0053h	OPDc (option disconnection)	R	1: ON, 0: OFF
0054h	FREF (FQ command source)	R	1: Operator, 0: Others
0055h	REF (RUN command source)	R	1: Operator, 0: Others
0056h	SETM (2nd motor selected)	R	1: 2nd motor selected, 0: 1st motor selected
0057h	(Reserved)	-	-
0058h	EDM (Gate suppress monitor)	R	1: ON, 0: OFF
0059h-	unused	R	inaccessible

- \*1 Normally, this coil is turned on when the corresponding intelligent input terminal on the control circuit terminal block is turned on or the coil itself is set to on. In this regard, the operation of the intelligent input terminal has priority over the operation of the coil. If disconnection of the communication train has disabled the master system from turning off the coil, turn the corresponding intelligent input terminal on the control circuit block on and off. This operation turns off the coil.
- \*2 Communication error data is retained until an error reset command is input. (The data can be reset during the inverter operation.)



# **ModBus Holding Registers**

The following tables list the holding registers for the inverter interface to the network. The table legend is given below.

- Function Code The inverter's reference code for the parameter or function (same as inverter keypad display)
- Name The standard functional name of the parameter or function for the inverter
- R/W The read-only(R) or read-write access(R/W) permitted to the data in the inverter
- **Description** How the parameter or setting works (same as Chapter 3 description).
- Reg. The network register address offset for the value. Some values have a high-byte and low-byte address
- Range The numerical range for the network value that is sent and/or received



**TIP:** The network values are binary integers. Since these values cannot have an embedded decimal point, for many parameters it represents the actual value (in engineering units) multiplied by a factor of 10 or 100. Network communications must use the listed range for network data. The inverter automatically divides received values by the appropriate factor in order to establish the decimal point for internal use. Likewise, the network host computer must apply the same factor when it needs to work in engineering units. However, when sending data to the inverter, the network host computer must scale values to the integer range listed for network communications.

• **Resolution** - This is the quantity represented by the LSB of the network value, in engineering units. When the network data range is greater than the inverter's internal data range, this 1-bit resolution will be fractional.

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
0000h	unused	-	-	Inaccessible	
0001h	Eroguepov cource	F001 (high)	R/W	0 to 40000 (valid when A001 = 03)	0.01 [Hz]
0002h	Frequency source	F001 (low)	R/W		0.01 [HZ]
0003h	Inverter status A	-	R	0: Initial status 6: DC braking 2: Stopping 7: Retrying 3: Running 8: Tripping 4: Free-run stop 9: Undervoltage (UV), 5: Jogging	-
0004h	Inverter status B	-	R	0: Stopping, 1: Running, 2: Tripping	-
0005h	Inverter status C	-	R	0: 1: Stopping 2: Decelerating 3: Constant-speed operation 4: Accelerating 5: Forward rotation  6: Reverse rotation 7: Switching from fwd. 8: Switching from rev. to fwd. rotation, 9: Starting fwd. 10: Starting rev.	-
0006h	PID feedback	-	R/W	0 to 10000	0.01 [%]
0007h to 0010h	(Reserved)	-	R	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
0011h	Trip Counter	d080	R	0 to 65530	1 [time]
0012h	Trip info. 1 (factor)			See the list of inverter trip factors below	-
0013h	Trip info. 1 (inverter status)			See the list of inverter trip factors below	-
0014h	Trip info. 1 (frequency) (high)			0 to 100000	0.01[Hz]
0015h	Trip info. 1 (frequency (low)				
0016h	Trip info. 1 (current)	d081	R	Output current at tripping	0.01[A]
0017h	Trip info. 1 (voltage)	4001		DC input voltage at tripping	1[V]
0018h	Trip info. 1 (running time) (high)			Cumulative running time at tripping	1[h]
0019h	Trip info. 1 (running time) (low)			Carrialative ranning arrie at anpping	11.11
001Ah	Trip info. 1 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
001Bh	Trip info. 1 (power-on time) (low)				11.11
001Ch	Trip info. 2 (factor)			See the list of inverter trip factors below	-
001Dh	Trip info. 2 (inverter status)			See the list of inverter trip factors below	-
001Eh	Trip info. 2 (frequency) (high)			0 to 100000	0.01[Hz]
001Fh	Trip info. 2 (frequency (low)				
0020h	Trip info. 2 (current)	d082	R	Output current at tripping	0.01[A]
0021h	Trip info. 2 (voltage)	4002		DC input voltage at tripping	1[V]
0022h	Trip info. 2 (running time) (high)			Cumulative running time at tripping	1[h]
0023h	Trip info. 2 (running time) (low)			ggg	1111
0024h	Trip info. 2 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
0025h	Trip info. 2 (power-on time) (low)				1111
0026h	Trip info. 3 (factor)			See the list of inverter trip factors below	-
0027h	Trip info. 3 (inverter status)			See the list of inverter trip factors below	-
0028h	Trip info. 3 (frequency) (high)			0 to 100000	0.01[Hz]
0029h	Trip info. 3 (frequency (low)				
002Ah	Trip info. 3 (current)	d083	R	Output current at tripping	0.01[A]
002Bh	Trip info. 3 (voltage)	4000	1.	DC input voltage at tripping	1[V]
002Ch	Trip info. 3 (running time) (high)			Cumulative running time at tripping	1[h]
002Dh	Trip info. 3 (running time) (low)				-11-1
002Eh	Trip info. 3 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
002Fh	Trip info. 3 (power-on time) (low)				-11-11
0030h	Trip info. 4 (factor)			See the list of inverter trip factors below	-
0031h	Trip info. 4 (inverter status)			See the list of inverter trip factors below	-
0032h	Trip info. 4 (frequency) (high)			0 to 100000	0.01[Hz]
0033h	Trip info. 4 (frequency (low)				
0034h	Trip info. 4 (current)	d084	R	Output current at tripping	0.01[A]
0035h	Trip info. 4 (voltage)			DC input voltage at tripping	1[V]
0036h	Trip info. 4 (running time) (high)			Cumulative running time at tripping	1[h]
0037h	Trip info. 4 (running time) (low)			0 11 0	
0038h	Trip info. 4 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
0039h	Trip info. 4 (power-on time) (low)				
003Ah	Trip info. 5 (factor)			See the list of inverter trip factors below	-
003Bh	Trip info. 5 (inverter status)			See the list of inverter trip factors below	-
003Ch	Trip info. 5 (frequency) (high)			0 to 100000	0.01[Hz]
003Dh	Trip info. 5 (frequency (low)				
003Eh	Trip info. 5 (current)	d085	R	Output current at tripping	0.01[A]
003Fh	Trip info. 5 (voltage)			DC input voltage at tripping	1[V]
0040h	Trip info. 5 (running time) (high)			Cumulative running time at tripping	1[h]
0041h	Trip info. 5 (running time) (low)			3, 1,1,1,1,1	
0042h	Trip info. 5 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
0043h	Trip info. 5 (power-on time) (low)				
0044h	Trip info. 6 (factor)			See the list of inverter trip factors below	-
0045h	Trip info. 6 (inverter status)			See the list of inverter trip factors below	-
0046h	Trip info. 6 (frequency) (high)			0 to 100000	0.01[Hz]
0047h	Trip info. 6 (frequency (low)				
0048h	Trip info. 6 (current)	d086	R	Output current at tripping	0.01[A]
0049h	Trip info. 6 (voltage)			DC input voltage at tripping	1[V]
004Ah	Trip info. 6 (running time) (high)			Cumulative running time at tripping	1[h]
004Bh	Trip info. 6 (running time) (low)			2	11.1
004Ch	Trip info. 6 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
004Dh	Trip info. 6 (power-on time) (low)				1.1



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
004Eh	Programming error monitoring	d090	R	Warning code	-
004Fh to 006Ch	(reserved)	-	-	-	-
006Dh to 08Efh	(reserved)	-	-	-	-
0900h	Writing to EEPROM	-	W	Motor constant recalculation     Save all data in EEPROM     Other: Motor constant recalculation and save all data in EEPROM	-
0901h	Unused	-	-	Inaccessible	-
0902h	EEPROM write mode	-	W	0 (invalid) / 1 (valid)	
0903h to 1000h	Unused	-	-	Inaccessible	-

- Note 1: Assume that the rated current of the inverter is "1000".
- Note 2: If a number not less than "1000" (100.0 seconds) is specified, the second value after the decimal point will be ignored.
- Note 3: 0902h setting is referred for one time when following 06H command is executed.

# List of inverter trip factors

Upper part of trip factor code (indicating the factor)		Lower part of trip factor code (indicating the inverter status)		
Name		Name	Code	
No trip factor	0	Resetting	0	
Over-current event while at constant speed	1	Stopping	1	
Over-current event during deceleration	2	Decelerating	2	
Over-current event during acceleration	3	Constant-speed operation	3	
Over-current event during other conditions	4	Accelerating	4	
Overload protection	5	Operating at zero frequency	5	
Braking resistor overload protection	6	Starting	6	
Overvoltage protection	7	DC braking	7	
EEPROM error	8	Overload restricted	8	
Undervoltage protection	9			
Current detection error	10			
CPU error	11			
External trip	12			
USP error	13			
Ground-fault protection	14			
Input overvoltage protection	15			
Thermistor thermal protection	19			
Inverter thermal trip	21			
CPU error	22			
Main circuit error	25			
Driver error	30			
Thermistor error	35			
Braking error	36			
Safe Stop	37			
Low-speed overload protection	38			
Operator connection	40			
Modbus communication error	41			
Easy sequence error (invalid instruction)	43			
Easy sequence error (invalid nesting count)	44			
Easy sequence execution error 1	45			
Easy sequence user trip 0 to 9	50 to 59			
Option error 0 to 9	60 to 69			
Encoder disconnection	80			
Excessive speed	81			
Position control range trip	83			



# (iii) List of registers (monitoring)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1001h	Output frequency monitor	d001 (high)	R	0 to 40000(100000)	0.01 [Hz]
1002h	Output current monitor	d001 (low) d002	R	0 to 65530	0.1 [A]
	Rotation direction minitoring	d002	R	0: Stopping, 1: Forward rotation, 2: Reverse rotation	0.1 [Hz]
1005h	Process variable (PV), PID	d004 (high)	R	0 to 1000000	0.1
1006h	feedback monitoring	d004 (low)	ĸ		0.1
1007h	Intelligent input terminal status	d005	R	2^0: Terminal 1 to 2^6: Terminal 7	1 bit
	Intelligent output terminal status	d006	R	2^0: Terminal 11 to 2^1: Terminal 12/ 2^2: Relay Terminal	1 bit
100Ah	Scaled output frequency monitor	d007 (high) d007 (low)	R	0 to 4000000(10000000)	0.01
100Ch	Actual-frequency monitor	d008 (high) d008 (low)	R R	-100000 to +100000	0.01 [Hz]
	Torque command monitor	d009	R	-200 to +200	1 [%]
100Eh	Torque bias monitor	d010	R	-200 to +200	1 [%]
100Fh	(Reserved)	-	-	-	-
1010h	Torque monitor	d012	R	-200 to +200	1 [%]
	Output voltage monitor	d013	R	0 to 6000	0.1 [V]
1012h 1013h	Power monitor	d014 d015 (high)	R	0 to 1000	0.1 [kW]
1013h	Watt-hour monitor	d015 (fligh)	R	0 to 9999000	0.1
1015h		d015 (low)			
1016h	Elapsed RUN time monitor	d016 (low)	R	0 to 999900	1 [h]
1017h	Elapsed power-on time monitor	d017 (high) d017 (low)	R	0 to 999900	1 [h]
	Heat sink temperature monitor	d017 (l0w)	R	-200 to 1500	0.1 [°c]
101Ah to	(Reserved)	-	-	-	-
101Dh	Life-check monitor	d022	R	2^0: Capacitor on main circuit board 2^1: cooling-fan	1 bit
101Eh	EzSQ program counter	d023	R	0~1024	
	EzSQ program number	d024	R	0~9999	
	(Reserved)	-	-	-	-
102011	DC voltage monitoring (across P and N)	d102	R	0 to 10000	0.1 [V]
	BRD load factor monitoring	d103	R	0 to 1000	0.1 [%]
1028h	Electronic thermal overload monitoring	d104	R	0 to 1000	0.1 [%]
	(Reserved)	-	- 1	-	-
102Eh	User monitor 1	d025(HIGH)	R	-2147483647 to 2147483647	1
102Fh 1030h		d025(LOW) d026(HIGH)	R R		
1030h 1031h	User monitor 2	d026(LOW)	R	-2147483647 to 2147483647	1
1031h		d020(LOW)	R		
1032h	User monitor 3	d027(LOW)	R	-2147483647 to 2147483647	1
	(Reserved)	-	-	-	-
1036h	Position setting monitor	d029(HIGH) d029(LOW)	R R	-268435455 to 268435455	1
1038h		d029(LOW)	R		
1039h	Position feedback monitor	d030(LOW)	R	-268435455 to 268435455	1
	(reserved)	-	-	-	-
	Inverter mode monitor	d60	R	O(IM CT) 3(PM motor mode) 1(IM VT)	
1058h to 1102h	unused	-	-	Inaccessible	-

(iv) List of registers

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1103h 1104h	Acceleration time (1)	F002 (high) F002 (low)	R/W	1 to 360000	0.01 [s]
1105h 1106h	Deceleration time (1)	F003 (high) F003 (low)	R/W	1 to 360000	0.01 [s]
1107h	Keypad Run key routing	F004	R/W	0 (forward rotation), 1 (reverse rotation)	-
1108h to 1200h	Unused	-	ı	Inaccessible	-

# (v) List of registers (function modes) Parameter group A

Paramete	er group A				
Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1201h	Frequency source	A001	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
1202h	Run command source (*)	A002	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	=
1203h	Base frequency	A003	R/W	300 to "maximum frequency"	0.1 [Hz]
1204h	Maximum frequency	A004	R/W	300 to 4000(10000)	0.1 [Hz]
1205h	[AT] selection	A005	R/W	0 (switching between O and OI terminals), 2 (switching between O terminal and keypad potentiometer), 3 (switching between OI terminal and keypad potentiometer)	-
1206h to 120Ah	(Reserved)	-	•	-	-
120Bh 120Ch	[O] input active range start frequency	A011 (high) A011 (low)	R/W	0 to 40000(100000)	0.01 [Hz]
120Dh 120Eh	[O] input active range end frequency	A012 (high) A012 (low)	R/W	0 to 40000(100000)	0.01 [Hz]
120Fh	[O] input active range start voltage	A013	R/W	0 to "[O]-[L] input active range end voltage"	1 [%]
1210h	[O] input active range end voltage	A014	R/W	"[O]-[L] input active range start voltage" to 100	1 [%]
1211h	[O] input start frequency select	A015	R/W	0 (external start frequency), 1 (0 Hz)	-
1212h	Analog input filter.	A016	R/W	1 to 30 or 31 (500 ms filter ±0.1 Hz with hysteresis)	1
1213h	EzSQ selection	A017	R/W	0 (disabling), 1 (PRG terminal), 2 (Always)	-
1214h	(Reserved)	-	-	-	-
1215h	Multi speed operation selection	A019	R/W	0 (binary), 1 (bit)	-
1216h 1217h	Multi-speed freq. 0	A020 (high) A020 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1218h 1219h	Multi-speed freq. 1	A021 (high) A021 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Ah 121Bh	Multi-speed freq. 2	A022 (high) A022 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Ch 121Dh	Multi-speed freq. 3	A023 (high) A023 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Eh 121Fh	Multi-speed freq. 4	A024 (high) A024 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1220h 1221h	Multi-speed freq. 5	A025 (high) A025 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1222h 1223h	Multi-speed freq. 6	A026 (high) A026 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1224h 1225h	Multi-speed freq. 7	A027 (high) A027 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]

After changing the setting, keep the time 40ms or longer before actually give run command

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1226h 1227h	Multi-speed freq. 8	A028 (high) A028 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1228h 1229h	Multi-speed freq. 9	A029 (high) A029 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Ah 122Bh	Multi-speed freq. 10	A030 (high) A030 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Ch 122Dh	Multi-speed freq. 11	A031 (high) A031 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Eh 122Fh	Multi-speed freq. 12	A032 (high) A032 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1230h 1231h	Multi-speed freq. 13	A033 (high) A033 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1232h 1233h	Multi-speed freq. 14	A034 (high) A034 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1234h 1235h	Multi-speed freq. 15	A035 (high) A035 (low)	R/W R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1236h	(Reserved)	-	-	-	-
1237h	(Reserved)	-	-	-	-
1238h	Jog frequency	A038	R/W	0.0, "Start frequency" to 999(10000)	0.01 [Hz]
1239h	Jog stop mode	A039	R/W	O (free-running after jogging stops [disabled during operation]) I (deceleration and stop after jogging stops [disabled during operation]) C (DC braking after jogging stops [disabled during operation]) Ifree-running after jogging stops [enabled during operation]) G(deceleration and stop after jogging stops [enabled during operation]) C (DC braking after jogging stops [enabled during operation])	-
123Ah	(Reserved)	-	-	-	-
123Bh	Torque boost method selection	A041	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
123Ch	Manual torque boost value	A042	R/W	0 to 200	0.1 [%]
123Dh	Manual torque boost frequency	A043	R/W	0 to 500	0.1 [%]
123Eh	V/F characteristic curve selection, 1st motor	A044	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control),	-
123Fh	V/f gain	A045	R/W	20 to 100	1 [%]
1240h	Voltage compensation gain setting for automatic torque boost, 1st motor	A046	R/W	0 to 255	1 [%]
1241h	Slippage compensation gain setting for automatic torque boost, 1st motor	A047	R/W	0 to 255	1 [%]
1242h to1244h	(Reserved)	-	-	-	-
1245h	DC braking enable	A051	R/W	0 (disabling), 1 (enabling), 2 (output freq < [A052])	-
1246h	DC braking frequency	A052	R/W	0 to 6000	0.01 [Hz]
1247h	DC braking wait time	A053	R/W	0 to 50	0.1 [s]
1248h	DC braking force during deceleration	A054	R/W	0 to 100	1 [%]
1249h	DC braking time for deceleration	A055	R/W	0 to 600	0.1 [s]
124Ah	DC braking/edge or level detection for [DB] input	A056	R/W	0 (edge operation), 1 (level operation)	-
124Bh	DC braking force for starting	A057	R/W	0 to 100	1 [%]
124Ch 124Dh	DC braking time for starting DC braking carrier frequency	A058 A059	R/W R/W	0 to 600 20 to 150	0.1 [s] 0.1 [kHz]
	setting (Decembed)				
124Eh	(Reserved)	-	-	<u> -</u>	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
124Fh	Frequency upper limit	A061 (high)	R/W	0 or "maximum frequency limit" to "maximum	0.01 [Hz]
1250h	requestoy appor minic	A061 (low)	R/W	frequency"	0.01 [112]
1251h	Frequency lower limit	A062 (high)	R/W	0 or "maximum frequency limit" to "maximum	0.01 [Hz]
1252h	. requestey terror minic	A062 (low)	R/W	frequency"	0.0 . [2]
1253h	Jump freq. (center) 1	A063 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1254h		A063 (low)	R/W		
1255h	Jump freq. width (hysteresis) 1	A064	R/W	0 to 1000(10000)	0.01 [Hz]
1256h	Jump freg. (center) 2	A065 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1257h	,	A065 (low)	R/W	0 10 40000(100000)	0.01 [112]
1258h	Jump freq. width (hysteresis) 2	A066	R/W	0 to 1000(10000)	0.01 [Hz]
1259h	Jump freg. (center) 3	A067 (high)	R/W	0 to 40000(100000)	0.04 []
125Ah	Jump freq. (center) 3	A067 (low)	R/W	70 (0 40000(100000)	0.01 [Hz]
125Bh	Jump freq. width (hysteresis) 3	A068	R/W	0 to 1000(10000)	0.01 [Hz]
125Ch	Acceleration hold frequency	A069 (high)	R/W	0 to 40000	0.01 [Hz]
125Dh	Acceleration floid frequency	A069 (low)	R/W	70 10 40000	ט.טו נחבן
125Eh	Acceleration hold time	A070	R/W	0 to 600	0.1 [s]
125Fh	PID Function Enable	A071	R/W	0 (disabling), 1 (enabling), 2 (enabling inverted-data output)	-
1260h	PID proportional gain	A072	R/W	0 to 2500	0.10
1261h	PID integral time constant	A073	R/W	0 to 36000	0.1 [s]
1262h	PID derivative gain	A074	R/W	0 to 10000	0.01 [s]
1263h	PV scale conversion	A075	R/W	1 to 9999	0.01
1264h	PV source	A076	R/W	0 (input via OI), 1 (input via O), 2 (external communication), 3 (pulse train frequency input), 10 (operation result output)	-
1265h	Reverse PID	A077	R/W	00 (disabling), 01 (enabling)	-
1266h	PID output limiter	A078	R/W	0 to 1000	0.1 [%]
1267h	PID feed forward selection	A079	R/W	0 (disabled), 1(O input), 2 (OI input)	-
1268h	(Reserved)	-	R/W	-	-
1269h	AVR function select	A081	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
126Ah	AVR voltage select	A082	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)	-
126Bh	AVR filter time constant	A083	R/W	0.000 to 10.00	0.001[s]
126Ch	AVR deceleration gain	A084	R/W	50 to 200	1[%]
126Dh	Energy-saving operation mode	A085	R/W	0 (normal operation), 1 (energy-saving operation)	-
126Eh	Energy-saving mode tuning	A086	R/W	0 to 1000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
126Fh to 1273h	(Reserved)	-	-	-	
1274h 1275h	Acceleration time (2)	A092 (high) A092 (low)	R/W R/W	1 to 360000	0.01 [s]
1276h 1277h	Deceleration time (2)	A093 (high) A093 (low)	R/W R/W	1 to 360000	0.01 [s]
1278h	Select method to switch to Acc2/Dec2 profile	A094	R/W	0 (switching by 2CH terminal), 1 (switching by setting) 2 (Forward and reverse)	-
1279h 127Ah	Acc1 to Acc2 frequency transition point	A095 (high) A095 (low)	R/W R/W	0 to 40000(100000)	0.01 [Hz]
127Bh 127Ch	Dec1 to Dec2 frequency transition point	A096 (high) A096 (low)	R/W R/W	0 to 40000(100000)	0.01 [Hz]
127Dh	Acceleration curve selection	A097	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Eh	Deceleration curve setting	A098	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Fh	(Reserved)	-	-	=	-
1280h	(Reserved)	-	-	-	
1281h 1282h	[OI] input active range start frequency	A101 (high) A101 (low)	R/W R/W	0 to 40000(100000)	0.01 [Hz]
1283h 1284h	[OI] input active range end frequency	A102 (high) A102 (low)	R/W R/W	0 to 40000(100000)	0.01 [Hz]
1285h	[OI] input active range start current	A103	R/W	0 to "[OI]-[L] input active range end current"	1 [%]
1286h	[OI] input active range end current	A104	R/W	"[OI]-[L] input active range start current" to 100	1 [%]
1287h	[OI] input start frequency select	A105	R/W	0 (external start frequency), 1 (0 Hz)	1
1288h to 12A4h	(Reserved)	-	1	-	-
12A5h	Acceleration curve constant	A131	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A6h	Deceleration curve constant	A132	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A7h to 12AEh	(Reserved)	-	-	-	-
12AFh	Operation-target frequency selection 1	A141	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
12B0h	Operation-target frequency selection 2	A142	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-
12B1h	Operator selection	A143	R/W	0 (addition: A141 + A142), 1 (subtraction: A141 - A142), 2 (multiplication: A141 x A142)	-
12B2h	(Reserved)	-	-	-	-
12B3h 12B4h	Frequency to be added	A145 (high) A145 (low)	R/W R/W	0 to 40000(100000)	0.01 [Hz]
12B5h	Sign of the frequency to be added	A146	R/W	00 (frequency command + A145), 01 (frequency command - A145)	-
12B6h to 12B8h	(Reserved)	-	-	-	-
12B9h	EL-S-curve acceleration/deceleration ratio 1	A150	R/W	0 to 50	1 [%]
12BAh	EL-S-curve acceleration/deceleration ratio 2	A151	R/W	0 to 50	1 [%]
12BBh	EL-S-curve deceleration ratio 1	A152	R/W	0 to 50	1 [%]
12BCh	EL-S-curve deceleration/deceleration ratio 2	A153	R/W	0 to 50	1 [%]
12BDh 12BEh	Deceleration hold frequency	A154 (high) A154 (low)	R/W	0~40000(100000)	0.01 [Hz]
12BFh	Deceleration hold time	A155	R/W	0~600	0.1 [s]
12C0h 12C1h	PID sleep function triggering level	A156 (high) A156 (low)	R/W	0~40000(100000)	0.01 [Hz]
12C2h	PID sleep function action delay time	A157	R/W	0~255	0.1 [s]
12C3h to 12C5h	(Reserved)	-	-	-	-
12C6h 12C7h	[VR] input active range start frequency	A161 (high) A161 (low)	R/W	0~40000(100000)	0.01 [Hz]
12C8h 12C9h	[VR] input active range end frequency	A162 (high) A162 (low)	R/W	0~40000(100000)	0.01 [Hz]
12CAh	[VR] input active range start %	A163	R/W	0~100	1 [%]
12CBh	[VR] input active range end %	A164	R/W	0~100	1 [%]
12CCh	[VR] input start frequency select	A165	R/W	0(start frequency A161) / 1(0Hz)	-
12CDh to 1300h	unused	-	-	Inaccessible	-



## Parameter group B

No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1301h	Restart mode on power failure / under-voltage trip	b001	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
1302h	Allowable under-voltage power failure time	b002	R/W	3 to 250	0.1 [s]
1303h	Retry wait time before motor restart	b003	R/W	3 to 1000	0.1 [s]
1304h	Instantaneous power failure/under-voltage trip alarm enable	b004	R/W	0 (disabling), 1 (enabling), 2 (disabling during stopping and decelerating to stop)	-
1305h	Number of restarts on power failure/under-voltage trip events	b005	R/W	0 (16 times), 1 (unlimited)	-
1306h	(Reserved)	-	-	-	-
1307h	Restart frequency threshold	b007 (high)	R/W	0 to 40000	0.01 [Hz]
1308h 1309h	Restart mode on over voltage / over current	b007 (low) b008	R/W R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
130Ah	(Reserved)	-	-	-	-
130Bh	Number of retry on over voltage / over current	b010	R/W	1 to 3	1 [s]
130Ch	Retry wait time on over voltage / over current	b011	R/W	3 to 1000	0.1 [s]
130Dh	Level of electronic thermal	b012	R/W	200 to 1000	0.1 [%]
130Eh 130Fh	Electronic thermal characteristic (Reserved)	b013	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting) Inaccessible	-
	Free setting, electronic thermal frequency (1)	b015	R/W	0 to 400	1 [Hz]
1311h	Free setting, electronic thermal current (1)	b016	R/W	0 to Rated current	0.1 [A]
1312h	Free setting, electronic thermal frequency (2)	b017	R/W	0 to 400	1 [Hz]
1313h	Free setting, electronic thermal current (2)	b018	R/W	0 to Rated current	0.1 [A]
1314h	Free setting, electronic thermal frequency (3)	b019	R/W	0 to 400	1 [Hz]
	Free setting, electronic thermal current (3)	b020	R/W	0 to Rated current	0.1 [A]
1316h	Overload restriction operation mode	b021	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
1317h	Overload restriction level	b022	R/W	200 to 2000	0.1 [%]
1318h	Deceleration rate at overload restriction	b023	R/W	1 to 30000	0.1 [s]
1319h	Overload restriction operation mode (2)	b024	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
131Ah	Overload restriction level 2	b025	R/W	200 to 2000	0.1 [%]
131Bh	Deceleration rate at overload restriction (2)	b026	R/W	1 to 30000	0.1 [s]
131Ch	Over current suppression enable	b027	R/W	0 (disabling), 1 (enabling)	-
131Dh	Current level of active freq.	b028	R/W	100 to 2000	0.1 [%]
	Deceleration rate of active freq.	b029	R/W	1 to 30000	0.1 [s]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
131Fh	Start freq. of active frequency matching	b030	R/W	0 (frequency at the last shutoff), 1 (maximum frequency), 2 (set frequency)	-
1320h	Software lock mode selection	b031	R/W	0 (disabling change of data other than "b031" when SFT is on), 1 (disabling change of data other than "b031" and frequency settings when SFT is on), 2 (disabling change of data other than "b031"), 3 (disabling change of data other than "b031" and frequency settings), 10 (enabling data changes during operation)	-
1321h	(Reserved)	-	-	-	-
1322h	Motor cable length parameter	b033	R/W	5 to 20	-
1323h 1324h	Run/power-on warning time	b034 (high) b034 (low)	R/W R/W	0 to 65535	1 [10h]
1325h	Rotation direction restriction	b035	R/W	0( Enable for both dir)/ 1 (Enable for forward only)/ 2 (Enable for reverse only)	-
1326h	Reduced voltage start selection	b036	R/W	0 (minimum reduced voltage start time) to 255 (maximum reduced voltage start time)	-
1327h	Function code display restriction	b037	R/W	0 (full display), 1 (function-specific display), 2 (user setting), 3 (data comparison display), 4 (basic display), 5(monitor display)	-
1328h	Initial display selection	b038	R/W	001-060	-
1329h	Automatic user parameter registration	b039	R/W	0 (disabling), 1 (enabling)	-
132Ah	Torque limit selection	b040	R/W	00 (quadrant-specific setting), 01 (switching by terminal), 02 (analog input)	-
132Bh	Torque limit 1 (fwd-power in 4-quadrant mode)	b041	R/W	0 to 200/255 (no)	1 [%]
132Ch	Torque limit 2 (rev/regen. in 4-quadrant mode)	b042	R/W	0 to 200/255 (no)	1 [%]
132Dh	Torque limit 3 (rev/power in 4-quadrant mode)	b043	R/W	0 to 200/255 (no)	1 [%]
132Eh	Torque limit 4 (fwd/regen. in 4-quadrant mode)	b044	R/W	0 to 200/255 (no)	1 [%]
132Fh	Torque limit LADSTOP enable	b045	R/W	0 (disabling), 1 (enabling)	-
1330h	Reverse Run protection enable	b046	R/W	0 (disabling), 1 (enabling)	-
1331h to 1332h	(Reserved)	-	-	-	-
1333h	Dual Rating Selection	b049	R/W	0(CT mode)/1(VT mode)	-
1334h	Controlled deceleration on power loss	b050	R/W	0 (disabling), 1 (enabling), 2, (nonstop operation at momentary power failure (no restoration)) 3, (nonstop operation at momentary power failure (restoration to be done))	-
1335h	DC bus voltage trigger level of ctrl. decel.	b051	R/W	0 to 10000	0.1 [V]
1336h	Over-voltage threshold of ctrl. decel.	b052	R/W	0 to 10000	0.1 [V]
1337h 1338h	Deceleration time of ctrl. decel.	b053 (high) b053 (low)	R/W R/W	0.01 to 36000	0.01 [s]
1339h	Initial freq. drop of ctrl. decel.	b054	R/W	0 to 1000	0.01 [Hz]
133Ah to 133Eh	(Reserved)	-	-	-	-
133Fh	Maximum-limit level of window comparators O	b060	R/W	0. to 100. (lower limit : b061 + b062 *2) (%)	1 [%]
1340h	Minimum-limit level of window comparators O	b061	R/W	0. to 100. (lower limit : b060 - b062*2) (%)	1 [%]
1341h	Hysteresis width of window comparators O	b062	R/W	0. to 10. (lower limit : b061 - b062 / 2) (%)	1 [%]
1342h	Maximum-limit level of window comparators OI	b063	R/W	0. to 100. (lower limit : b064 + b066 *2) (%)	1 [%]
1343h	Minimum-limit level of window comparators OI	b064	R/W	0. to 100. (lower limit : b063 - b066 *2) (%)	1 [%]
1344h	Hysteresis width of window comparators OI	b065	R/W	0. to 10. (lower limit : b063 - b064 / 2) (%)	1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1345h to 1348h	(Reserved)	-	-	-	
1349h	Operation level at O disconnection	b070	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Ah	Operation level at OI disconnection	b071	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Bh to 134Dh	(reserved)	-	-	-	-
134Eh	Ambient temperature	b075	R/W	-10 to 50	1 [°c]
134Fh to 1350	(reserved)	-	-	-	-
1351h	Cumulative input power data clearance	b078	R/W	Clearance by setting "1"	-
1352h	Watt-hour display gain	b079	R/W	1 to 1000	1
1353h to 1354h	(Reserved)	-	-	-	-
1355h	Start frequency	b082	R/W	10 to 999	0.01 [Hz]
1356h	Carrier frequency	b083	R/W	20 to 150	0.1 [kHz]
1357h	Initialization mode (parameters or trip history)	b084	R/W	0.1 (clearing the trip history), 2 (initializing the data), 3 (clearing the trip history and initializing the data), 4 (clearing the trip history and initializing the data and EzSQ program)	-
1358h	Country code for initialization	b085	R/W	0 (area A), 1 (area B)	-
1359h	Frequency scaling conversion factor	b086	R/W	1 to 9999	0.01
135Ah	STOP key enable	b087	R/W	0 (enabling), 1 (disabling), 2 (disabling only stop)	-
135Bh	Restart mode after FRS	b088	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (starting with active matching frequency)	-
135Ch	Automatic carrier frequency reduction	b089	R/W	0(disabling)/1(enabling( output current controlled))/ 2(enabling( fin temperature controlled))	-
135Dh	Dynamic braking usage ratio	b090	R/W	0 to 1000	0.1 [%]
135Eh	Stop mode selection	b091	R/W	0 (deceleration until stop), 1 (free-run stop)	-
135Fh	Cooling fan control	b092	R/W	0 (always operating the fan), 1 (operating the fan only during inverter operation [including 5 minutes after power-on and power-off]),2	-
1360h	Clear elapsed time of cooling fan	b093	R/W	0(count)/1(clear)	=
1361h	Initialization target data	b094	R/W	0 to 3	-
1362h	Dynamic braking control	b095	R/W	0 (disabling), 1 (enabling [disabling while the motor is stopped]), 2 (enabling [enabling also while the motor is stopped])	
1363h	Dynamic braking activation level	b096	R/W	330 to 380, 660 to 760	1. [V]
1364h	BRD resistor value	b097	R/W	Min.Resistance to 6000	0.1[Ω]
1365h to 1366h	(Reserved)	-	-	- (A)    (A)	-
1367h	Free-setting V/f frequency (1)	b100		0. to "free-setting V/f frequency (2)"	1 [Hz]
1368h 1369h	Free-setting V/f voltage (1) Free-setting V/f frequency (2)	b101 b102		0. to 8000 0. to "free-setting V/f frequency (3)"	0.1 [V] 1 [Hz]
1369h	Free-setting V/f trequency (2)	b102	R/W	0. to 8000	0.1 [V]
136Bh	Free-setting V/I voltage (2) Free-setting V/I frequency (3)	b103	R/W	0. to "free-setting V/f frequency (4)"	0.1 [V] 1 [Hz]
136Ch	Free-setting V/f riequency (3)	b104 b105		0. to 8000	0.1 [V]
136Dh	Free-setting V/f frequency (4)	b106	R/W	0. to "free-setting V/f frequency (5)"	1 [Hz]
136Eh	Free-setting V/f voltage (4)	b107	R/W	0. to 8000	0.1 [V]
136Fh	Free-setting V/f frequency (5)	b108		0. to "free-setting V/f frequency (6)"	1 [Hz]
1370h	Free-setting V/f voltage (5)	b109	R/W	0. to 8000	0.1 [V]
1371h	Free-setting V/f frequency (6)	b110	R/W	0. to "free-setting V/f frequency (7)"	1 [Hz]
1372h	Free-setting V/f voltage (6)	b111	R/W	0. to 8000	0.1 [V]
1373h	Free-setting V/f frequency (7)	b112	R/W	0. to 400.	1 [Hz]
1374h	Free-setting V/f voltage (7)	b113	R/W	0. to 8000	0.1 [V]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1375h to 137Ah	(Reserved)	-	-	-	-
137Bh	Brake Control Enable	b120	R/W	0 (disabling), 1 (enabling)	-
137Ch	Brake Wait Time for Release	b121	R/W	0 to 500	0.01 [s]
137Dh	Brake Wait Time for Acceleration	b122	R/W	0 to 500	0.01 [s]
137Eh	Brake Wait Time for Stopping	b123	R/W	0 to 500	0.01 [s]
137Fh	Brake Wait Time for Confirmation	b124	R/W	0 to 500	0.01 [s]
1380h	Brake Release Frequency	b125	R/W	0 to 40000	0.01 [Hz]
1381h	Brake Release Current	b126	R/W	0 to 2000	0.1 [%]
1382h	Braking frequency	b127	R/W	0 to 40000	0.01 [Hz]
1383h	(Reserved)	-	-	-	- '
1384h	(Reserved)	-	-	-	-
1385h	Deceleration over voltage suppression enable	b130	R/W	0 (disabling), 1 (enabling), 2 (enabling with acceleration)	-
1386h	Decel. over volt. suppress level	b131	R/W	200 V class: 330 to 390 (V) 400 V class: 660 to 780 (V)	1 [V]
1387h	Decel. over volt. suppress const.	b132	R/W	10 to 3000	0.01 [s]
1388h	Decel. overvolt. suppress propotional gain	b133	R/W	0 to 500	0.01
1389h	Decel. overvolt. suppress Integral time	b134	R/W	0 to 1500	0.1 [s]
138Ah to 1393h	(Reserved)	-	-	-	-
1394h	GS input mode	b145	R/W	0(non Trip) /1(Trip)	-
1395h~13 99h	(Reserved)	-	-	-	-
139Ah	Display ex.operator connected	b150	R/W	001 to 060	-
139Bh~13 A2h	(Reserved)	-	-	-	-
13A3h	1st parameter of Dual Monitor	b160	R/W	001 to 030	-
13A4h	2nd parameter of Dual Monitor	b161	R/W	001 to 030	-
13A5h	(Reserved)	-	-	-	-
13A6h	Freq. set in monitoring	b163	R/W	0 (disabling), 1 (enabling)	-
13A7h	Automatic return to the initial display	b164	R/W	0 (disabling), 1 (enabling)	-
13A8h	Ex. operator com. loss action	b165	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
13A9h	Data Read/Write select	b166	R/W	0 (Read/Write OK) / 1 (Protected)	-
13AAh~13 ADh	(Reserved)	-	-		-
13AEh	Inverter mode selection	b171	R/W	0 (disabling), 1 (IM mode), 3 (PM motor mode)	-
13AFh~13 B6h	(Reserved)	-	-	-	-
13B7h	Initialization trigger	b180	R/W	0 (disabling), 1 (enabling)	-
13B8h~14 00h	unused	-	-	Inaccessible	-



# Parameter group C

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1401h	Input [1] function	C001	R/W	1 (RV: Reverse RUN), 2 (CF1: Multispeed 1 setting), 3 (CF2: Multispeed 2 setting), 4 (CF3: Multispeed 3 setting), 5 (CF4: Multispeed 4 setting), 6 (JG: Jogging), 7 (DB: external DC braking), 8 (SET: Set 2nd motor data). 9 (2CH: 2-stage	-
1402h	Input [2] function	C002	R/W	external trip), 13 (USP: unattended start protection), 14 (CS: commercial power source enable), 15 (SFT: software lock), 16 (AT: analog input voltage/current select), 18 (RS: reset), 20 (STA: starting by 3-wire input), 21 (STP: stopping by 3-wire input), 22 (F/R: forward/reverse switching by 3-wire input), 23 (PID: PID	-
1403h	Input [3] function	C003	R/W	disable), 24 (PIDC: PID reset, 27 (UP: remote control UP function), 28 (DWN: remote control DOWN function), 29 (UDC: remote control data clearing), 31 (OPE: forcible operation), 32 (SF1: multispeed bit 1), 33 (SF2: multispeed bit 2), 34 (SF3: multispeed bit 3), 35 (SF4: multispeed bit 4), 36 (SF5: multispeed bit 5), 37 (SF6: multispeed bit 6), 38 (SF7: multispeed bit 7), 39	-
1404h	Input [4] function	C004	R/W	(OLR: overload restriction selection), 40 (TL: torque limit enable), 41 (TRQ1: torque limit selection bit 1), 42 (TRQ2: torque limit selection bit 2), 44 (BOK: braking confirmation), 46 (LAC: LAD cancellation), 47 (PCLR: clearance of position deviation), 50 (ADD: trigger for frequency addition [A145]), 51 (F-TM: forcible-terminal operation), 52 (ATR: permission of torque	-
1405h	Input [5] function	C005	R/W	command input), 53 (KHC: cumulative power clearance), 56 (MI1: general-purpose input 1), 57 (MI2: general-purpose input 2), 58 (MI3: general-purpose input 3), 59 (MI4: general-purpose input 4), 60 (MI5: general-purpose input 5), 61 (MI6: general-purpose input 5), 61 (MI6: general-purpose input 7), 65 (AHD: analog command holding), 66 (CP1: multistage position	-
1406h	Input [6] function	C006	R/W	settings selection 1), 67 (CP2: multistage position settings selection 2), 68 (CP3: multistage position settings selection 3), 69 (ORL: Zero-return limit function), 70 (ORG: Zero-return trigger function), 73 (SPD: speed / position switching), 77 (GS1: safety input 1), 78 (GS2: safety input 2), 81 (485: EzCOM), 82 (PRG: executing EzSQ program), 83 (HLD: retain output frequency), 84	-
1407h	Input [7] function	C007	R/W	(ROK: permission of run command), 85 (EB: Rotation direction detection(for V/f with ENC), 86 (DISP: Display limitation), 255 (no: no assignment),	
1408h to 140Ah	(Reserved)	-	-	Inaccessible	-
140Bh	Input [1] active state	C011	R/W	0 (NO), 1 (NC)	-
140Ch	Input [2] active state	C012		0 (NO), 1 (NC)	-
140Dh	Input [3] active state	C013		0 (NO), 1 (NC)	-
140Eh 140Fh	Input [4] active state Input [5] active state	C014 C015	R/W R/W	0 (NO), 1 (NC) 0 (NO), 1 (NC)	-
1410h	Input [6] active state	C015	R/W	0 (NO), 1 (NC)	-
1411h	Input [7] active state	C017		0 (NO), 1 (NC)	-
1412h to 1414h	(Reserved)	-	-	Inaccessible	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1415h	Output [11] function	C021	R/W	0 (RUN: running), 1 (FA1: constant-speed reached), 2 (FA2: set frequency overreached), 3 (OL: overload notice advance signal (1)), 4 (OD: output deviation for PID control), 5 (AL: alarm signal), 6 (FA3: set frequency reached), 7 (OTQ: over-torque), 9 (UV: undervoltage), 10 (TRQ: torque limited), 11 (RNT: operation time over), 12 (ONT: plug-in time over), 13 (THM: thermal alarm signal), 19 (BRK: brake release), 20 (BER: braking error), 21 (ZS: 0 Hz detection signal), 22 (DSE: speed deviation maximum), 23 (POK: positioning completed), 24 (FA4: set frequency overreached 2), 25 (FA5: set frequency reached 2), 26 (OL2: overload notice advance signal (2)), 31 (FBV: PID feedback	-
1416h	Output [12] function	C022	R/W	comparison), 32 (NDc: communication line disconnection), 33 (LOG1: logical operation result 1), 34 (LOG2: logical operation result 2), 35 (LOG3: logical operation result 2), 35 (LOG3: logical operation result 3), 39 (WAC: capacitor life warning), 40 (WAF: cooling-fan), 41 (FR: starting contact signal), 42 (OHF: heat sink overheat warning), 43 (LOC: low-current indication signal), 44 (M01: general-purpose output 1), 45 (M02: general-purpose output 2), 46 (M03: general-purpose output 3), 50 (IRDY: inverter ready), 51 (FWR: forward rotation), 52 (RVR: reverse rotation), 53 (MJA: major failur) 54 (WCO: window comparator OI), 58 (FREF),59 (REF),60 (SETM),62 (EDM),63 (OPO: Option)	-
1421h to 1423h	(Reserved)	-	-	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	-
141Ah	Alarm relay function	C026	R/W		-
141Bh	[EO] terminal selection	C027	R/W	0 (output frequency), 1 (output current), 2 (output torque), 3 (digital output frequency), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 8 (digital current monitoring), 10 (heat sink temperature), 12 (general-purpose output YA0), 15 (16(option)	-
141Ch	[AM] terminal selection	C028	R/W	0 (output frequency), 1 (output current), 2 (output torque), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 10 (heat sink temperature), 11 (output torque [signed value]), 13 (general-purpose output YA1), 16(option)	-
141Dh	(reserved)	-	-	-	-
141Eh	Digital current monitor reference value	C030	R/W	200 to 2000	0.1 [%]
141Fh	Output [11] active state	C031	R/W	0 (NO), 1 (NC)	-
1420h 1421h to	Output [12] active state	C032	R/W	0 (NO), 1 (NC)	-
142111 to	(Reserved)	-	-	-	-
1424h	Alarm relay active state	C036	R/W	0 (NO), 1 (NC)	-
1425h	(Reserved) Output mode of low current	-	-	- 0 (output during acceleration/deceleration and constant-speed	-
1426h	detection	C038	R/W	operation), 1 (output only during constant-speed operation)	-
1427h	Low current detection level	C039	R/W	0 to 2000	0.1 [%]
1428h	Overload signal output mode	C040	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1429h	Overload warning level	C041	R/W	0 to 2000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
142Ah	Frequency arrival setting for	C042 (high)	R/W	0 to 40000	0.01 [Hz]
142Bh 142Ch	accel. Frequency arrival setting for	C042 (low) C043 (high)	R/W R/W		
1420h	decel.	C043 (fligh)	R/W	0 to 40000	0.01 [Hz]
142Eh	PID deviation level	C044	R/W	0 to 1000	0.1 [%]
142Fh	Frequency arrival setting 2 for	C045 (high)	R/W	0 to 40000	0.01 [Hz]
1430h	accel.	C045 (low)	R/W	0 10 40000	0.01 [HZ]
1431h	Frequency arrival setting 2 for	C046 (high)	R/W	0 to 40000	0.01 [Hz]
1432h	decel.	C046 (low)	R/W		[]
1433h	Pulse train input scale conversion for EO output	C047	R/W	0.01 – 99.99	-
1434h to 1437h	(Reserved)	-	-	-	-
1438h	Maximum PID feedback data	C052	R/W	0 to 1000	0.1 [%]
1439h	Minimum PID feedback data	C053	R/W	0 to 1000	0.1 [%]
143Ah	Over-torque/under-torqueselection	C054	R/W	0(Over torque)/1(under torque)	-
143Bh	Over-torque (forward-driving) level setting	C055	R/W	0 to 200	1 [%]
143Ch	Over-torque (reverse regenerating) level setting	C056	R/W	0 to 200	1 [%]
143Dh	Over-torque (reverse driving) level setting	C057	R/W	0 to 200	1 [%]
143Eh	Over-torque (forward regenerating) level setting	C058	R/W	0 to 200	1 [%]
143Fh	Signal output mode of Over/under torque	C059	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1440h	(Reserved)	-	-	-	-
1441h	Electronic thermal warning level	C061	R/W	0 to 100	1 [%]
1442h	(Reserved)	-		-	
1443h 1444h	Zero speed detection level Heat sink overheat warning level	C063 C064	R/W R/W	0 to 10000 0 to 110	0.01 [Hz]
1445h to 144Ah	(Reserved)	-	-	-	1 [°c] -
144Bh	Communication speed	C071	R/W	03(2400bps), 04(4800bps), 05(9600bps) 06(19.2kbps), 07(38.4kbps),,08(57.6kbps), 09(76.8kbps), 10(115.2kbps)	-
144Ch	Modbus address	C072	R/W	1. to 247.	-
144Dh	(Reserved)	-	-	-	-
144Eh	Communication parity	C074	R/W	00 (no parity), 01 (even parity), 02 (odd parity)	-
144Fh	Communication stop bit	C075	R/W	1 (1 bit), 2 (2 bits)	-
1450h	Selection of the operation after communication error	C076	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1451h	Communication timeout limit	C077	R/W	0 to 9999	0.01 [s]
1452h	Communication wait time	C078	R/W	0 to 1000	1 [ms]
1453h to 1454h	(Reserved)	-	-	-	-
1455h	[O] input span calibration	C081	R/W	0 to 2000	0.1
1456h	[OI] input span calibration	C082	R/W	0 to 2000	0.1
1457h to 1458h	(Reserved)	-	-	-	-
1459h	Thermistor input tuning	C085	R/W	0 to 2000	0.1
145Ah to 145Eh	(Reserved)	-	-	-	-
145Fh	Debug mode enable	C091	R	0/1	-
1460h to 1463h	(Reserved)	-	-	-	-
1464h	Communication selection	C096	R/W	0(Modbus-RTU) 1(EzCOM) 2(EzCOM <administrator>)</administrator>	
1465h	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1466h	EzCOM start adr. of master	C098	R/W	1~8	
1467h	EzCOM end adr. of master	C099	R/W	1~8	
1468h	EzCOM starting trigger	C100	R/W	00(Input terminal), 01(Always)	
1469h	Up/Down memory mode selection	C101	R/W	0 (not storing the frequency data), 1 (storing the frequency data)	-
146Ah	Reset mode selection	C102	R/W	0 (resetting the trip when RS is on), 1 (resetting the trip when RS is off), 2 (enabling resetting only upon tripping [resetting when RS is on]), 3(resetting only trip)	-
146Bh	Restart mode after reset	C103	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (restarting with active matching frequency)	-
146Ch	UP/DWN clear mode	C104	R/W	0 (0Hz)/1 (EEPROM data)	-
146Dh	FM gain adjustment	C105	R/W	50 to 200	1 [%]
146Eh	AM gain adjustment	C106	R/W	50 to 200	1 [%]
146Fh	(Reserved)	-	-	Inaccessible	1 [%]
1471h	AM bias adjustment	C109	R/W	0 to 100	1 [%]
1472h	(Reserved)	-	-	-	1 [%]
1473h	Overload warning level 2	C111	R/W	0 to 2000	0.1 [%]
1474h to 1485h	(Reserved)	-	-	-	-
1486h	Output [11] on-delay time	C130	R/W	0 to 1000	0.1 [s]
1487h	Output [11] off-delay time	C131	R/W	0 to 1000	0.1 [s]
1488h	Output [12] on-delay time	C132	R/W	0 to 1000	0.1 [s]
1489h	Output [12] off-delay time	C133	R/W	0 to 1000	0.1 [s]
148Ah to 148F	(Reserved)	-	-	-	-
1490h	Output RY on-delay time	C140	R/W	0 to 1000 0 to 1000	0.1 [s]
1491h 1492h	Output RY off-delay time Logic output 1 operand A	C141 C142	R/W R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	0.1 [s] -
1493h	Logic output 1 operand B	C143	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1494h	Logical output 1 operator	C144	R/W	0 (AND), 1 (OR), 2 (XOR)	
1495h	Logic output 2 operand A	C145	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1496h	Logic output 2 operand B	C146	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1497h	Logical output 2 operator	C147	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1498h	Logic output 3 operand A	C148	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1499h	Logic output 3 operand B	C149	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
149Ah	Logical output 3 operator	C150	R/W	0 (AND), 1 (OR), 2 (XOR)	-
149Bh to 14A3h	(Reserved)	-	-	-	-
14A4h	Input [1] response time	C160	R/W	0 to 200	•
14A5h	Input [2] response time	C161	R/W	0 to 200	
14A6h	Input [3] response time	C162	R/W	0 to 200	
14A7h	Input [4] response time	C163	R/W	0 to 200	
14A8h 14A9h	Input [5] response time	C164 C165	R/W R/W	0 to 200	
14A9h 14AAh	Input [6] response time Input [7] response time	C165 C166	R/W	0 to 200 0 to 200	
14AAn 14ABh to 14ACh	(Reserved)	-	-	-	
14ACh 14ADh	Multistage speed/position determination time	C169	R/W	0 to 200	
14A4h to	<u> </u>	0.100	1000		
1500h	unused	-	-	Inaccessible	-



#### Parameter group H

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1501h	Auto-tuning Setting	H001	R/W	0 (disabling auto-tuning), 1 (auto-tuning without rotation), 2 (auto-tuning with rotation)	-
1502h	Motor data selection, 1st motor	H002	R/W	0 (Hitachi standard data), 2 (auto-tuned data)	-
1503h	Motor capacity, 1st motor	H003	R/W	00(0.1kW)- 15 (18.5kW)	-
1504h	Motor poles setting, 1st motor	H004	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles), 3 (8 poles), 4 (10 poles)	-
1505h	(Reserved)	-	-	-	-
1506h	Motor speed constant, 1st motor	H005	R/W	0 to 1000	1[%]
1508h~15 14h	(Reserved)	-	-	-	-
1516h	Motor stabilization constant, 1st motor	H006	R/W	0 to 255	1
1517h	(Reserved)	-	-	-	_
1516h	Motor constant R1, 1st motor	H020	R/W	1 to 65530	0.001 [Ω]
1517h	(Reserved)	-	-	-	_
1518h	Motor constant R2, 1st motor	H021	R/W	1 to 65530	0.001 [Ω]
1519h	(Reserved)	-	-	-	-
151Ah	Motor constant L, 1st motor	H022	R/W	1 to 65530	0.01 [mH]
151Bh	(Reserved)	-	-	-	_
151Ch	Motor constant lo	H023	R/W	1 to 65530	0.01 [A]
151Dh		H024 (high)	R/W	44 0000000	0.004
151Eh	Motor constant J	H024 (low)	R/W	1 to 9999000	0.001
151Hf~152 4h	(Reserved)	-	-	-	-
1525h	Auto constant R1, 1st motor	H030	R/W	1 to 65530	0.001 [Ω]
1526h	(Reserved)	-	-	Inaccessible	_
1527h	Auto constant R2, 1st motor	H031	R/W	1 to 65530	0.001 [Ω]
1528h	(Reserved)	-	-	-	-
1529h	Auto constant L, 1st motor	H032	R/W	1 to 65530	0.01 [mH]
152Ah	(Reserved)	-	-	Inaccessible	_
152Bh	Auto constant lo, 1st motor	H033	R/W	1 to 65530	0.01 [A]
152Ch	Auto constant I dette	H034 (high)	R/W	4 +- 0000000	0.004
152Dh	Auto constant J, 1st motor	H034 (low)	R/W	1 to 9999000	0.001
152Eh~15 3Ch	(Reserved)	-	-	-	-
153Dh	Slip compensation P gain for V/f control with FB	H050	R/W	0 to 10000	0.1
153Eh	Slip compensation P gain for V/f control with FB	H051	R/W	0 to 10000	1
153Fh~16 00h	unused	-	-	Inaccessible	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1571h	PM motor code setting	H102	R/W	00 (Hitachi standard data)/ 01 (auto-tuned data)	-
1572h	PM motor capacity	H103	R/W	0(0.1)     4(0.75)     8(3.0)     12(7.5)       1(0.2)     5(1.1)     9(3.7)     13(11.0)       2(0.4)     6(1.5)     10(4.0)     14(15.0)       3(0.55)     7(2.2)     11(5.5)     15(18.5)	-
1573h	PM motor pole setting	H104	R/W	0(2P)     6(14P)     12(26P)     18(38P)       1(4P)     7(16P)     13(28P)     19(40P)       2(6P)     8(18P)     14(30P)     20(42P)       3(8P)     9(20P)     15(32P)     21(44P)       4(10P)     10(22P)     16(34P)     22(46P)       5(12P)     11(24P)     17(36P)     23(48P)	-
1574h	PM Rated Current	H105	R/W	0~1000	0.1[%]
1575h	PM const R(Resistance)	H106	R/W	1 to 65535	$0.001[\Omega]$
1576h	PM const Ld(d-axis inductance)	H107	R/W	1 to 65535	0.01[mH]
1577h	PM const Lq(q-axis inductance)	H108	R/W	1 to 65535	0.01[mH]
1578h	PM const Ke(Induction voltage constant)	H109	R/W	1 to 65535	0.0001 [V/(rad/s)]
1579h	PM const J(Moment of inertia)	H110	R/W	1 to 9999000	0.001 [kgm²]
157Ah	(Reserved)	-	-	-	-
157Bh	PM const R (Resistance)	H111	R/W	1 to 65535	$0.001[\Omega]$
157Ch	PM const Ld(d-axis inductance)	H112	R/W	1 to 65535	0.01[mH]
157Dh	PM const Lq(q-axis inductance)	H113	R/W	1 to 65535	0.01[mH]
157Eh	(Reserved)	•	1	-	-
157Fh	(Reserved)	-	-	-	-
1580h	(Reserved)	-	-	-	-
1581h	PM Speed Response	H116	R/W	1 to 1000	1[%]
1582h	PM Starting Current	H117	R/W	2000 to 10000	0.01[%]
1583h	PM Starting Time	H118	R/W	1 to 6000	0.01[s]
1584h	PM Stabilization Constant	H119	R/W	0 to 120	1[%]
1585h	(Reserved)	-	-	-	-
1586h	PM Minimum Frequency	H121	R/W	0 to 255	0.1[%]
1587h	PM No-Load Current	H122	R/W	0 to 10000	0.01[%]
1588h	PM Starting Method Select	H123	R/W	00 (disabling)/ 01 (enabling)	-
1589h	(Reserved)	-	1	-	-
158Ah	PM Initial Magnet Position Estimation 0V Wait Times	H131	R/W	0 to 255	1
158Bh	PM Initial Magnet Position Estimation Detect Wait Times	H132	R/W	0 to 255	1
158Ch	PM Initial Magnet Position Estimation Detect Times	H133	R/W	0 to 255	1
158Dh	PM Initial Magnet Position Estimation Voltage Gain	H134	R/W	0 to 200	1
158Eh~16 00h	Unused	-	-		-



### Parameter group P

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1601h	Operation mode on expansion card 1 error	P001	R/W	0 (tripping), 1 (continuing operation)	-
1602h	(Reserved)	-	-	-	-
1603h	[EA] terminal selection	P003	R/W	00 (Speed reference, incl. PID) 01 (Encoder feedback) 02 (Extended terminal for EzSQ)	
1604h	Pulse train input mode for feedback	P004	R/W	00 (Single-phase pulse [EA]) 01 (2-phase pulse [90° difference] 1 ([EA] and [EB])) 02 (2-phase pulse [90° difference] 2 ([EA] and [EB])) 03 (Single-phase pulse [EA] and direction signal [EB])	
1605h to 160Ah	(Reserved)	-	-	-	-
160Bh	Encoder pulse-per-revolution (PPR) setting	P011	R/W	32 to 1024	1
160Ch	Simple positioning selection	P012	R/W	00 (simple positioning deactivated) 02 (simple positioning activated)	-
160Dh to 160Eh	(Reserved)	-	-	-	-
160Fh	Creep speed	P015	R/W	"start frequency" to 1000	0.01 [Hz]
1610h to 1619h	(Reserved)	-	-	-	-
161Ah	Over-speed error detection level	P026	R/W	0 to 1500	0.1 [%]
161Bh	Speed deviation error detection level	P027	R/W	0 to 12000	0.01 [Hz]
161Ch to 161Eh	(Reserved)	-	-	-	-
161Fh	Accel/decel time input selection	P031	R/W	0 (digital operator), 3 (easy sequence)	-
1620h	(Reserved)	ı	-	-	-
1621h	Torque command input selection	P033	R/W	0 (O terminal), 1 (OI terminal), 3 (digital operator), 06 (Option)	-
1622h	Torque command setting	P034	R/W	0 to 200	1 [%]
1623h	(Reserved)	-	-	-	-
1624h	Torque bias mode	P036	R/W	0 (disabling the mode),1 (digital operator),	-
1625h	Torque bias value	P037	R/W	-200 to +200	1 [%]
1626h	Torque bias polarity selection	P038	R/W	0 (as indicated by the sign), 1 (depending on the operation direction), 05(Option)	-
1627h	Speed limit for torque-controlled	P039 (high)	R/W	0 to 12000	0.01 [Hz]
1628h 1629h	operation (forward rotation) Speed limit for torque-controlled	P039 (low) P040 (high)	R/W R/W		
162Ah	operation (reverse rotation)	P040 (light)	R/W	0 to 12000	0.01 [Hz]
162Bh	Speed / torque control switching time	P041	R/W	0 to 1000	-
162Ch to 162Dh	(Reserved)	-	-	-	-
162Eh	Communication watchdog timer	P044	R/W	0 to 9999	0.01 [s]
162Fh	Inverter action on communication error	P045	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1630h	DeviceNet polled I/O: Output instance number	P046	R/W	0-20	
1631h	(Reserved)	-	-	-	-
1632h	Inverter action on communication idle mode	P048	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1633h	Motor poles setting for RPM	P049	R/W	0 (0 pole), 1 (2 poles), 2 (4 poles), 3 (6 poles),4 (8 poles),5 (10 poles), 6 (12 poles),7 (14 poles),8 (16 poles), 9 (18 poles), 10 (20 poles),11 (22 poles), 12 (24 poles),13 (26 poles),14 (28 poles), 15 (30 poles), 16 (32 poles),17 (34 poles), 18 (36 poles), 19 (38 poles),20 (40 poles), 21 (42 poles), 22 (44 poles),23 (46 poles), 24 (48 poles)	-
1634h to 1638h	(Reserved)	-	-	-	-
1639h	Pulse train frequency scale	P055	R/W	10 to 320 (input frequency corresponding to the allowable maximum frequency)	0.1 [kHz]
163Ah	Time constant of pulse train frequency filter	P056	R/W	1 to 200	0.01 [s]
163Bh	Pulse train frequency bias	P057	R/W	-100 to +100	1 [%]
163Ch	Pulse train frequency limit	P058	R/W	0 to 100	1 [%]
163Dh	(Reserved)	-	-	-	-
163Eh	i` ′	P060(HIGH)	R/W		
163Fh	Multistage position 0	P060(LOW)	R/W	1	1
1640h		P061(HIGH)	R/W		
1641h	Multistage position 1	P061(LOW)	R/W	-	1
1642h		P062(HIGH)	R/W		
1643h	Multistage position 2	P062(LOW)	R/W	-	1
1644h		P062(LOW)	R/W		
	Multistage position 3			4	1
1645h		P063(LOW)	R/W		
1646h	Multistage position 4	P064(HIGH)	R/W		1
1647h	0 1	P064(LOW)	R/W		
1648h	Multistage position 5	P065(HIGH)	R/W		1
1649h	3. 1	P065(LOW)	R/W		
164Ah	Multistage position 6	P066(HIGH)	R/W		1
164Bh	manadage position o	P066(LOW)	R/W		
164Ch	Multistage position 7	P067(HIGH)	R/W		1
164Dh	Manage position 7	P067(LOW)	R/W		'
164Eh	Homing mode selection	P068	R/W	0(Low) / 1(High)	
164Fh	Homing direction	P069	R/W	0(FW) / 1(RV)	
1650h	Low-speed homing frequency	P070	R/W	0 to 1000	
1651h	High-speed homing frequency	P071	R/W	0 to 40000	
1652h	Position range (forward)	P072(HIGH)	R/W	0 to 268435455	1
1653h	r osition range (torward)	P072(LOW)	R/W	70 (0 200433433	'
1654h	Desition range (reverse)	P073(HIGH)	R/W	-268435455 to 0	1
1655h	Position range (reverse)	P073(LOW)	R/W	-200430400 l0 U	'
1656h	(Reserved),	- '	-	-	-
1657h	Positioning mode	P075	R/W	00With limitation 01No limitation (fastest control)	
1658h	(Reserved),	-	-	-	-
1659h	Encoder disconnection timeout	P077	R/W	0 to 100	0.1[s]
165Ah to 1665h	(Reserved),	-	-	-	-
1656h to 1665h	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1666h	EzSQ user parameter U (00)	P100	R/W	0 to 65530	1
1667h	EzSQ user parameter U (01)	P101	R/W	0 to65530	1
1668h	EzSQ user parameter U (02)	P102	R/W	0 to 65530	1
1669h	EzSQ user parameter U (03)	P103	R/W	0 to 65530	1
166Ah	EzSQ user parameter U (04)	P104	R/W	0 to 65530	1
166Bh	EzSQ user parameter U (05)	P105	R/W	0 to 65530	1
166Ch	EzSQ user parameter U (06)	P106	R/W	0 to 65530	1
166Dh	EzSQ user parameter U (07)	P107	R/W	0 to 65530	1
166Eh	EzSQ user parameter U (08)	P108	R/W	0 to 65530	1
166Fh	EzSQ user parameter U (09)	P109	R/W	0 to 65530	1
1670h	EzSQ user parameter U (10)	P110	R/W	0 to 65530	1
1671h	EzSQ user parameter U (11)	P111	R/W	0 to 65530	1
1672h	EzSQ user parameter U (12)	P112	R/W	0 to 65530	1
1673h	EzSQ user parameter U (13)	P113	R/W	0 to 65530	1
1674h	EzSQ user parameter U (14)	P114	R/W	0 to 65530	1
1675h	EzSQ user parameter U (15)	P115	R/W	0 to 65530	1
1676h	EzSQ user parameter U (16)	P116	R/W	0 to 65530	1
1677h	EzSQ user parameter U (17)	P117	R/W	0 to 65530	1
1678h	EzSQ user parameter U (18)	P118	R/W	0 to 65530	1
1679h	EzSQ user parameter U (19)	P119	R/W	0 to 65530	1
167Ah	EzSQ user parameter U (20)	P120	R/W	0 to 65530	1
167Bh	EzSQ user parameter U (21)	P121	R/W	0 to 65530	1
167Ch	EzSQ user parameter U (22)	P122	R/W	0 to 65530	1
167Dh	EzSQ user parameter U (23)	P123	R/W	0 to 65530	1
167Eh	EzSQ user parameter U (24)	P124	R/W	0 to 65530	1
167Fh	EzSQ user parameter U (25)	P125	R/W	0 to 65530	1
1680h	EzSQ user parameter U (26)	P126	R/W	0 to 65530	
1681h	EzSQ user parameter U (27)	P127	R/W	0 to 65530	
1682h	EzSQ user parameter U (28)	P128	R/W	0 to 65530	1
1683h	EzSQ user parameter U (29)	P129	R/W	0 to 65530	1
1684h	EzSQ user parameter U (30)	P130	R/W	0 to 65530	1
1685h	EzSQ user parameter U (31)	P131	R/W	0 to 65530	1
1686h to 168Dh	(Reserved),	-	-	-	-
168Eh	EzCOM number of data	P140	R/W	1 to 5	
168Fh	EzCOM destination 1 adderss	P141	R/W	1 to 247	
1690h	EzCOM destination 1 register	P142	R/W	0000 to FFFF	
1691h	EzCOM source 1 register	P143	R/W	0000 to FFFF	
1692h	EzCOM destination 2 adderss	P144	R/W	1 to 247	
1693h	EzCOM destination 2 register	P145	R/W	0000 to FFFF	
1694h	EzCOM source 2 register	P146	R/W	0000 to FFFF	
1695h	EzCOM destination 3 adderss	P147	R/W	1 to 247	
1696h	EzCOM destination 3 register	P148	R/W	0000 to FFFF	
1697h	EzCOM source 3 register	P149	R/W	0000 to FFFF	
1698h	EzCOM destination 4 adderss	P150	R/W	1 to 247	
	EzCOM destination 4 register	P151	R/W	0000 to FFFF	
169Ah	EzCOM source 4 register	P152	R/W	0000 to FFFF	
169Bh	EzCOM destination 5 adderss	P153	R/W	1 to 247	
169Ch	EzCOM destination 5 register	P154	R/W	0000 to FFFF	
169Dh	EzCOM source 5 register	P155	R/W	0000 to FFFF	
169Eh~16	(Reserved),	_	_		_
A1h	(		-		

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
16A2h	Option I/F command register to write 1	P160	R/W	0000 to FFFF	-
16A3h	Option I/F command register to write 2	P161	R/W	0000 to FFFF	-
16A4h	Option I/F command register to write 3	P162	R/W	0000 to FFFF	-
16A5h	Option I/F command register to write 4	P163	R/W	0000 to FFFF	-
16A6h	Option I/F command register to write 5	P164	R/W	0000 to FFFF	-
16A7h	Option I/F command register to write 6	P165	R/W	0000 to FFFF	-
16A8h	Option I/F command register to write 7	P166	R/W	0000 to FFFF	-
16A9h	Option I/F command register to write 8	P167	R/W	0000 to FFFF	-
16AAh	Option I/F command register to write 9	P168	R/W	0000 to FFFF	-
16ABh	Option I/F command register to write 10	P169	R/W	0000 to FFFF	-
16ACh	Option I/F command register to read 1	P170	R/W	0000 to FFFF	-
16ADh	Option I/F command register to read 2	P171	R/W	0000 to FFFF	-
16AEh	Option I/F command register to read 3	P172	R/W	0000 to FFFF	-
16AFh	Option I/F command register to read 4	P173	R/W	0000 to FFFF	-
16B0h	Option I/F command register to read 5	P174	R/W	0000 to FFFF	-
16B1h	Option I/F command register to read 6	P175	R/W	0000 to FFFF	-
16B2h	Option I/F command register to read 7	P176	R/W	0000 to FFFF	-
16B3h	Option I/F command register to read 8	P177	R/W	0000 to FFFF	-
16B4h	Option I/F command register to read 9	P178	R/W	0000 to FFFF	-
16B5h	Option I/F command register to read 10	P179	R/W	0000 to FFFF	-
16B6h	Profibus Node address	P180	R/W	0 to 125	-
16B7h	Profibus Clear Node address	P181	R/W	0(clear)/1(not clear)	-
16B8h	Profibus Map selection	P182	R/W	0(PPO)/1(Comvertional) )/ 2 (Flexible Mode Format Selection)	-
16B9h to 16BAh	(Reserved),	-	-	-	-
16BBh	CANopen Node address	P185	R/W	0 to 127	
16BCh	CAN open communication speed	P186	R/W	0 (automatic) 5 (250kbps) 1 (10kbps) 6 (500kbps) 2 (20kbps) 7 (800kbps) 3 (50kbps) 8 (1Mbps) 4 (125kbps)	
16BDh~16 BFh	(Reserved),	-	-	-	-
16C0h	CompoNet Node address	P190	R/W	00 to 63	1
16C1h	(Reserved),	-	-	-	-
16C2h	DeviceNet MAC ID	P192	R/W	00 to 63	1
16C3h	(Reserved)	-	-	-	-
16C4h	(Reserved)	-	-	-	-
	ML2 frame length	P195	R/W	0(32bytes) / 1(17bytes)	1
16C6h	ML2 Node address	P196	R/W	21h to 3Eh	1
16C7h to 1E00h	Unused	-	-	-	-



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1E02h	Coil data 2	-	R/W	2º: coil number 0020h – 2 <sup>15</sup> : coil number 002Fh -	-
1E03h	Coil data 3	=	R/W	2 <sup>1</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1E04h	Coil data 4	-	R/W	2 <sup>1</sup> : coil number 0030h – 2 <sup>15</sup> : coil number 003Fh -	-
1E05h	Coil data 5	-	R/W	2 <sup>1</sup> : coil number 0040h – 2 <sup>15</sup> : coil number 004Fh -	-
1E06h to 1F18h	(reserved)	-	-	-	-
1E19h to 1F00h	Unused	-	-	-	-
1F01h	Coil data 0	-	R/W	2 <sup>1</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1F02h to 1F1Dh	(reserved)	-	-	(note: 2)	-
1F1Eh to 2102h	Unused	-	-	Inaccessible	-

Note 1: above register (coil data 0 to 5) is consisted with 16 coil data. EzCOM communication (inverter to inverter) doesn't support coil, but only register is supporte, in case of need to access coil, please use above registers. Note 2: Be sure not to write into above 1F02h to 1F1Dh.

(vi) List of registers (2nd control settings)

Register No.	Fund	ction name	Function code	R/W	Monitoring and setting items	Data resolution
2103h	Acceleration t	time (1),	F202 (high)	R/W	1 to 360000	0.01 [s]
2104h	2nd motor		F202 (low)	R/W	1 10 300000	0.01[8]
2105h	Deceleration	time (1),	F203 (high)	R/W	1 to 360000	0.01 [s]
2106h	2nd motor		F203 (low)	R/W	1 10 300000	0.01 [8]
2107h to 2200h	unused		-	1	Inaccessible	-

(vii) List of registers (function modes for the 2nd control settings)

	ii) List of registers (function modes for the 2nd control settings)									
Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution					
2201h	Frequency source, 2nd motor	A201	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-					
2202h	Frequency source, 2nd motor	A202	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-					
2203h	Base frequency, 2nd motor	A203	R/W	300 to "maximum frequency, 2nd motor"	0.1 [Hz]					
2204h	Maximum frequency, 2nd motor	A204	R/W	300 to 4000	0.1 [Hz]					
2205h to 2215h	(Reserved)	1	-	Inaccessible	-					
2216h 2217h	Multispeed frequency setting, 2nd motor	A220 (high) A220 (low)	R/W R/W	0 or "start frequency" to "maximum frequency, 2nd motor"	0.01 [Hz]					
2218h to 223Ah	(Reserved)	-	-	Inaccessible	-					
223Bh	Torque boost method selection, 2nd motor	A241	R/W	0 (manual torque boost), 1 (automatic torque boost)	-					
223Ch	Manual torque boost value, 2nd motor	A242	R/W	20 to 200	1 [%]					
223Dh	Manual torque boost frequency, 2nd motor	A243	R/W	0 to 255	1 [%]					
223Eh	V/F characteristic curve selection, 2nd motor	A244	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control)	-					
223Fh	V/f gain, 2nd motor	A245	R/W	20 to 100	1 [%]					
2240h	Voltage compensation gain setting for automatic torque boost, 2nd motor	A246	R/W	0 to 255	1					
2241h	Slippage compensation gain setting for automatic torque boost, 2nd motor	A247	R/W	0 to 255	1					
2242h to 224Eh	(Reserved)	-	-	Inaccessible	-					
224Fh 2250h	Frequency upper limit, 2nd motor	A261 (high) A261 (low)	R/W R/W	00 or "2nd minimum frequency limit" to "maximum frequency, 2nd motor"	0.01 [Hz]					
2251h 2252h	Frequency lower limit, 2nd motor	A262 (high) A262 (low)	R/W R/W	00 or "start frequency" to "maximum frequency, 2nd motor limit"	0.01 [Hz]					
2253h to 2268h	(Reserved)	-	-	Inaccessible	-					
2269h	AVR function select, 2nd motor	A281	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-					
226Ah	AVR voltage select, 2nd motor	A282	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)						
226Bh to 226Eh	(Reserved)	-	-	Inaccessible	-					

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
226Fh 2270h	Acceleration time (2), 2nd motor	A292 (high) A292 (low)	R/W R/W	1 to 360000	0.01 [s]
2271h 2272h	Deceleration time (2), 2nd motor	A293 (high) A293 (low)	R/W R/W	1 to 360000	0.01 [s]
2273h	Select method to switch to Acc2/Dec2, 2nd motor	A293 (10W)	R/W	0 (switching by 2CH terminal), 1 (switching by setting), 2 (switching only when the rotation is reversed)	-
2274h	Acc1 to Acc2 frequency	A295 (high)	R/W	0 to 40000 (100000)	0.01 [Hz]
2275h 2276h 2277h	transition point, 2nd motor  Dec1 to Dec2 frequency transition point, 2nd motor	A295 (low) A296 (high) A296 (low)	R/W R/W	0 to 40000 (100000)	0.01 [Hz]
2278h to 230Bh	(Reserved)	- A290 (IOW)	-	-	-
230Ch	Level of electronic thermal, 2nd motor	b212	R/W	200 to 1000	0.1 [%]
230Dh	Electronic thermal characteristic, 2nd motor	b213	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting)	-
230Eh to 2315h	(Reserved)	-	-	-	-
2316h	Overload restriction operation mode, 2nd motor	b221	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
2317h	Overload restriction level, 2nd motor	b222	R/W	100 to 2000	0.1[%]
2318h	Deceleration rate at overload restriction, 2nd motor	b223	R/W	1 to 30000	0.1[s]
2319h to 2428h	unused	-	-	Inaccessible	-
2429h	Overload warning level 2, 2nd motor	C241	R/W	0 to 2000	0.1[%]
242Ah to 2501h	Unused	-	-	Inaccessible	-
2502h	Motor data selection, 2nd motor	H202	R/W	0 (Hitachi standard data), 2 (auto-tuned data),	-
2503h	Motor capacity, 2nd motor	H203	R/W	00(0.1kW)- 15 (18.5kW)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2504h	Motor poles setting, 2nd motor	H204	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles), 3 (8 poles), 4 (10 poles)	-
2505h	Motor speed constant, 2nd	H205 (high)	R/W	1 to 1000	0.001
2506h	motor	H205 (low)	R/W		0.001
2507h	Motor stabilization constant, 2nd motor	H206	R/W	0 to 255	1
2508h to 2515h	(Reserved)	-	ı	-	-
2516h	Motor constant R1, 2nd motor	H220 (high)	R/W	1 to 65535	0.001 [Ω]
2517h	(Reserved)	-	-	-	-
2518h	Motor constant R2, 2nd motor	H221 (high)	R/W	1 to 65535	0.001 [Ω]
2519h	(Reserved)	-	-	-	-
251Ah	Motor constant L, 2nd motor	H222 (high)	R/W	1 to 65535	0.01 [mH]
251Bh	(Reserved)		1	-	-
251Ch	Motor constant lo, 2nd motor	H223 (high)	R/W	1 to 65535	0.01 [A]
251Dh	Motor constant J, 2nd motor	H224 (high)	R/W	1 to 9999000	0.001
251Eh	INOLOI CONSTANT 3, ZIIG MOTOI	H224 (low)	R/W	1 10 9999000	0.001
251Fh to	(Reserved)				_
2524h	,				
2525h	Auto constant R1, 2nd motor	H230 (high)	R/W	1 to 65530	0.001 [Ω]
2526h	(Reserved)	-	-	-	-
2527h	Auto constant R2, 2nd motor	H231 (high)	R/W	1 to 65530	0.001 [Ω]
2528h	(Reserved)	-	-	-	-
2529h	Auto constant L, 2nd motor	H232 (high)	R/W	1 to 65530	0.01 [mH]
252Ah	(Reserved)	-	-	-	-
252Bh	Auto constant lo, 2nd motor	H233 (high)	R/W	1 to 65530	0.01 [A]
252Ch	Auto constant J, 2nd motor	H234 (high)	R/W	1 to 9999000	0.001
252Dh	,	H234 (low)	R/W		0.001
252Eh ~	Unused	-	-	Inaccessible	-

## **Drive Parameter Setting Tables**

### Introduction

This appendix lists the user-programmable parameters for the WJ200 for version2 series inverters and the default values for European and U.S. product types. The right-most column of the tables is blank, so you can record values you have changed from the default. This involves just a few parameters for most applications. This appendix presents the parameters in a format oriented toward the keypad on the inverter.

## **Parameter Settings for Keypad Entry**

WJ200 for version2 series inverters provide many functions and parameters that can be configured by the user. We recommend that you record all parameters that have been edited, in order to help in troubleshooting or recovery from a loss of parameter data.

Inverter model	WJ200	]	This information is printed on the specification label
MFG. No.			located on the right side of the inverter

#### **Main Profile Parameters**



**NOTE**:. Mark " $\checkmark$ " in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access.

	"F" Func	tion	Run	Defaults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
F00 I	Output frequency setting	Standard default target frequency that determines constant motor speed, range is 0.0 / start frequency to maximum frequency (A004)	✓	0.0	Hz
F002	Acceleration time (1)	Standard default acceleration, range is 0.01 to 3600 seconds.	✓	10.0	s
F202	Acceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	S
F003	Deceleration time (1)	Standard default deceleration, range is 0.01 to 3600 seconds.	✓	10.0	s
F203	Deceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	S
F004	Keypad RUN key routing	Two options; select codes:  ODForward  OIReverse	×	00	_

### **Standard Functions**



NOTE: Mark "\sqrt{" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access

	"A".	Function	Run Defaul		ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
A00 I	Frequency source	Eight options; select codes:  ODPOT on ext. operator  OIControl terminal	×	02	-
A20 I	Frequency source,  2 <sup>nd</sup> motor	O2Function F001 setting O3ModBus network input O4Option O5Pulse train input O7via EzSQ OCalculate function output	×	02	_
A005	Run command source	Five options; select codes:  O IControl terminal  O ZRun key on keypad,	<b>X</b>	02	_
A505	Run command source, 2 <sup>nd</sup> motor	or digital operator  IModBus network input Option	×	02	_
A003	Base frequency	Settable from 30 Hz to the maximum frequency(FODH)	×	60.0	Hz
A203	Base frequency, 2 <sup>nd</sup> motor	Settable from 30 Hz to the 2 <sup>nd</sup> maximum frequency( <b>คะอน</b> )	×	60.0	Hz
A004	Maximum frequency	Settable from the base frequency to 400 Hz	×	60.0	Hz
A504	Maximum frequency, 2 <sup>nd</sup> motor	Settable from the 2 <sup>nd</sup> base frequency to 400 Hz	×	60.0	Hz
A005	[AT] selection	Three options; select codes:  ODSelect between [O] and [OI] at [AT]  (ON=OI, OFF=O)  OZSelect between [O] and external POT  at [AT]  (ON=POT, OFF=O)  O3Select between [OI] and external  POT at [AT]  (ON=POT, OFF=OI)	×	00	_
A0 1 1	[O] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0	✓	0.00	Hz
AO 12	[O] input active range end frequency	The output frequency corresponding to the analog input range ending point, range is 0.0 to 400.0	✓	0.00	Hz
AD 13	[O] input active range start voltage	The starting point (offset) for the active analog input range, range is 0. to 100.	✓	0.	%
AD 14	[O] input active range end voltage	The ending point (offset) for the active analog input range, range is 0. to 100.	✓	100.	%
AO 15	[O] input start frequency enable	Two options; select codes:  ODUse offset (AD ! ! value)  O!Use OHz	✓	01	_
AO 16	Analog input filter	Range n = 1 to 31, 1 to 30: 2ms filter 31: 500ms fixed filter with ±0.1kHz hys.	✓	8.	Spl.
A0 17	Simple sequence function selection (EzSQ)	00 (disabling), 01 (PRG terminal) ,02 (Always)	✓	00	-

	"A" :	Function	Run	Defa	ılts
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
AO 19	Multi-speed operation selection	Select codes:  OlBinary operation (16 speeds selectable with 4 terminals)  IBit operation (8 speeds selectable with 7 terminals)	×	00	-
A020	Multi-speed freq. 0	Defines the first speed of a multi-speed profile, range is 0.0 / start frequency to 400Hz  ### ### ############################	✓	0.0	Hz
A550	Multi-speed freq. 0, 2 <sup>nd</sup> motor	Defines the first speed of a multi-speed profile or a 2nd motor, range is 0.0 / start frequency to 400Hz  R220 = Speed 0 (2nd motor)	✓	0.0	Hz
AD2 1 to AD35	Multi-speed freq. 1 to 15 (for both motors)	Defines 15 more speeds, range is 0.0 / start frequency to 400 Hz. <b>AU2</b> I=Speed 1 ~ <b>AU35</b> =Speed15	✓	See next row	Hz
		AO2 I ~ AO35	✓	0.0	Hz
A038	Jog frequency	Defines limited speed for jog, range is from start frequency to 9.99 Hz	✓	6.00	Hz
R039	Jog stop mode	Define how end of jog stops the motor; six options:  ODFree-run stop (invalid during run)  OIControlled deceleration (invalid during run)  OZDC braking to stop(invalid during run)  O3Free-run stop (valid during run)  O4Controlled deceleration (valid during run)  O5DC braking to stop(valid during run)  run)	×	04	_
A04 I	Torque boost select	Two options:  ODManual torque boost  O IAutomatic torque boost	×	00	_
A24 I	Torque boost select, 2 <sup>nd</sup> motor	U IAutomatic torque poost	×	00	_
A045	Manual torque boost value	Can boost starting torque between 0 and 20% above normal V/f curve, range is 0.0 to 20.0%	✓	1.0	%
A545	Manual torque boost value, $2^{\mathrm{nd}}$ motor	Tunge 15 0.0 to 20.070	✓	1.0	%
A043	Manual torque boost frequency	Sets the frequency of the V/f breakpoint A in graph (top of previous page) for torque boost,	✓	5.0	%
A243	Manual torque boost frequency, 2nd motor	range is 0.0 to 50.0%	✓	5.0	%
A044	V/f characteristic curve	Six available V/f curves;  ODConstant torque	×	00	-
A244	V/f characteristic curve, 2 <sup>nd</sup> motor	□ 1Reduced torque (1.7) □2Free V/F □3Sensorless vector (SLV)	×	00	<del>-</del>
A045	V/f gain	Sets voltage gain of the inverter, range is 20. to 100.%	✓	100.	%
A245	V/f gain, 2 <sup>nd</sup> motor	1	✓	100.	%
A046	Voltage compensation gain for automatic torque boost	Sets voltage compensation gain under automatic torque boost, range is 0. to	✓	100.	_

	"A" I	unction	Run	Defa	ılts
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
A246	Voltage compensation gain for automatic torque boost, $2^{nd}$ motor	255.	✓	100.	_
AD47	Slip compensation gain for automatic torque boost	Sets slip compensation gain under automatic torque boost, range is 0. to 255.	✓	100.	_
A247	Slip compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	100.	_
A05 I	DC braking enable	Three options; select codes:  ODisable  OEnable during stop  OFrequency detection	×	00	-
A052	DC braking frequency	The frequency at which DC braking begins, range is from the start frequency (b082) to 60Hz	×	0.5	Hz
A053	DC braking wait time	The delay from the end of controlled deceleration to start of DC braking (motor free runs until DC braking begins), range is 0.0 to 5.0 seconds.	×	0.0	S
A054	DC braking force for deceleration	Level of DC braking force, settable from 0 to 100%	×	50.	%
A055	DC braking time for deceleration	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds.	×	0.5	s
A056	DC braking / edge or level detection for [DB] input	Two options; select codes:  ODEdge detection OlLevel detection	×	01	_
A057	DC braking force at start	Level of DC braking force at start, settable from 0 to 100%	×	0.	%
A058	DC braking time at start	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds.	×	0.0	s
A059	Carrier frequency during DC braking	Carrier frequency of DC braking performance, range is from 2.0 to 15.0kHz	×	5.0	kHz
R06 I	Frequency upper limit	Sets a limit on output frequency less than the maximum frequency (AOD4).  Range is from frequency lower limit (AOD2) to maximum frequency (AOD4).  0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz
A26 I	Frequency upper limit, 2nd motor	Sets a limit on output frequency less than the maximum frequency (A2D4). Range is from frequency lower limit (A252) to maximum frequency (A2D4). 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz
R062	Frequency lower limit	Sets a limit on output frequency greater than zero.  Range is start frequency (6082) to frequency upper limit (806 i) 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz
A262	Frequency lower limit, 2nd motor	Sets a limit on output frequency greater than zero. Range is start frequency (b082) to frequency upper limit (R25 I) 0.0 setting is disabled >0.0 setting is enabled	×	0.00	Hz

	"A" ]	Function	Run	Defa	ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
A063 A065 A067	Jump freq. (center) 1 to 3	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency) Range is 0.0 to 400.0 Hz	×	0.0 0.0 0.0	Hz
A064 A066 A068	Jump freq. width (hysteresis) 1 to 3	Defines the distance from the center frequency at which the jump around occurs Range is 0.0 to 10.0 Hz	×	0.5 0.5 0.5	Hz
A069	Acceleration hold frequency	Sets the frequency to hold acceleration, range is 0.0 to 400.0Hz	×	0.00	Hz
םרסA	Acceleration hold time	Sets the duration of acceleration hold, range is 0.0 to 60.0 seconds.	×	0.0	s
ו רם	PID enable	Enables PID function, three option codes:  OOPID Disable OIPID Enable OZPID Enable with reverse output	×	00	-
A072	PID proportional gain	Proportional gain has a range of 0.00 to 25.00	✓	1.0	_
AO13	PID integral time constant	Integral time constant has a range of 0.0 to 3600 seconds.	✓	1.0	s
АСТЧ	PID derivative time constant	Derivative time constant has a range of 0.0 to 100 seconds.	✓	0.00	s
AD75	PV scale conversion	Process Variable (PV), scale factor (multiplier), range of 0.01 to 99.99	×	1.00	_
A016	PV source	Selects source of Process Variable (PV), option codes:  OD[OI] terminal (current in)  OI[O] terminal (voltage in)  OZModBus network  OBPulse train input  IOCalculate function output	×	00	-
ררם	Reverse PID action	Two option codes:  OPID input = SP-PV  O IPID input = -(SP-PV)	×	00	_
АСОВ	PID output limit	Sets the limit of PID output as percent of full scale, range is 0.0 to 100.0%	×	0.0	%
P079	PID feed forward selection	Selects source of feed forward gain, option codes:  ODDisabled  OI[O] terminal (voltage in)  OZ[OI] terminal (current in)	×	00	_
A08 I	AVR function select	Automatic (output) voltage regulation, selects from three type of AVR functions, three option codes:	×	02	
A58 I	AVR function select, 2 <sup>nd</sup> motor	OOAVR enabled O IAVR disabled OZAVR enabled except during deceleration	×	02	_
A085	AVR voltage select	200V class inverter settings: 200/215/220/230/240 400V class inverter settings:	×	200/ 400	V
A585	AVR voltage select, 2 <sup>nd</sup> motor	380/400/415/440/460/480	×	200/ 400	V
A083	AVR filter time constant	Define the time constant of the AVR filter, range is 0 to 10 seconds.	×	0.300	s

	"A" I	<b>Function</b>	Run	Defa	ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
A084	AVR deceleration gain	Gain adjustment of the braking performance, range is 50 to 200%	×	100.	%
A085	Energy-saving operation mode	Two option codes:  ODNormal operation O1Energy-saving operation	×	00	-
A086	Energy-saving mode tuning	Range is 0.0 to 100 %.	×	50.0	%
A095	Acceleration time (2)	Duration of 2 <sup>nd</sup> segment of acceleration, range is: 0.01 to 3600 seconds.	✓	10.00	s
A292	Acceleration time (2), 2 <sup>nd</sup> motor	0.01 to 5000 seconds.	✓	10.00	s
A093	Deceleration time (2)	Duration of 2 <sup>nd</sup> segment of deceleration, range is: 0.01 to 3600 seconds.	✓	10.00	s
A293	Deceleration time (2), 2 <sup>nd</sup> motor	0.01 to 5000 seconds.	✓	10.00	S
A094	Select method to switch to Acc2/Dec2 profile	Three options for switching from 1st to 2nd accel/decel:  002CH input from terminal	×	00	-
A594	Select method to switch to Acc2/Dec2 profile, 2 <sup>nd</sup> motor	☐Transition frequency ☐Forward and reverse	×	00	_
A095	Acc1 to Acc2 frequency transition point	Output frequency at which Accel1 switches to Accel2, range is 0.0 to 400.0 Hz	×	0.0	Hz
A295	Acc1 to Acc2 frequency transition point, 2 <sup>nd</sup> motor	400.0 112	×	0.0	Hz
A096	Dec1 to Dec2 frequency transition point	Output frequency at which Decel1 switches to Decel2, range is 0.0 to 400.0 Hz	×	0.0	Hz
A296	Dec1 to Dec2 frequency transition point, 2 <sup>nd</sup> motor	100.0 112	×	0.0	Hz
R097	Acceleration curve selection	Set the characteristic curve of Acc1 and Acc2, five options:  ODlinear  O1S-curve  O2U-curve  O3Inverse U-curve  O4EL S-curve	×	00	-
A098	Deceleration curve selection	Set the characteristic curve of Dec1 and Dec2, options are same as above (RD97)	×	00	_
A 10 I	[OI] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	×	0.00	Hz
A 105	[OI] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	×	0.0	Hz
A 103	[OI] input active range start current	The starting point (offset) for the current input range, range is 0. to 100.%	×	20.	%
A 104	[OI] input active range end current	The ending point (offset) for the current input range, range is 0. to 100.%	×	100.	%
A 105	[OI] input start frequency select	Two options; select codes:  ODUse offset (A IO I value)  O IUse OHz	×	00	-
A 13 I	Acceleration curve constant	Range is 01 to 10.	×	02	-

	"A" I	<b>Tunction</b>	Run	Defa	ılts
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
A 132	Deceleration curve constant	Range is 01 to 10.	×	02	-
A 14 1	A input select for calculate function	Seven options:  OlOperator  OlVR  OlTerminal [O] input  OlTerminal [OI] input  OlRS485  OlOption  OlPulse train input	×	02	-
A 142	B input select for calculate function	Seven options:  ODOperator  OIVR  OZTerminal [O] input  OJTerminal [OI] input  OHRS485  OSOption  OTPulse train input	×	03	-
R 143	Calculation symbol	Calculates a value based on the A input source (# #1 selects) and B input source (# #2 selects).  Three options:  ODADD (A input + B input)  O1SUB (A input - B input)  O2MUL (A input * B input)	×	00	-
A 145	ADD frequency	An offset value that is applied to the output frequency when the [ADD] terminal is ON. Range is 0.0 to 400.0 Hz	✓	0.00	Hz
A 146	ADD direction select	Two options:  ODPlus (adds # 145 value to the output frequency setting)  OIMinus (subtracts # 145 value from the output frequency setting)	×	00	-
A 150	Curvature of EL-S-curve at the start of acceleration	Range is 0 to 50%	×	10.	%
A 15 I	Curvature of EL-S-curve at the end of acceleration	Range is 0 to 50%	×	10.	%
A 152	Curvature of EL-S-curve at the start of deceleration	Range is 0 to 50%	×	10.	%
A 153	Curvature of EL-S-curve at the end of deceleration	Range is 0 to 50%	×	10.	%
A 154	Deceleration hold frequency	Sets the frequency to hold deceleration, range is 0.0 to 400.0Hz	×	0.0	Hz
A 155	Deceleration hold time	Sets the duration of deceleration hold, range is 0.0 to 60.0 seconds.	×	0.0	s
A 156	PID sleep function action threshold	Sets the threshold for the action, set range $0.0{\sim}400.0~\mathrm{Hz}$	×	0.00	Hz
A 157	PID sleep function action delay time	Sets the delay time for the action, set range $0.0\sim25.5$ seconds.	×	0.0	s
A 16 I	[VR] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	×	0.00	Hz
A 162	[VR] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	×	0.00	Hz

	"A" Function			Defaults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
A 163	[VR] input active range start %	The starting point (offset) for the current input range, range is 0. to 100.%	×	0.	%
A 164	[VR] input active range end %	The ending point (offset) for the current input range, range is 0. to 100.%	×	100.	%
A 165	[VR] input start frequency select	Two options; select codes:  ODUse offset (A 15 1 value)  O 1Use 0Hz	×	01	_



### **Fine Tuning Functions**



NOTE: Mark "\sqrt{" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access

	"b" l	Function	Run Defaults		lts
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
POO 1	Restart mode on power failure / under-voltage trip	Select inverter restart method, Five option codes:  ODAlarm output after trip, no automatic restart  OIRestart at OHz  OZResume operation after frequency matching  OJResume previous freq. after freq. matching, then decelerate to stop and display trip info  OHResume operation after active freq. matching	×	00	-
P005	Allowable under-voltage power failure time	The amount of time a power input under-voltage can occur without tripping the power failure alarm. Range is 0.3 to 25 sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	×	1.0	s
ь003	Retry wait time before motor restart	Time delay after under-voltage condition goes away, before the inverter runs motor again. Range is 0.3 to 100 seconds.	×	1.0	s
6004	Instantaneous power failure / under-voltage trip alarm enable	Three option codes:  ODDisable  O1Enable  O2Disable during stop and decelerates to a stop	×	00	-
ь005	Number of restarts on power failure / under-voltage trip events	Two option codes:  ODRestart 16 times  O IAlways restart	×	00	-
ьоол	Restart frequency threshold	Restart the motor from 0Hz if the frequency becomes less than this set value during the motor is coasting, range is 0 to 400Hz	×	0.00	Hz
ь000	Restart mode on over voltage / over current trip	Select inverter restart method, Five option codes:  ODAlarm output after trip, no automatic restart  OIRestart at OHz  OZResume operation after frequency matching  OJResume previous freq. after active freq. matching, then decelerate to stop and display trip info  OHResume operation after active freq. matching	×	00	-
PO 10	Number of retry on over voltage / over current trip	Range is 1 to 3 times	×	3	-
PD 11	Retry wait time on over voltage / over current trip	Range is 0.3 to 100 sec.	×	1.0	s
PD 15	Level of electronic thermal	Set a level between 20% and 100% for the rated inverter current.	×	Rated current for	A
P5 15	Level of electronic thermal, 2 <sup>nd</sup> motor		×	each inverter model *1	A
PO 13	Electronic thermal characteristic	Select from three curves, option codes:	×	01	-

	"b" ]	Function	Run	Defa	ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
PS 13	Electronic thermal characteristic, 2 <sup>nd</sup> motor	ODReduced torque O IConstant torque OZFree setting	×	01	-
ьо 15	Free setting electronic thermal ~freq.1	Range is 0 to 400Hz	×	0.0	Hz
ьо 16	Free setting electronic thermal ~current1	Range is 0 to inverter rated current Amps	×	0.00	A
ьо п	Free setting electronic thermal ~freq.2	Range is 0 to 400Hz	×	0.0	Hz
PO 18	Free setting electronic thermal ~current2	Range is 0 to inverter rated current Amps	×	0.00	A
ьо 19	Free setting electronic thermal ~freq.3	Range is 0 to 400Hz	×	0.0	Hz
P050	Free setting electronic thermal ~current3	Range is 0 to inverter rated current Amps	×	0.00	A
POS 1	Overload restriction operation mode	Select the operation mode during overload conditions, four options, option	×	01	-
P55 I	Overload restriction operation mode, 2 <sup>nd</sup> motor	codes:  ODDisabled  O IEnabled for acceleration and constant speed  OZEnabled for constant speed only  OJEnabled for acceleration and constant speed, increase speed at regen.	×	01	-
P055	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution	×	Rated current x 1.5	A
P555	Overload restriction level, 2 <sup>nd</sup> motor	is 1% of rated current	×	Rated current x 1.5	A
PD53	Deceleration rate at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0,	×	1.0	s
P553	Deceleration rate at overload restriction, 2 <sup>nd</sup> motor	resolution 0.1 seconds.	×	1.0	s
6024	Overload restriction operation mode 2	Select the operation mode during overload conditions, four options, option codes:  ODDisabled OIEnabled for acceleration and constant speed OZEnabled for constant speed only OJEnabled for acceleration and constant speed, increase speed at regen.	×	01	-
6025	Overload restriction level 2	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	×	Rated current x 1.5	
P052	Deceleration rate 2 at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1 seconds.	×	1.0	s
6027	OC suppression selection *	Two option codes:  ODDisabled  O IEnabled	×	01	-
P058	Current level of active freq. matching	Sets the current level of active freq. matching restart, range is 0.1*inverter rated current to 2.0*inverter rated current, resolution 0.1 seconds.	×	Rated current	A
P053	Deceleration rate of active freq. matching	Sets the deceleration rate when active freq. matching restart, range is 0.1 to 3000.0, resolution 0.1 seconds.	×	0.5	s

	"b" ]	Function	Run	Defa	ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
ь030	Start freq. of active freq.	Three option codes:	×	00	_
	matching	ODfreq at previous shutoff O Istart from max. Hz			
		02start from set frequency			
ьоэ I	Software lock mode selection	Prevents parameter changes, in five	×	01	_
		options, option codes:  00all parameters except b03   are	~		
		locked when [SFT] terminal is ON			
		0 1all parameters except <b>b03</b> I and			
		output frequency <b>FOO I</b> are locked when [SFT] terminal is ON			
		when [SF1] terminal is ON  02all parameters except b03 I are			
		locked			
		03all parameters except b03 I and			
		output frequency <b>FOO I</b> are locked <b>IO</b> High level access including <b>bO3 I</b>			
		See appendix C for the accessible			
		parameters in this mode.			
ь033	Motor cable length	Set range is 5 to 20.	×	10.	_
6034	Run/power ON warning time	Range is,	×	0.	Hrs.
		<b>D.</b> :Warning disabled  1. to <b>9999</b> .:	^		
		10~99.990 hrs (unit: 10)			
		1000 to 6553:			
	D-t-ti litit-i-ti	100,000~655,350 hrs (unit: 100)			
ь035	Rotation direction restriction	Three option codes:	×	00	_
		<b>D</b> 1Reverse rotation is restricted			
		02Forward rotation is restricted			
ь036	Reduced voltage start selection	Set range, <b>0</b> (disabling the function), <b>1</b> (approx. 6ms) to <b>255</b> (approx. 1.5s)	×	2	-
6037	Function code display restriction	Seven option codes:  ODFull display	×	04	-
	restriction	<b>D</b> 1Function-specific display			
		סבUser setting (and סבור)			
		03Data comparison display			
		04Basic display 05Monitor display only			
ь038	Initial display selection	000Func. code that SET key pressed	~	001	_
		last displayed.(*)	×		
		00 1~030d00 1~d030 displayed 20 1F00 1 displayed			
		202B display of LCD operator			
ь039	Automatic user parameter	Two option codes:	×	00	_
	registration	00Disable	^		
6040	Torque limit selection	IEnable Four option codes:		00	_
00 10	1	OOQuadrant-specific setting mode	×		_
		UTerminal-switching mode			
604 1	Torque limit 1 (fwd/power)	O2Analog voltage input mode(O)  Torque limit level in forward powering		200	%
		quadrant, range is 0 to 200%/no(disabled)	×	200	70
P045	Torque limit 2 (fwd/power)	Torque limit level in forward powering quadrant, range is 0 to 200%/no(disabled)	×	200	%
6043	Torque limit 3 (rev/power)	Torque limit level in reverse powering	×	200	%
6044	Torque limit 4 (fwd/regen.)	quadrant, range is 0 to 200%/no(disabled)  Torque limit level in forward regen.		200	%
		quadrant, range is 0 to 200%/no(disabled)	X	200	7∕0
6045	Torque LAD STOP selection	Two option codes:	×	00	-
		01Enable			
•	i			•	

	"b" ]	Function	Run	Defaults		
Func. Code	Name	Description	Mode Edit	Lnitial data	Units	
6046	Reverse run protection	Two option codes:  ODNo protection O1Reverse rotation is protected	×	01	-	
6049	Dual Rating Selection	00 (CT mode) / 0 1 (VT mode)	×	00		
ь050	Controlled deceleration on power loss	Four option codes:  ODTrips OIDecelerates to a stop OZDecelerates to a stop with DC bus voltage controlled OJDecelerates to a stop with DC bus voltage controlled, then restart	×	00	-	
605 I	DC bus voltage trigger level of ctrl. decel.	Setting of DC bus voltage to start controlled decel. operation. Range is 0.0 to 1000.0	×	220.0/ 440.0	V	
6052	Over-voltage threshold of ctrl. decel.	Setting the OV-LAD stop level of controlled decel. operation. Range is 0.0 to 1000.0	×	360.0/ 720.0	V	
ь05Э	Deceleration time of ctrl. decel.	Range is 0.01 to 3600.0 seconds.	×	1.0	s	
6054	Initial freq. drop of ctrl. decel.	Setting of initial freq. drop. Range is 0.0 to 10.0 Hz	×	0.0	Hz	
6060	Maximum-limit level of window comparator (O)	Set range, {Minlimit level ( <b>b05</b> !) + hysteresis width ( <b>b052</b> )x2} to 100 % (Minimum of 0%)	×	100.	%	
ь06 і	Minimum-limit level of window comparator (O)	Set range, 0 to {Maxlimit level ( <b>b050</b> ) - hysteresis width ( <b>b052</b> )x2} % (Maximum of 0%)	0.	%		
P065	Hysteresis width of window comparator (O)	Set range, 0 to {Maxlimit level ( <b>b050</b> ) - Minlimit level ( <b>b05</b> !)}/2 % (Maximum of 10%)		0.	%	
ь063	Maximum-limit level of window comparator (OI)	Set range, {Minlimit level (b054 + hysteresis width (b055)x2} to 100 % (Minimum of 0%)	✓	100.	%	
6064	Minimum-limit level of window comparator (OI)	Set range, 0 to {Maxlimit level ( <b>b053</b> ) - hysteresis width ( <b>b055</b> )x2} % (Maximum of 0%)	✓	0.	%	
ь065	Hysteresis width of window comparator (OI)	Set range, 0 to {Maxlimit level ( <b>b053</b> ) - Minlimit level ( <b>b054</b> )}/2 % (Maximum of 10%)	✓	0.	%	
ьото	Operation level at O disconnection	Set range, 0 to 100%, or "no" (ignore)	×	no	-	
ו רם	Operation level at OI disconnection	Set range, 0 to 100%, or "no" (ignore)	×	no	-	
ьо75	Ambient temperature setting	Set range is, -10~50 °C	✓	40	°C	
6078	Watt-hour clearance	Two option codes:  ODOFF  OION (press STR then clear)	✓	00	-	
ь079	Watt-hour display gain	Set range is, 1.~1000.	✓	1.		
P085	Start frequency	Sets the starting frequency for the inverter output, range is 0.10 to 9.99 Hz	×	0.50	Hz	
P083	Carrier frequency	Sets the PWM carrier (internal switching frequency), range is 2.0 to 15.0 kHz	×	2.0	kHz	
6084	Initialization mode (parameters or trip history)	Select initialized data, five option codes:  ODInitialization disabled  OIClears Trip history  OZInitializes all Parameters  OJClears Trip history and initializes all parameters  OHClears Trip history and initializes all parameters  OHClears Trip history and initializes all parameters and EzSQ program	×	00	-	

	"b" ]					Defa	Defaults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units			
ь085	Country for initialization	Select default parameter values for country on initialization, two option codes:  ODarea A  O Iarea B	×	00	-			
6086	Frequency scaling conversion factor	Specify a constant to scale the displayed frequency for d007 monitor, range is 0.01 to 99.99	×	1.00	_			
ь087	STOP key enable	Select whether the STOP key on the keypad is enabled, three option codes:  OD Enabled  O I Disabled always  OZ Disabled for stop	×	00	-			
ь088	Restart mode after FRS	Selects how the inverter resumes operation when free-run stop (FRS) is cancelled, three options:  ODRestart from 0Hz  OIRestart from frequency detected from real speed of motor (freq. matching)  OZRestart from frequency detected from real speed of motor (active freq. matching)	×	00				
ь089	Automatic carrier frequency reduction	Three option codes:  ODDisabled  OIEnabled, depending on the output current  OZEnabled, depending on the heat-sink temperature	×	01	-			
ь090	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 sec. intervals, range is 0.0 to the value calcurated by the inverter with b097. If the connected register's allowable range is narrow than above range, the register's range is prior. 0%: Function disabled >0%: Enabled, per value	×	0.0	%			
ь095	Dynamic braking control (BRD) selection	Three option codes:  ODDisable  O IEnable during run only  OZEnable always	×	01				
ь096	BRD activation level (As DC Voltage)	If DC Voltage > b096, the register consume. regeneration power.  Range is: 330 to 380V (200V class) 660 to 760V (400V class)	×	360/ 720	V			
6097	BRD register	Set the value of the register connected to the inverter. By this setting, b090's upper limit as the inverter hardware is calcurated automatically. So, you can focus the usage ratio as the connected register.  Range is minimum connectable register Rbmin to 600.0[\Omega]	×	Min. Resistance	Ω			
ь 100	Free V/F setting, freq.1	Set range, 0 ~ value of <b>b</b> 102	×	0.	Hz			
ь 10 1	Free V/F setting, voltage.1	Set range, $0 \sim 800 \text{V}$	×	0.0	V			
P 105	Free V/F setting, freq.2	Set range, value of <b>b</b> 100 ~ <b>b</b> 104	×	0.	Hz			
P 103	Free V/F setting, voltage.2	Set range, $0 \sim 800 \text{V}$	×	0.0	V			
ь 104	Free V/F setting, freq.3	Set range, value of <b>b</b> 102 ~ <b>b</b> 105	×	0.	Hz			

	"b" ]	Function	Run	Defaults		
Func. Code	Name	Description	Mode Edit	Lnitial data	Units	
ь 105	Free V/F setting, voltage.3	Set range, $0 \sim 800 \text{V}$	×	0.0	V	
ь 106	Free V/F setting, freq.4	Set range, value of <b>b</b> 104 ~ <b>b</b> 108	×	0.	Hz	
ь 107	Free V/F setting, voltage.4	Set range, 0 ~ 800V	×	0.0	V	
ь 108	Free V/F setting, freq.5	Set range, value of <b>b</b> 108 ~ <b>b</b> 1 10	×	0.	Hz	
ь 109	Free V/F setting, voltage.5	Set range, 0 ~ 800V	×	0.0	V	
ь і 10	Free V/F setting, freq.6	Set range, value of <b>b</b> 108 ~ <b>b</b> 112	X	0.	Hz	
ЬПП	Free V/F setting, voltage.6	Set range, 0 ~ 800V	×	0.0	V	
P 1 15	Free V/F setting, freq.7	Set range, <b>b</b> 1 10 ~ 400	×	0.	Hz	
6113	Free V/F setting, voltage.7	Set range, 0 ~ 800V	X	0.0	V	
P 150	Brake control enable	Two option codes:  ODDisable  O !Enable	×	00	-	
P 15 I	Brake Wait Time for Release	Set range: 0.00 to 5.00 seconds.	×	0.00	s	
P 155	Brake Wait Time for Acceleration	Set range: 0.00 to 5.00 seconds.	×	0.00	s	
P 153	Brake Wait Time for Stopping	Set range: 0.00 to 5.00 s seconds.	×	0.00	s	
Ь 124	Brake Wait Time for Confirmation	Set range: 0.00 to 5.00 seconds.	×	0.00	s	
ь 125	Brake release freq.	Set range: 0 to 400Hz	×	0.00	Hz	
ь 126	Brake release current	Set range: 0~200% of inverter rated current	×	(rated current)	A	
ь 127	Braking freq. setting	Set range: 0 to 400Hz	×	0.00	Hz	
ь 130	Deceleration overvoltage suppression enable	ODDisabled O1Enabled O2Enabled with accel.	×	00	-	
Ь IЗ I	Decel. overvolt. suppress level	DC bus voltage of suppression. Range is: 200V class330 to 395 400V class660 to 790	×	380 /760	V	
ь 132	Decel. overvolt. suppress const.	Accel. rate when b130=02. Set range: 0.10 ~ 30.00 seconds.	×	1.00	s	
ь 133	Decel. overvolt. suppress proportional gain	Proportional gain when b130=01. Range is: 0.00 to 5.00	✓	0.20	=	
ь 134	Decel. overvolt. suppress integral time	Integration time when b130=01. Range is: 0.00 to 150.0 seconds.	✓	1.0	s	
ь 145	GS input mode	Two option codes:  ODNo trip (Hardware shutoff only)  OITrip	×	00	_	
ь 150	Display ex.operator connected	When an external operator is connected via RS-422 port, the built-in display is locked and shows only one "d" parameter configured in: d00 I ~ d030	×	001	-	
ь 160	1st parameter of Dual Monitor	Set any two "d" parameters in b160 and b161, then they can be monitored in d050.	×	001	_	
ь 15 1	2nd parameter of Dual Monitor	The two parameters are switched by up/down keys. Set range: d00 ! ~ d030	002	-		
ь 163	Frequency set in monitoring	Two option codes:  ODFreq. set disabled  O IFreq. set enabled	✓	00	-	

	"b"	Run	Defaults		
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
ь 164	Automatic return to the initial display	10 min. after the last key operation, display returns to the initial parameter set by <b>b038</b> . Two option codes: <b>00Disable 01Enable</b>	<b>✓</b>	00	-
ь 165	Ex. operator com. loss action	Five option codes:  ODTrip  OITrip after deceleration to a stop  OZIgnore  OJCoasting (FRS)  OHDecelerates to a stop	02	_	
ь 166	Data Read/Write select	OO Read/Write OK O I Protected	00	_	
ьпі	Inverter mode selection	Three option codes:  ODNo function  OIStd. IM (Induction Motor)  OBPM(Permanent Magnet Motor)	×	00	-
ь 180	Initialization trigger (*)	This is to perform initialization by parameter input with <b>b084</b> , <b>b085</b> and <b>b094</b> . Two option codes: <b>00</b> Initialization disable <b>0</b> 1Perform initialization	×	00	-
ь 190	Password Settings A	0000(Invalid Password) 0001-FFFF(Password)	×	0000	_
ь 19 1	Password authentication A	0000-FFFF	×	0000	_
P 192	Password Settings B	0000(Invalid Password) 0001-FFFF(Password)	×	0000	_
ь 193	Password authentication B	0000-FFFF	×	0000	_

### **Intelligent Terminal Functions**



NOTE: Mark "\sqrt{" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access

	"C"	'Function	Run	Defa	ults
Func. Code	Name	Description	Mode Edit	Linitial data	Units
C00 I	Input [1] function	Select input terminal [1] function, 68 options (see next section)	×	00 [FW]	-
C005	Input [2] function	Select input terminal [2] function, 68 options (see next section)	×	01 [RV]	-
C003	Input [3] function [GS1 assignable]	Select input terminal [3] function, 68 options (see next section)	×	02 [CF1]	-
C004	Input [4] function [GS2 assignable]	Select input terminal [4] function, 68 options (see next section)	×	03 [CF2]	-
C005	Input [5] function [PTC assignable]	Select input terminal [5] function, 68 options (see next section)	×	09 [2CH]	-
C006	Input [6] function	Select input terminal [6] function, 68 options (see next section)	×	18 [RS]	-
רססס	Input [7] function	Select input terminal [7] function, 68 options (see next section)	×	13 [USP]	=
CO 1 1	Input [1] active state	Select logic conversion, two option codes:  ODnormally open [NO]	×	00	-
CO 12	Input [2] active state	01normally closed [NC]	×	00	-
CO 13	Input [3] active state		×	00	-
CO 14	Input [4] active state		×	00	-
CO 15	Input [5] active state	_	×	00	_
CO 16	Input [6] active state	_	×	00	_
רו סם	Input [7] active state		×	00	-
CO2 I	Output [11] function [EDM assignable]	48 programmable functions available for logic (discrete) outputs (see next section)	×	01 [FA1]	-
C055	Output [12] function		×	00	-
C026	Alarm relay function	48 programmable functions available for logic	×	[RUN] 05	
		(discrete) outputs (see next section)		[AL]	
כספר	[EO] terminal selection (Pulse/PWM output)	13 programmable functions:  00Output frequency (PWM)  01Output current (PWM)  02Output torque (PWM)  03Output frequency (Pulse train)  04Output voltage (PWM)  05Input power (PWM)  06Electronic thermal load ratio (PWM)  07LAD frequency (PWM)  08Output current (Pulse train)  10Heat sink temperature (PWM)  12General output (PWM)  15Pulse train input monitor  16Option(PWM)	×	07	-

	"C"	"C" Function		Defa	ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
C028	[AM] terminal selection (Analog voltage output 010V)	11 programmable functions:  00Output frequency 01Output current 02Output torque 04Output voltage 05Input power 06Electronic thermal load ratio 07LAD frequency 10Heat sink temperature 11Output torque (with code) 13General output 15Option	×	07 [LAD]	
C030	Digital current monitor reference value	Current with digital current monitor output at 1,440Hz Range is 20%~200% of rated current	✓	Rated current	A
CO3 I	Output [11] active state	Select logic conversion, two option codes:  ODnormally open [NO]	×	00	_
C032	Output [12] active state	Inormally closed [NC]	×	00	=
C036	Alarm relay active state		×	01	-
C038	Output mode of low current detection	Two option codes:  ODDuring acceleration,  deceleration and constant  speed  OlDuring constant speed only	×	01	-
C039	Low current detection level	Set the level of low load detection, range is 0.0 to 2.0*inverter rated current	×	INV rated current	A
C040	Output mode of overload warning	Two option codes:  ODDuring accel., decel. and constant speed  OlDuring constant speed only	×	01	1
C04 I	Overload warning level	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	×	Rated current x 1.15	A
C24 I	Overload warning level, 2 <sup>nd</sup> motor	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	×	Rated current x 1.15	A
C042	Frequency arrival setting for acceleration	Sets the frequency arrival setting threshold for the output frequency during acceleration, range is 0.0 to 400.0 Hz	×	0.0	Hz
C043	Frequency arrival setting for deceleration	Sets the frequency arrival setting threshold for the output frequency during deceleration, range is 0.0 to 400.0 Hz	×	0.0	Hz
C044	PID deviation level	Sets the allowable PID loop error magnitude (absolute value), SP-PV, range is 0.0 to 100%	×	3.0	%
C045	Frequency arrival setting 2 for acceleration	Set range is 0.0 to 400.0 Hz	×	0.00	Hz
C046	Frequency arrival setting 2 for deceleration	Set range is 0.0 to 400.0 Hz	×	0.00	Hz
רפס	Pulse train input/output scale conversion	If EO terminal is configured as pulse train input (C027=15), scale conversion is set in C047.  Pulse-out = Pulse-in × (C047) Set range is 0.01 to 99.99	✓	1.00	-
C052	PID FBV output high limit	When the PV exceeds this value, the PID loop turns OFF the PID second stage output, range is 0.0 to 100%	×	100.0	%

	"C"	Function	Run			
Func. Code	Name	Description	Mode Edit	Lnitial data	Units	
C053	PID FBV output low limit	When the PV goes below this value, the PID loop turns ON the PID second stage output, range is 0.0 to 100%	×	0.0	%	
C054	Over-torque/under-torque selection	Two option codes:  OuOver-torque  UUnder-torque	×	00	-	
C055	Over/under-torque level (Forward powering mode)	Set range is 0 to 200%	×	100.	%	
C056	Over/under-torque level (Reverse regen. mode)	Set range is 0 to 200%	×	100.	%	
C057	Over/under-torque level (Reverse powering mode)	Set range is 0 to 200%	×	100.	%	
C058	Over/under-torque level (Forward regen. mode)	Set range is 0 to 200%	×	100.	%	
C059	Signal output mode of Over/under-torque	Two option codes:  ODDuring accel., decel. and  constant speed  O IDuring constant speed only	×	01	-	
C06 I	Electronic thermal warning level	Set range is 0 to 100% Setting 0 means disabled.	×	90	%	
C063	Zero speed detection level	Set range is 0.0 to 100.0Hz	×	0.00	Hz	
C064	Heat sink overheat warning  Communication speed	Set range is 0 to 110 °C  Eight option codes:	×	100.	$^{\circ}\mathrm{C}$	
ו רם ז		032,400 bps 044,800 bps 059,600 bps 0619,200 bps 0738,400 bps 0857,600 bps 0976,800 bps 10115,200 bps	×	05	bps	
כרסם	Modbus address	Set the address of the inverter on the network. Range is 1 to 247	×	1.	-	
בסוא	Communication parity	Three option codes:  ODNo parity  OIEven parity  OZOdd parity	×	00	-	
C075	Communication stop bit	Two option codes:  I1 bit  22 bit	×	1	bit	
C076	Communication error select			02	-	
ררם	Communication error time-out	Sets the communications watchdog timer period. Range is 0.00 to 99.99 seconds. 0.0 = disabled	×	0.00	s	
פרס	Communication wait time	Time the inverter waits after receiving a message before it transmits.  Range is 0. to 1000. m seconds.	×	0.	ms	
C08 I	O input span calibration	Scale factor between the external frequency command on terminals L–O (voltage input) and the frequency output, range is 0.0 to 200%	✓	100.0	%	

	"C"	Function	Run	Defa	ults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units	
C082	OI input span calibration	Scale factor between the external frequency command on terminals L–OI (voltage input) and the frequency output, range is 0.0 to 200%	✓	100.0	%	
C085	Thermistor input (PTC) span calibration	Scale factor of PTC input. Range is 0.0 to 200%	✓	100.0	%	
C09 I	Debug mode enable *	Displays debug parameters. Two option codes: ODDisable O IEnable <do not="" set=""> (for factory use)</do>	✓	00	-	
C096	Communication selection	ODModbus-RTU O I EzCOM OZ EzCOM <administrator></administrator>	×	00	_	
C098	EzCOM start adr. of master	01-08	×	01		
C099	EzCOM end adr. of master	01-08	×	01	-	
C 100	EzCOM starting trigger	OO Input terminal O I Always	×	00	_	
C 10 I	Up/Down memory mode selection	Controls speed setpoint for the inverter after power cycle. Two option codes:  DDClear last frequency (return to default frequency FDD I)  DIKeep last frequency adjusted by UP/DWN	×	00	-	
C 102	Reset selection	Determines response to Reset input [RS]. Four option codes:  ODCancel trip state at input signal ON transition, stops inverter if in Run Mode  OICancel trip state at signal OFF transition, stops inverter if in Run Mode  OZCancel trip state at input ON transition, no effect if in Run Mode  OZClear the memories only related to trip status	×	00	-	
C 103	Restart mode after reset	Determines the restart mode after reset is given, three option codes:  ODStart with 0 Hz  OIStart with freq. matching  OZStart with active freq. matching	×	00	-	
C 104	UP/DWN clear mode	Freq. set value when UDC signal is given to the input terminal, two option codes:  ODO Hz  OIOriginal setting (in the EEPROM memory at power on)	×	00	-	
C 105	EO gain adjustment	Set range is 50 to 200%	✓	100.	%	
C 106	AM gain adjustment	Set range is 50 to 200%	✓	100.	%	
C 109	AM bias adjustment	Set range is 0 to 100%	✓	0.	%	
	Overload warning level 2	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	Rated current x 1.15	A	
C 130	Output [11] on delay	Set range is 0.0 to 100.0 seconds.				
[ EI ]	Output [11] off delay		<b>X</b> 0.0			
C 132	Output [12] on delay	Set range is 0.0 to 100.0 seconds.	0.0	s		
C 133	Output [12] off delay		×	0.0	S	

		Function	Run	Defa	ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
C 140	Relay output on delay	Set range is 0.0 to 100.0 seconds.	×	0.0	s
C 14 I	Relay output off delay		×	0.0	s
C 142	Logic output 1 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3,	×	00	_
E 143	Logic output 1 operand B	OPO, no	×	00	_
[ 144	Logic output 1 operator	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OI[LOG] = A OR B  OZ[LOG] = A XOR B	×	00	-
C 145	Logic output 2 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3,	×	00	_
C 146	Logic output 2 operand B	OPO, no	×	00	_
E 147	Logic output 2 operator	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OI[LOG] = A OR B  OZ[LOG] = A XOR B	×	00	-
C 148	Logic output 3 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3,	×	00	-
C 149	Logic output 3 operand B	OPO, no	×	01	-
C 150	Logic output 3 operator	Applies a logic function to calculate [LOG] output state, Three options:  OD[LOG] = A AND B  OI[LOG] = A OR B  OZ[LOG] = A XOR B	×	00	-
C 160	Input [1] response time	Sets response time of each input terminal, set range:	×	1.	-
C 16 1	Input [2] response time	0 (x 2 [ms]) to 200 (x 2 [ms]) (0 to 400 [ms])	×	1.	_
C 162	Input [3] response time	(0 to 100 [maj/	×	1.	_
C 163	Input [4] response time	]	×	1.	_
C 164	Input [5] response time	]	×	1.	-
C 165	Input [6] response time		×	1.	_
C 166	Input [7] response time		×	1.	-
C 169	Multistage speed/position determination time	Set range is 0. to 200. (x 10ms)	×	0.	ms

**Input Function Summary Table** – This table shows all thirty-one intelligent input functions at a glance. Detailed description of these functions, related parameters and settings, and example wiring diagrams are in "Using Intelligent Input Terminals" on page 4-8.

	Input Function Summary Table					
Option Code	Terminal Symbol	Function Name	Description			
00	FW	FORWARD Run/Stop	ON	Inverter is in Run Mode, motor runs forward		
TORWARD Run	ronwand numbtop	OFF	Inverter is in Stop Mode, motor stops			
n ,	RV	D		Inverter is in Run Mode, motor runs reverse		
יט	It V	Reverse Run/Stop	OFF	Inverter is in Stop Mode, motor stops		
02	CF1 *1	Multi-speed Select,	ON	Binary encoded speed select, Bit 0, logical 1		
UE	CF1 1	Bit 0 (LSB)	OFF	Binary encoded speed select, Bit 0, logical 0		
רח	CEO	Multi-speed Select,	ON	Binary encoded speed select, Bit 1, logical 1		
03	CFZ	CF2 Bit 1	Bit 1	OFF	Binary encoded speed select, Bit 1, logical 0	

04	CF3	Multi-speed Select, Bit 2	ON OFF	Binary encoded speed select, Bit 2, logical 1 Binary encoded speed select, Bit 2, logical 0
05	CF4	Multi-speed Select,	ON	Binary encoded speed select, Bit 3, logical 1
06	JG	Bit 3 (MSB)  Jogging	OFF ON OFF	Binary encoded speed select, Bit 3, logical 0 Inverter is in Run Mode, output to motor runs at jog parameter frequency Inverter is in Stop Mode
רם	DB	External DC braking	ON OFF	DC braking will be applied during deceleration DC braking will not be applied
08	SET	Set (select) 2nd Motor Data	ON OFF	The inverter uses 2nd motor parameters for generating frequency output to motor  The inverter uses 1st (main) motor parameters for
09	2CH	2-stage Acceleration and Deceleration	ON OFF	generating frequency output to motor  Frequency output uses 2nd-stage acceleration and deceleration values  Frequency output uses standard acceleration and
			ON	deceleration values  Causes output to turn OFF, allowing motor to free run (coast) to stop
11	FRS	FRS Free-run Stop		Output operates normally, so controlled deceleration stop motor
12	EXT	External Trip	ON	When assigned input transitions OFF to ON, inverter latches trip event and displays <b>E</b> 12
"-		Excernar 111p	OFF	No trip event for ON to OFF, any recorded trip events remain in history until reset
13	USP	Unattended Start	ON	On power up, the inverter will not resume a Run command (mostly used in the US)
	CSI	Protection	OFF	On power up, the inverter will resume a Run command that was active before power loss
14	CS	Commercial power source switchover	ON OFF	Motor can be driven by commercial power  Motor is driven via the inverter
15	SFT	Software Lock	ON OFF	The keypad and remote programming devices are prevented from changing parameters  The parameters may be edited and stored
16	AT	Analog Input Voltage/Current Select	ON OFF	Refer to "Analog Input Settings" on page 3-13.
18	RS	Reset Inverter	ON OFF	The trip condition is reset, the motor output is turned OFF, and power up reset is asserted  Normal power ON operation
19	PTC	PTC thermistor Thermal Protection	ANLG	When a thermistor is connected to terminal [5] and [L], the inverter checks for over-temperature and will cause trip event and turn OFF output to motor
		(C005 only)	OPEN	A disconnect of the thermistor causes a trip event, and the inverter turns OFF the motor

	Input Function Summary Table					
Option Code	Terminal Symbol	Function Name	Description			
20	STA	Start	ON	Starts the motor rotation		
	DIA	(3-wire interface)	OFF	No change to present motor status		
21	STP	Stop	ON	Stops the motor rotation		
E 1	511	(3-wire interface)	OFF	No change to present motor status		
22	F/R	FWD, REV (3-wire interface)	ON	Selects the direction of motor rotation: ON = FWD. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction  Selects the direction of motor rotation: OFF = REV. While		
			OFF	the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction		
23	PID	PID Disable	ON	Temporarily disables PID loop control. Inverter output turns OFF as long as PID Enable is active (ADT I=0 I)		
E3	EID		OFF	Has no effect on PID loop operation, which operates normally if PID Enable is active (ADT 1=0 1)		
24	PIDC	PID Reset	ON	Resets the PID loop controller. The main consequence is that the integrator sum is forced to zero		

		Inp	ut Funct	ion Summary Table
Option Code	Terminal Symbol	Function Name		Description
			OFF	No effect on PID controller
27	UP	Remote Control UP Function (motorized	ON	Accelerates (increases output frequency) motor from current frequency
		speed pot.)	OFF	Output to motor operates normally
28	DWN	Remote Control Down Function (motorized	ON	Decelerates (decreases output frequency) motor from current frequency
		speed pot.)	OFF	Output to motor operates normally
29	UDC	Remote Control Data Clearing	ON	Clears the UP/DWN frequency memory by forcing it to equal the set frequency parameter F001. Setting [ 10   1 must be set=00 to enable this function to work
			OFF	UP/DWN frequency memory is not changed
31	OPE	Operator Control	ON	Forces the source of the output frequency setting <b>FOOL</b> and the source of the Run command <b>FOOL</b> to be from the digital operator
			OFF	Source of output frequency set by <b>ADD I</b> and source of Run command set by <b>ADD2</b> is used
32	SF1 Multi-speed Select, ON Bit encoded speed select, Bit 1, logic			
		Bit operation Bit 1	OFF	Bit encoded speed select, Bit 1, logical 0
33	SF2	Multi-speed Select, Bit operation Bit 2	ON OFF	Bit encoded speed select, Bit 2, logical 1 Bit encoded speed select, Bit 2, logical 0
	272	Multi-speed Select,	ON	Bit encoded speed select, Bit 2, logical 1
34	SF3	Bit operation Bit 3	OFF	Bit encoded speed select, Bit 3, logical 0
35	SF4	Multi-speed Select,	ON	Bit encoded speed select, Bit 4, logical 1
	514	Bit operation Bit 4	OFF	Bit encoded speed select, Bit 4, logical 0
36	SF5	Multi-speed Select,	ON	Bit encoded speed select, Bit 5, logical 1
		Bit operation Bit 5 Multi-speed Select,	OFF ON	Bit encoded speed select, Bit 5, logical 0 Bit encoded speed select, Bit 6, logical 1
37	SF6	Bit operation Bit 6	OFF	Bit encoded speed select, Bit 6, logical 1 Bit encoded speed select, Bit 6, logical 0
70	OE/F	Multi-speed Select,	ON	Bit encoded speed select, Bit 7, logical 1
38	SF7	Bit operation Bit 7	OFF	Bit encoded speed select, Bit 7, logical 0
39	OLR	Overload Restriction	ON	Perform overload restriction
	0111	Source Changeover	OFF	Normal operation
40	$\mathrm{TL}$	Torque Limit Selection	ON	Setting of <b>b040</b> is enabled
		-	OFF	Max. torque is limited with 200%
41	TRQ1	Torque limit switch 1	ON	Torque limit related parameters of Powering/regen, and
42	TRQ2	Torque limit switch 2	OFF ON	FW/RV modes are selected by the combinations of these inputs.
			OFF	

	Input Function Summary Table						
Option Code	Terminal Symbol	Function Name	Description				
44	BOK	Brake confirmation	ON	Brake wait time (b 124) is valid			
- ' '	DOK	Brake confirmation		Brake wait time ( <b>b</b> 124) is not valid			
46	LAC	LAD cancellation	ON	Set ramp times are ignored. Inverter output immediately follows the freq. command.			
			OFF	Accel. and/or decel. is according to the set ramp time			
47	PCLR	Pulse counter clear	ON	Clear the position deviation data			
71	1 CLI	i dise codiffer clear	OFF	F Maintain the position deviation data			
50	ADD	ADD frequency enable	ON	Adds the # 145 (add frequency) value to the output frequency			
טכ	ADD		OFF	Does not add the # 145 value to the output frequency			
<b>.</b> .	12 (D) (f	Force Terminal Mode	ON	Force inverter to use input terminals for output frequency and Run command sources			
51	F-TM		OFF	Source of output frequency set by <b>AOO 1</b> and source of Run command set by <b>AOO2</b> is used			
63	ATR	Enable torque	ON	Torque control command input is enabled			
52	AIK	command input	OFF	Torque control command input is disabled			
53	KHC	Clear watt-hour data	ON	Clear watt-hour data			
KHC		Clear watt nour data	OFF	No action			
56	MI1	General purpose input	ON	General purpose input (1) is made ON under EzSQ			
ا ا	10111	(1)	OFF	General purpose input (1) is made OFF under EzSQ			

		Ini	out Func	tion Summary Table			
Option Code	Terminal Symbol	Function Name		Description			
57	MI2	General purpose input (2)	ON OFF	General purpose input (2) is made ON under EzSQ General purpose input (2) is made OFF under EzSQ			
58	MI3	General purpose input (3)	ON OFF	General purpose input (3) is made ON under EzSQ General purpose input (3) is made OFF under EzSQ			
59	MI4	General purpose input (4)	ON OFF	General purpose input (4) is made ON under EzSQ General purpose input (4) is made OFF under EzSQ			
60	MI5	General purpose input (5)	ON OFF	General purpose input (5) is made ON under EzSQ General purpose input (5) is made OFF under EzSQ			
<b>6</b> I	MI6	General purpose input (6)	ON OFF	General purpose input (6) is made ON under EzSQ General purpose input (6) is made OFF under EzSQ			
62	MI7	General purpose input (7)	ON OFF	General purpose input (7) is made ON under EzSQ General purpose input (7) is made OFF under EzSQ			
65	AHD	Analog command hold	ON OFF	Analog command is held Analog command is not held			
66	CP1	Multistage-position switch (1)	ON OFF				
67	CP2	Multistage-position switch (2)	ON OFF	Multistage position commands are set according to the combination of these switches.			
68	CP3	Multistage-position switch (3)	ON OFF				
69	ORL	Limit signal of homing	ON OFF	Limit signal of homing is ON Limit signal of homing is OFF			
סר	ORG	Trigger signal of homing	ON OFF	N Starts homing operation			
73	SPD	Speed/position changeover	ON OFF	Speed control mode Position control mode			

		Iı	nput Func	tion Summary Table		
Option Code	Terminal Symbol	Function Name	Description			
רר	GS1 *	GS1 input	ON	EN60204-1 related signals:		
			OFF	Signal input of "Safe torque off" function.		
1 7B	GS2 *	GS2 input	ON			
			OFF			
81	485	Start EzCOM	ON	Starts EzCOM		
			OFF	No execution		
82	PRG	Executing EzSQ	ON	Executing EzSQ program		
		program	OFF	No execution		
83	HLD	Retain output	ON	Retain the current output frequency		
		frequency	OFF	No retention		
84	ROK	Permission of Run	ON	Run command permitted		
-		command	OFF	Run command is not permitted		
85	EB	Rotation direction	ON	Forward rotation		
		detection (C007 only)	OFF	Reverse rotation		
86	DISP	Display limitation	ON	Only a parameter configured in <b>b038</b> is shown		
			OFF	All the monitors can be shown		
255	no	No function	ON	(input ignored)		
			OFF	(input ignored)		

**Output Function Summary Table** – This table shows all functions for the logical outputs (terminals [11], [12] and [AL]) at a glance. Detailed descriptions of these functions, related parameters and settings, and example wiring diagrams are in "Using Intelligent Output Terminals" in chapter 4.

Output Function Summary Table							
Option Code	Terminal Symbol	Function Name	Description			Description	
nn	RUN	Run Signal	ON	When the inverter is in Run Mode			
		_	OFF	When the inverter is in Stop Mode			
ПІ	FA1	Frequency Arrival	ON	When output to motor is at the set frequency			
		Type 1–Constant Speed	OFF	When output to motor is OFF, or in any acceleration or deceleration ramp			

		Ou	tput Fun	ction Summary Table	
Option Code	Terminal Symbol	Function Name		Description	
02	FA2	Frequency Arrival Type 2–Over frequency	ON	When output to motor is at or above the set freq., even if in accel (CO42) or decel (CO43) ramps	
			OFF	When output to motor is OFF, or at a level below the set frequency	
03	OL	Overload Advance Notice Signal 1	ON	When output current is more than the set threshold ( <b>CD4</b> 1) for the overload signal	
			OFF	When output current is less than the set threshold for the deviation signal	
04	OD	Output Deviation for PID Control	ON	deviation signal	
	4.7	A) G: 1	OFF	When PID error is less than the set threshold for the deviation signal	
05	AL	Alarm Signal	ON OFF	When an alarm signal has occurred and has not been cleared When no alarm has occurred since the last cleaning of alarm(s)	
06	FA3	Frequency Arrival Type 3–Set frequency	ON	When output to motor is at the set frequency, during accel (COY2) and decel (COY3).	
		Type 3—Set frequency	OFF	When output to motor is OFF, or is not at a level of the set frequency	
רם	OTQ	Over/under Torque Signal	ON OFF	Estimated motor torque exceeds the specified level Estimated motor torque is lower than the specified level	
09	UV	Undervoltage	ON OFF	Inverter is in Undervoltage Inverter is not in Undervoltage	
10	TRQ	Torque Limited Signal	ON	Torque limit function is executing	
- 11	RNT	Run Time Expired	OFF ON	Torque limit function is not executing  Total running time of the inverter exceeds the specified value	
			OFF	Total running time of the inverter does not exceed the specified value	
12	ONT	Power ON time Expired	ON	Total power ON time of the inverter exceeds the specified value	
			OFF	Total power ON time of the inverter does not exceed the specified value	
13	THM	Thermal Warning	ON OFF	Accumulated thermal count exceeds the <b>CO5</b> I set value  Accumulated thermal count does not exceed the <b>CO5</b> I set	
19	BRK	Brake Release Signal	ON	value Output for brake release	
		Ŭ.	OFF	No action for brake	
20	BER	Brake Error Signal	ON OFF	Brake error has occurred  Brake performance is normal	
21	ZS	Zero Hz Speed	ON	Output frequency falls below the threshold specified in [053]	
		Detection Signal	OFF	Output frequency is higher than the threshold specified in ${\it C063}$	
22	DSE	Speed Deviation Excessive	ON	Deviation of speed command and actual speed exceeds the specified value <b>PO27</b> .	
			OFF	Deviation of speed command and actual speed does not exceed the specified value PO27.	
23	POK	Positioning Completion	ON OFF	Positioning is completed Positioning is not completed	
24	FA4	Frequency Arrival Type 4–Over frequency	ON	When output to motor is at or above the set freq., even if in accel ( <b>CO45</b> ) or decel ( <b>CO46</b> ) ramps	
			OFF	When output to motor is OFF, or at a level below the set frequency	
25	FA5	Frequency Arrival Type 5—Set frequency	ON	When output to motor is at the set frequency, during accel (CD45) and decel (CD45).	
			OFF	When output to motor is OFF, or is not at a level of the set frequency	
26	OL2	Overload Advance Notice Signal 2	ON	When output current is more than the set threshold ([ !!!) for the overload signal	
			OFF	When output current is less than the set threshold for the deviation signal	
27	ODc	Analog Voltage Input Disconnect Detection	ON OFF	When the [O] input value < b070 setting (signal loss detected) When no signal loss is detected	
28	OIDc	Analog Current input	ON	When the [OI] input value < <b>b07</b> I setting (signal loss detected)	

		Ou	tput Fund	ction Summary Table	
Option Code	Terminal Symbol	Function Name	Description		
31	FBV	Disconnect Detection PID Second Stage Output	OFF	When no signal loss is detected  Transitions to ON when the inverter is in RUN Mode and the PID Process Variable (PV) is less than the Feedback Low Limit ([053])	
			OFF	Transitions to OFF when the PID Process Variable (PV) exceeds the PID High Limit (£052), and transitions to OFF when the inverter goes from Run Mode to Stop Mode	
32	NDc	Network Disconnect Detection	ON	When the communications watchdog timer (period specified by LTO) has time out	
			OFF	When the communications watchdog timer is satisfied by regular communications activity	
33	LOG1	Logic Output Function 1	ON	When the Boolean operation specified by [ 143] has a logical "1" result	
			OFF	When the Boolean operation specified by [ H3 has a logical "0" result	
34	LOG2	Logic Output Function 2	ON	When the Boolean operation specified by $\it L$ $\it H5$ has a logical "1" result	
			OFF	When the Boolean operation specified by <b>C M5</b> has a logical "0" result	
35	LOG3	Logic Output Function 3	ON	When the Boolean operation specified by $\it L$ $\it H9$ has a logical "1" result	
			OFF	When the Boolean operation specified by <b>[ H9</b> has a logical "0" result	
39	WAC	Capacitor Life Warning Signal	ON OFF	Lifetime of internal capacitor has expired.  Lifetime of internal capacitor has not expired.	
40	WAF	Cooling Fan Warning Signal	ON	Lifetime of cooling fan has expired.	
			OFF	Lifetime of cooling fan has not expired.	
41	FR	Starting Contact	ON	Either FW or RV command is given to the inverter	
		Signal	OFF	No FW or RV command is given to the inverter, or both are given to the inverter	
42	OHF	Heat Sink Overheat Warning	ON OFF	Temperature of the heat sink exceeds a specified value ( <b>CD54</b> )  Temperature of the heat sink does not exceed a specified value ( <b>CD54</b> )	
43	LOC	Low load detection	ON	(COG4)  Motor current is less than the specified value (CO39)	
	MO1	C	OFF	Motor current is not less than the specified value ([039)	
44	MO1	General Output 1	ON OFF	General output 1 is ON General output 1 is OFF	
45	MO2	General Output 2	ON	General output 2 is ON	
	MOS	G 10 + + 2	OFF ON	General output 2 is OFF General output 3 is ON	
46	МО3	General Output 3	OFF	General output 3 is OFF	
50	IRDY	Inverter Ready Signal	ON OFF	Inverter can receive a run command Inverter cannot receive a run command	
51	FWR	Forward Rotation	ON OFF	Inverter is driving the motor in forward direction  Inverter is not driving the motor in forward direction	
52	RVR	Reverse Rotation	ON OFF	Inverter is driving the motor in reverse direction  Inverter is not driving the motor in reverse direction	
53	MJA	Major Failure Signal	ON OFF	Inverter is not driving the motor in reverse direction  Inverter is tripping with major failure  Inverter is normal, or is not tripping with major failure	
54	WCO	Window Comparator for Analog Voltage Input	ON OFF	Analog voltage input value is inside of the window comparator  Analog voltage input value is outside of the window comparator	
55	WCOI	Window Comparator for Analog Current	ON Analog current input value is inside of the window comparator  Analog current input value is outside of the window		
		Input Fragueray Command	OFF	comparator  Execution of the comparator	
58	FREF	Frequency Command Source	ON OFF	Frequency command is given from the operator Frequency command is not given from the operator	
59	REF	Run Command Source	ON	Run command is given from the operator	
L			OFF	Run command is not given from the operator	

	Output Function Summary Table					
Option Code	Terminal Symbol	Function Name	Description			
60	SETM	2 <sup>nd</sup> Motor Selection	ON	2 <sup>nd</sup> motor is being selected		
	OU SEIM		OFF	2 <sup>nd</sup> motor is not being selected		
	EDM	STO (Safe Torque Off)	ON	STO is being performed		
62		Performance Monitor (Output terminal 11 only)	OFF	STO is not being performed		
<b>6</b> 2	OPO	Ontion and autmut	ON	(output terminal for option card)		
03	<b>63</b> OPO	Option card output	OFF	(output terminal for option card)		
255	no	Not used	ON	-		
E33	no	Not used	OFF	-		

### **Motor Constants Functions**



NOTE:. Mark "✓" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access

"H" Function			Run	Defaults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
H00 I	Auto-tuning selection	Three option codes:  ODDisabled  O IEnabled with motor stop  OZEnabled with motor rotation	×	00	-
H002	Motor constant selection	Four option codes:  ODHitachi standard motor	×	00	_
H202	Motor constant selection, 2 <sup>nd</sup> motor	02Auto tuned data	×	00	_
H003	Motor capacity	Eleven selections: 0.1/0.2/0.4/0.75/1.5/2.2/3.7/	×	Specified by the capacity	kW
H203	Motor capacity, 2 <sup>nd</sup> motor	5.5/7.5/11/15/18.5	×	of each inverter model	kW
H004	Motor poles setting	Four selections:	×	4	poles
H204	Motor poles setting, 2 <sup>nd</sup> motor	2/4/6/8/10	×	4	poles
H005	Motor speed response constant	G	✓	100.	-
H205	Motor speed response constant, 2 <sup>nd</sup> motor	Set range is 1 to 1000	✓	100.	_
H006	Motor stabilization constant	Motor constant (factory set),	✓	100.	_
H206	Motor stabilization constant, 2 <sup>nd</sup> motor	range is 0 to 255	✓	100.	_
H020	Motor constant R1 (Hitachi motor)	0.004.07.707.0	×	Specified by the capacity	Ω
H220	Motor constant R1, 2 <sup>nd</sup> motor (Hitachi motor)	$0.001 \sim 65.535 \Omega$	×	of each	Ω
HO2 I	Motor constant R2 (Hitachi motor)	0.001 07 707 0	×	mode	Ω
H22 I	Motor constant R2, 2 <sup>nd</sup> motor (Hitachi motor)	$0.001{\sim}65.535\Omega$	×		Ω
H055	Motor constant L (Hitachi motor)		×	1	mH
H255	Motor constant L, 2 <sup>nd</sup> motor (Hitachi motor)	0.01~655.35mH	×		mН
H023	Motor constant IO (Hitachi motor)	0.01~655.35A	×		A

	4	H" Function	Run	Defa	ults
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
H223	Motor constant I0, 2 <sup>nd</sup> motor <b>(Hitachi motor)</b>		×		A
H024	Motor constant J (Hitachi motor)	$0.001 \sim 9999 \; \mathrm{kgm^2}$	×		${ m kgm^2}$
H224	Motor constant J, 2 <sup>nd</sup> motor (Hitachi motor)	0.001~3333 kgm-	×		$kgm^2$
н030	Motor constant R1 (Auto tuned data)	0.001∼65.535Ω	×		Ω
H230	Motor constant R1, 2 <sup>nd</sup> motor (Auto tuned data)	0.001~03.3362	×	Specified by	Ω
HD3 I	Motor constant R2 (Auto tuned data)	0.001~65.535Ω	×		Ω
H23 I	Motor constant R2, 2 <sup>nd</sup> motor (Auto tuned data)	0.001 00.0002	×		Ω
H032	Motor constant L (Auto tuned data)	0.01~655.35mH	×	the capacity	mH
H232	Motor constant L, 2 <sup>nd</sup> motor (Auto tuned data)	0.01~000.501111	×	inverter mode	mH
н033	Motor constant I0 (Auto tuned data)	0.01~655.35A	×	mode	A
H233	Motor constant I0, 2 <sup>nd</sup> motor (Auto tuned data)	0.01~000.59A	×		A
нозч	Motor constant J (Auto tuned data)	$0.001 \sim 9999 \; \mathrm{kgm^2}$	×		${ m kgm^2}$
H234	Motor constant J, 2 <sup>nd</sup> motor <b>(Auto tuned data)</b>	U.OUT BEEF TOO.	×		kgm²
H050	Slip compensation P gain for V/f control with FB	0.00-10.00	×	0.2	-
H05 I	Slip compensation I gain for V/f control with FB	01000.	×	2.	-

### PM Motor Constants Functions



**NOTE**:. Mark "✓" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access

	"	Run	Default	S	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
н 102	PM motor code setting	ODHitachi standard (Use H106-H110 at motor constants) O IAuto-Tuning (Use H109-H110, H111-H113 at motor constants)	×	00	-
H 103	PM motor capacity	0.1/0.2/0.4/0.55/0.75/1.1/1.5/2.2/3.0/3.7/ 4.0/5.5/7.5/11.0/15.0/18.5	×	kW dependent	kW
H 104	PM motor pole setting	2/4/6/8/10/12/14/16/18/20/22/24/26/28/ 30/32/34/36/38/40/42/44/46/48	×	kW dependent	Poles
H 105	PM Rated Current	$(0.00\text{-}1.00) \times \text{Rated current of the inverter [A]}$	×	kW dependent	A
н 106	PM const R(Resistance)	0.001-65.535 [Ω]	×	kW dependent	Ω
רסו א	PM const Ld(d-axis inductance)	0.01-655.35 [mH]	×	kW dependent	mH
H 108	PM const Lq(q-axis inductance)	0.01-655.35 [mH]	×	kW dependent	mH
H 109	PM const Ke(Induction voltage constant)	0.0001-6.5535 [V/(rad/s)]	×	kW dependent	V/(rad/s)
H I 10	PM const J(Moment of inertia)	0.001-9999.000 [kgm <sup>2</sup> ]	×	kW dependent	${ m kgm^2}$
нии	PM const R (Resistance, Auto)	0.001-65.535 [Ω]	×	kW dependent	Ω
H I 12	PM const Ld(d-axis inductance, Auto)	0.01-655.35 [mH]	×	kW dependent	mH
H I I3	PM const Lq(q-axis inductance, Auto)	0.01-655.35 [mH]	×	kW dependent	mH
H I 16	PM Speed Response	1-1000 [%]	×	100	%
ніп	PM Starting Current	20.00-100.00 [%]	×	70.00[%]	%
H I 18	PM Starting Time	0.01-60.00 [s]	×	1.00[s]	s
H I 19	PM Stabilization Constant	0-120 [%]	×	100[%]	%
H 15 I	PM Minimum Frequency	0.0-25.5 [%]	✓	8.0 [%]	%
H 155	PM No-Load Current	0.00-100.00 [%]	✓	10.00 [%]	%
н 123	PM Starting Method Select	OD Normal O I Initial Magnet Position Estimation	×	0	-
н із і	PM Initial Magnet Position Estimation 0V Wait Times	0-255	×	10	-
н 132	PM Initial Magnet Position Estimation Detect Wait Times	0-255	×	10	-



"H" Function			Run	Defaults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
н 133	PM Initial Magnet Position Estimation Detect Times	0-255	×	30	-
н 134	PM Initial Magnet Position Estimation Voltage Gain	0-200	×	100	_

H102 to H134 are displayed only when PM mode. PM mode only.

#### **Expansion Card Functions**

"P" parameters will be appeared when the expansion option is connected.



**NOTE**:. Mark "✓" in [Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access

"P" Function		Run	Defaults		
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
P00 I	Reaction when option card error occurs	Two option codes:  ODInverter trips  OIIgnores the error (Inverter continues operation)	×	00	-
P003	[EA] terminal selection	Three option codes:  ODSpeed reference (incl. PID)  O IFor control with encoder feedback  OZExtended terminal for EzSQ	×	00	-
P004	Pulse train input mode selection for feedback	Four option codes:  ODSingle-phase pulse [EA]  O I2-phase pulse (90° difference) 1  ([EA] and [EB])  OZ2-phase pulse (90° difference) 2  ([EA] and [EB])  OJSingle-phase pulse [EA] and  direction signal [EB]	×	00	-
P0 1 1	Encoder pulse setting	Sets the pulse number (ppr) of the encoder, set range is 32~1024 pulses	×	512.	_
PO 12	Simple positioning selection	Two option codes:  ODsimple positioning deactivated  O Isimple positioning activated	×	00	_
PO 15	Creep Speed	Set range is start frequency ( <b>b082</b> ) ~10.00 Hz	×	5.00	Hz
P026	Over-speed error detection level	Set range is 0~150%	×	115.0	%
P027	Speed deviation error detection level	Set range is 0~120 Hz	×	10.00	Hz
P03 I	Deceleration time Input Type	OOOperator, OIEzSQ	×	00	-
P033	Torque command input selection	Six option codes:  ODAnalog voltage input [O]  O IAnalog current input [OI]  OBOperator, ObOption	×	00	
P034	Torque command level input	Set range is 0~200%	✓	0.	%
P036	Torque bias mode selection	Five option codes:  ODNo bias  O IOperator	×	00	_
РОЭТ	Torque bias value setting	Range is -200~200%	✓	0.	%
P038	Torque bias polar selection	Two option codes:  ODAccording to the sign  OIAccording to the rotation direction  O5Option	×	00	-

	"P" Function		Run	Defaults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
P039	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
P040	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
P04 I	Speed / Torque control switching time	Set range is 0 to 1000 ms.	×	0.	ms
P044	Communication watchdog timer (for option)	Set range is 0.00 to 99.99 seconds.	×	1.00	s
P045	Inverter action on communication error (for option)	00 (tripping), 01 (tripping after decelerating and stopping the motor), 02 (ignoring errors), 03 (stopping the motor after free-running), 04 (decelerating and stopping the motor)	×	00	-
P046	DeviceNet polled I/O: Output instance number	0-20	×	1	=
P048	Inverter action on communication idle mode	00 (tripping), 01 (tripping after decelerating and stopping the motor), 02 (ignoring errors), 03 (stopping the motor after free-running), 04 (decelerating and stopping the motor)	×	00	-
P049	Motor poles setting for RPM	0/2/4/6/8/10/12/14/16/18/20/22/24/26/28/ 30/32/34/36/38/40/42/44/46/48	×	0	Poles
P055	Pulse train input frequency scale setting	Sets the pulse numbers at max. frequency, set range is 1.0~32.0 kHz	×	25.0	$\mathrm{kHz}$
P056	Pulse train input frequency filter time constant setting	Set range is 0.01~2.00 seconds.	×	0.10	s
P057	Pulse train input bias setting	Set range is -100~100 %	×	0.	%
P058	Limitation of the pulse train input setting	Set range is 0~100 %	×	100.	%
P060	Multistage position 0		✓	0	Pulses
P06 I	Multistage position 1		✓	0	Pulses
P062	Multistage position 2		✓	0	Pulses
P063	Multistage position 3	P073 to P072	✓	0	Pulses
P064	Multistage position 4	(Displayed higher 4-digits only)	✓	0	Pulses
P065	Multistage position 5		✓	0	Pulses
P066	Multistage position 6		✓	0	Pulses
P067	Multistage position 7		✓	0	Pulses
P068	Homing mode selection	ODLow speed mode O IHigh speed mode	✓	00	=
P069	Homing direction	ODForward rotation side O IReverse rotation side	✓	01	-
סרסף	Low speed homing freq.	0 to 10Hz	✓	5.00	Hz
ו רם	High speed homing freq.	0 to 400Hz	✓	5.00	Hz
POTZ	Position range (Forward)	0 to +268435455(Higher 4-digits displayed)	✓	+268435455	Pulses
РОТЭ	Position range (Reverse)	-268435455 to 0(Higher 4-digits displayed)	✓	-268435455	Pulses

	"P" Function		Run	Defaults	
Func. Code	Name	Description	Mode Edit	Lnitial data	Units
P075	Positioning mode selection	ODWith limitation O INo limitation (shorter route) P004 is to be set 00 or 01	×	00	_
ררם	Encoder disconnection timeout	0.0 to 10.0 seconds.	✓	1.0	s
P 100 ~ P 13 1	EzSQ user parameter U(00) ~ U(31)	Each set range is 0~65535	✓	0.	-
P 140	EzCOM number of data	1 to 5	✓	5	_
P 14 1	EzCOM destination 1 adderss	1 to 247	✓	1	-
P 142	EzCOM destination 1 register	0000 to FFFF	✓	0000	-
P 143	EzCOM source 1 register	0000 to FFFF	✓	0000	-
P 144	EzCOM destination 2 adderss	1 to 247	✓	2	_
P 145	EzCOM destination 2 register	0000 to FFFF	✓	0000	-
P 146	EzCOM source 2 register	0000 to FFFF	✓	0000	_
P 147	EzCOM destination 3 adderss	1 to 247	✓	3	_
P 148	EzCOM destination 3 register	0000 to FFFF	✓	0000	_
P 149	EzCOM source 3 register	0000 to FFFF	✓	0000	-
P 150	EzCOM destination 4 adderss	1 to 247	✓	4	-
P 15 1	EzCOM destination 4 register	0000 to FFFF	✓	0000	_
P 152	EzCOM source 4 register	0000 to FFFF	✓	0000	_
P 153	EzCOM destination 5 adderss	1 to 247	✓	5	_
P 154	EzCOM destination 5 register	0000 to FFFF	✓	0000	_
P 155	EzCOM source 5 register	0000 to FFFF	✓	0000	_
P 160 ~ P 169	Option I/F command register to write[1]~[10]	0000 to FFFF	✓	0000	_
P 160 ~ P 169	Option I/F command register to read[1]~[10]	0000 to FFFF	✓	0000	-
P 180	Profibus Node address	0 to 125	×	0.	_
P 18 I	Profibus Clear Node address	00(clear)/01(not clear)	×	00	
P 182	Profibus Map selection	00(PPO)/01(Comvertional)/ 02 (Flexible Mode Format Selection)	×	00	
P 185	CANOpen Node address	0 to 127	×	0	-
P 186	CANOpen speed selection	00 to 08	×	06	
P 190	CompoNet Node address	0 to 63	×	0	-
P 192	DeviceNet MAC ID	0 to 63	×	63	
P 195	ML2 frame length	00 (32bytes) / 01(17bytes)	×	00	_
P 196	ML2 Node address	21h to 3Eh	×	21h	h